Photo Instructions

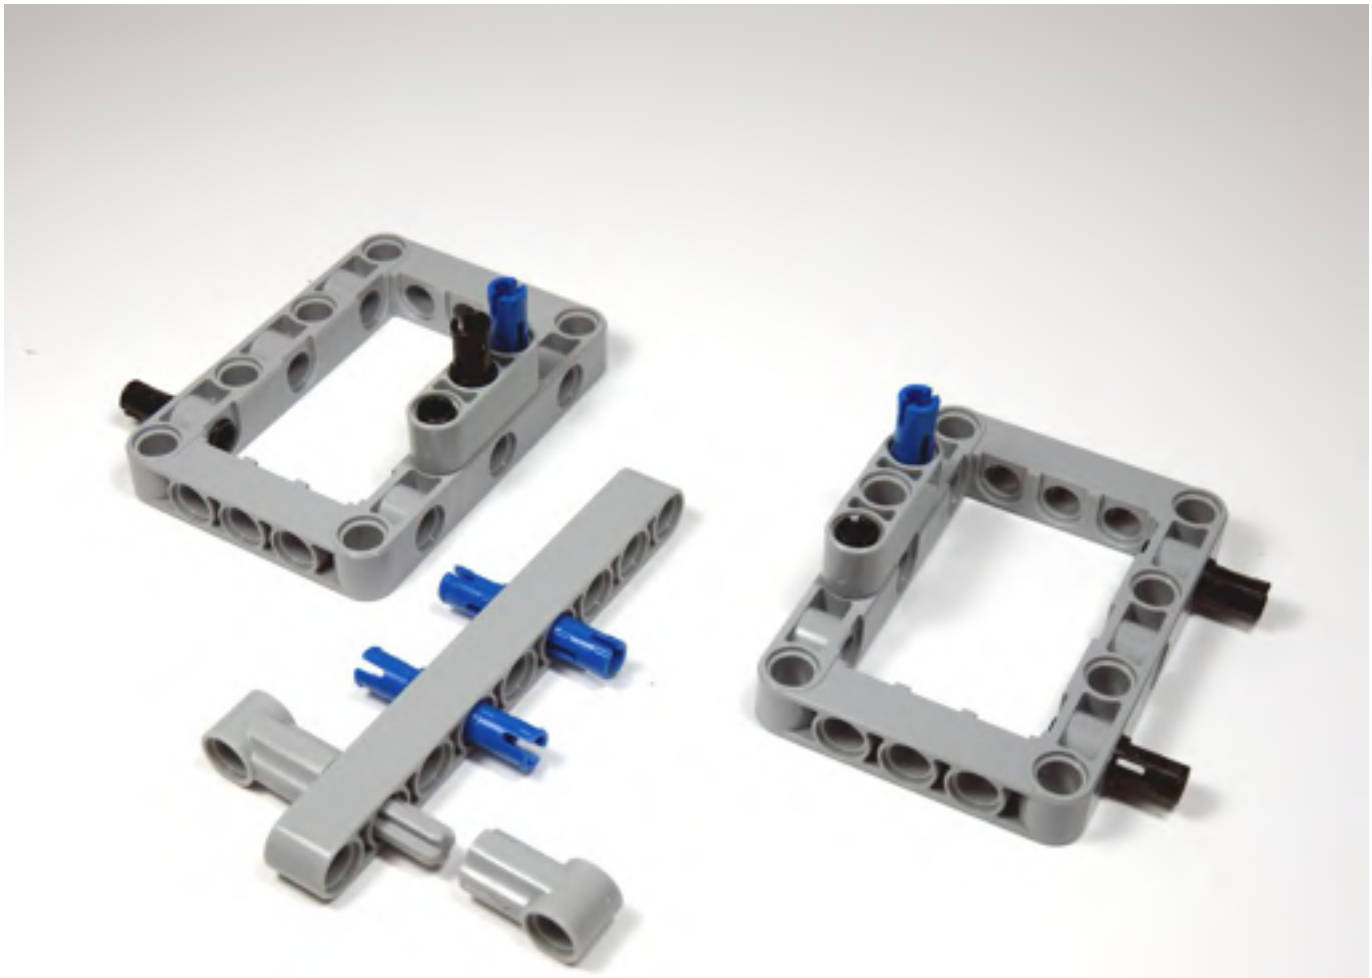

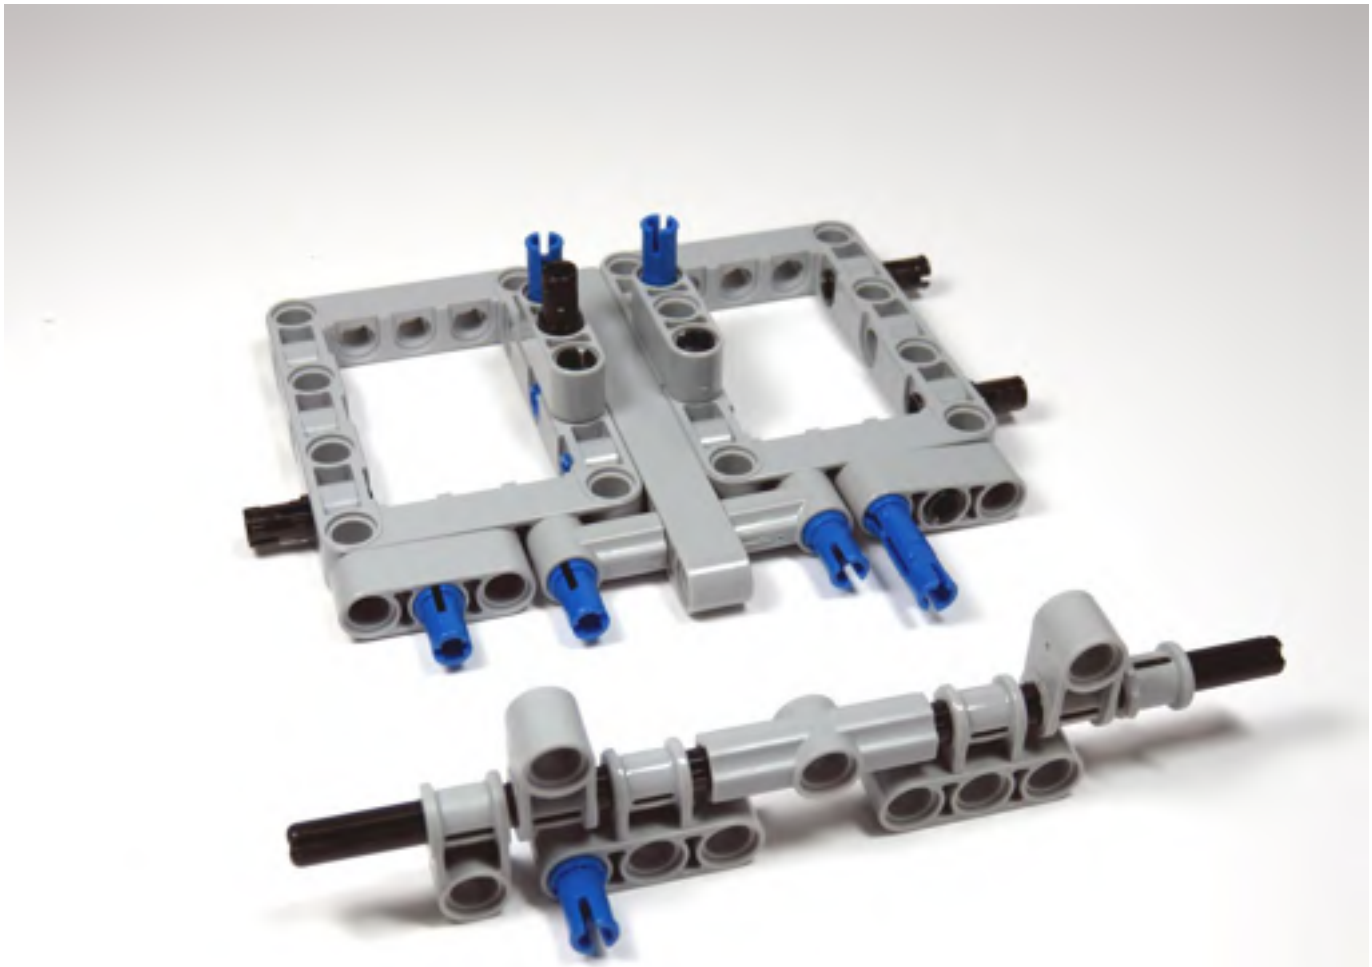

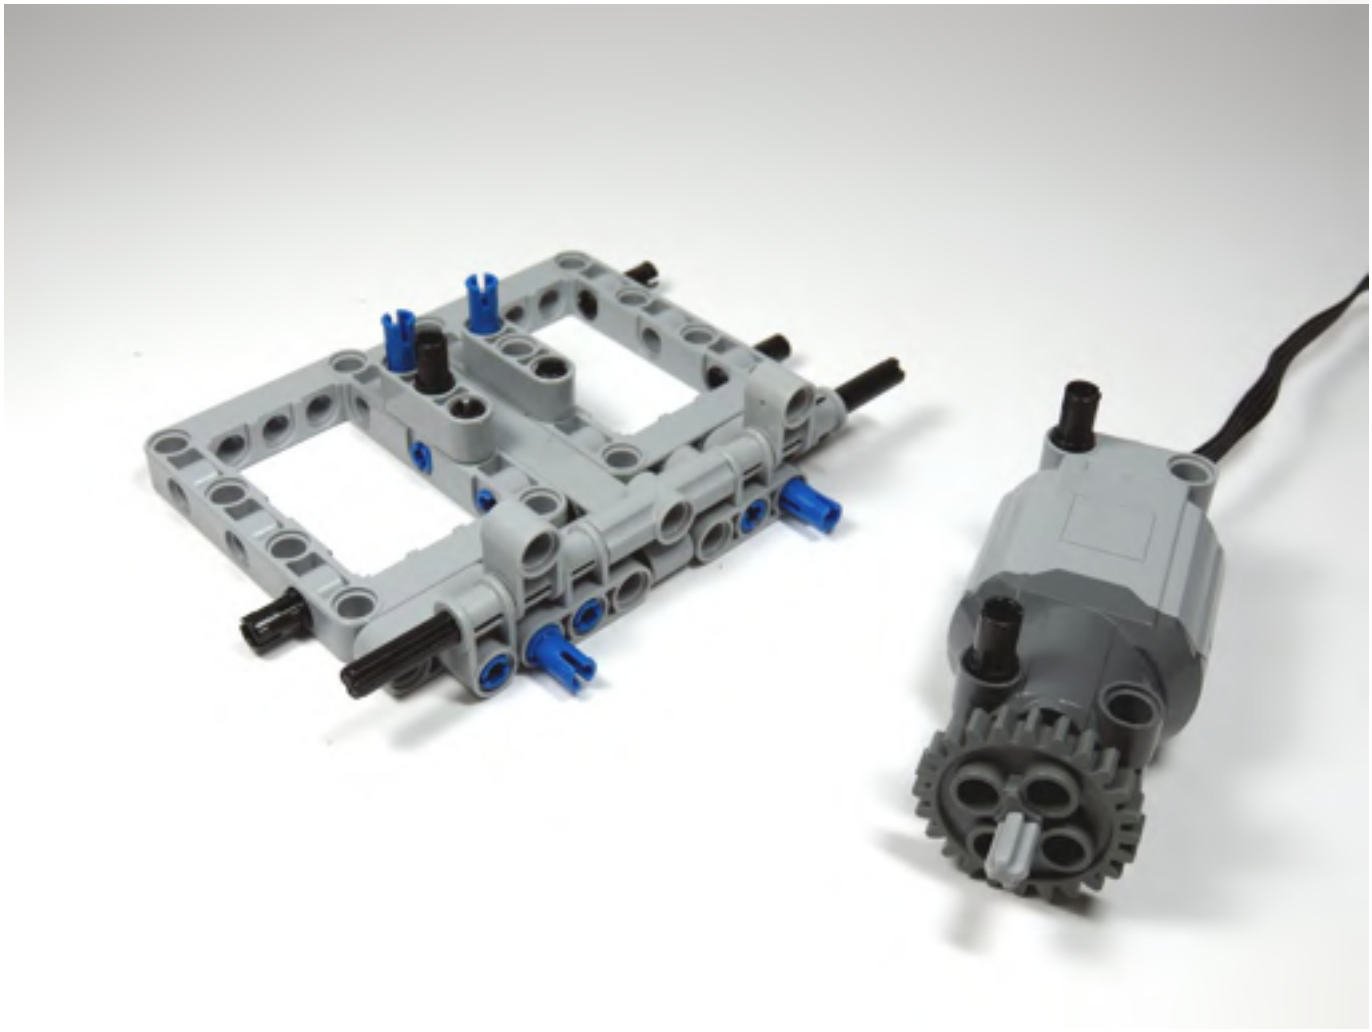

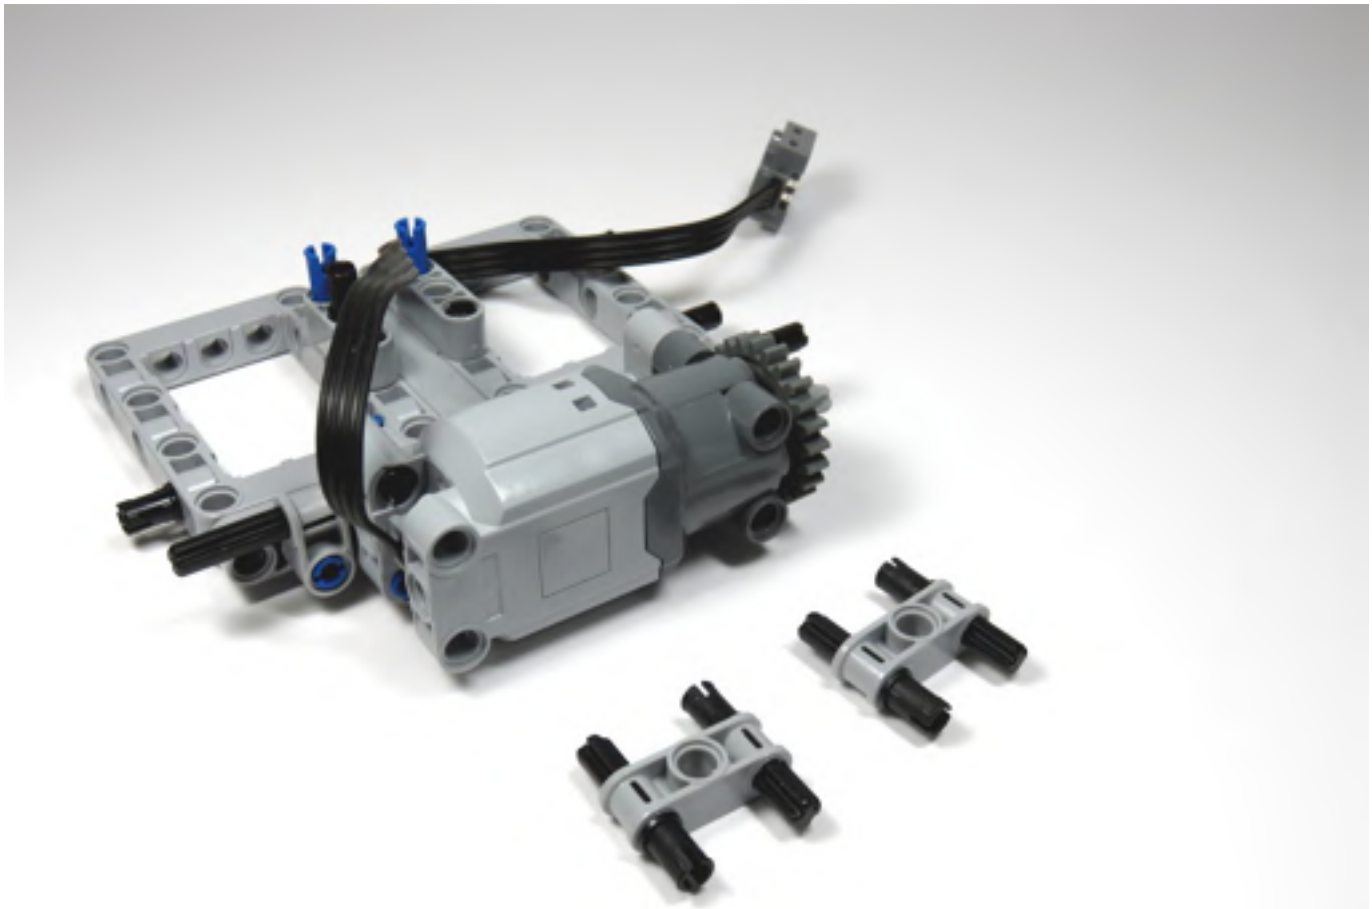

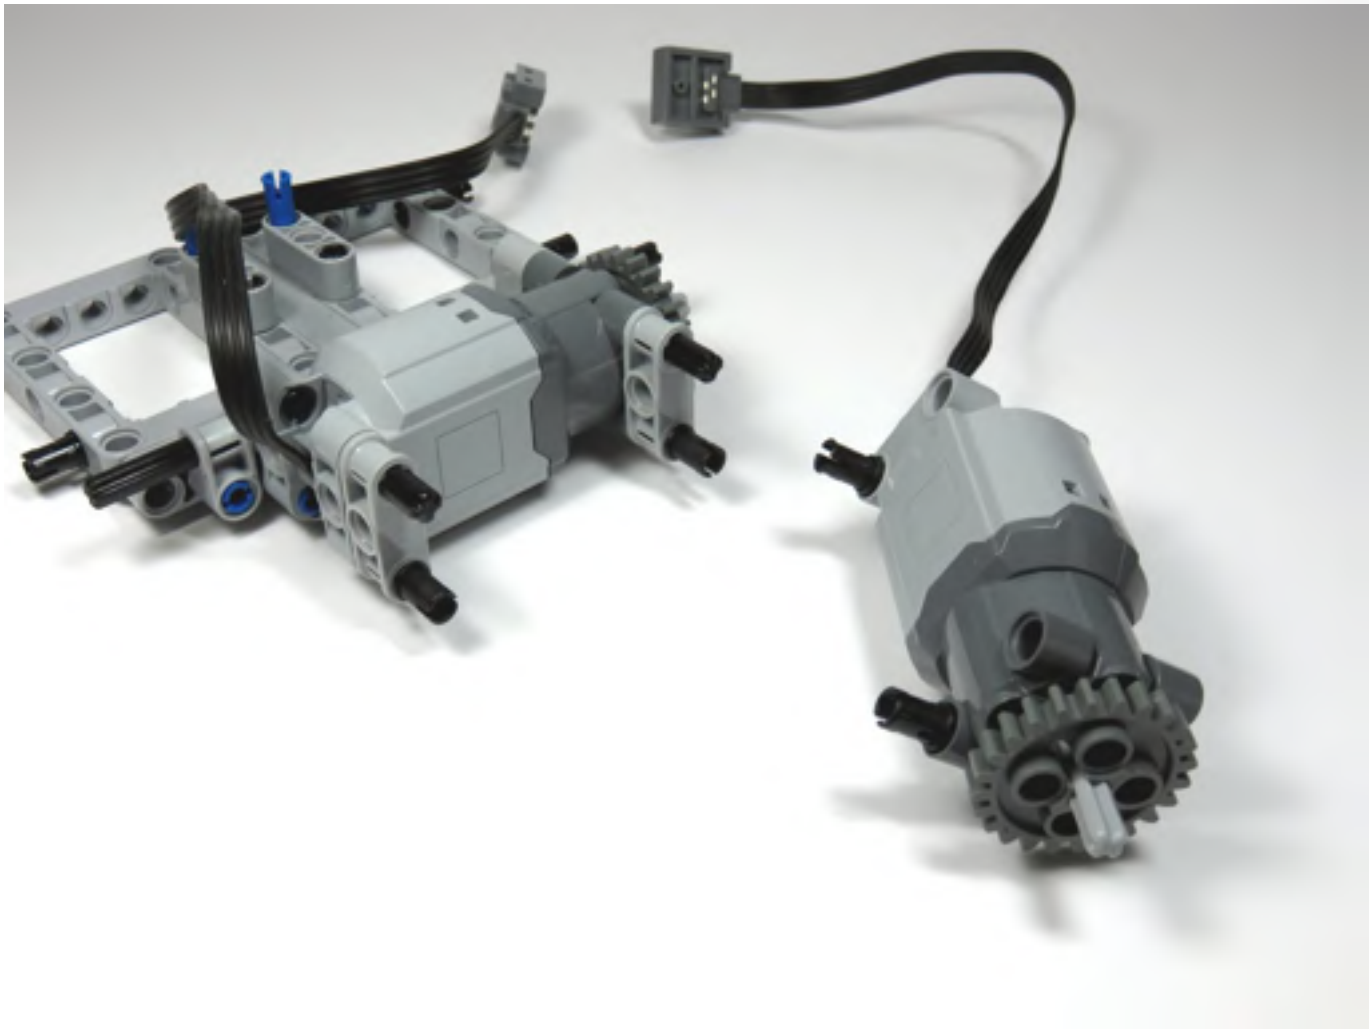

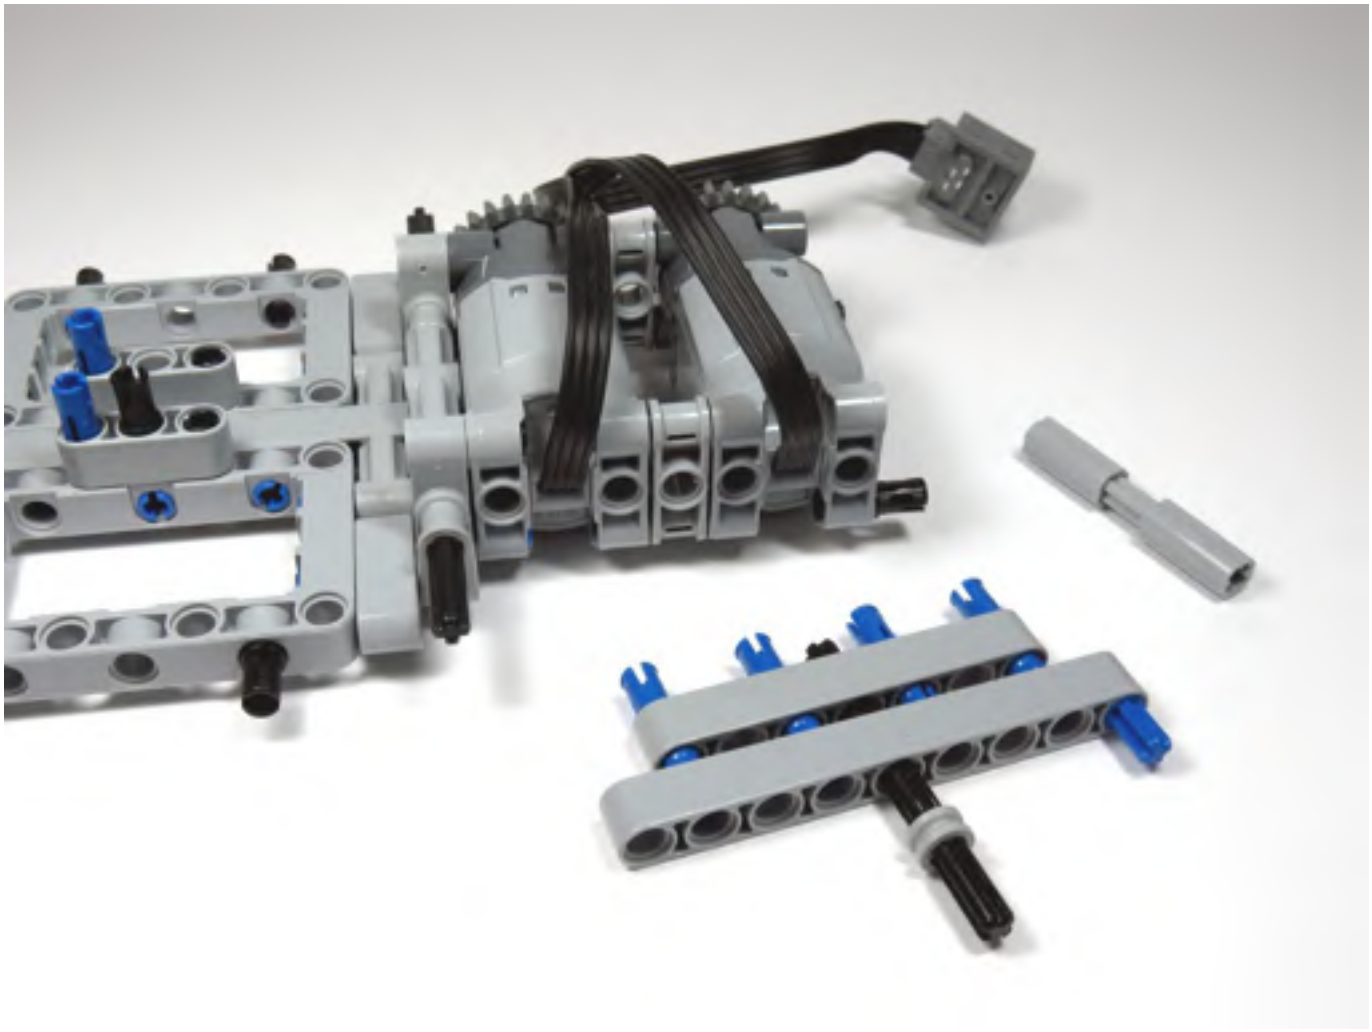

Connect L Motor cables together

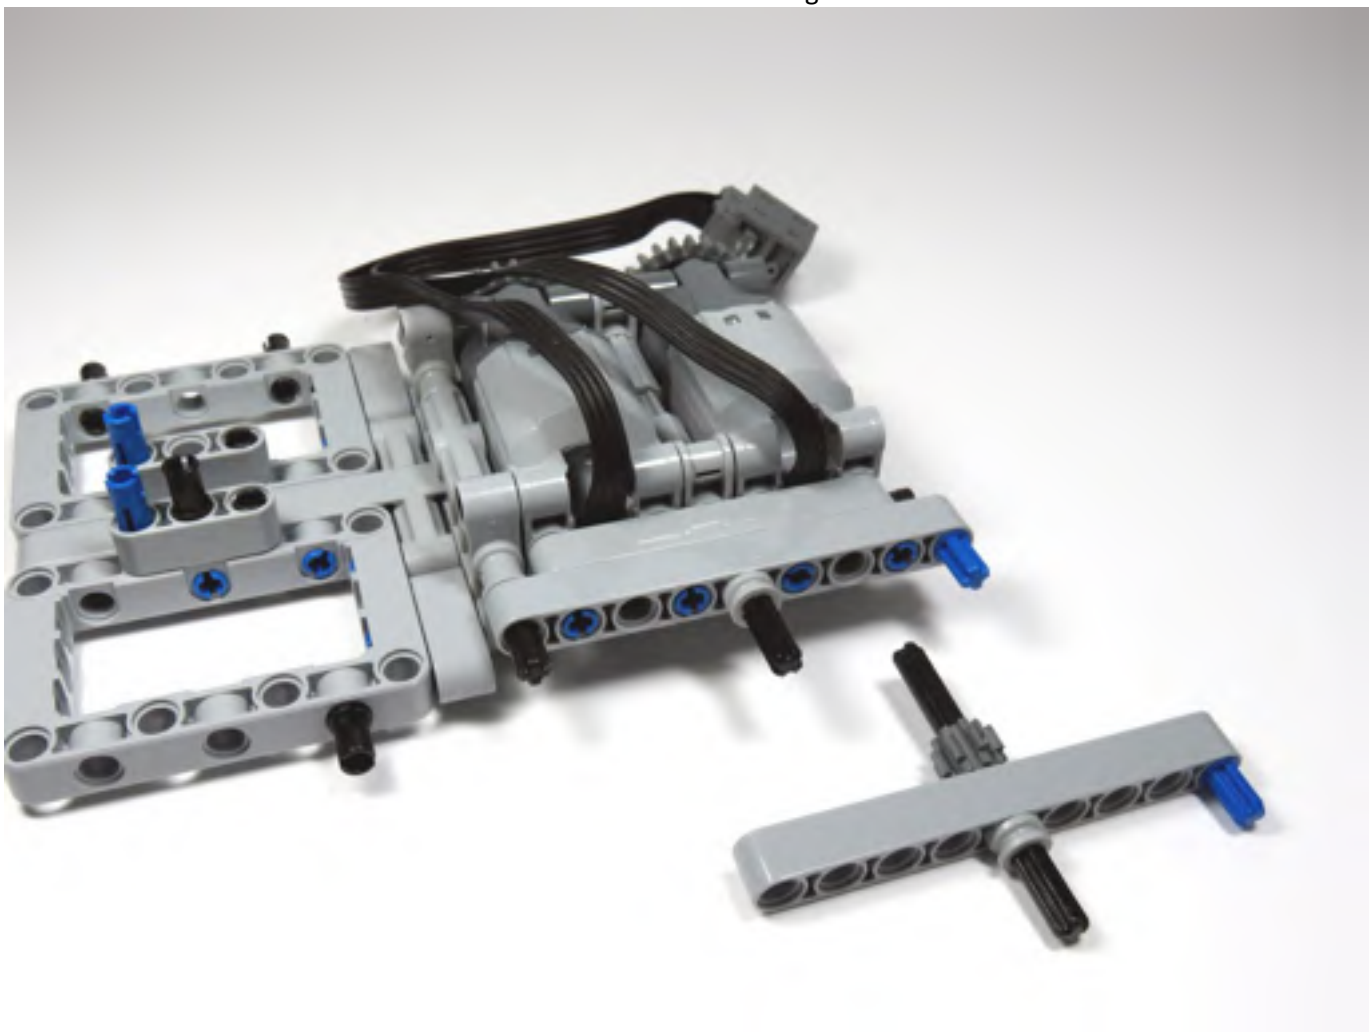

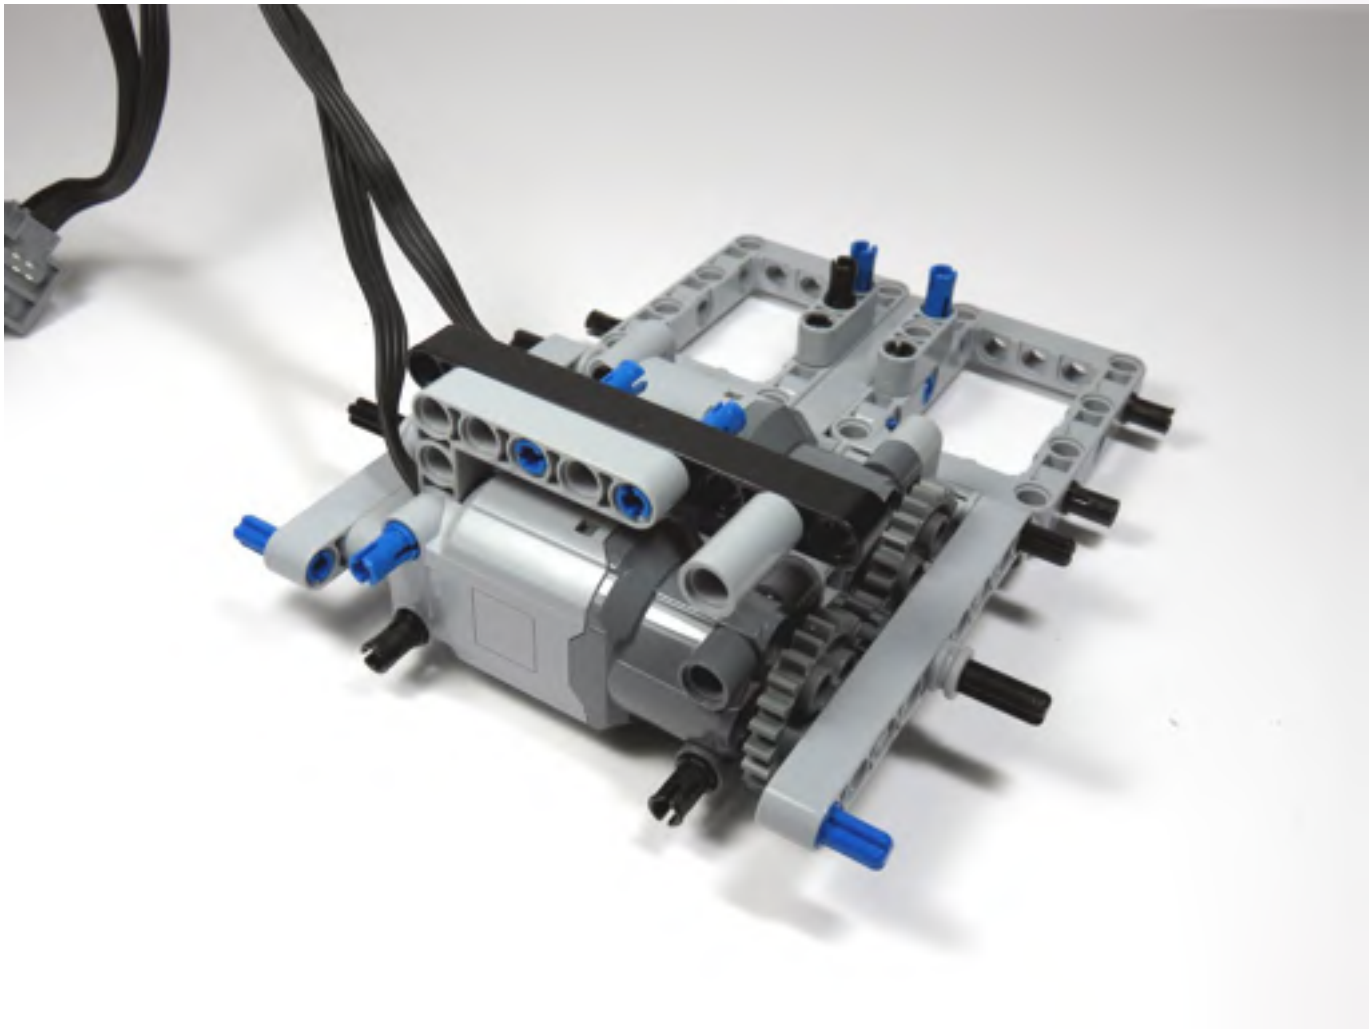

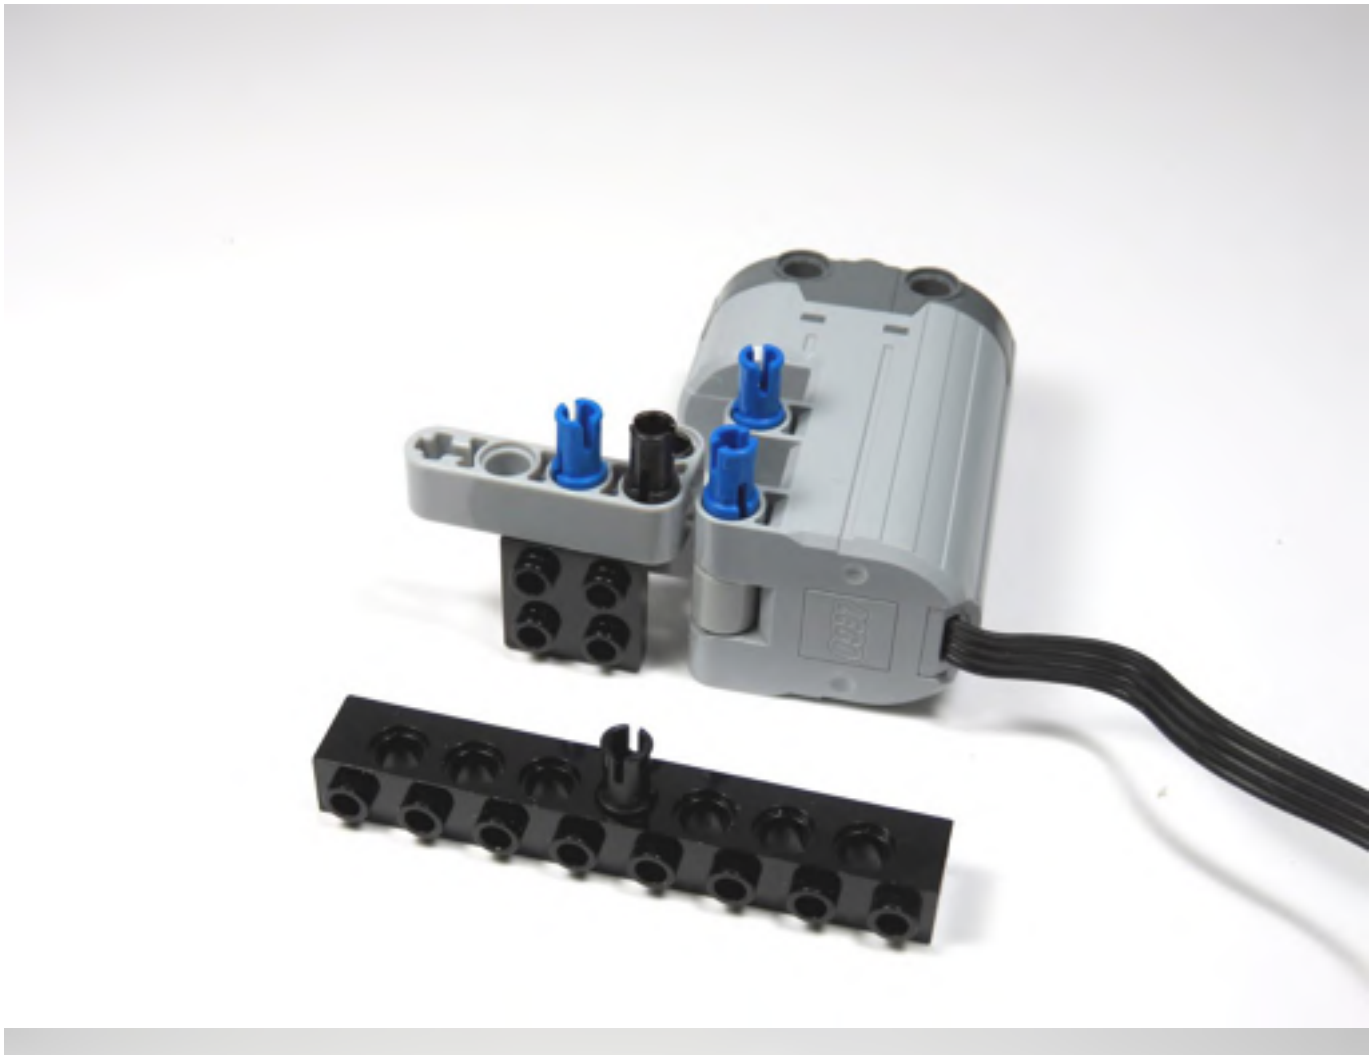

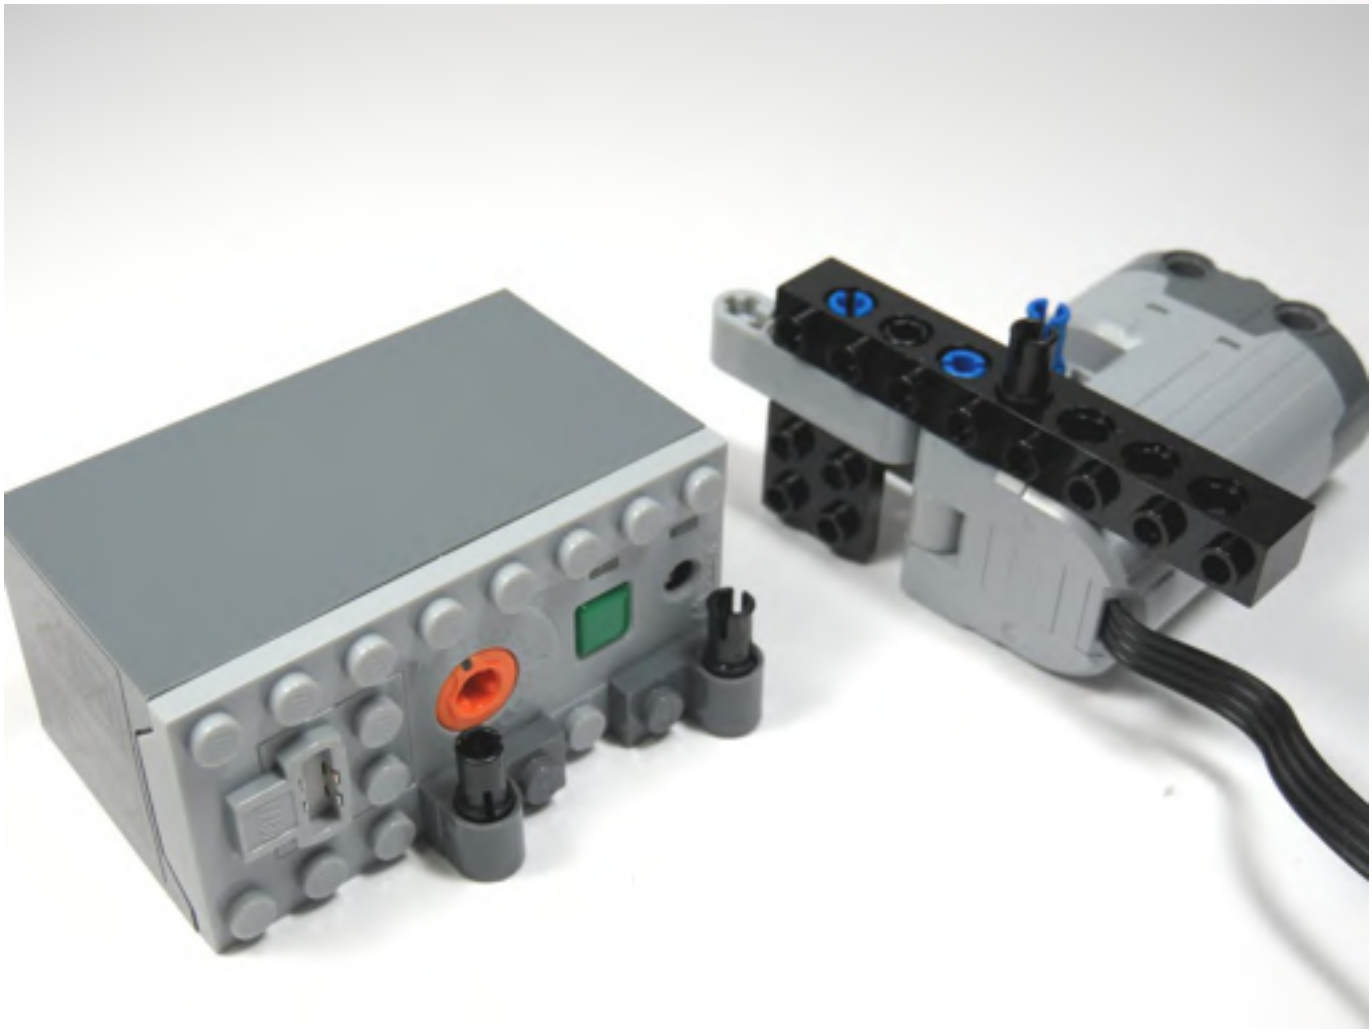

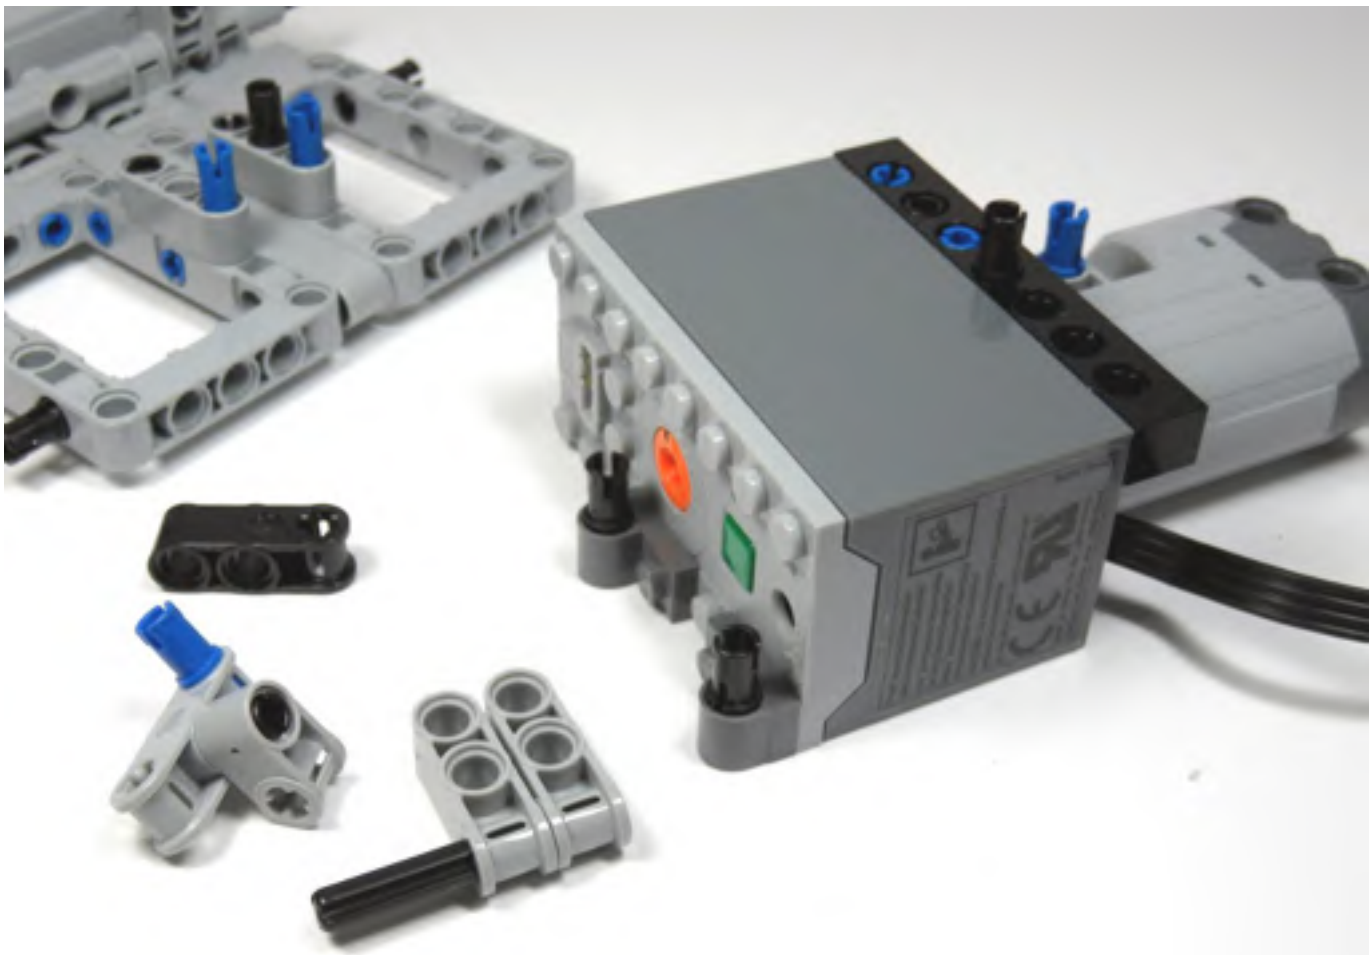

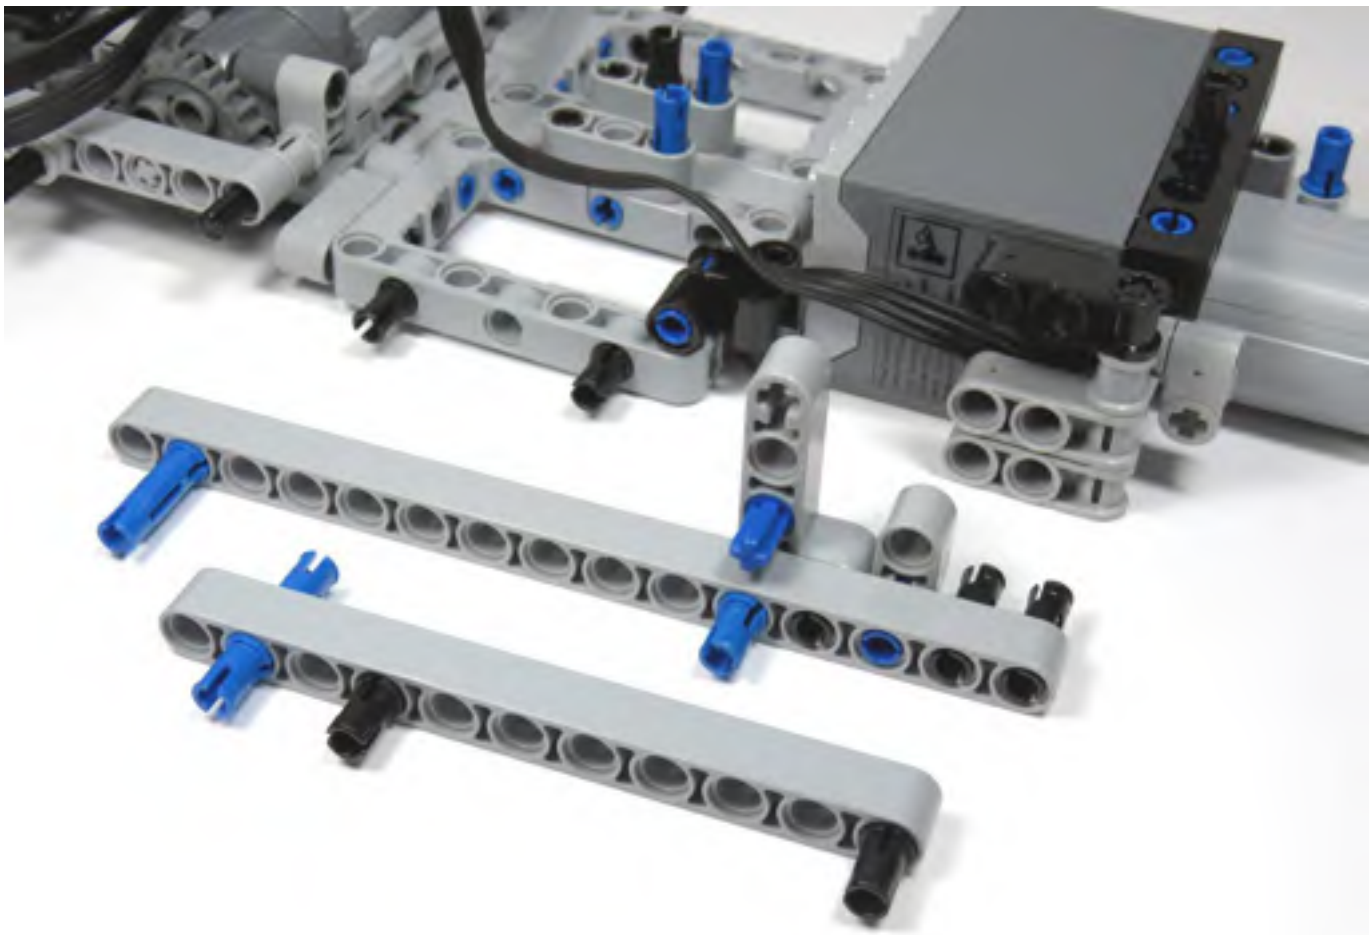

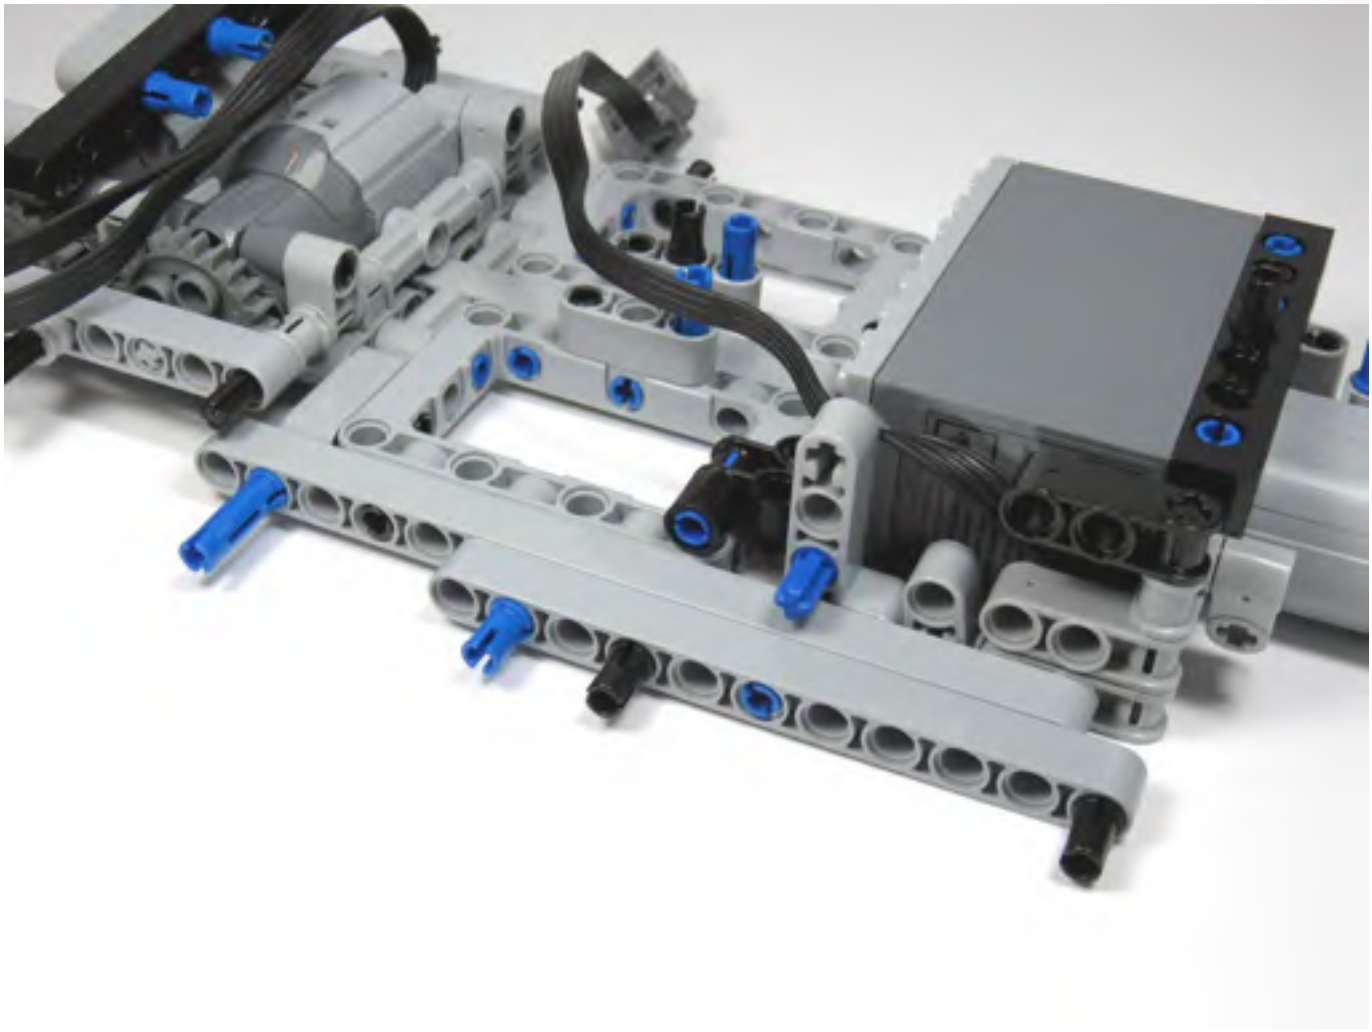

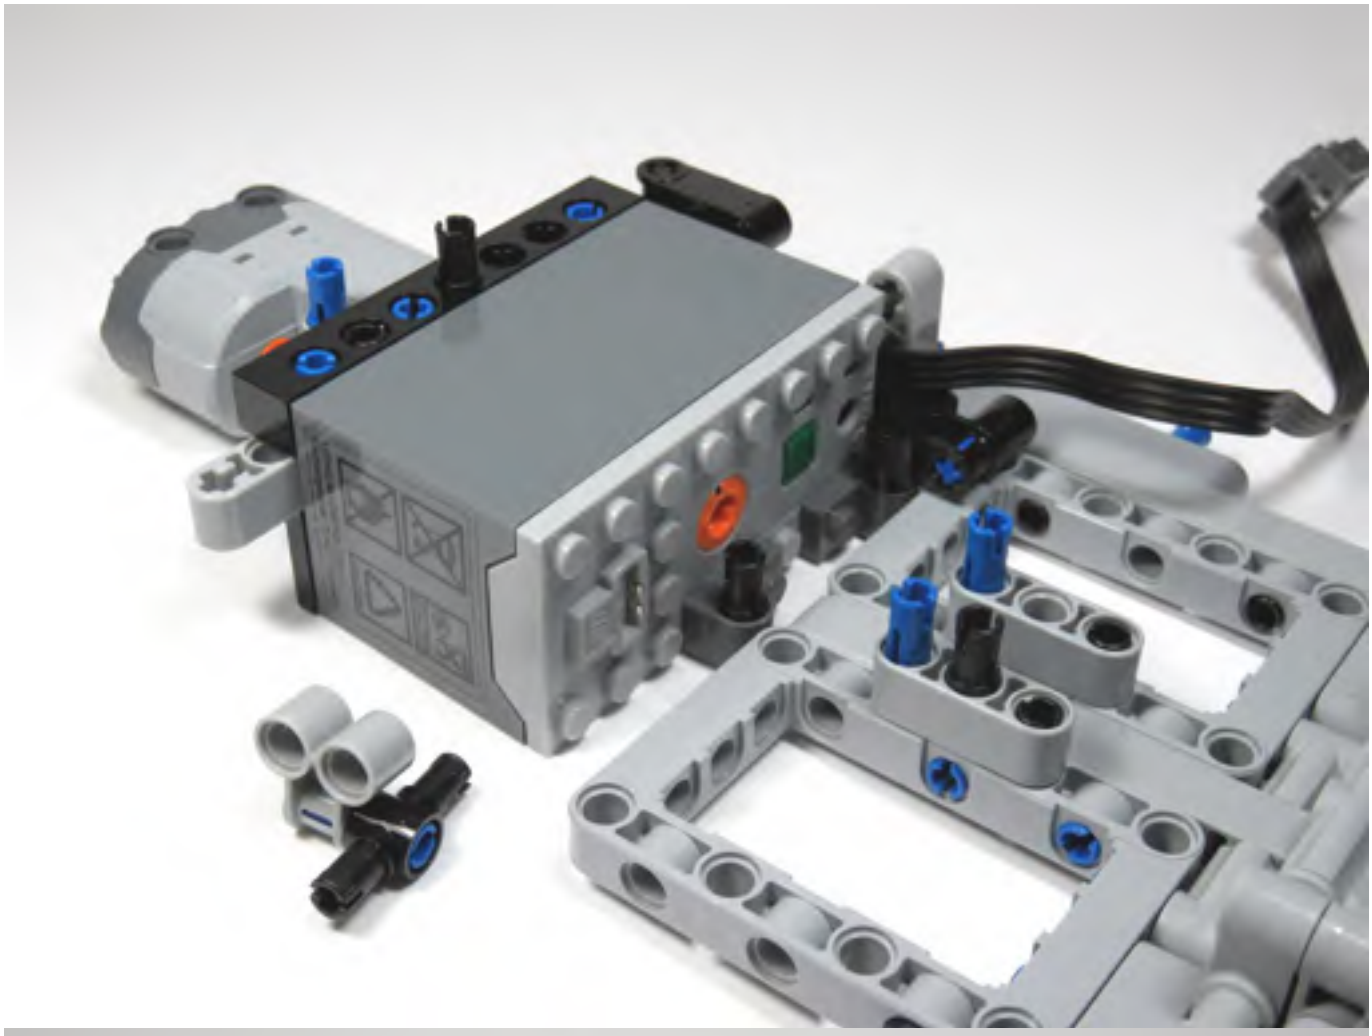

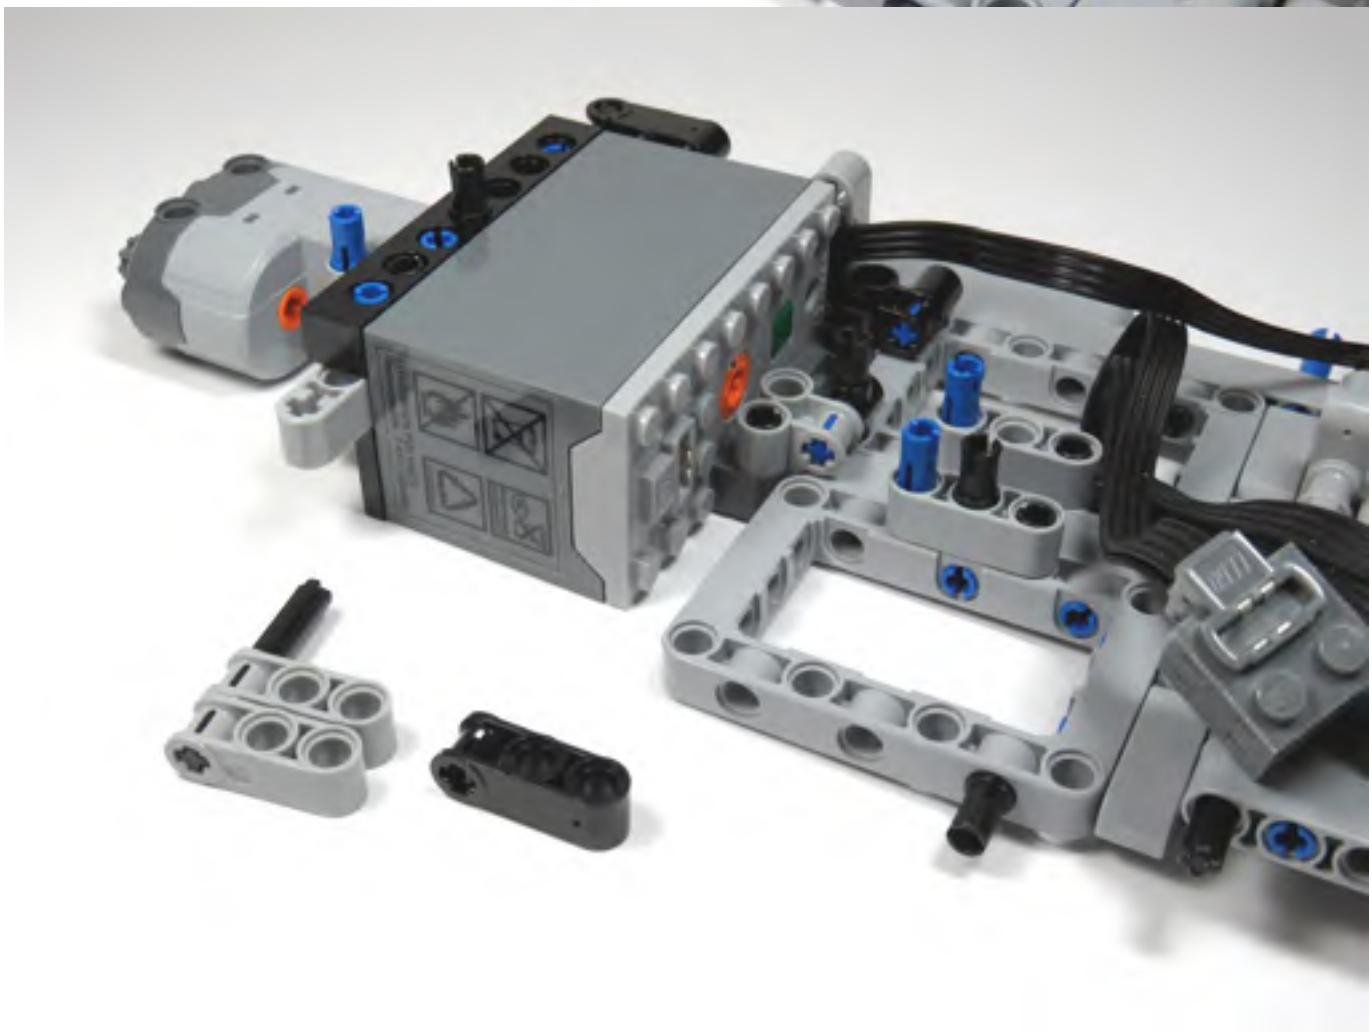

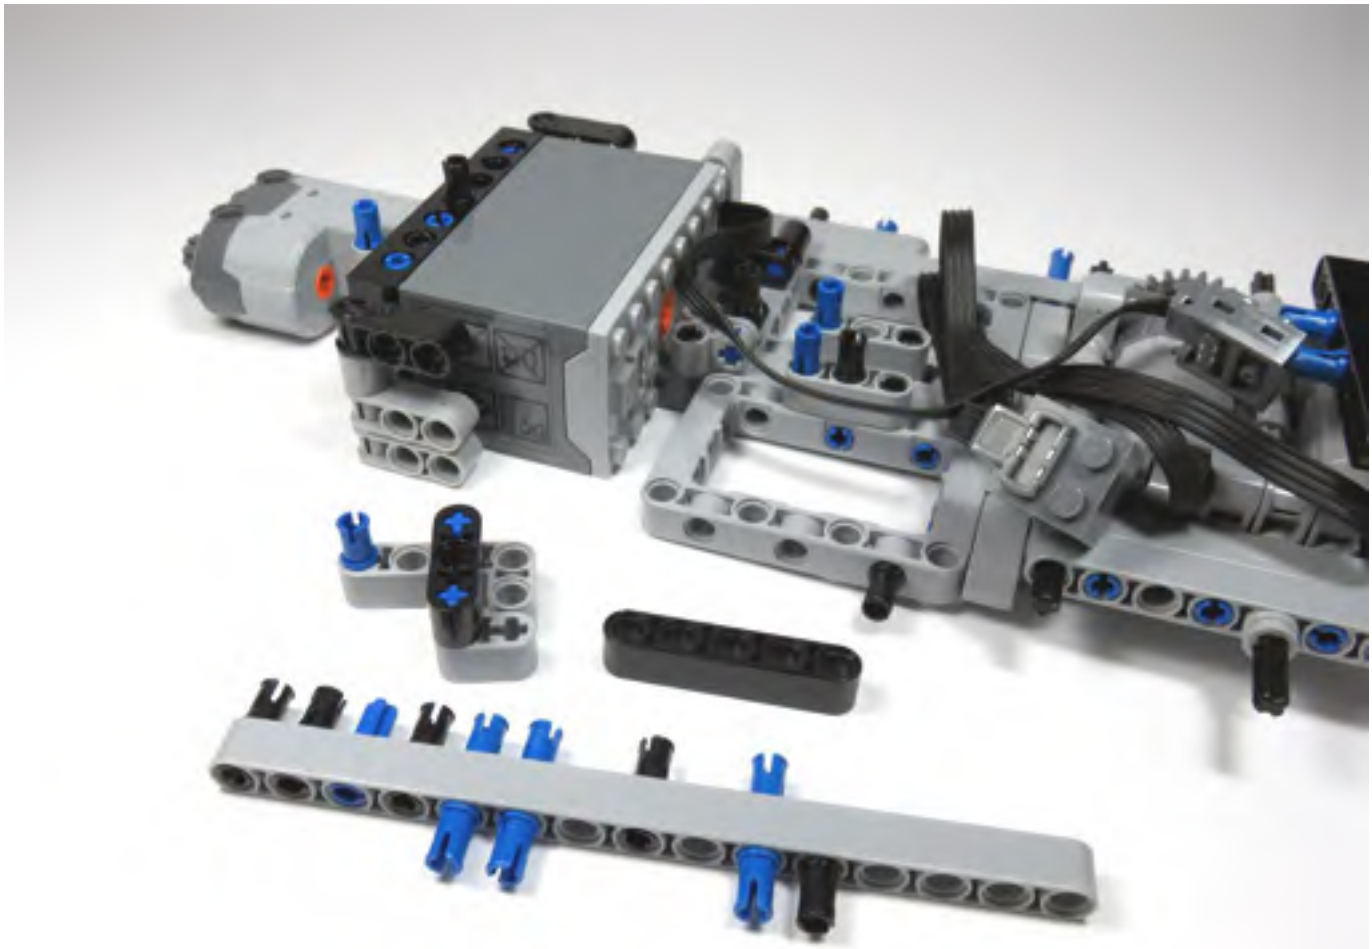

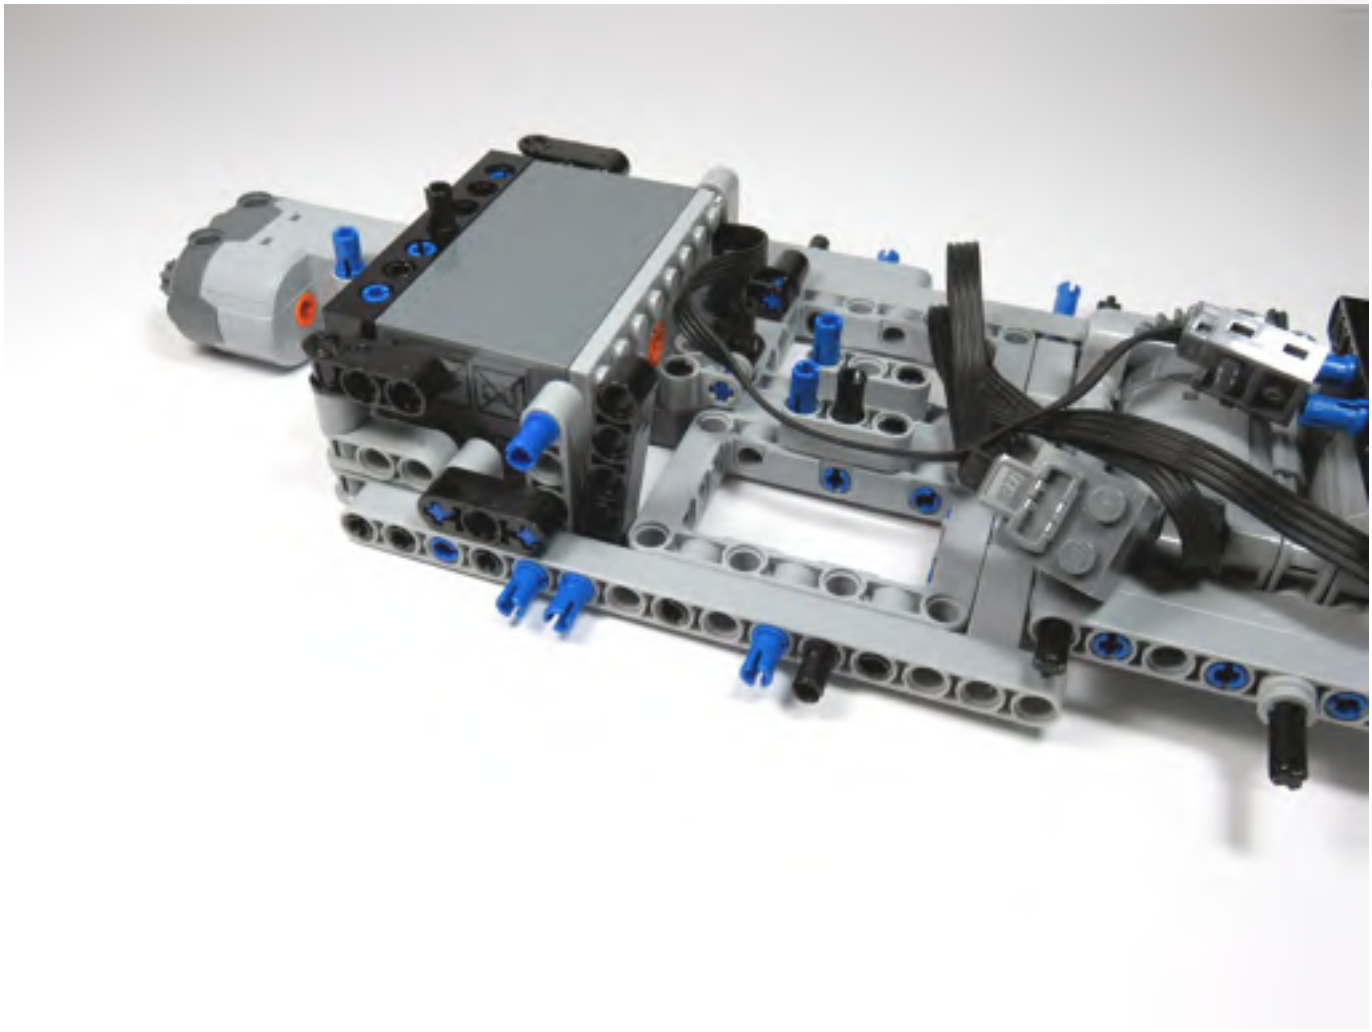

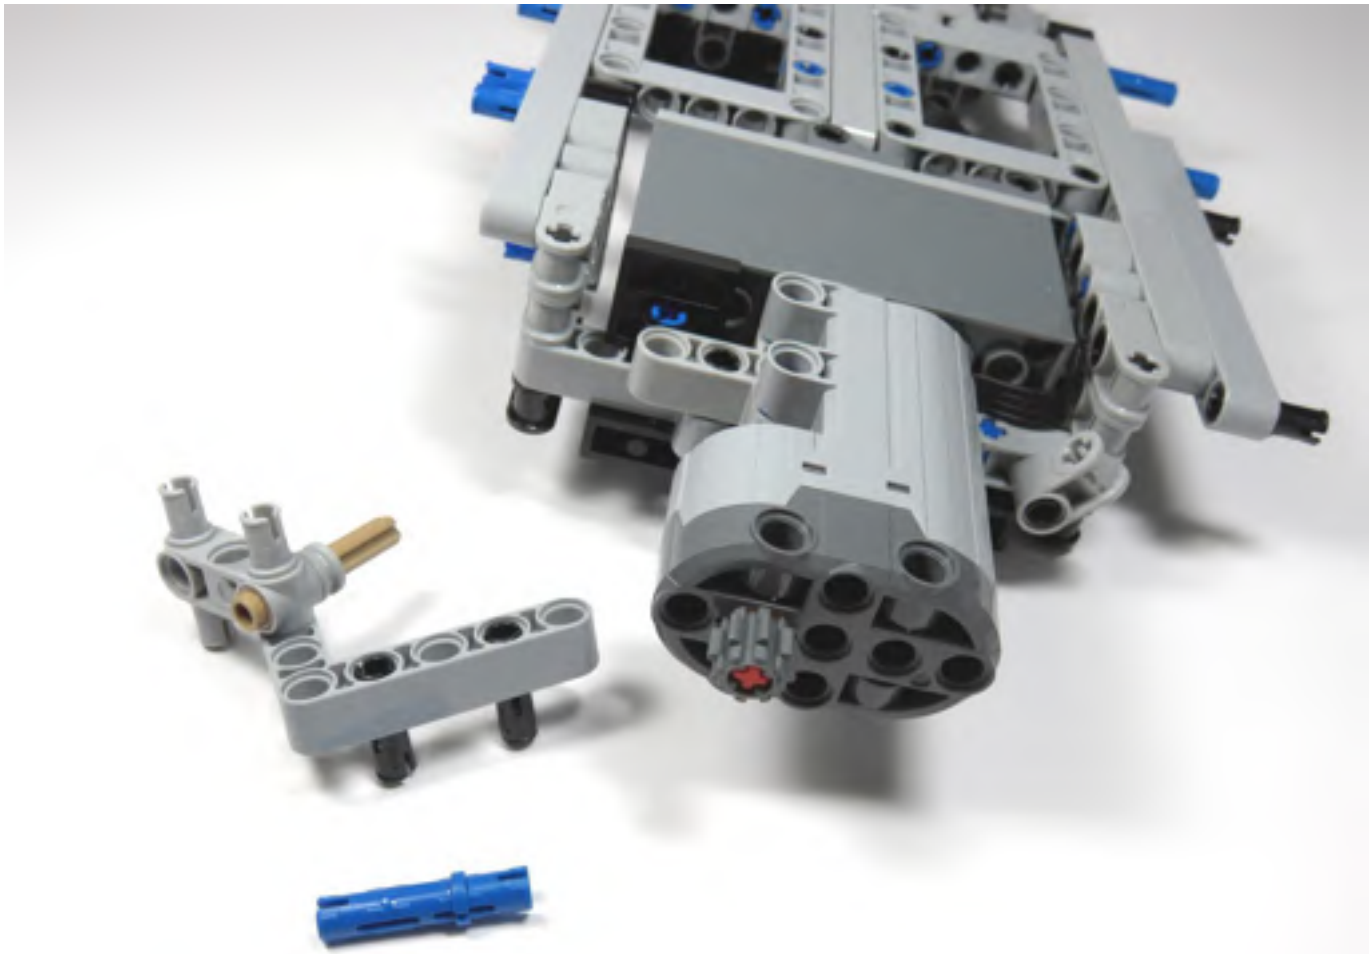

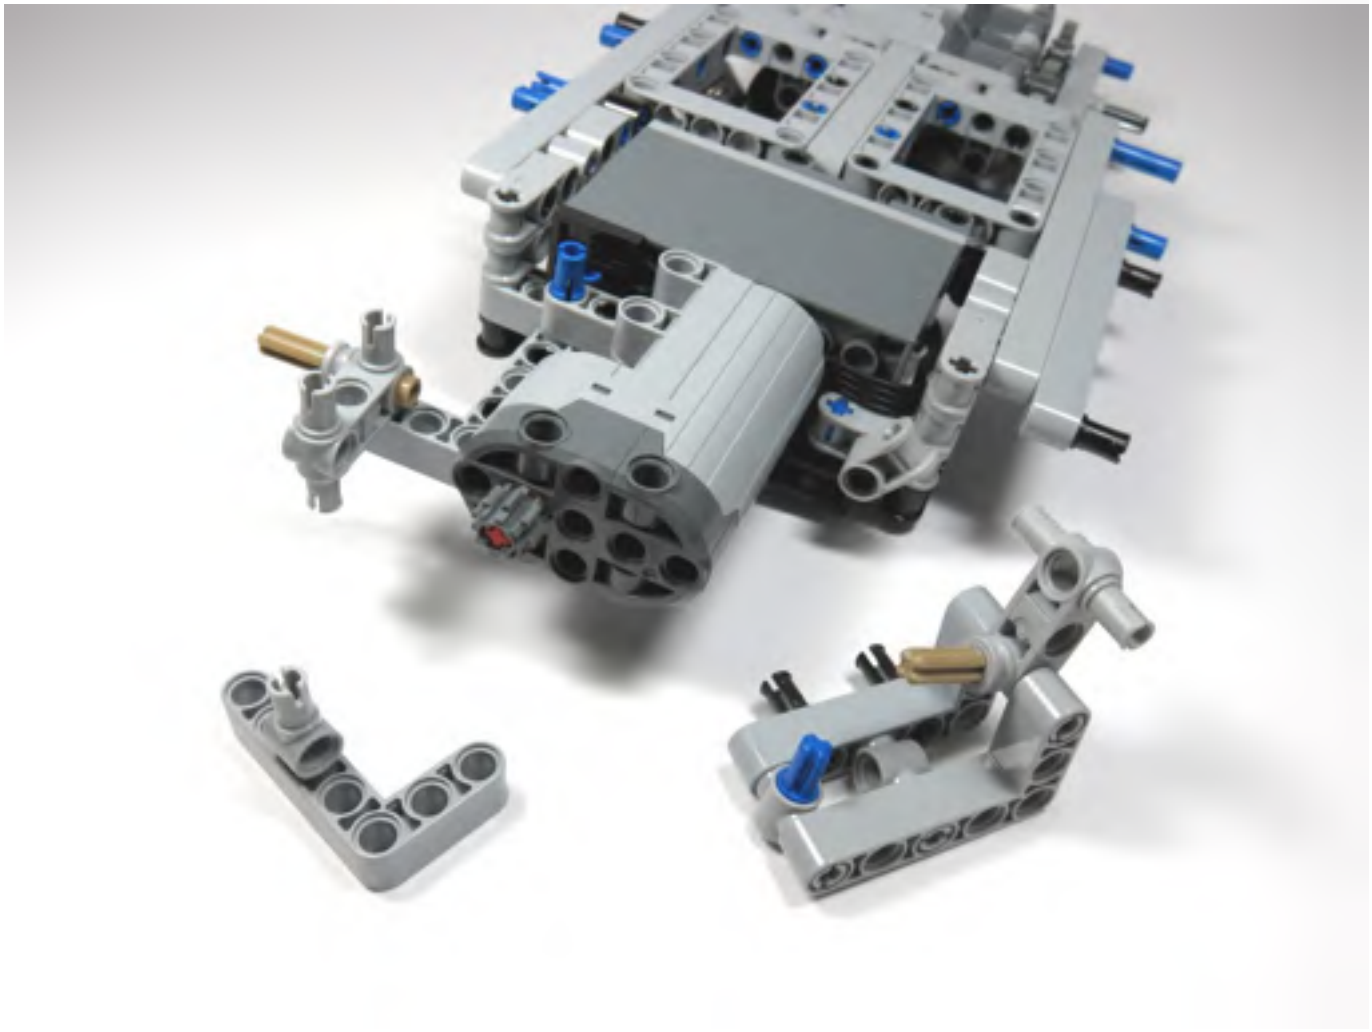

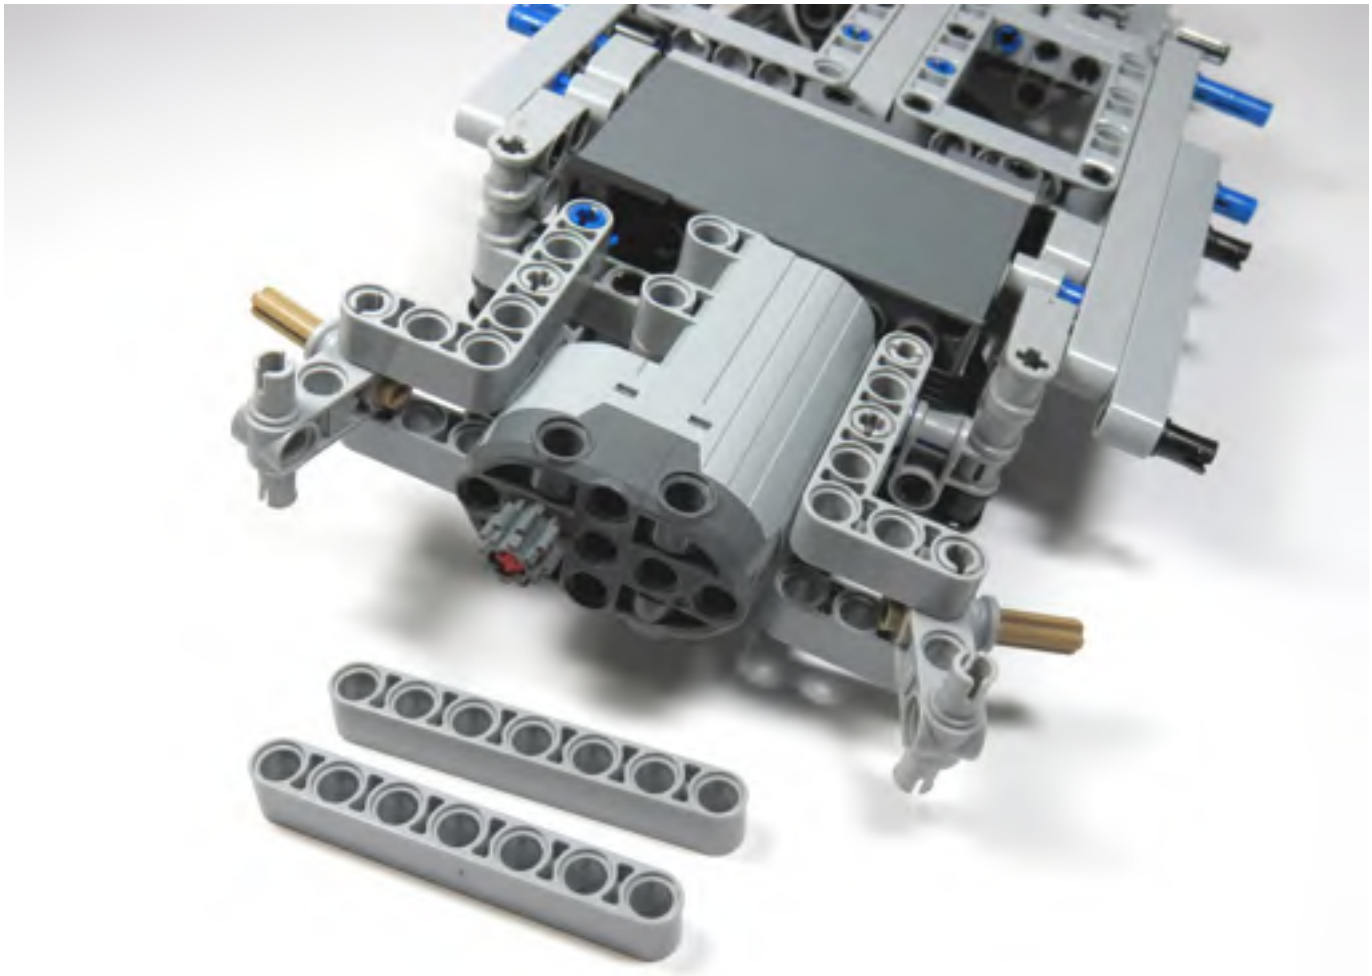

Turn Over

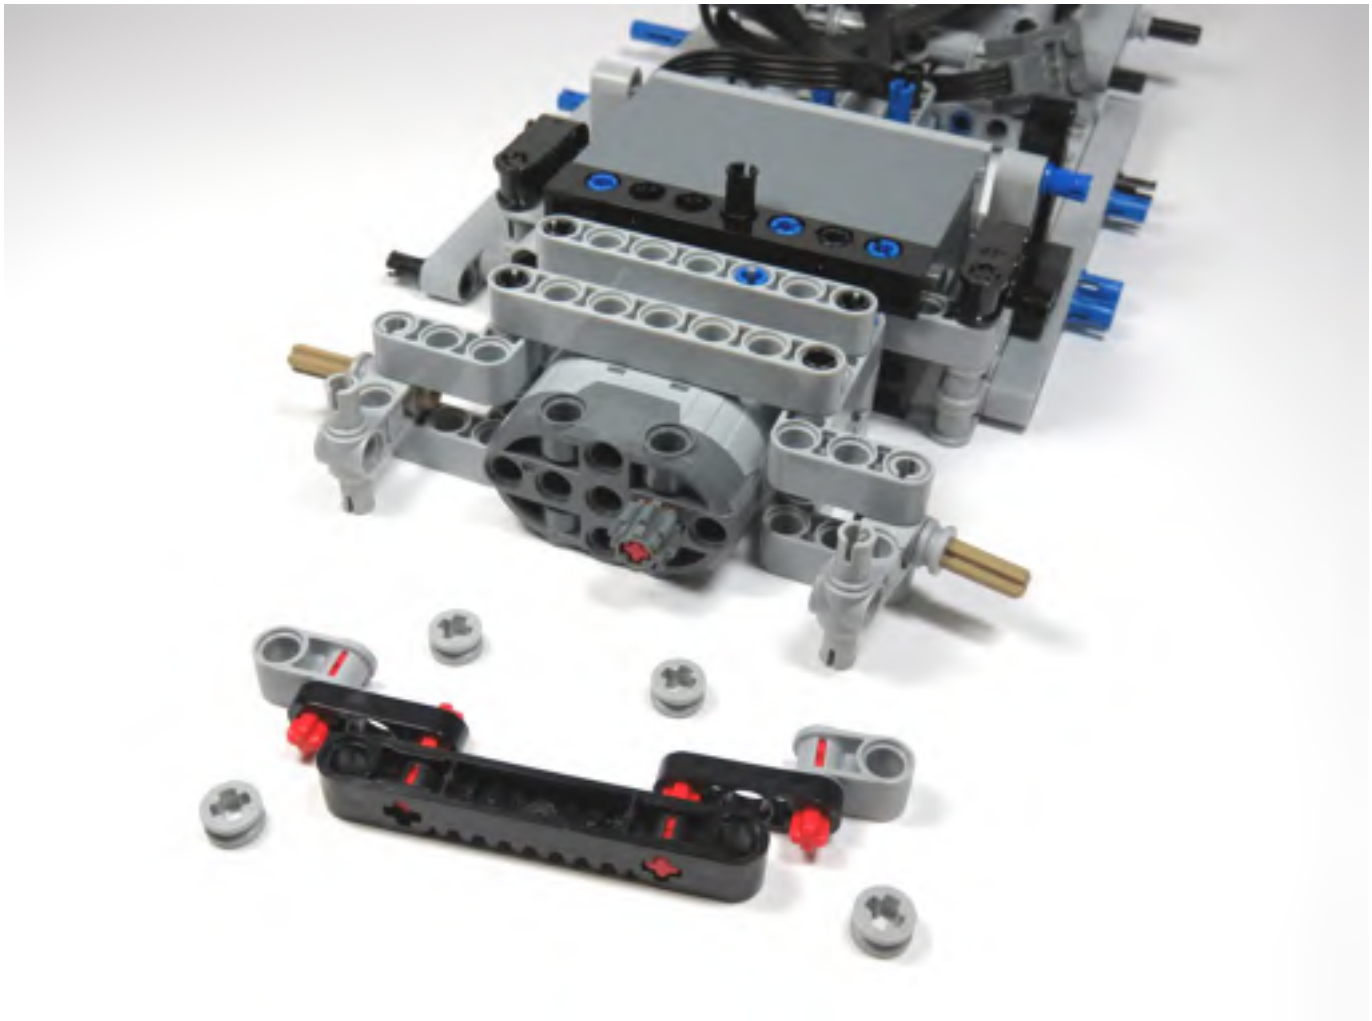

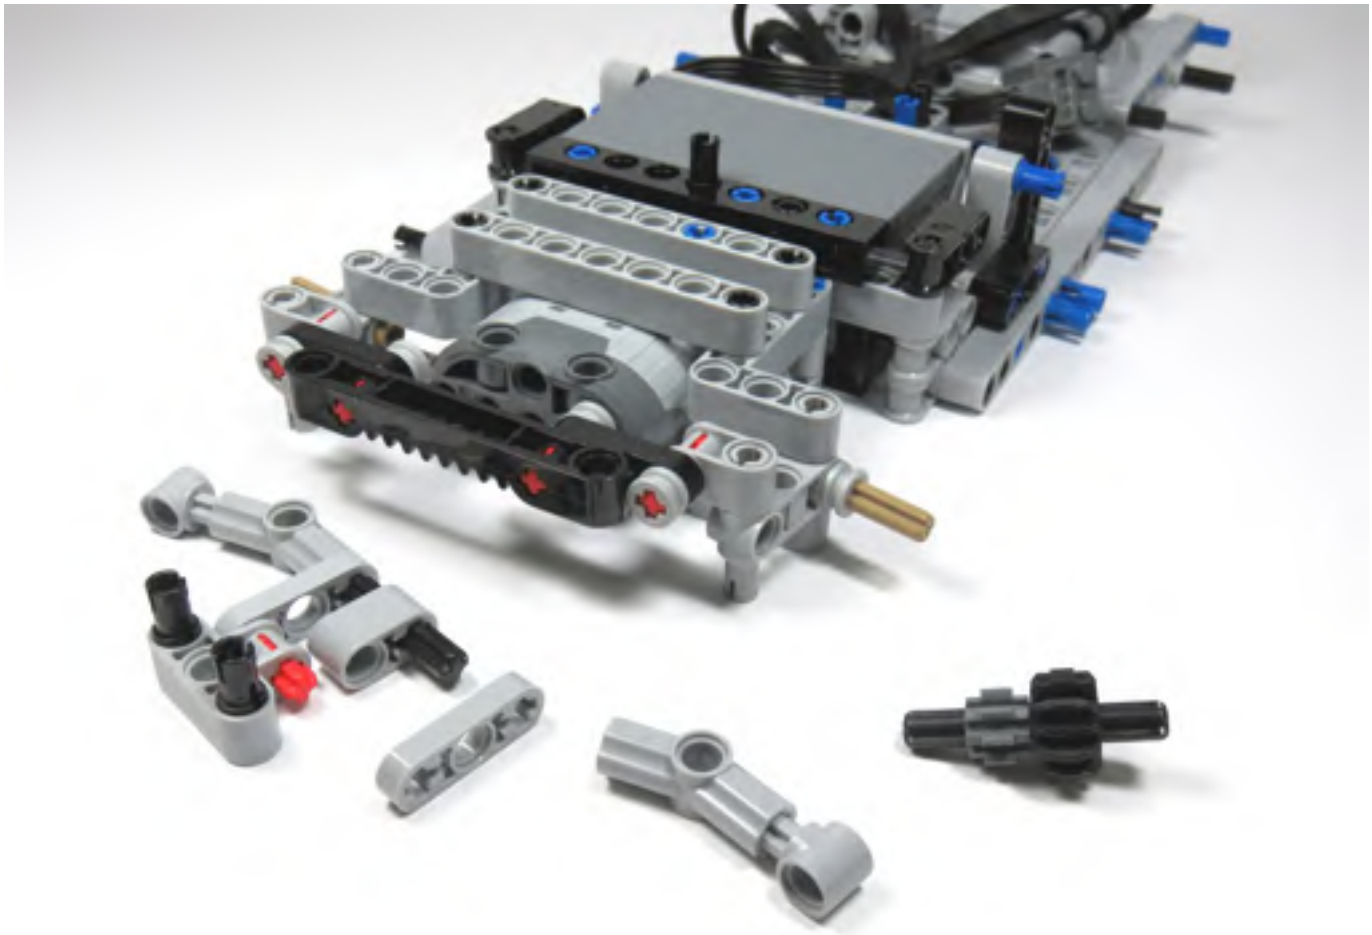

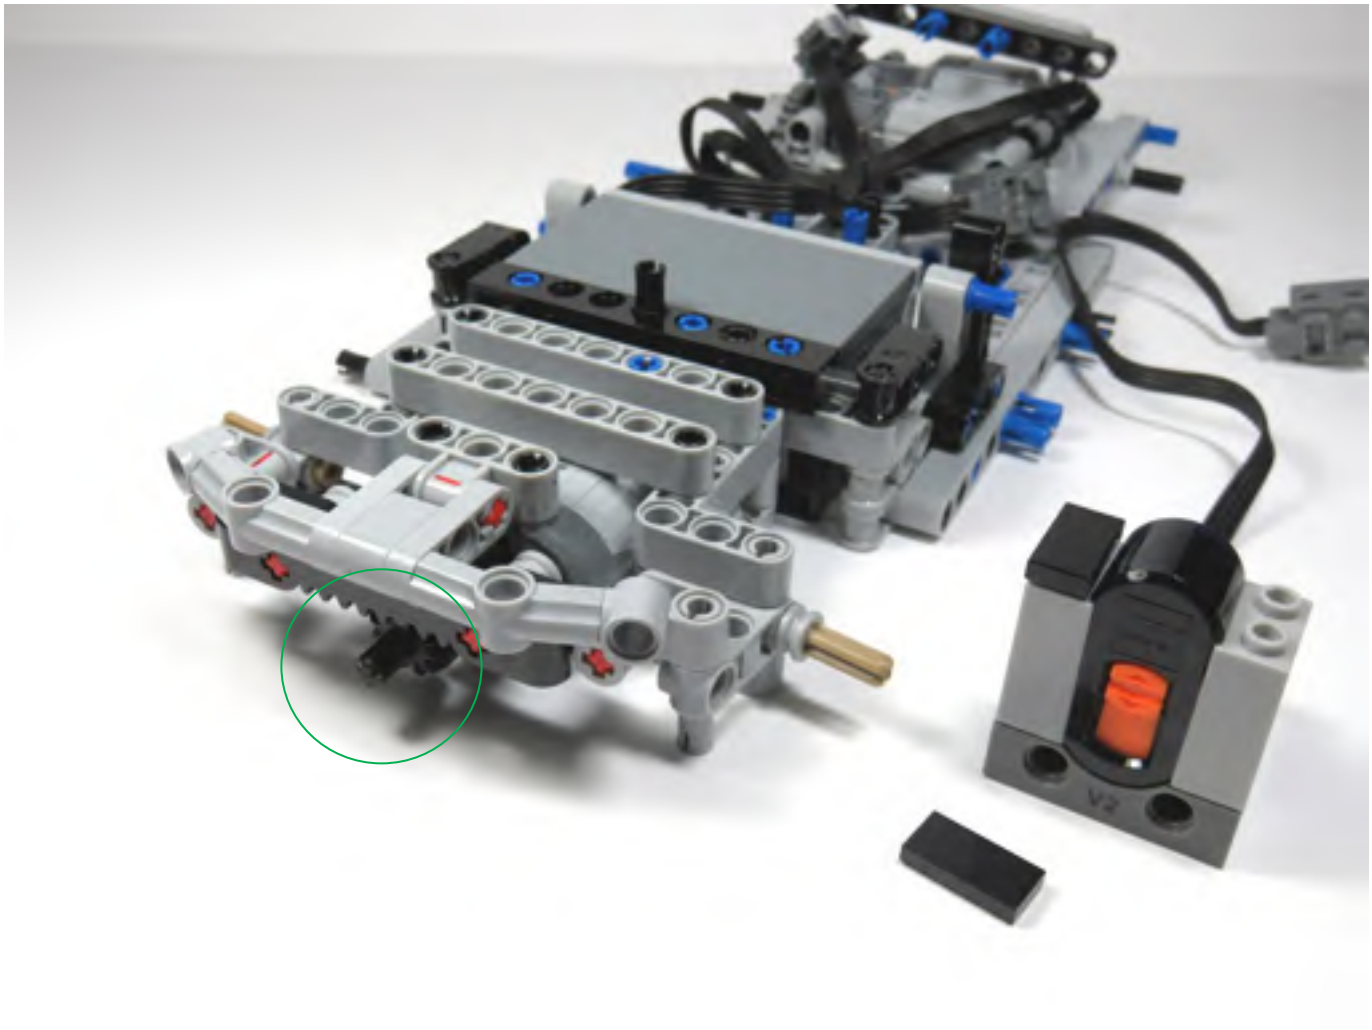

Make sure steering is centred

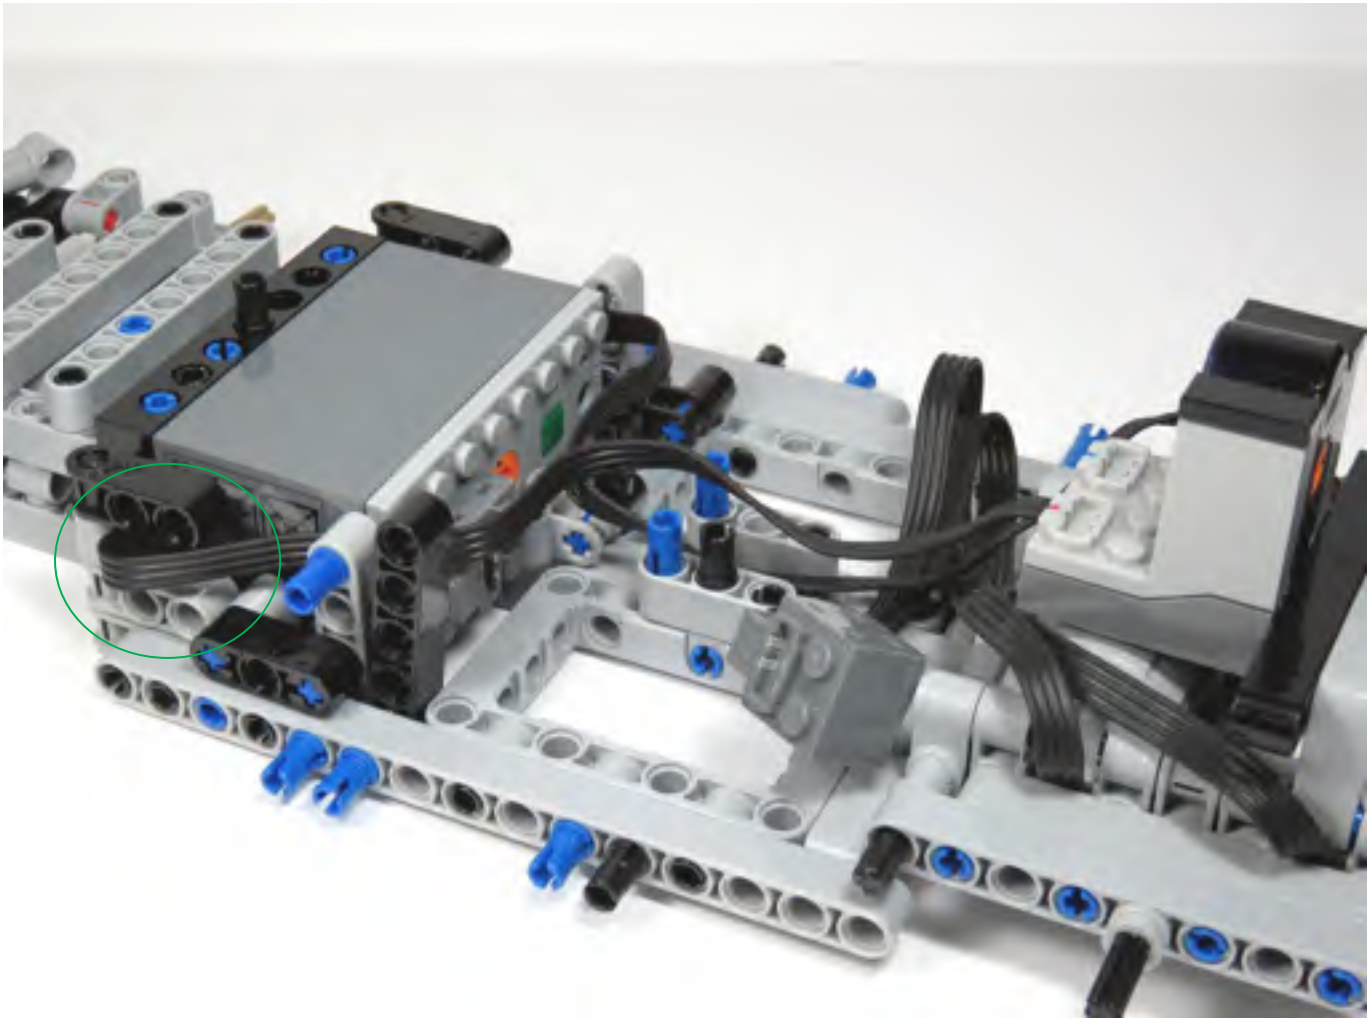

IR receiver cable runs up through the centre, then to circled area, then to battery

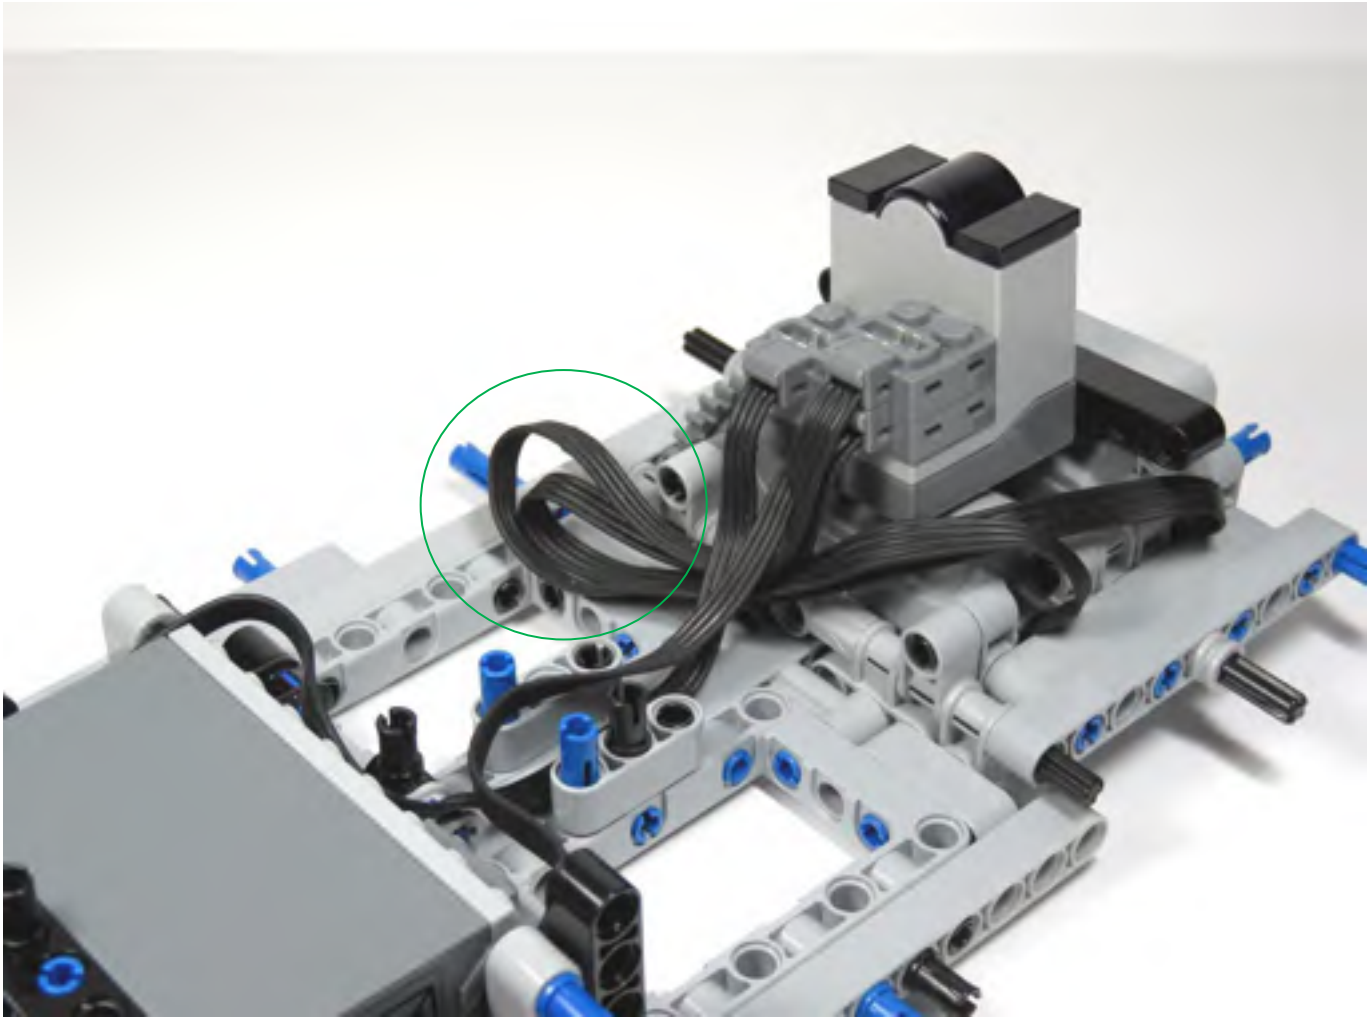

Run L Motor cables to circled area. // Connect PFs to IR receiver

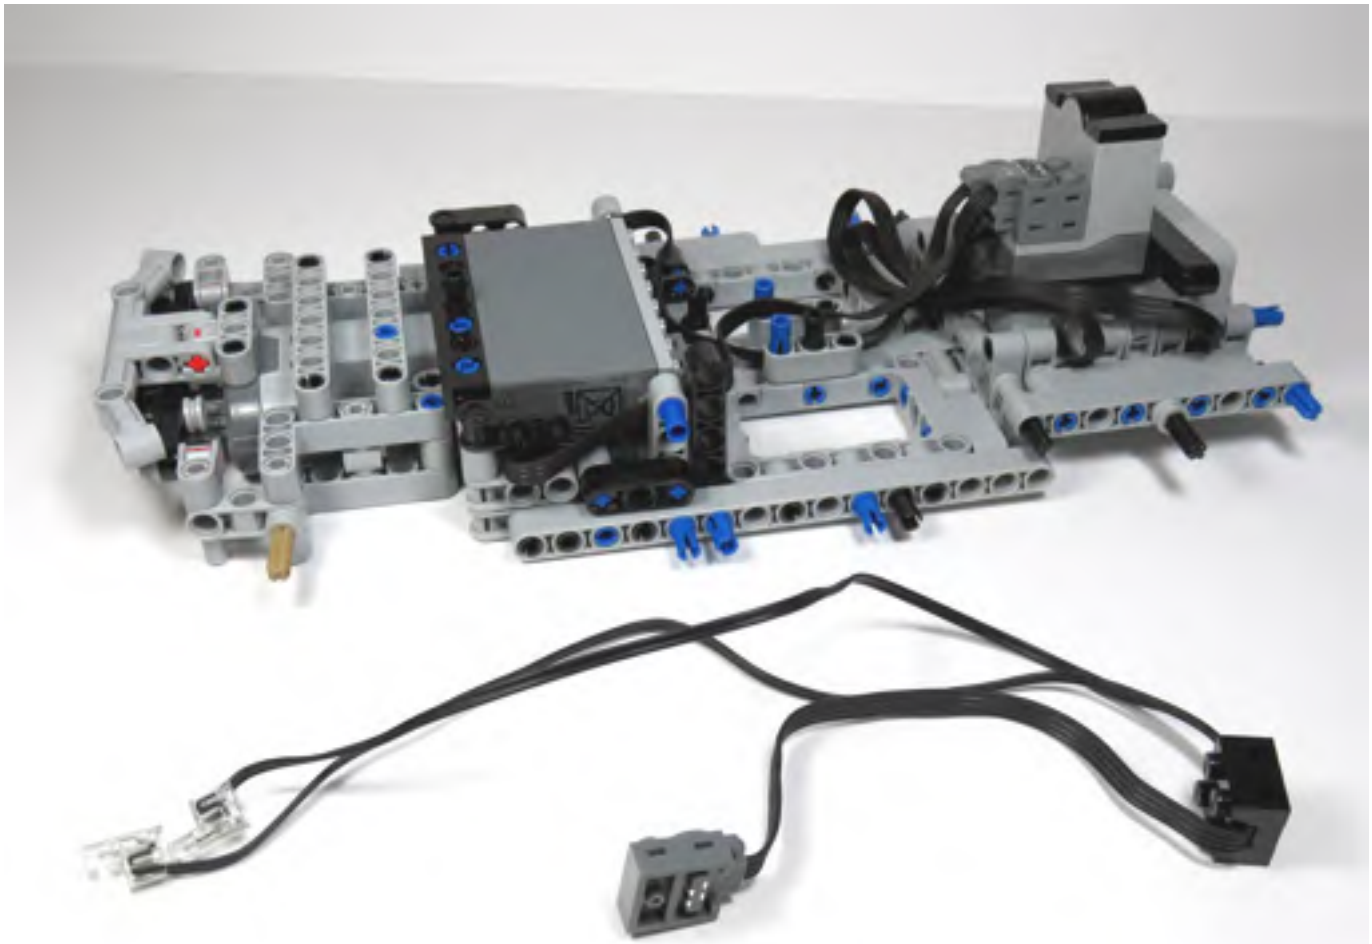

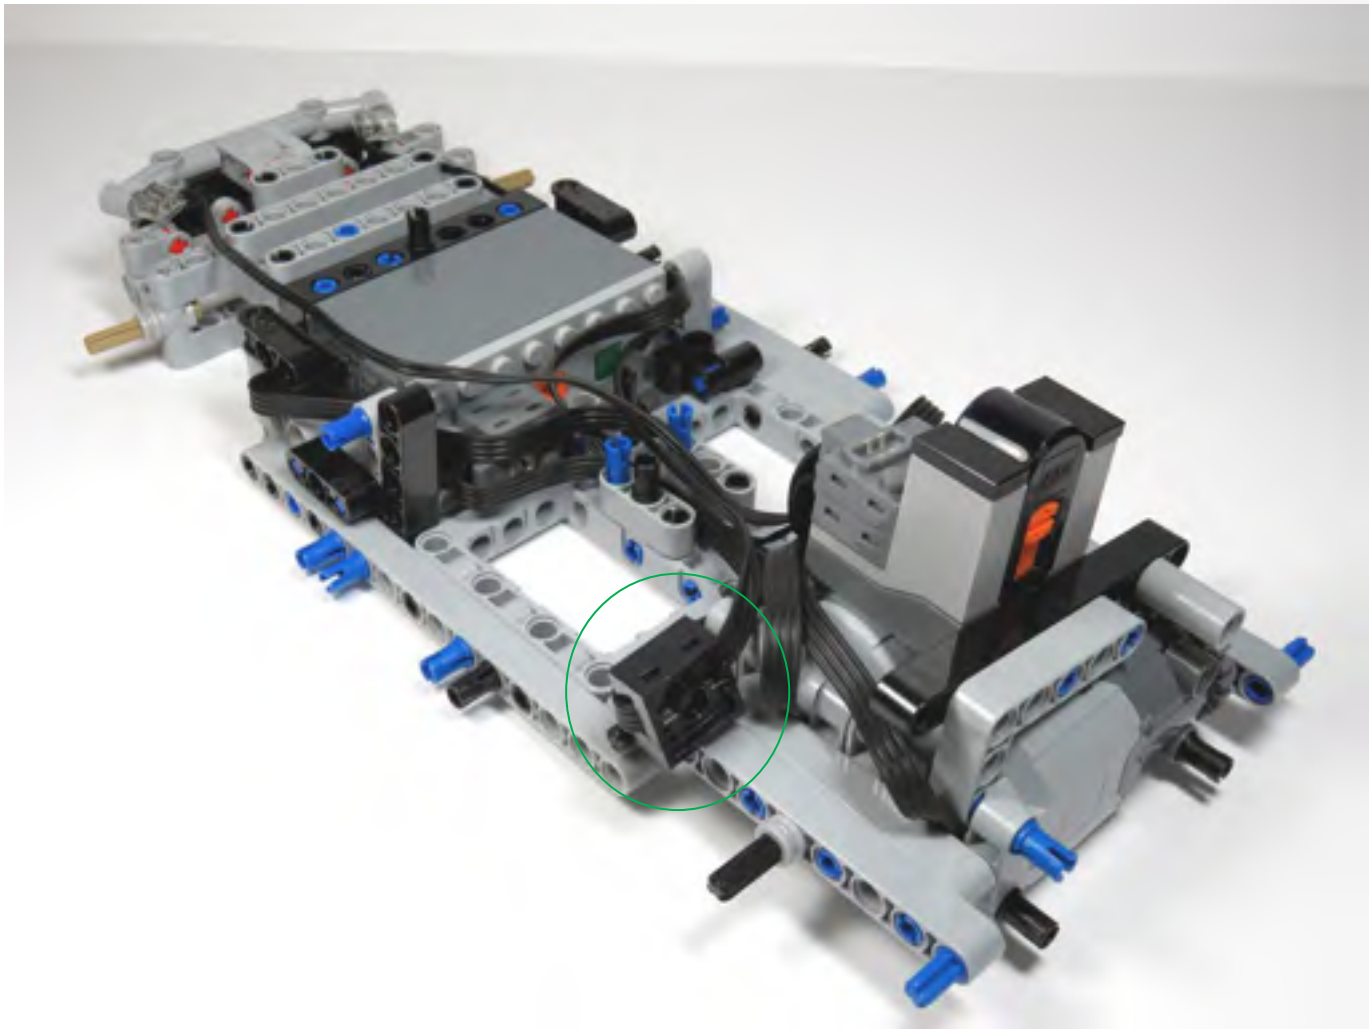

Circled LED light square needs to be in this position, it gets connected later on.

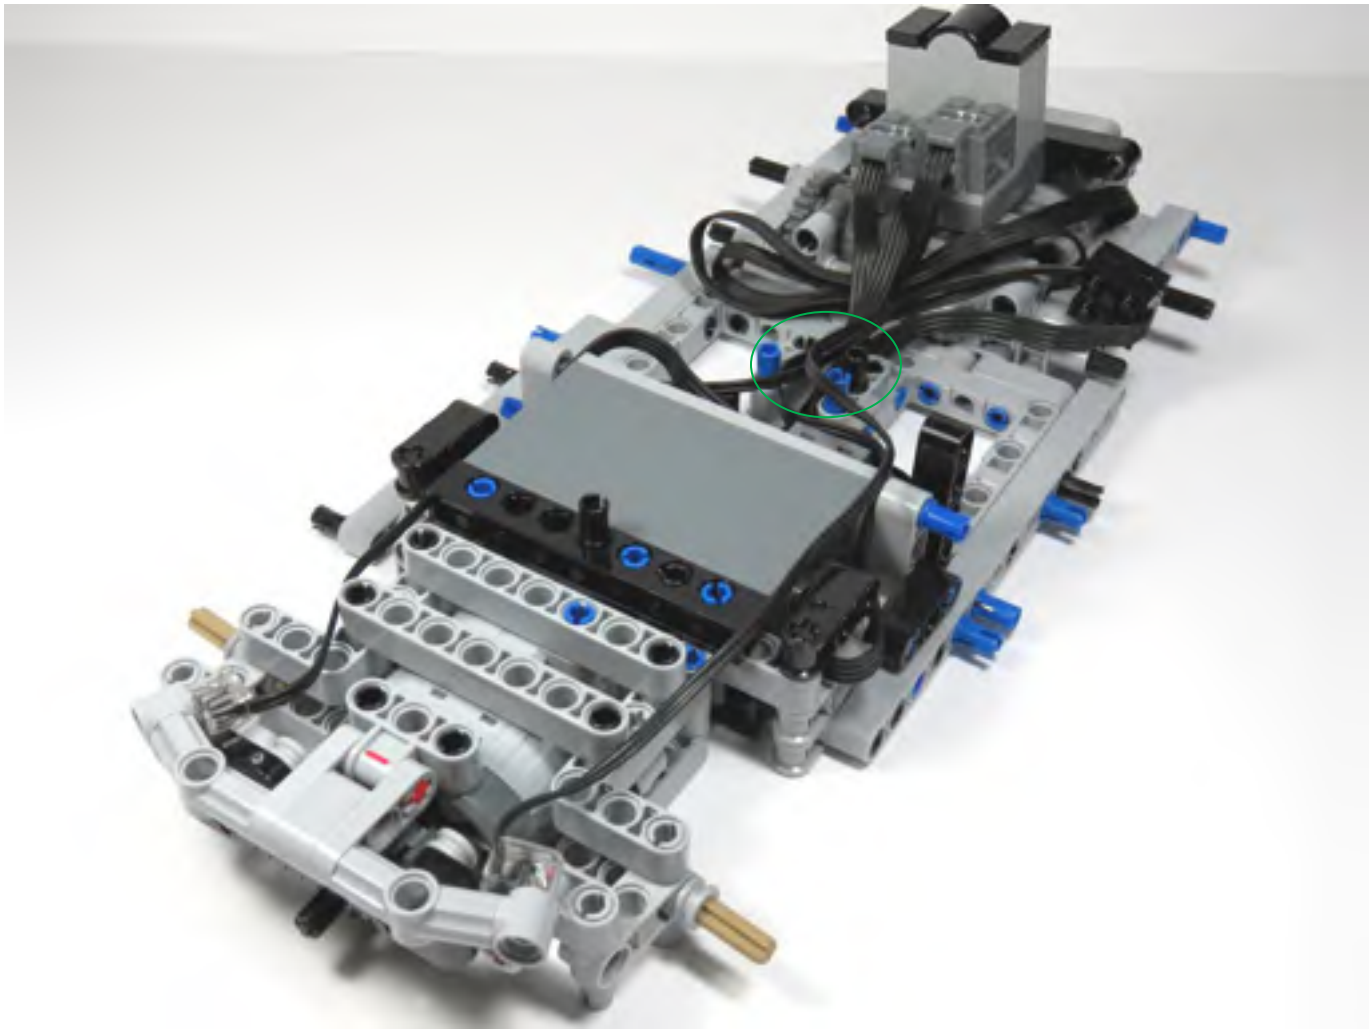

It's important to run the cables through the centre part.

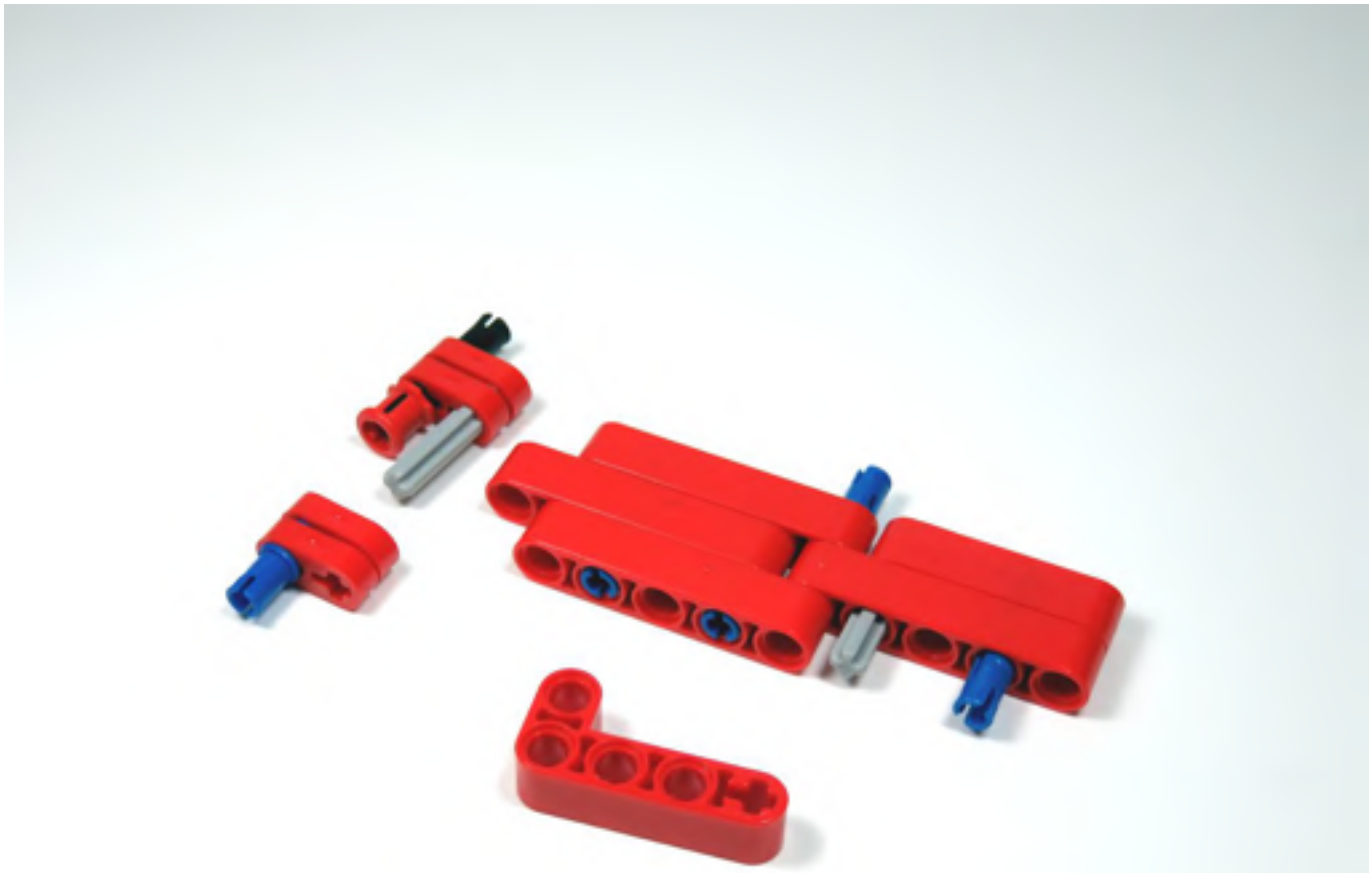

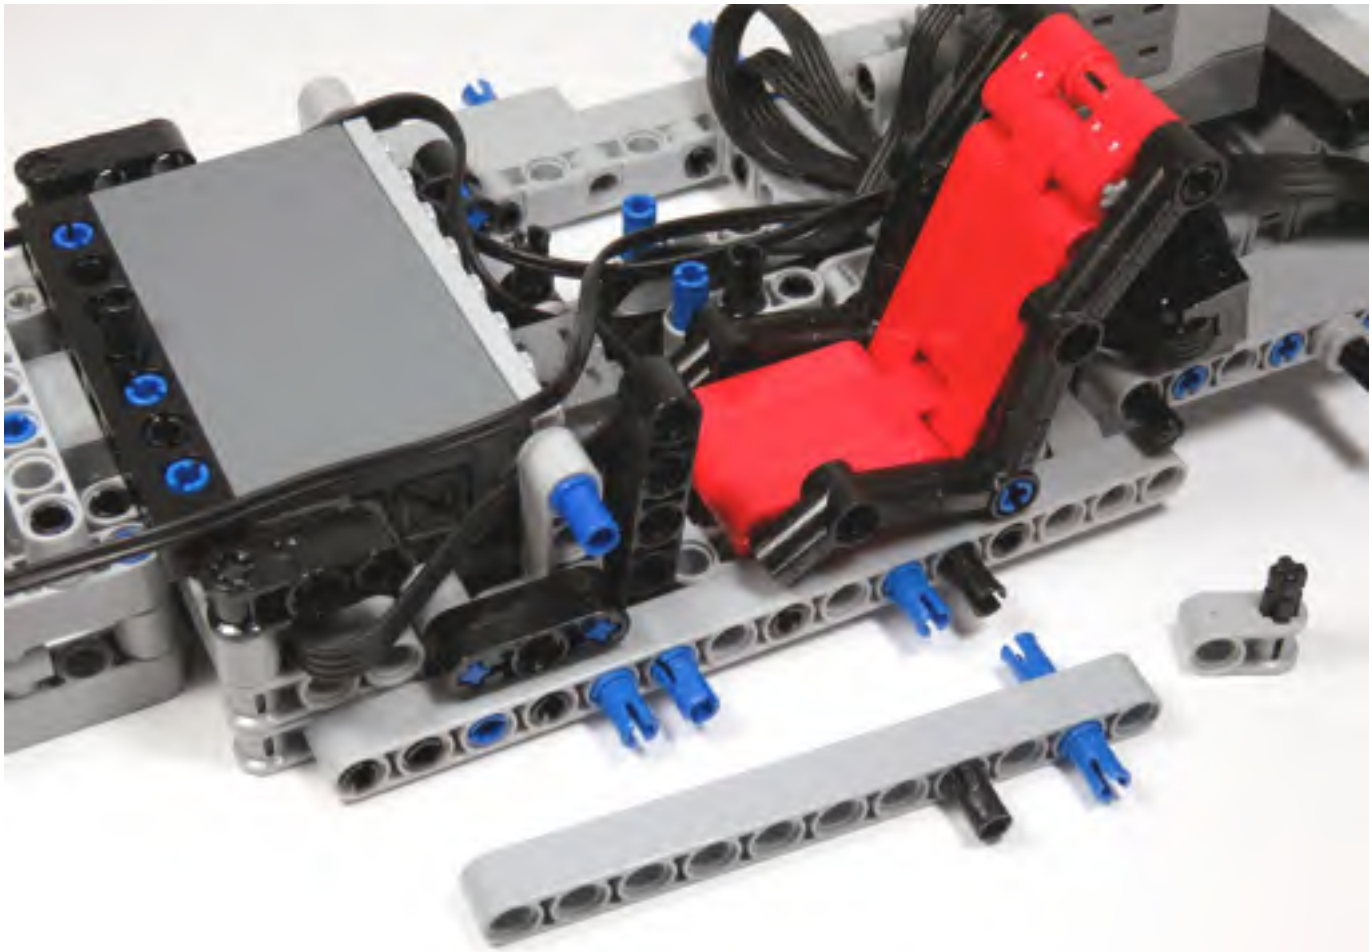

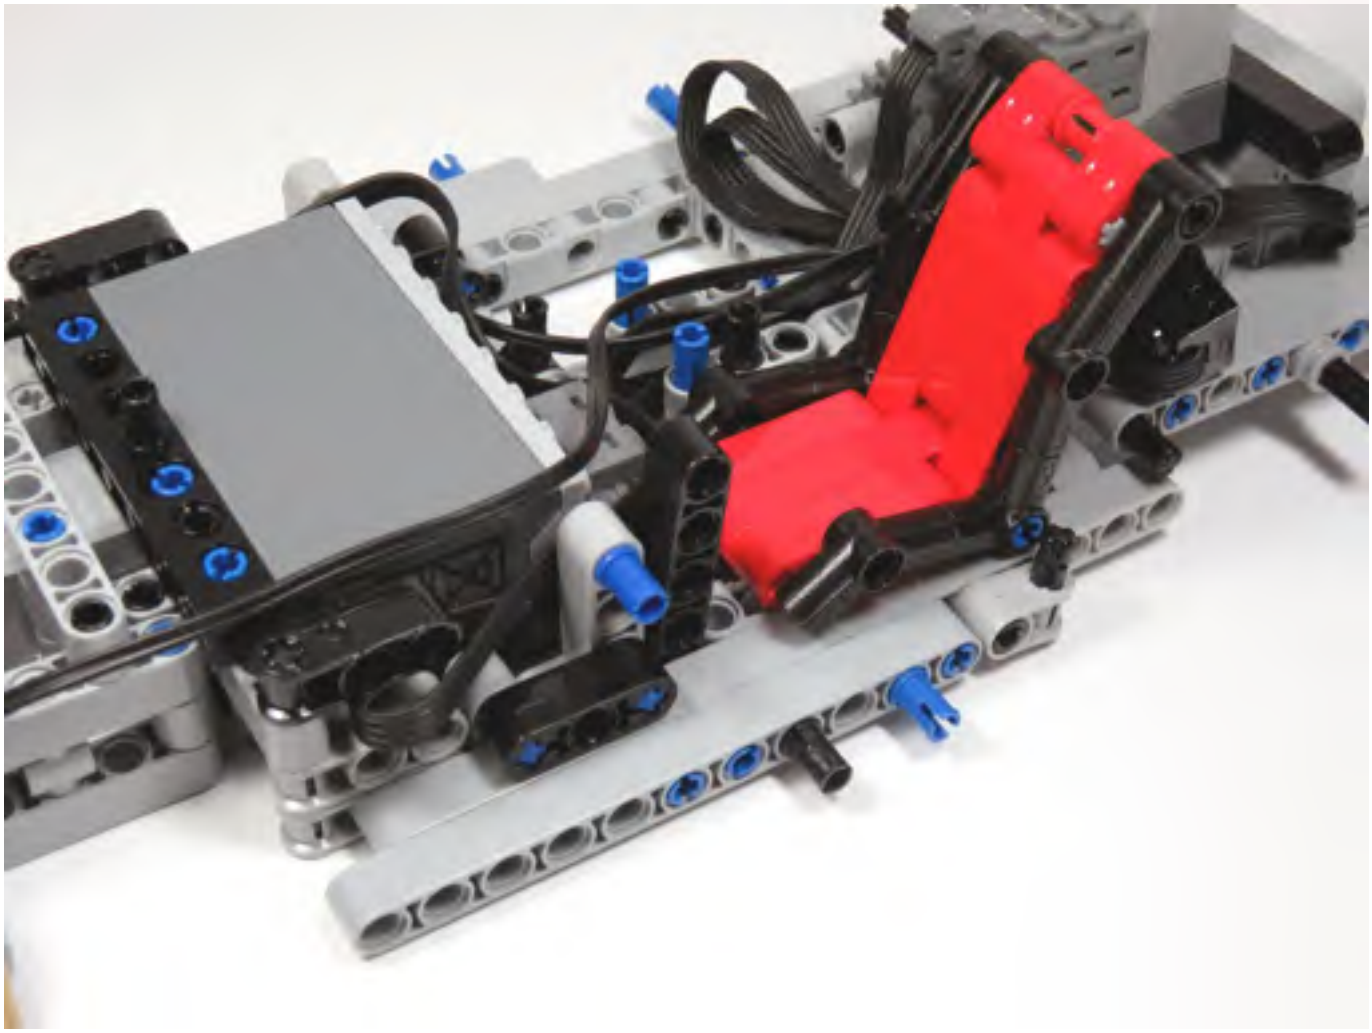

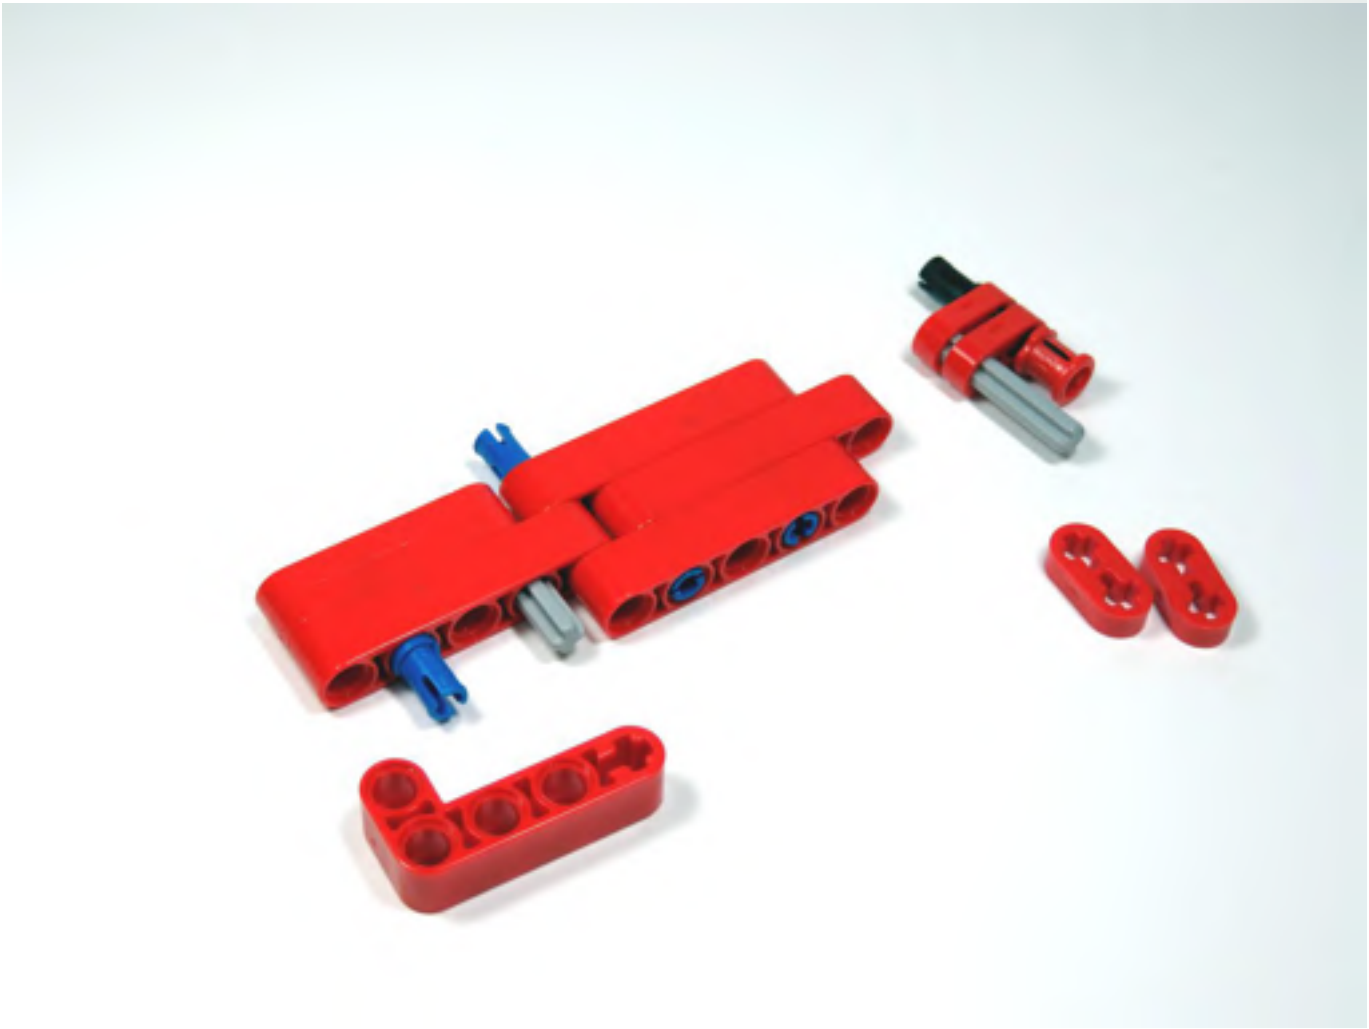

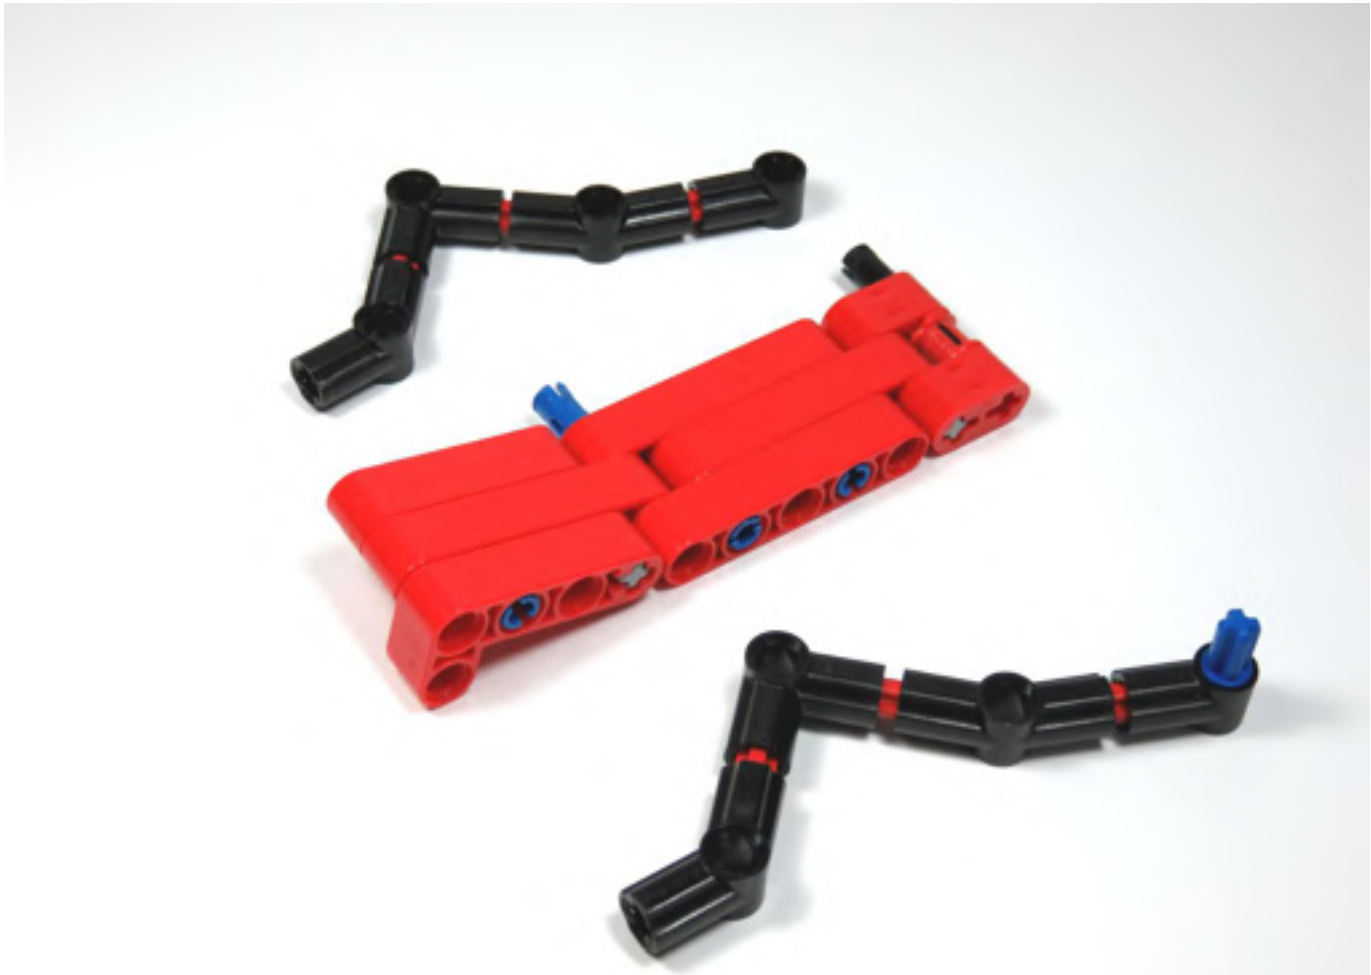

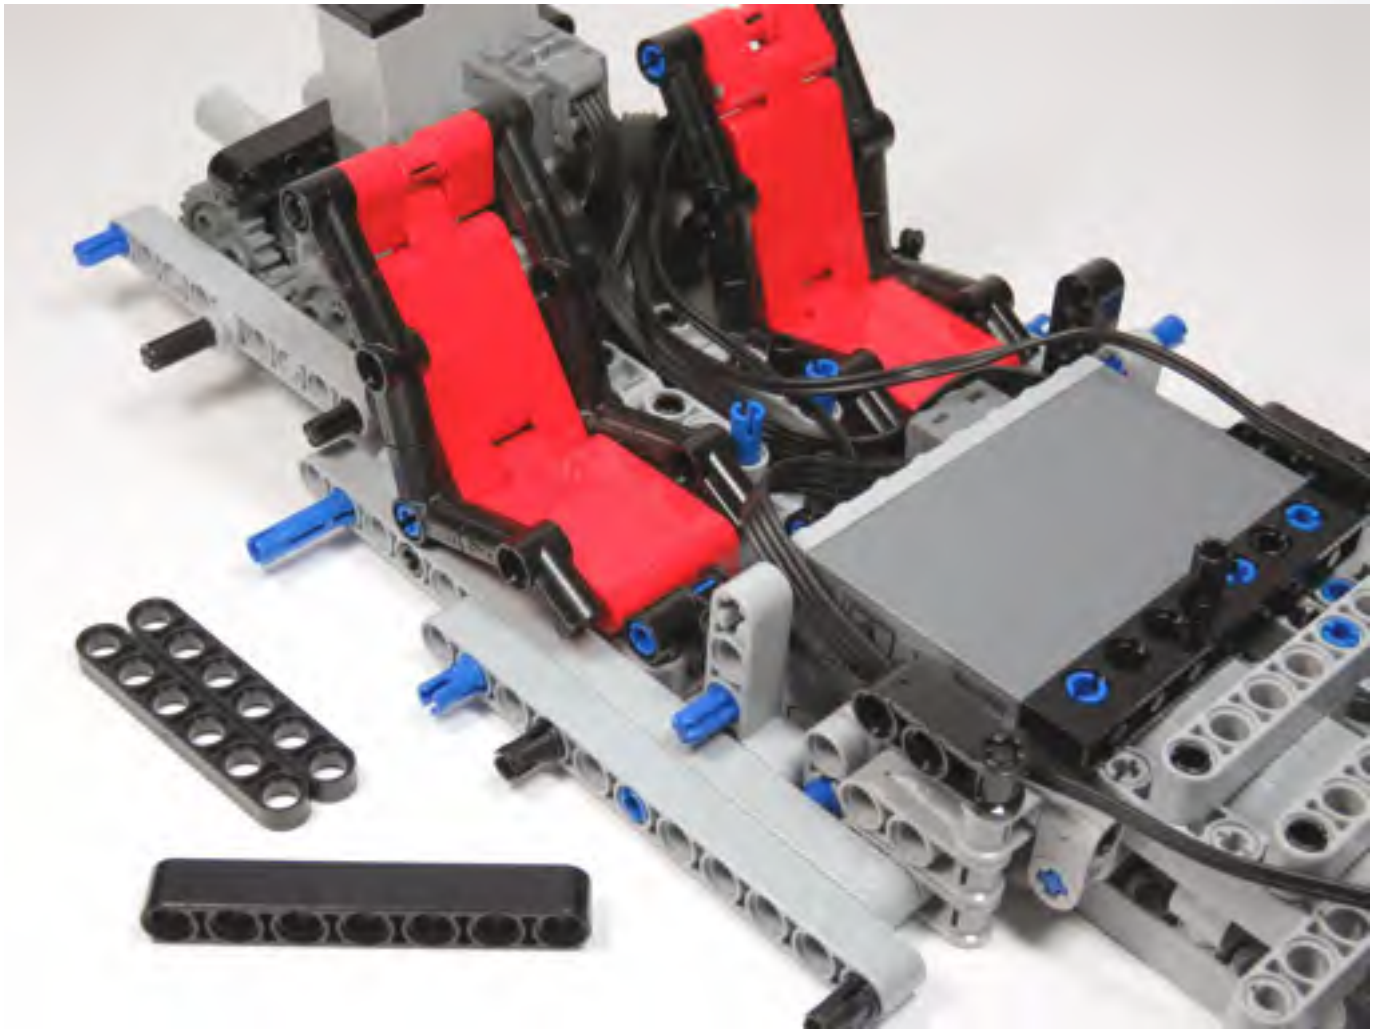

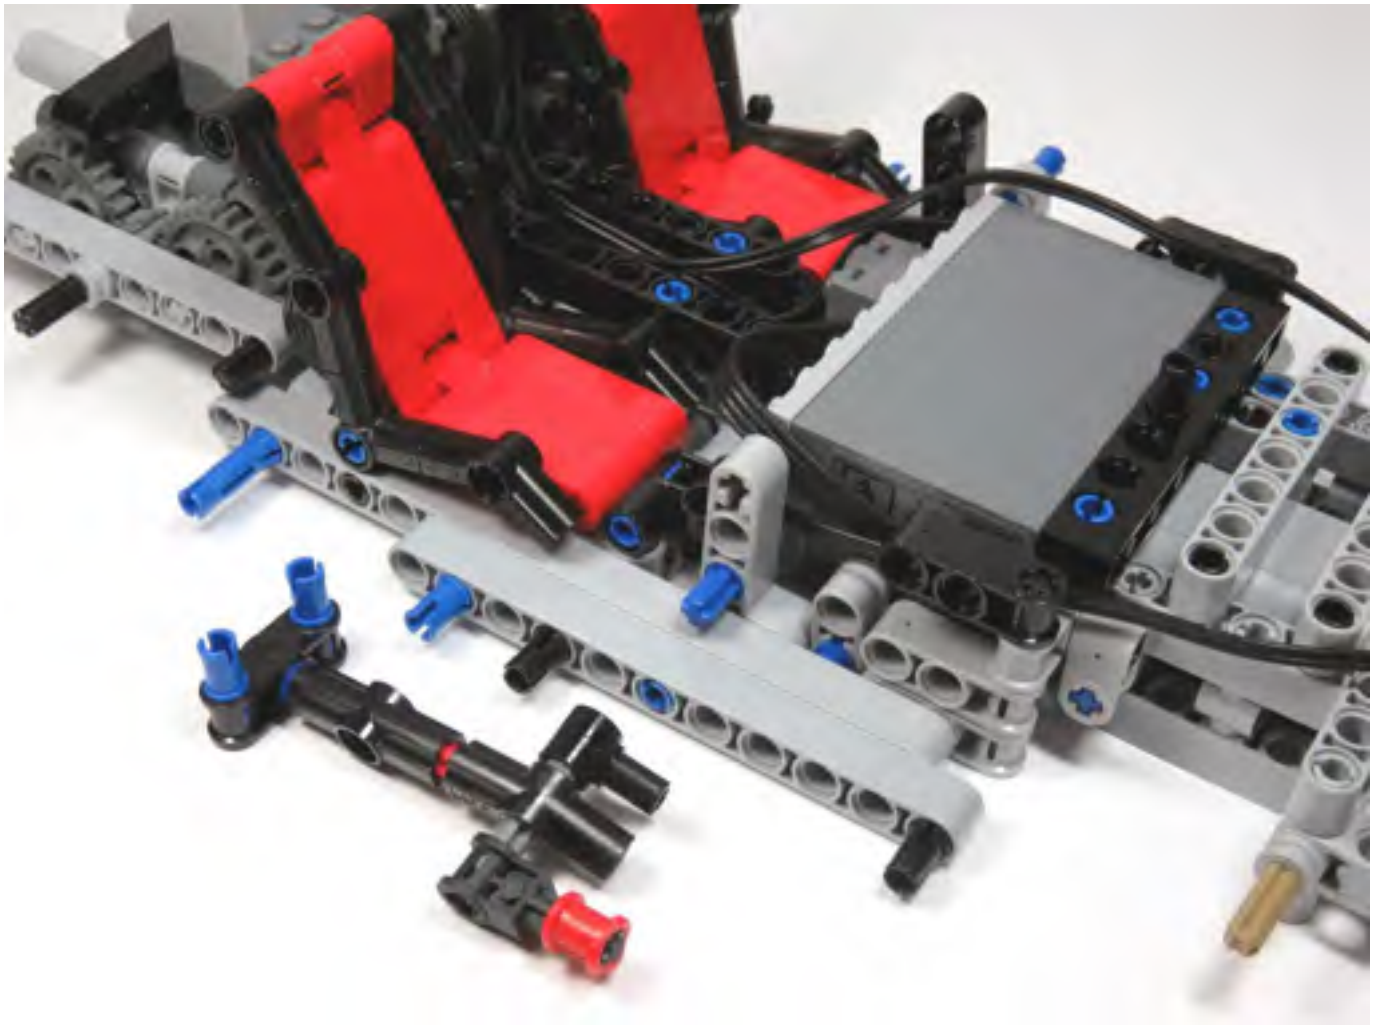

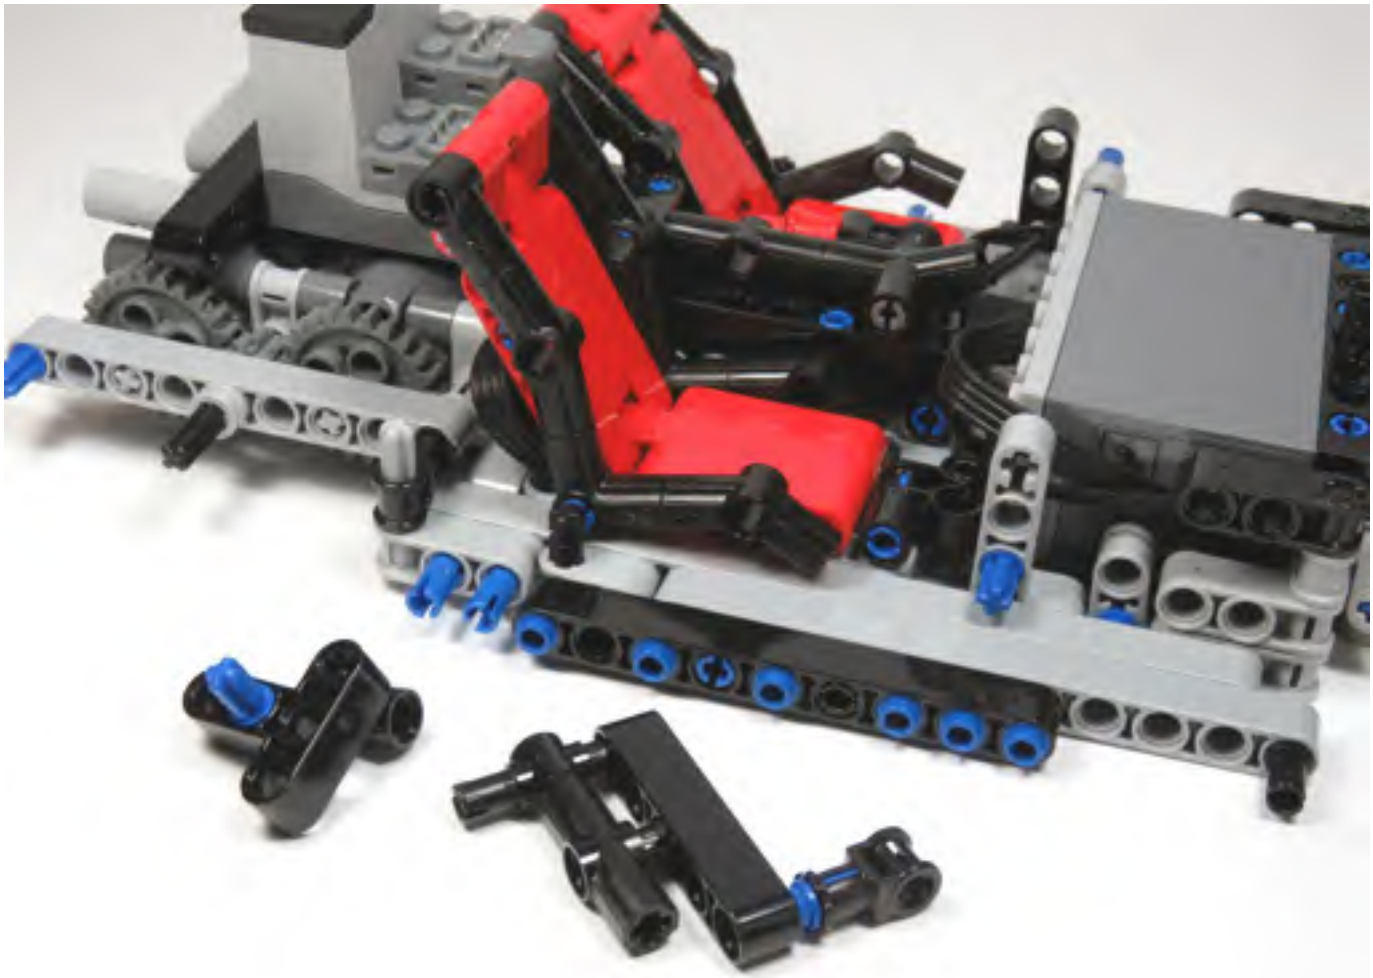

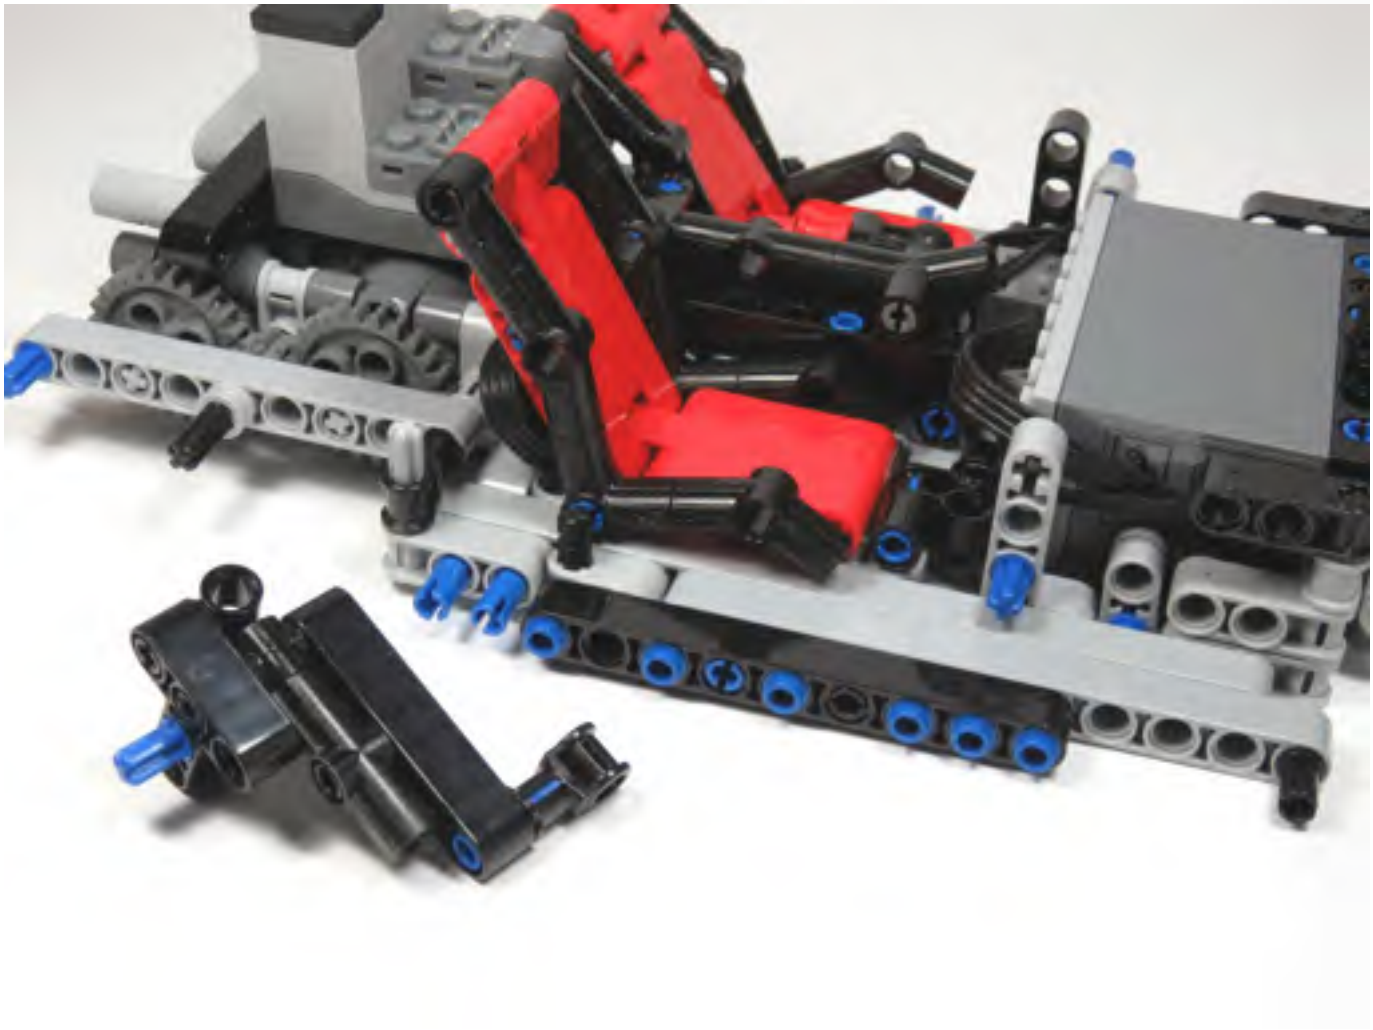

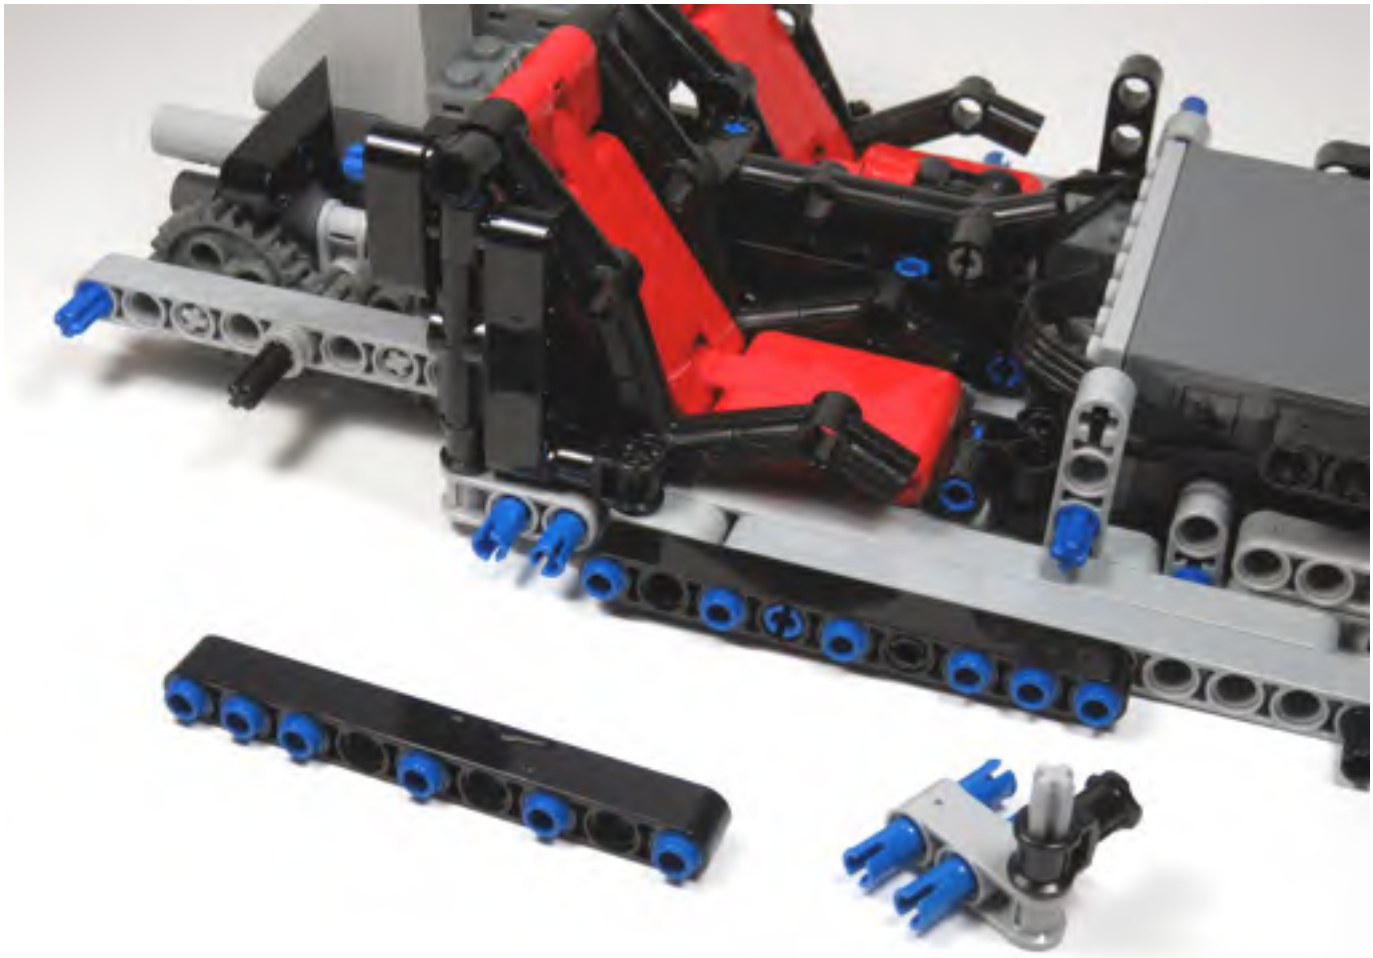

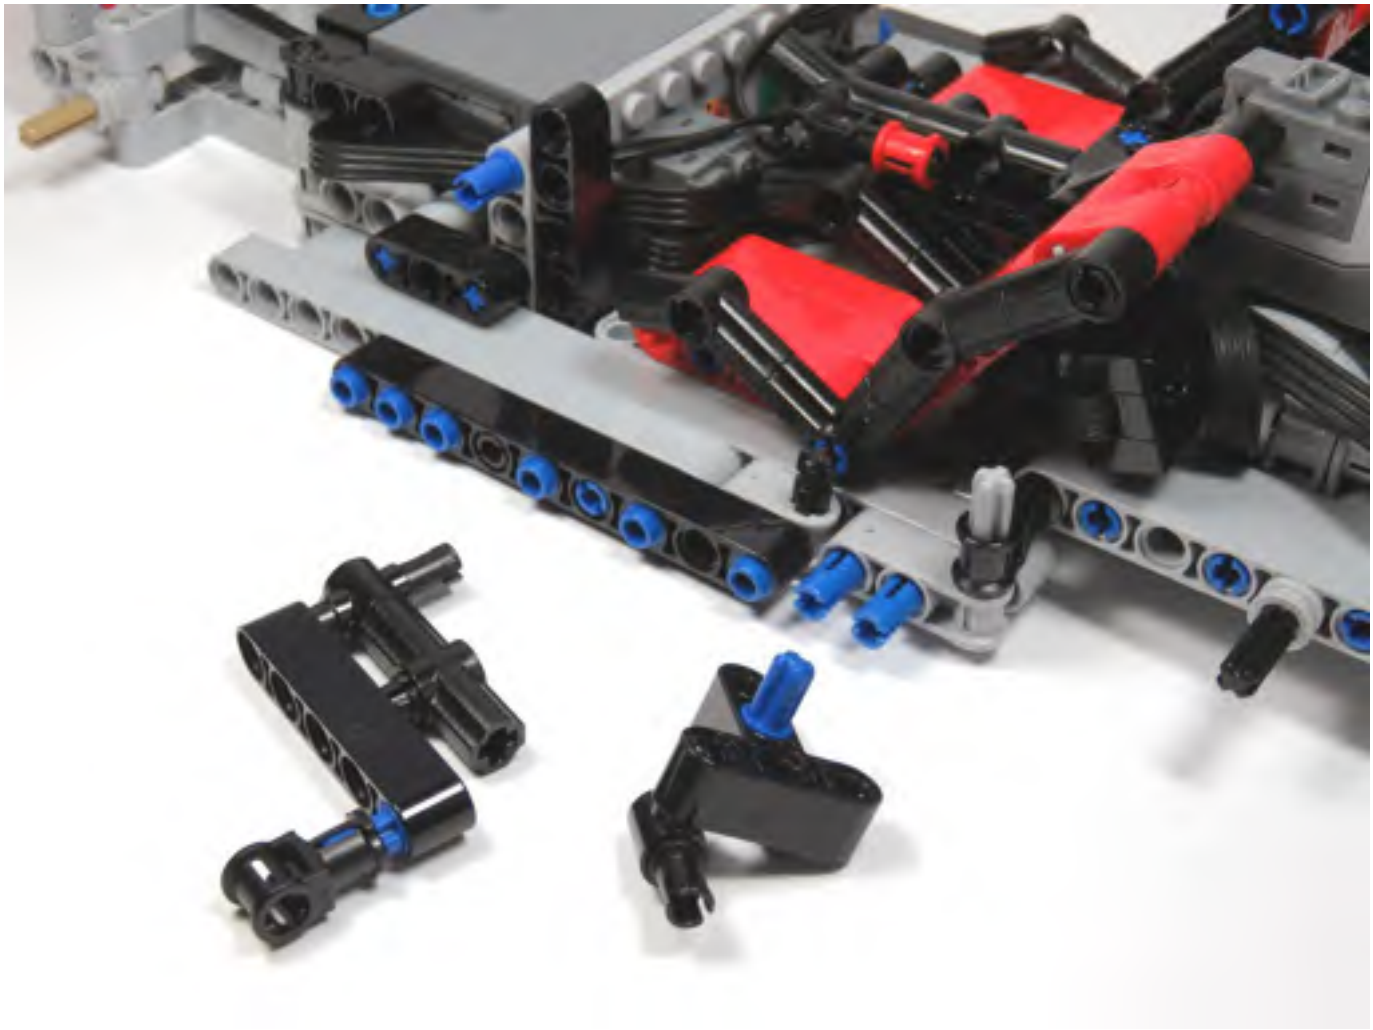

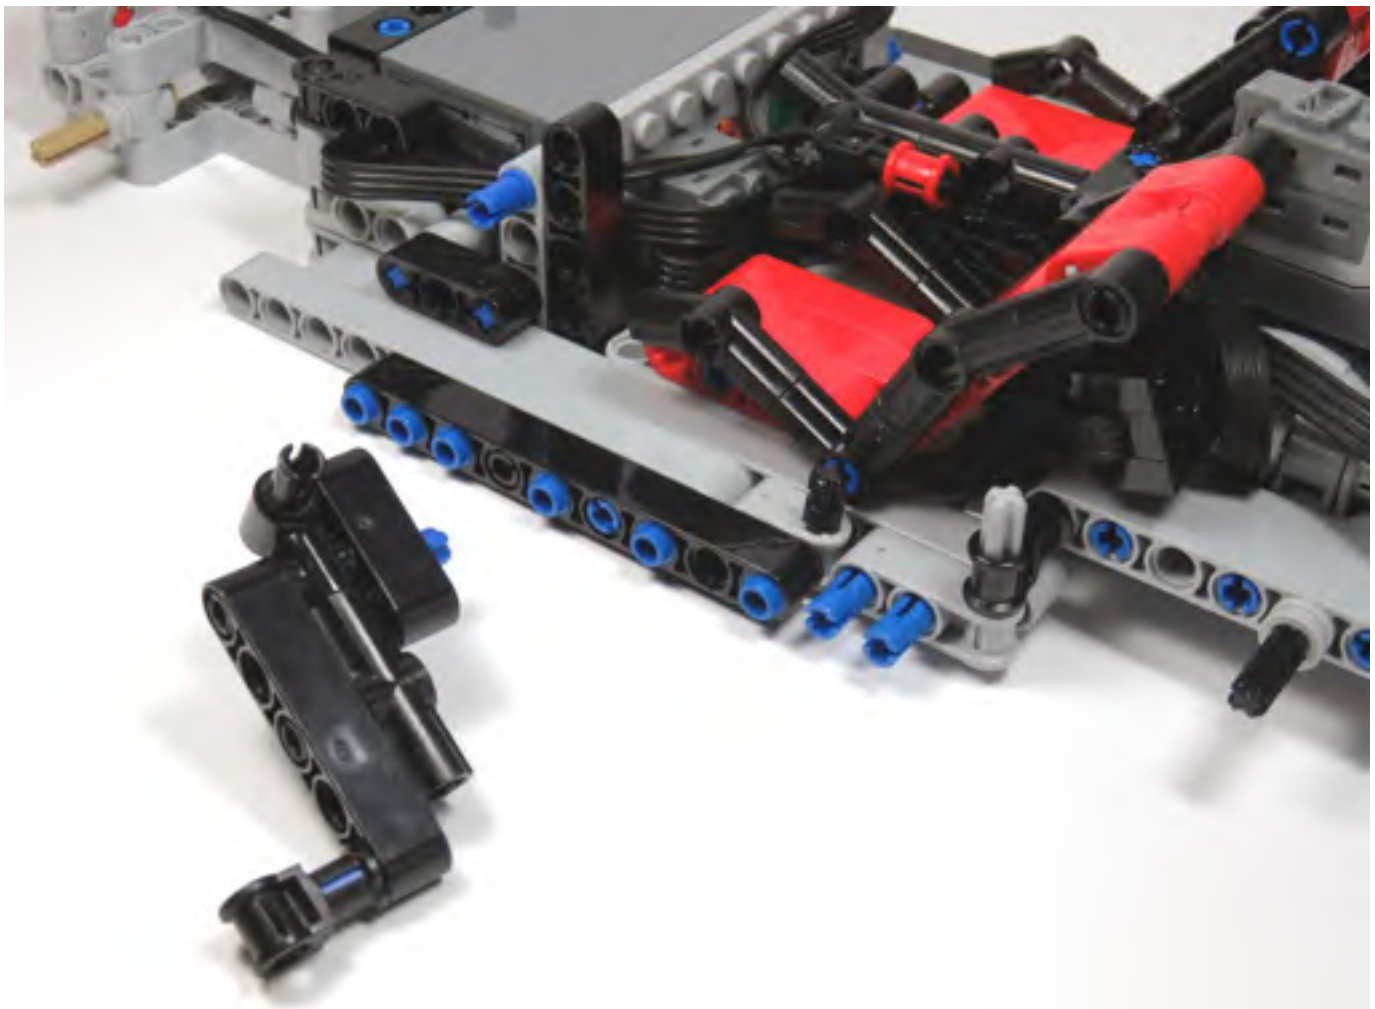

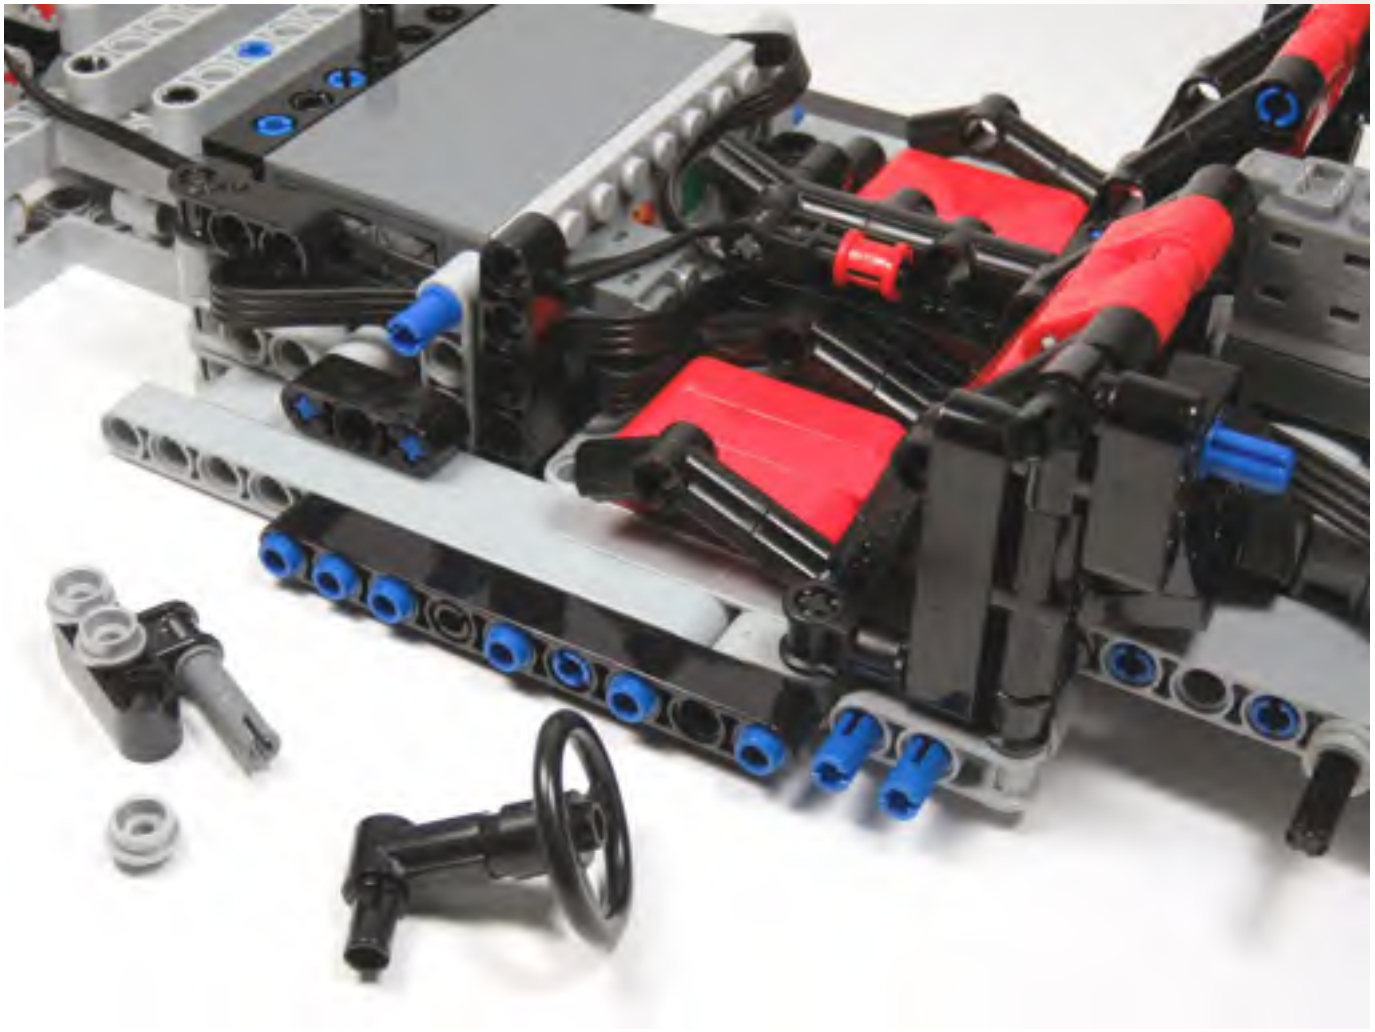

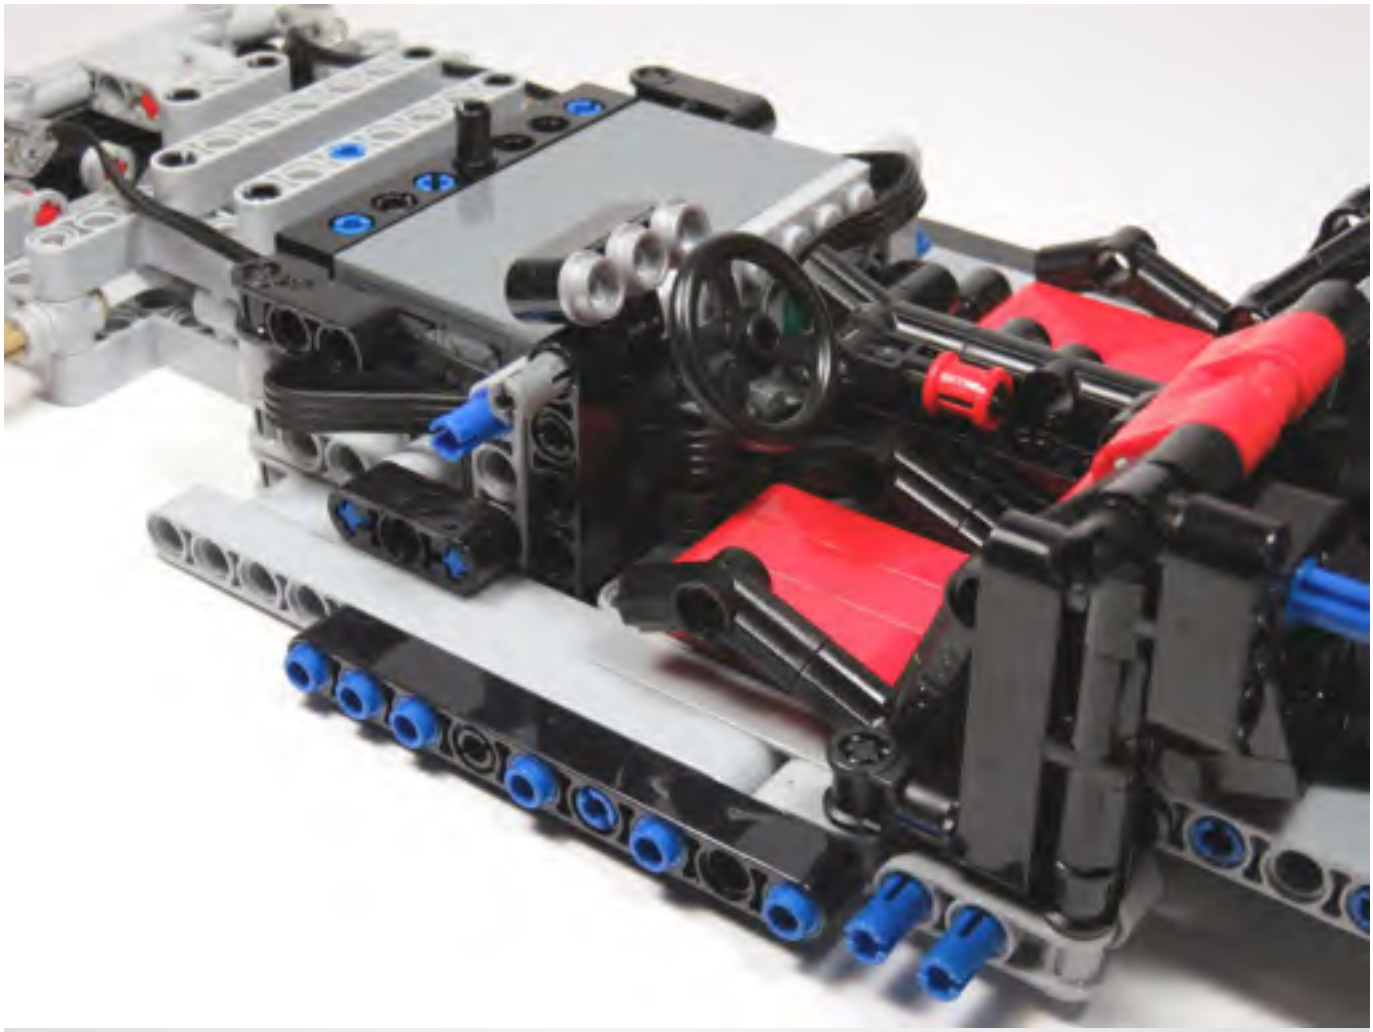

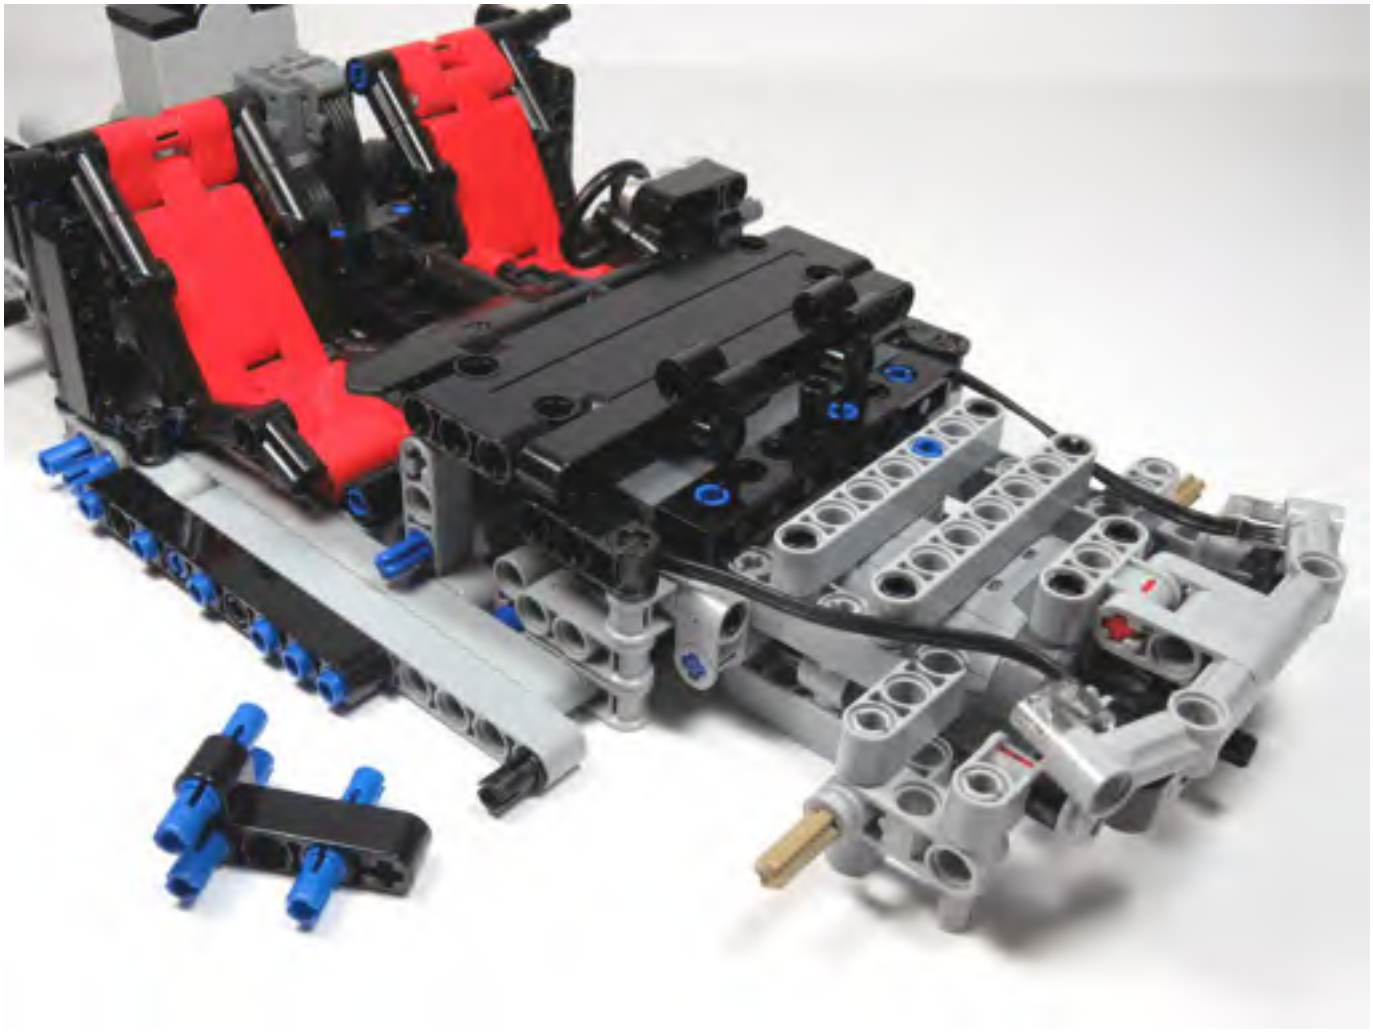

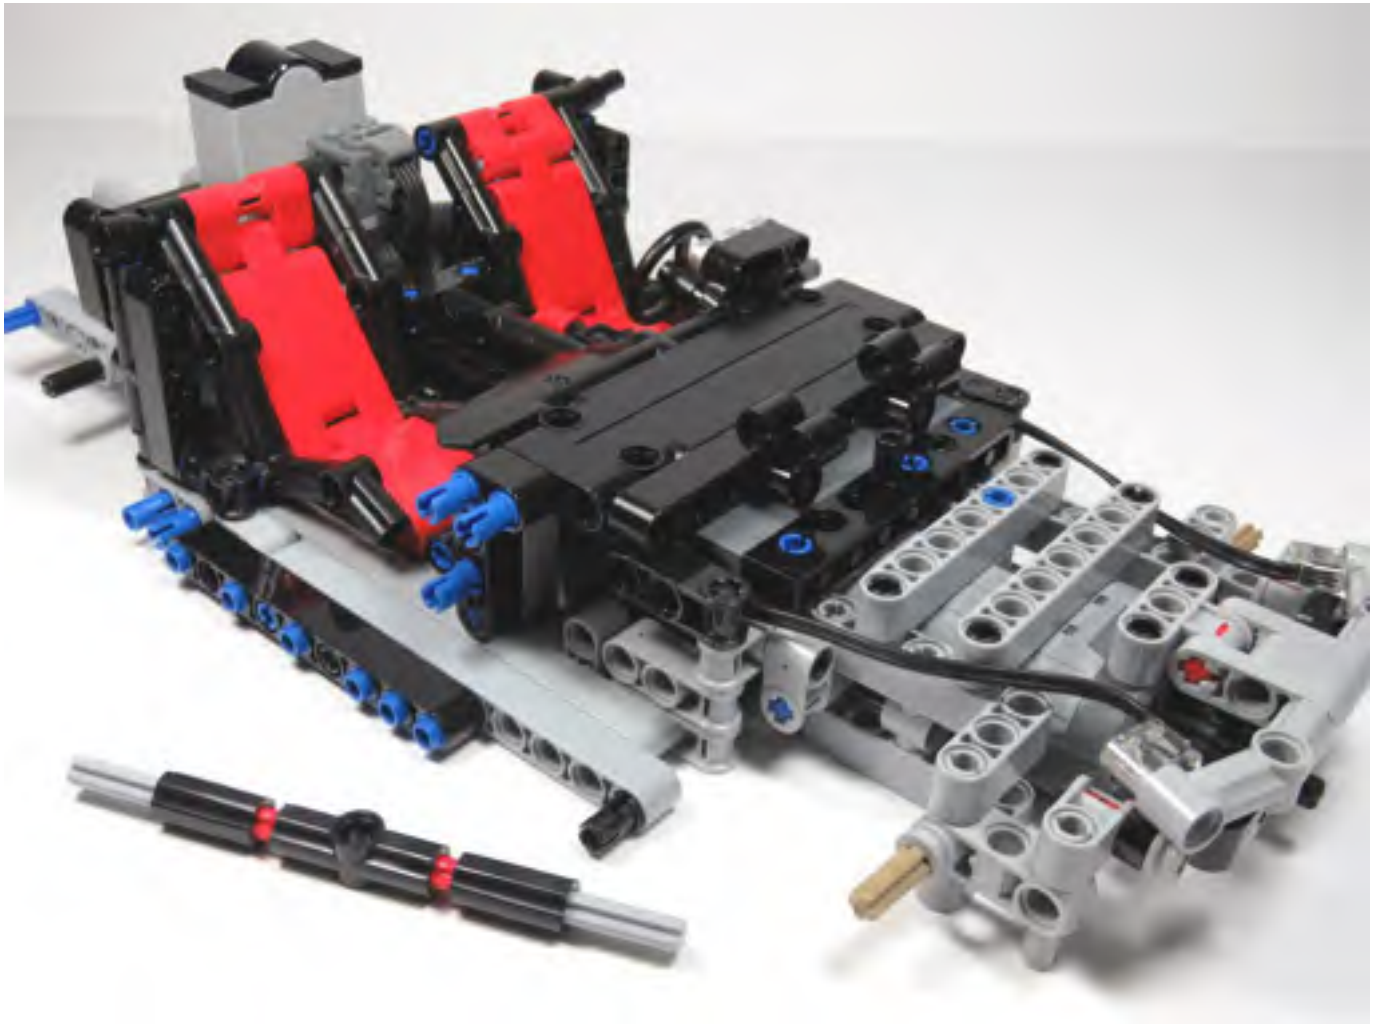

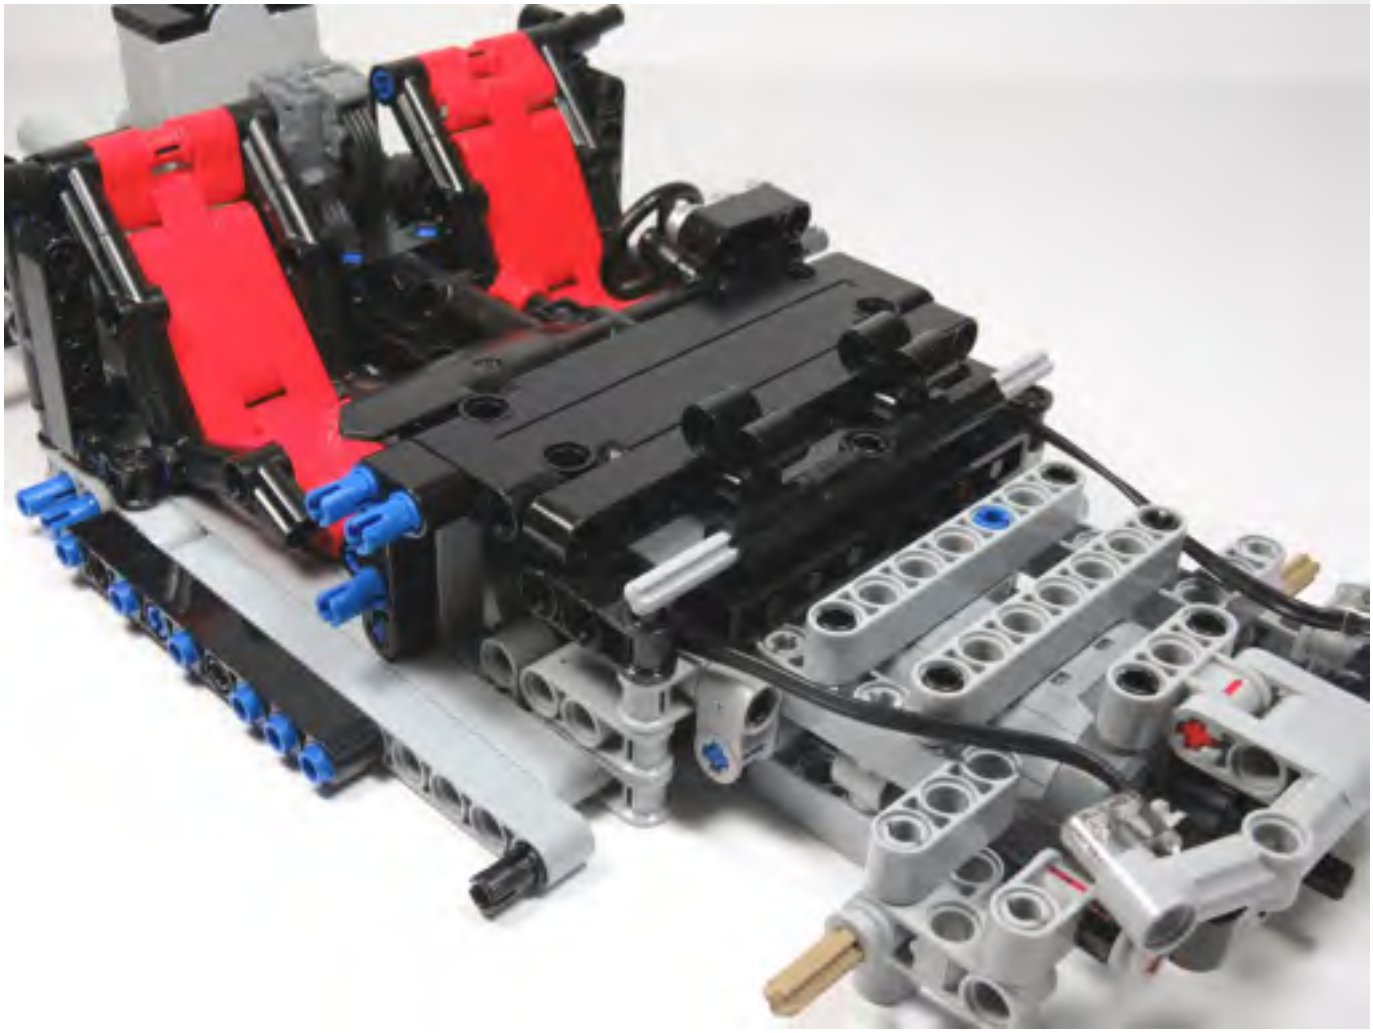

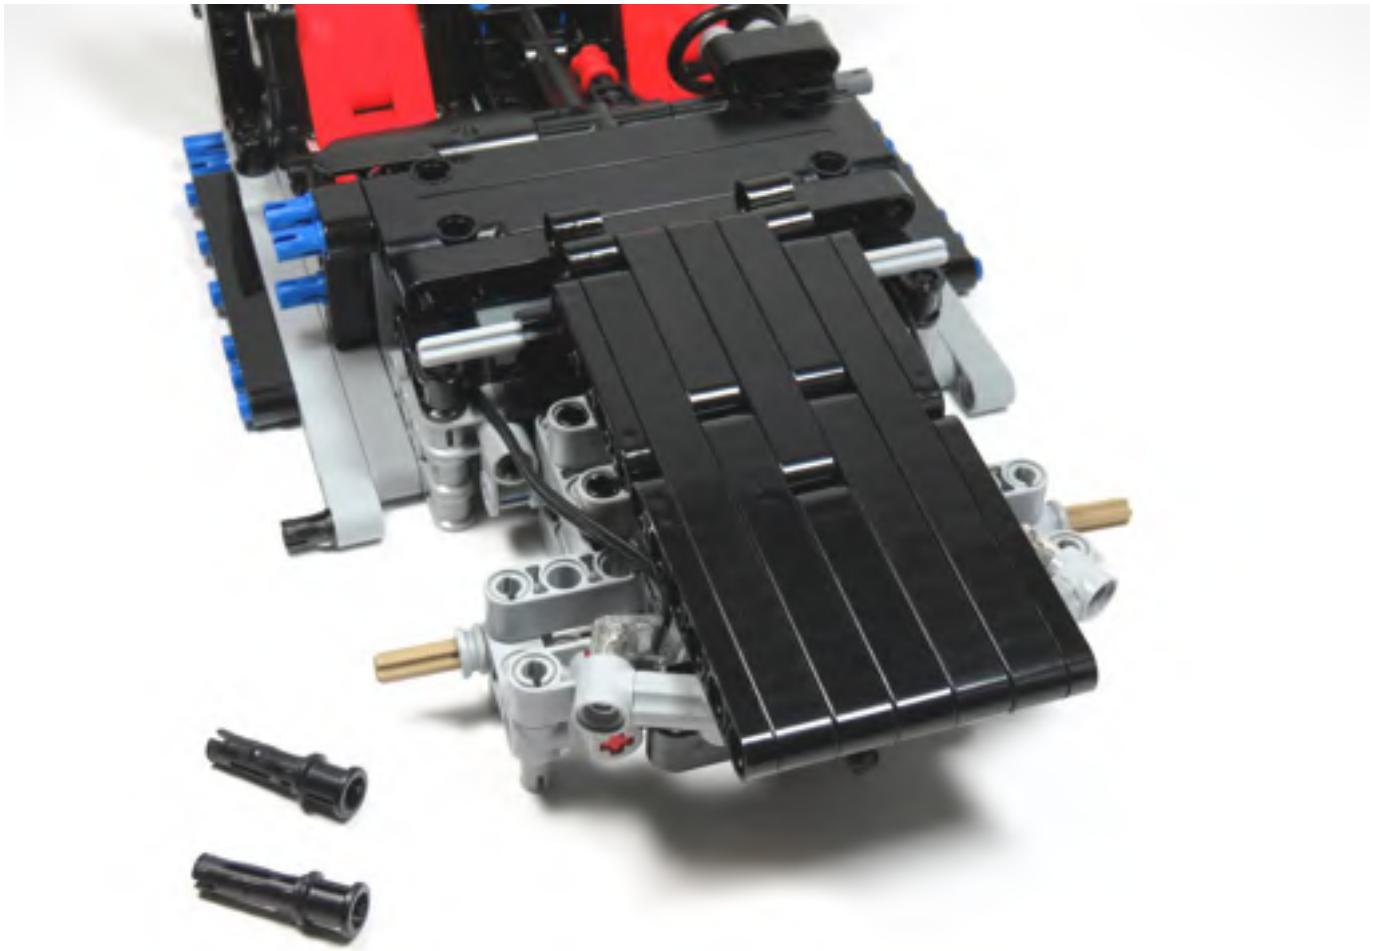

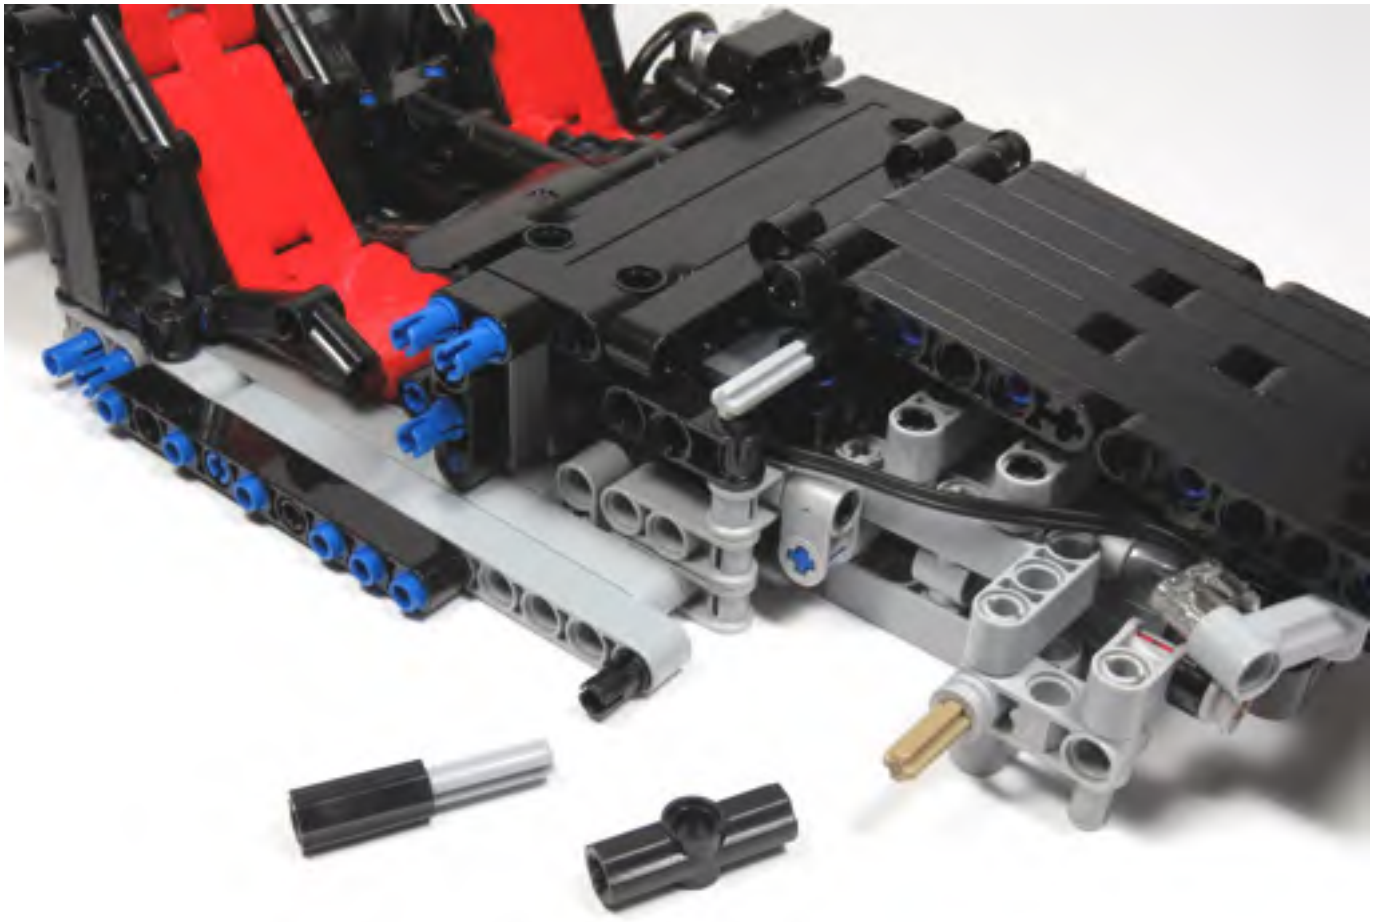

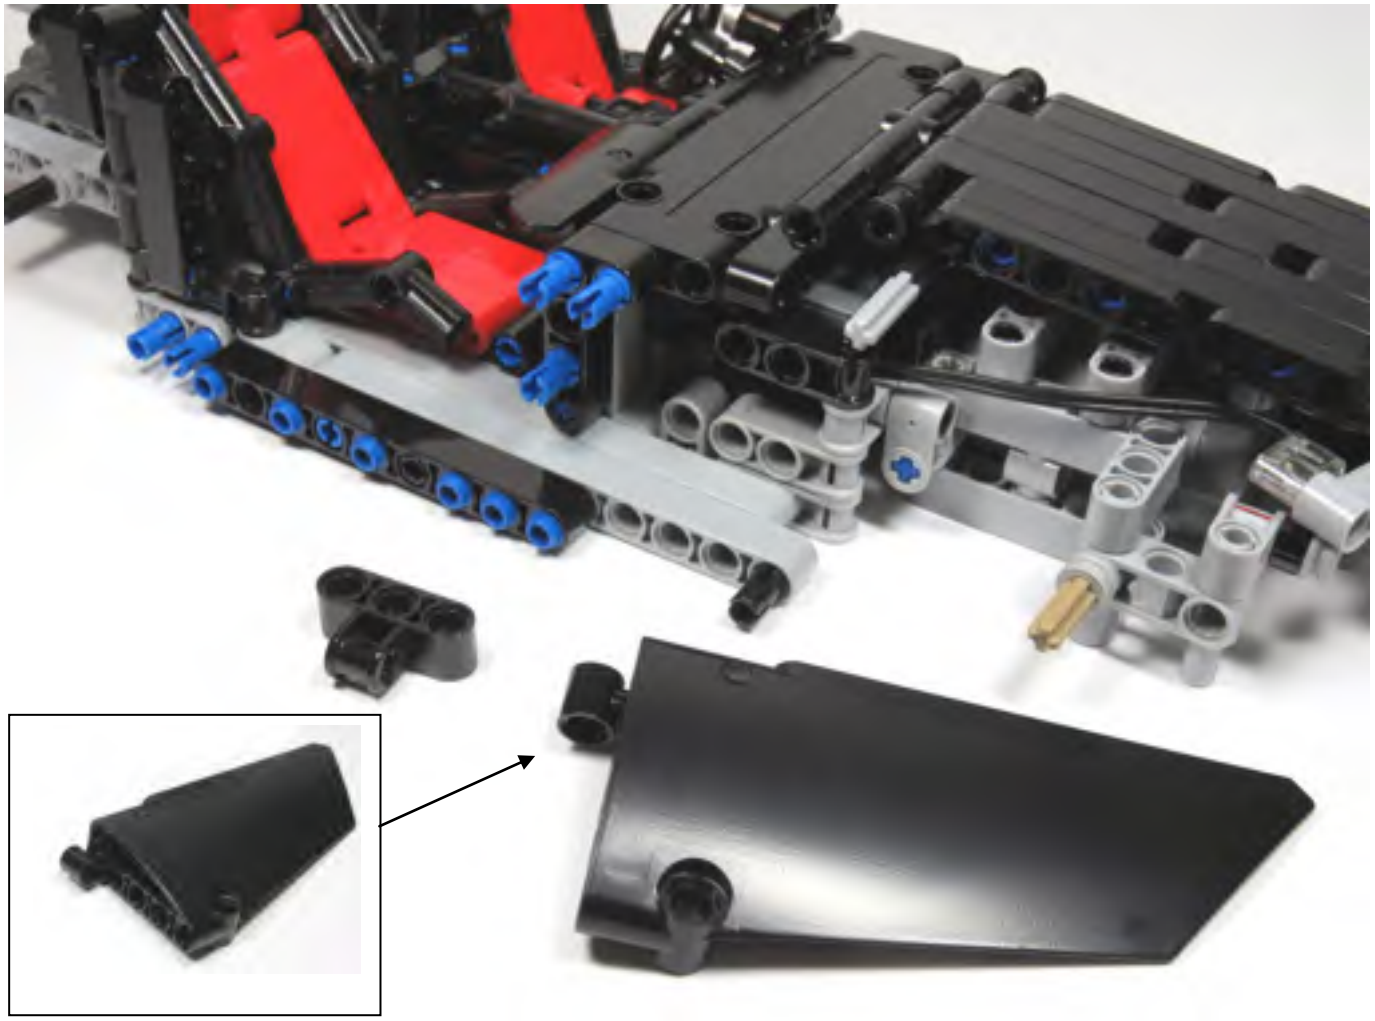

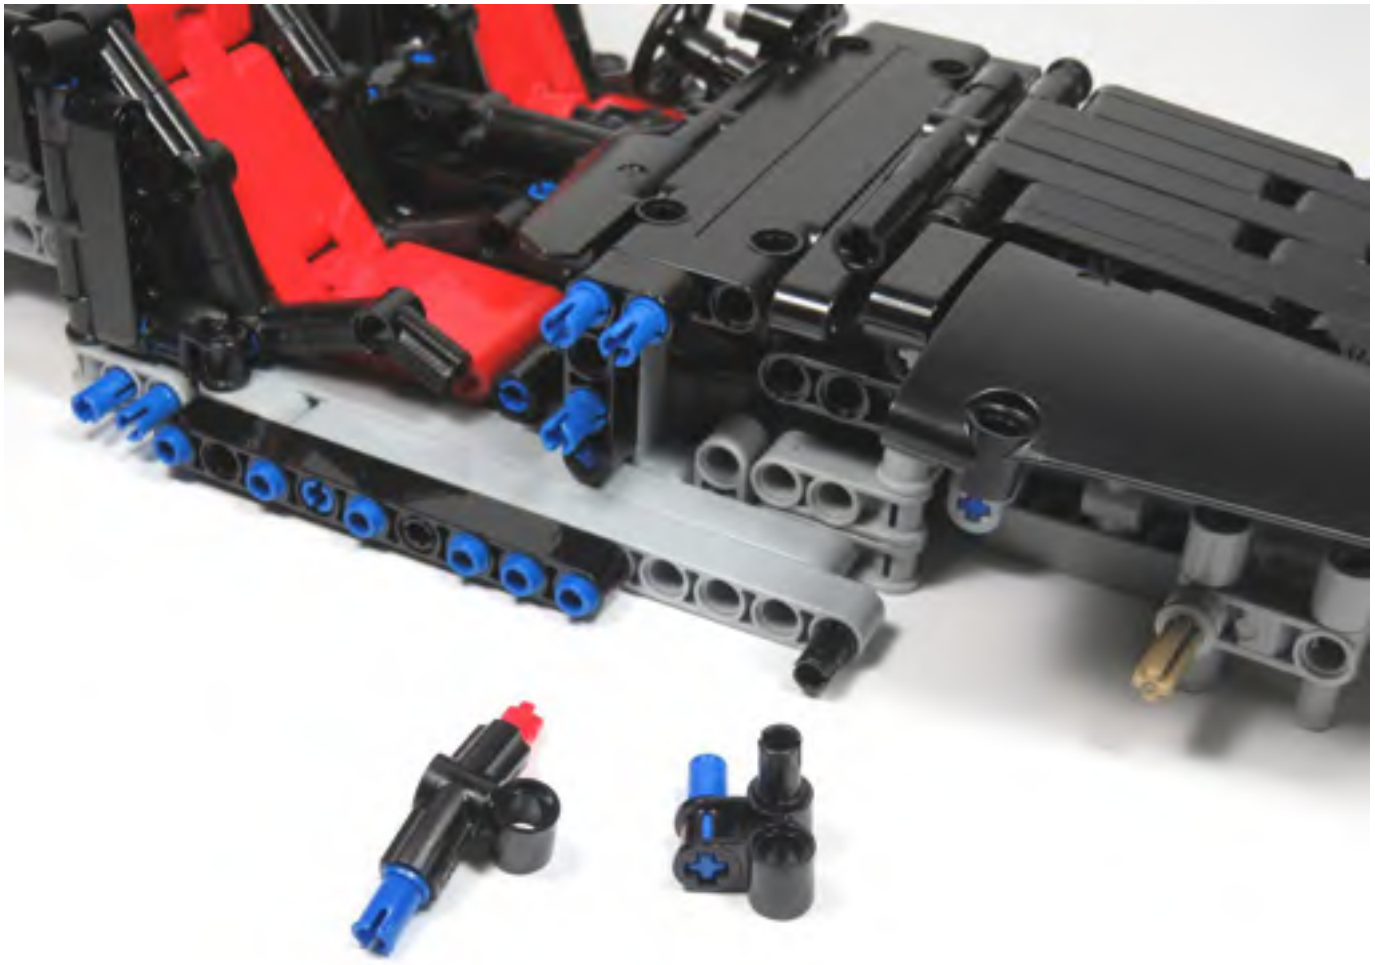

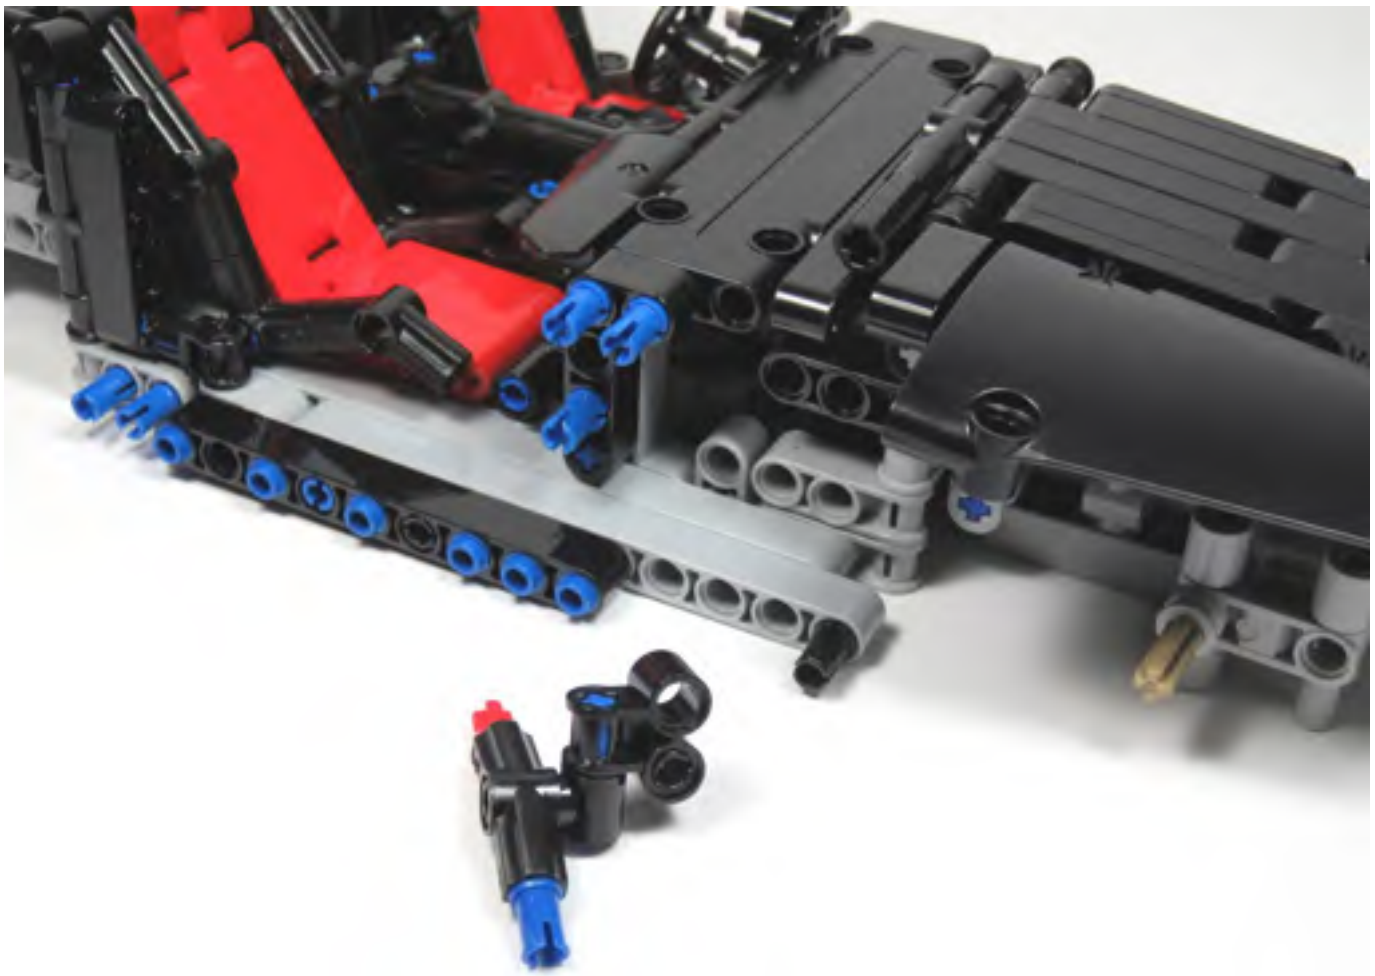

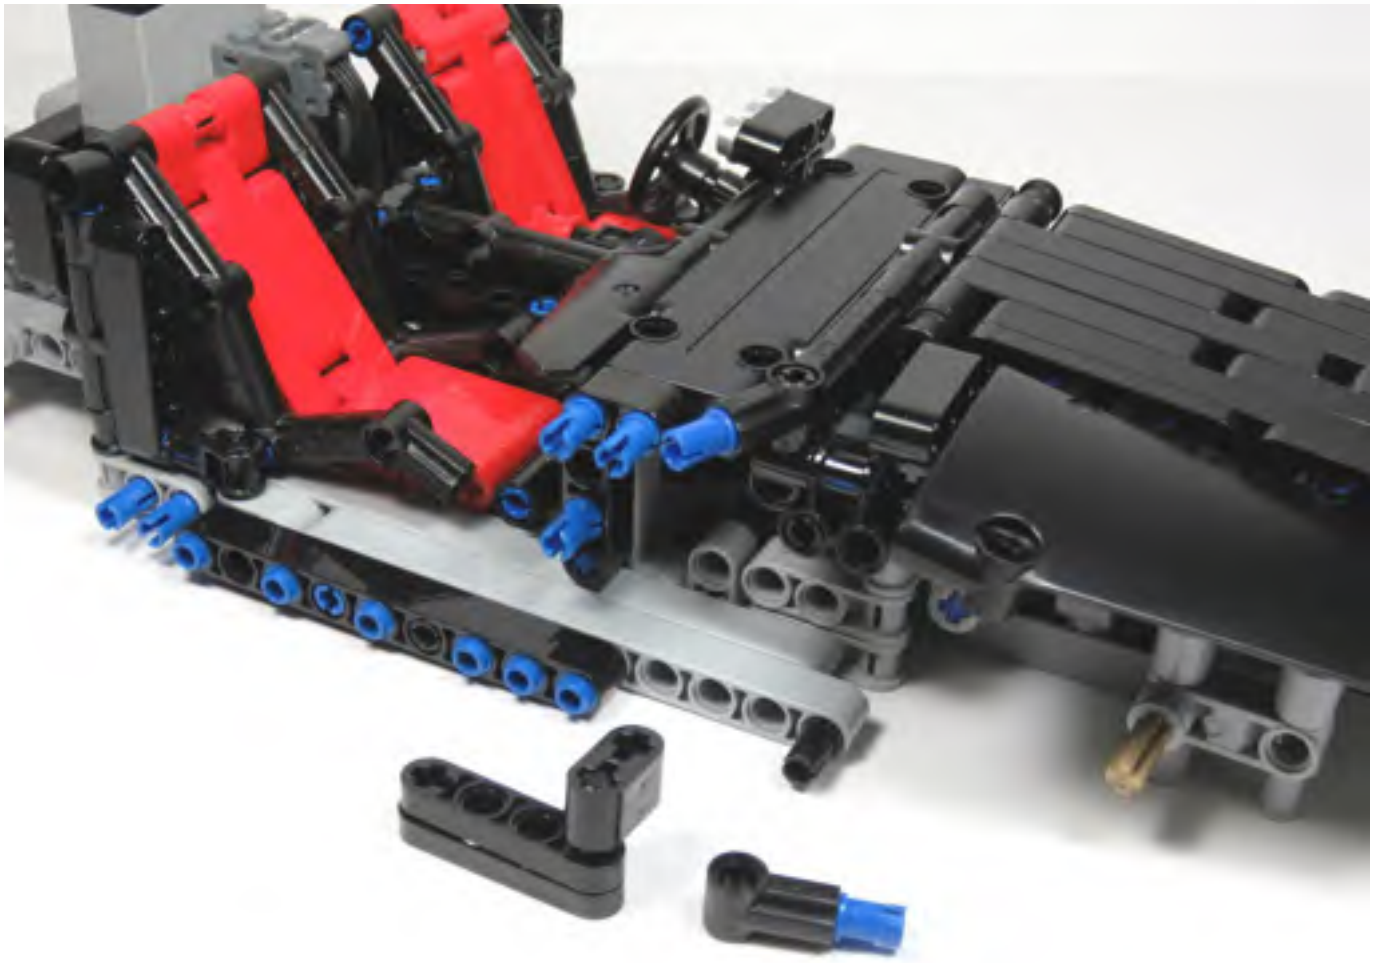

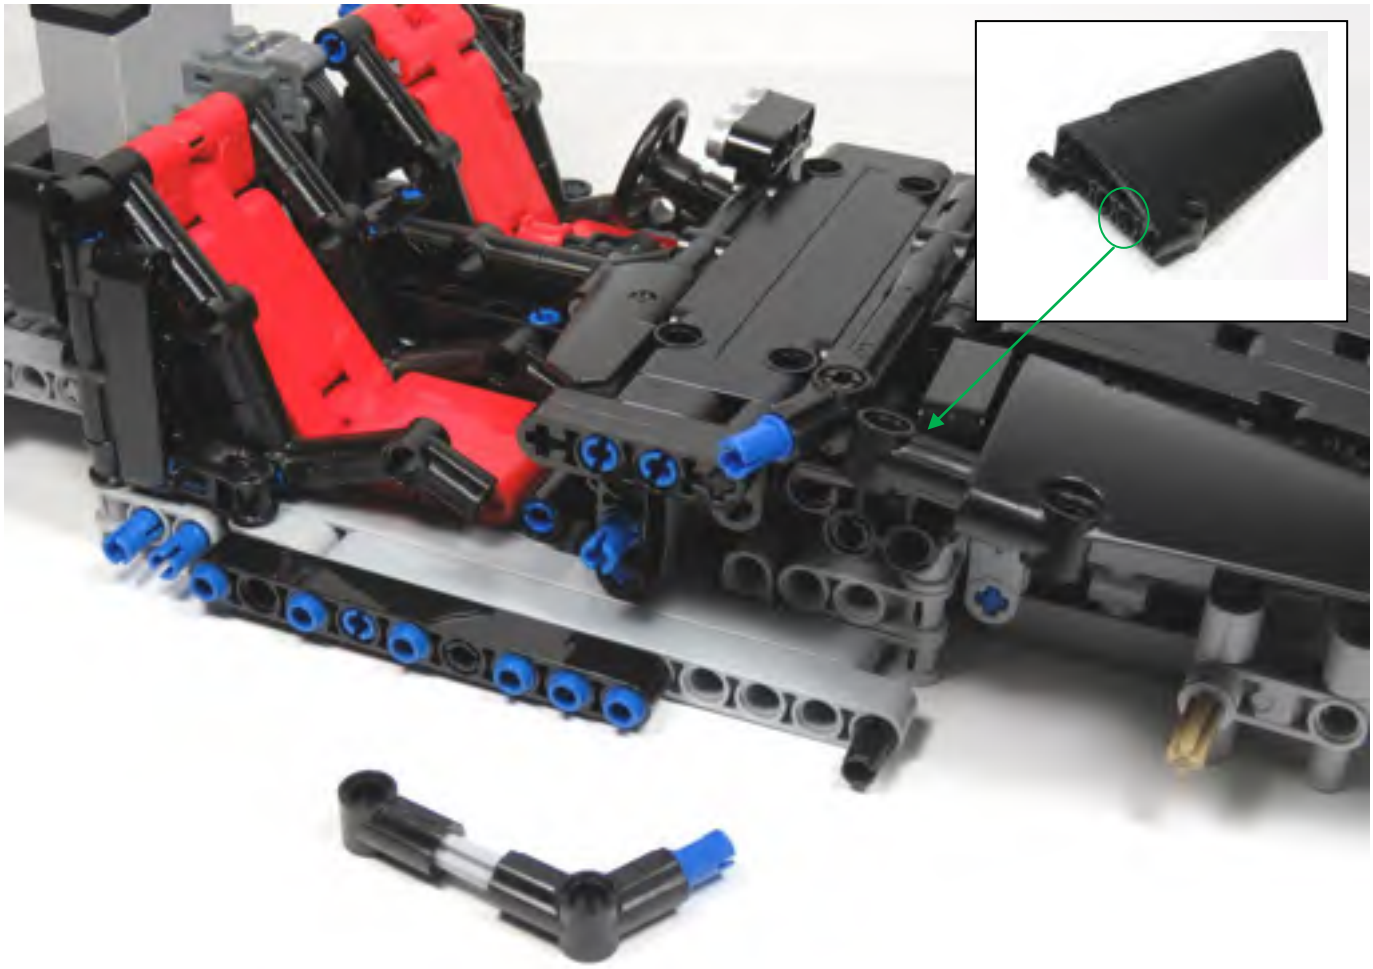

#1 connector (32013) connected at circled part

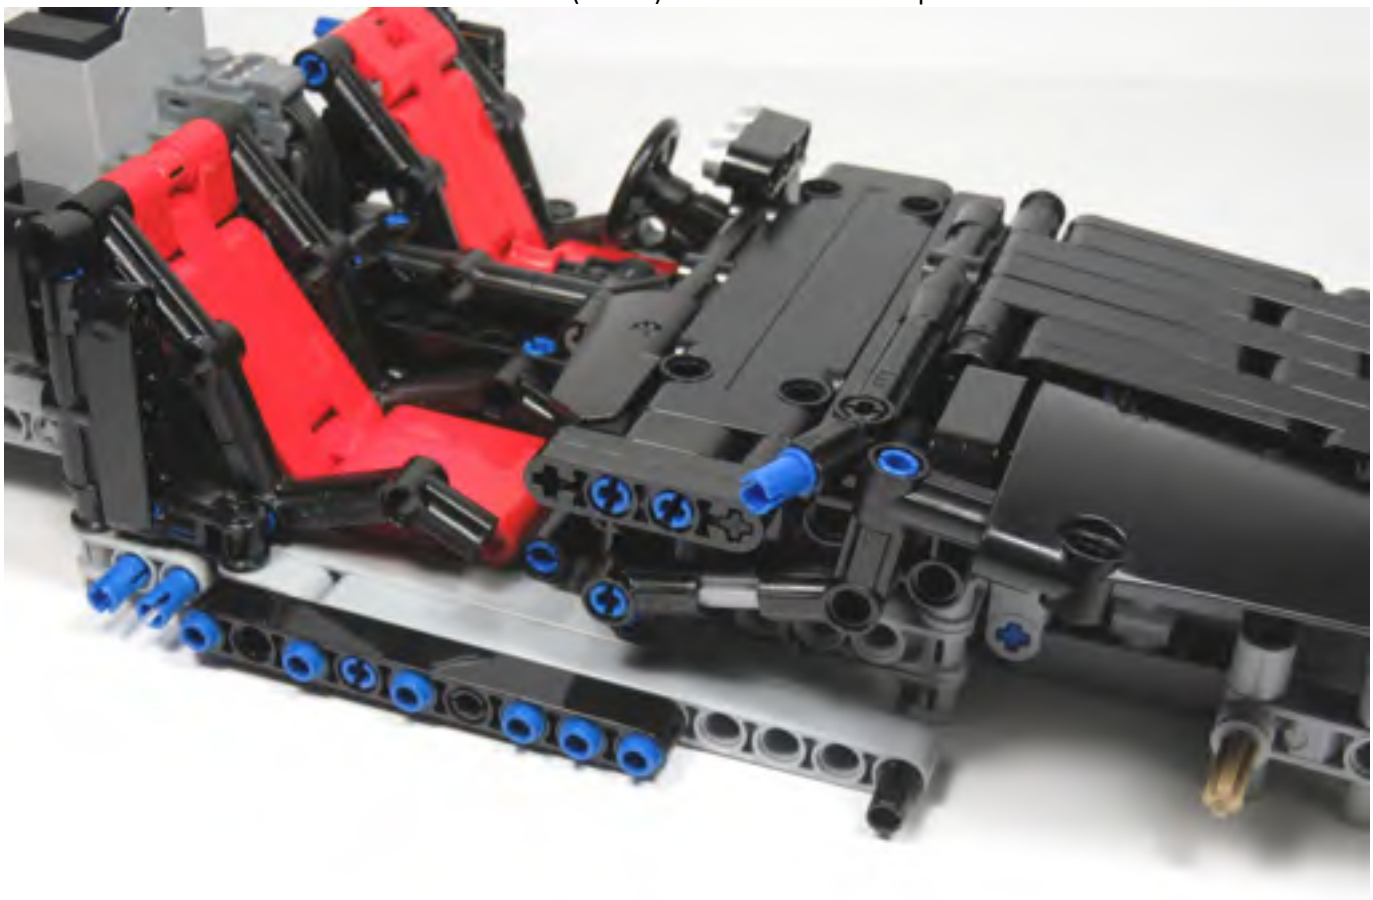

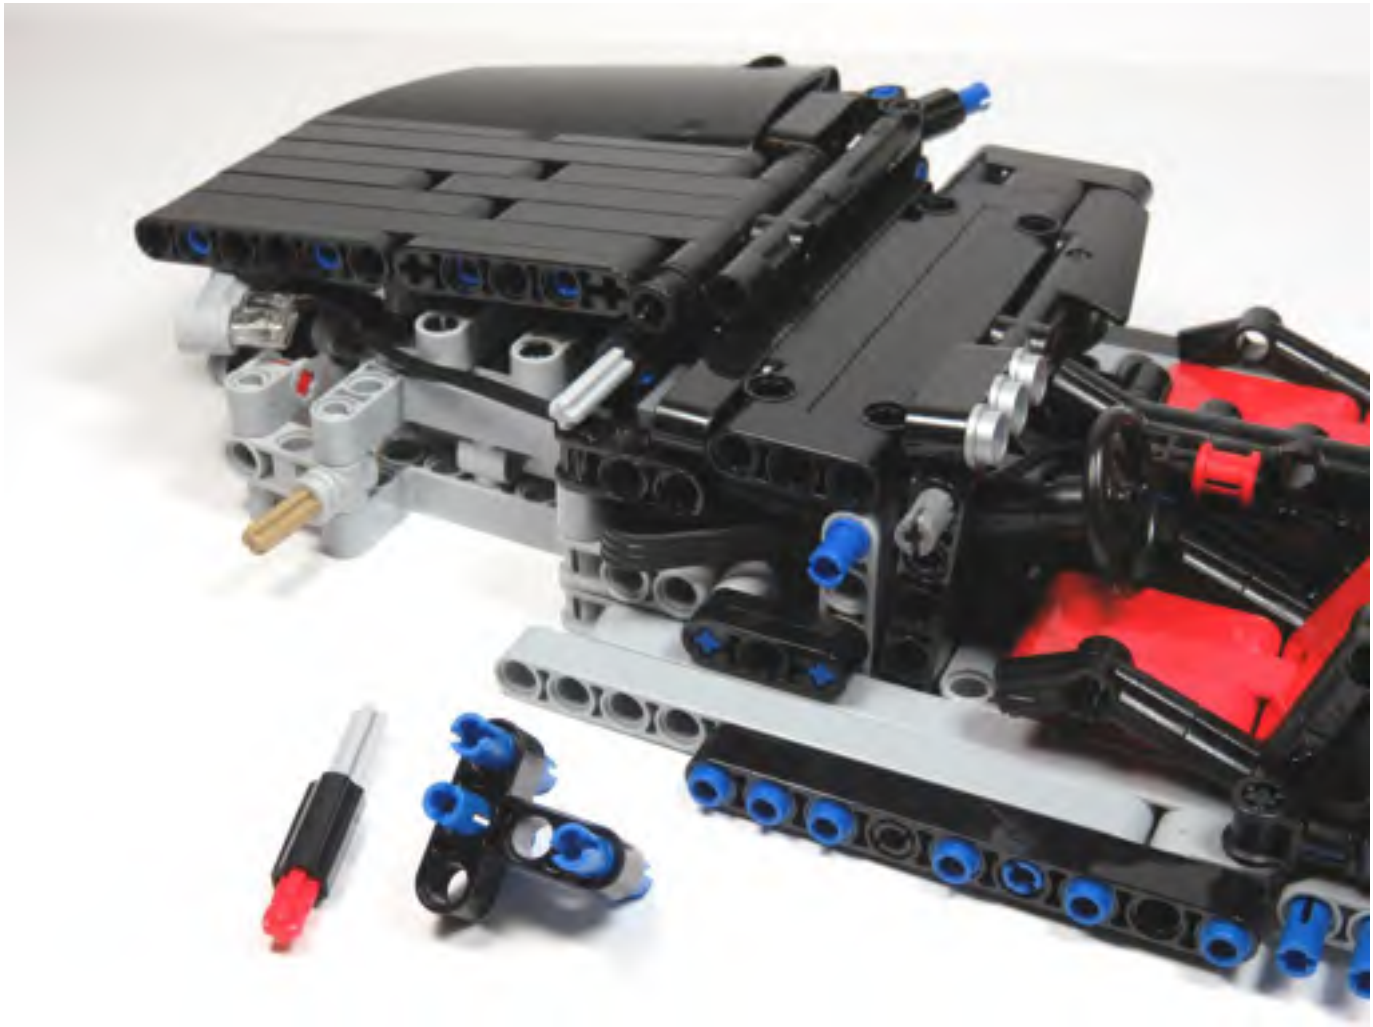

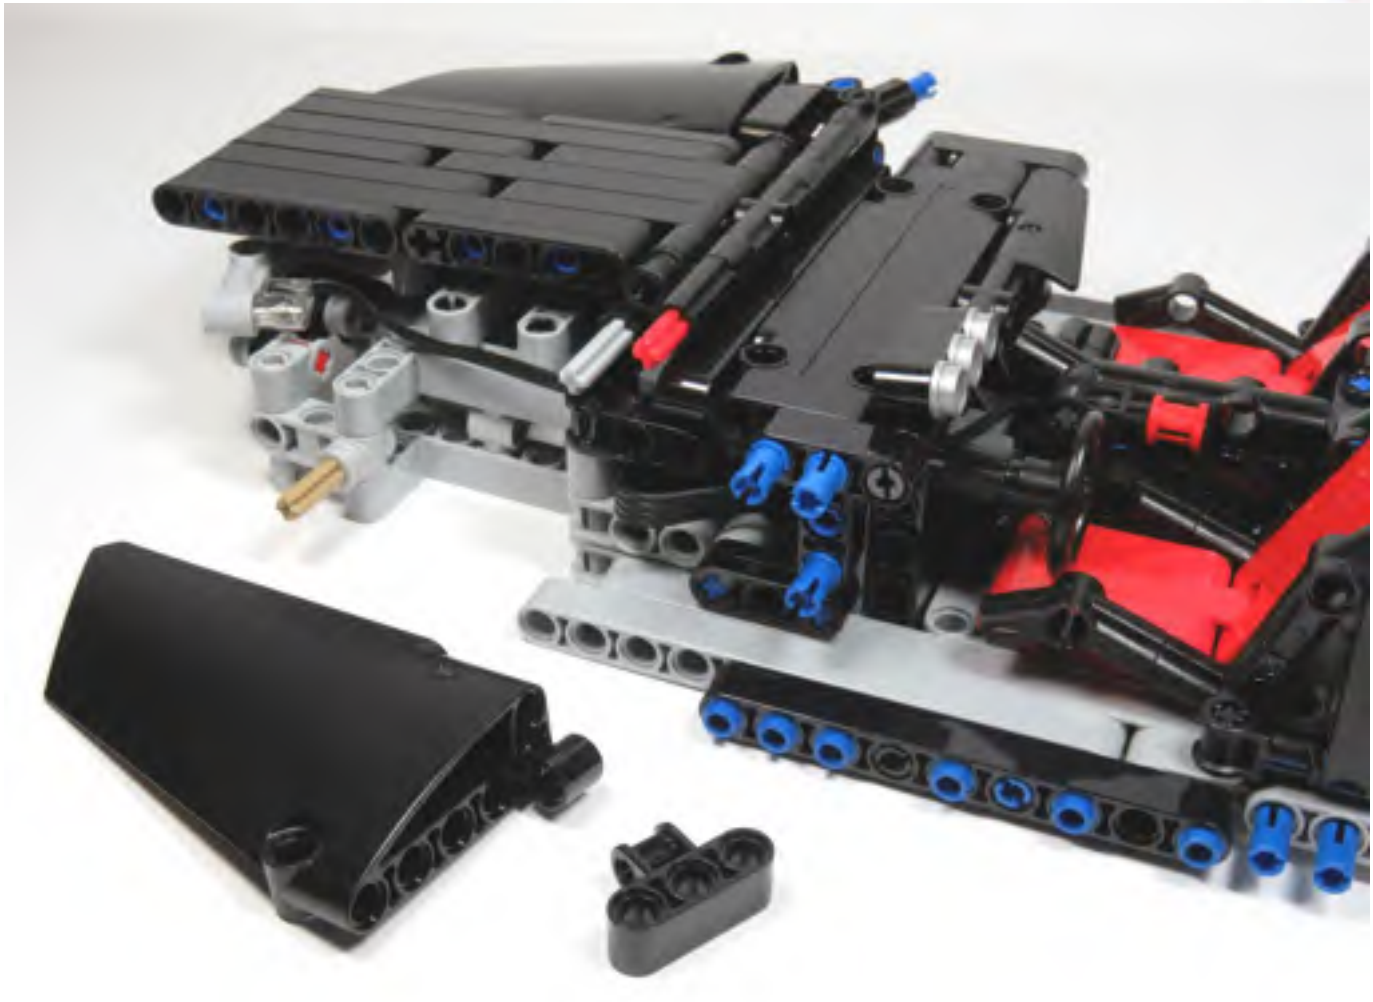

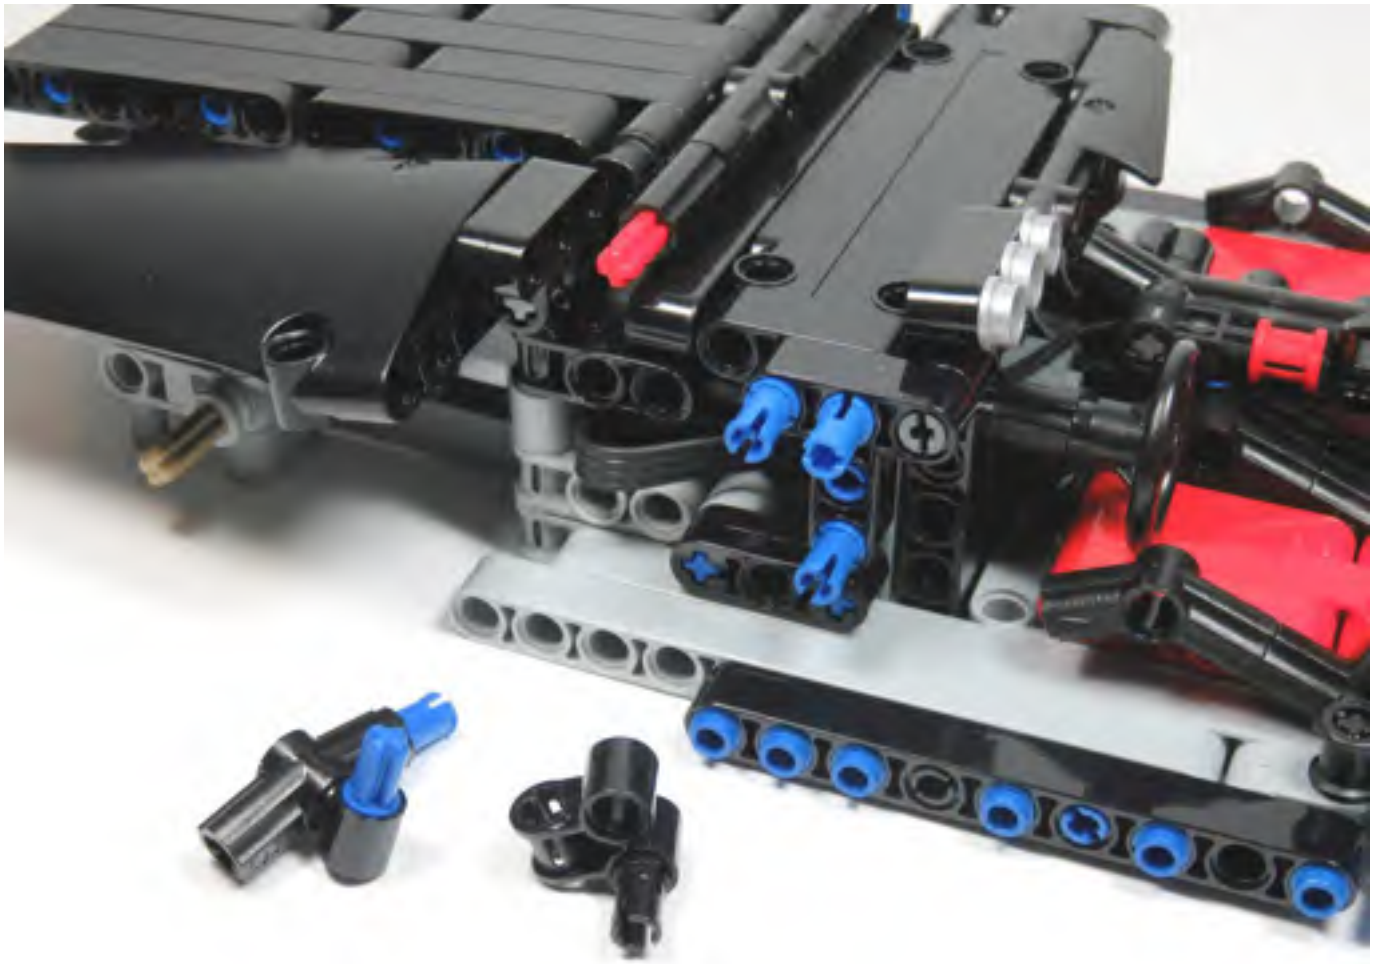

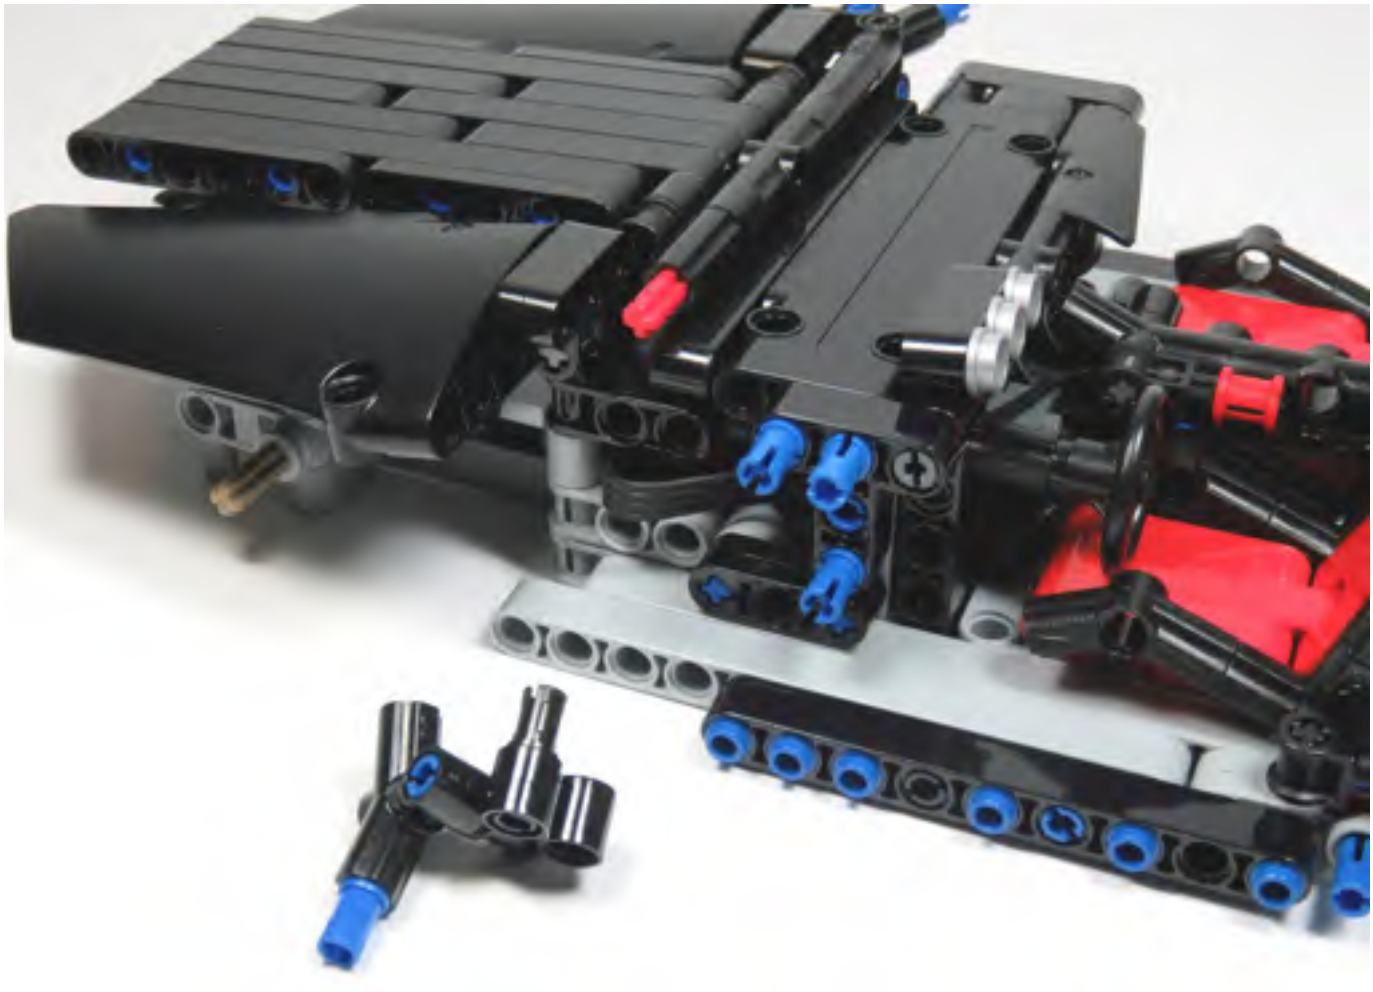

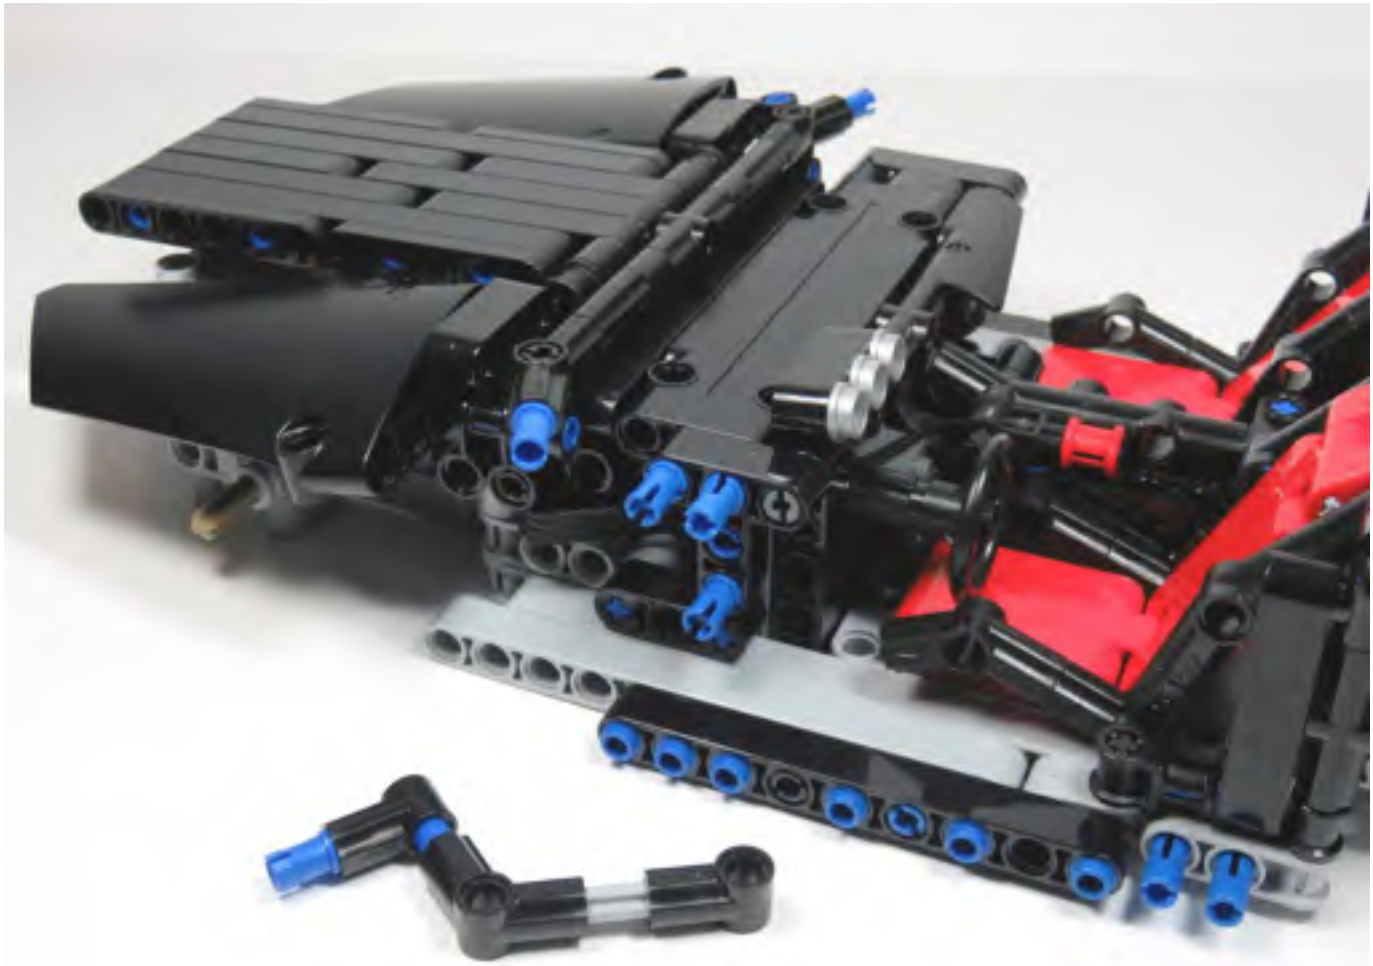

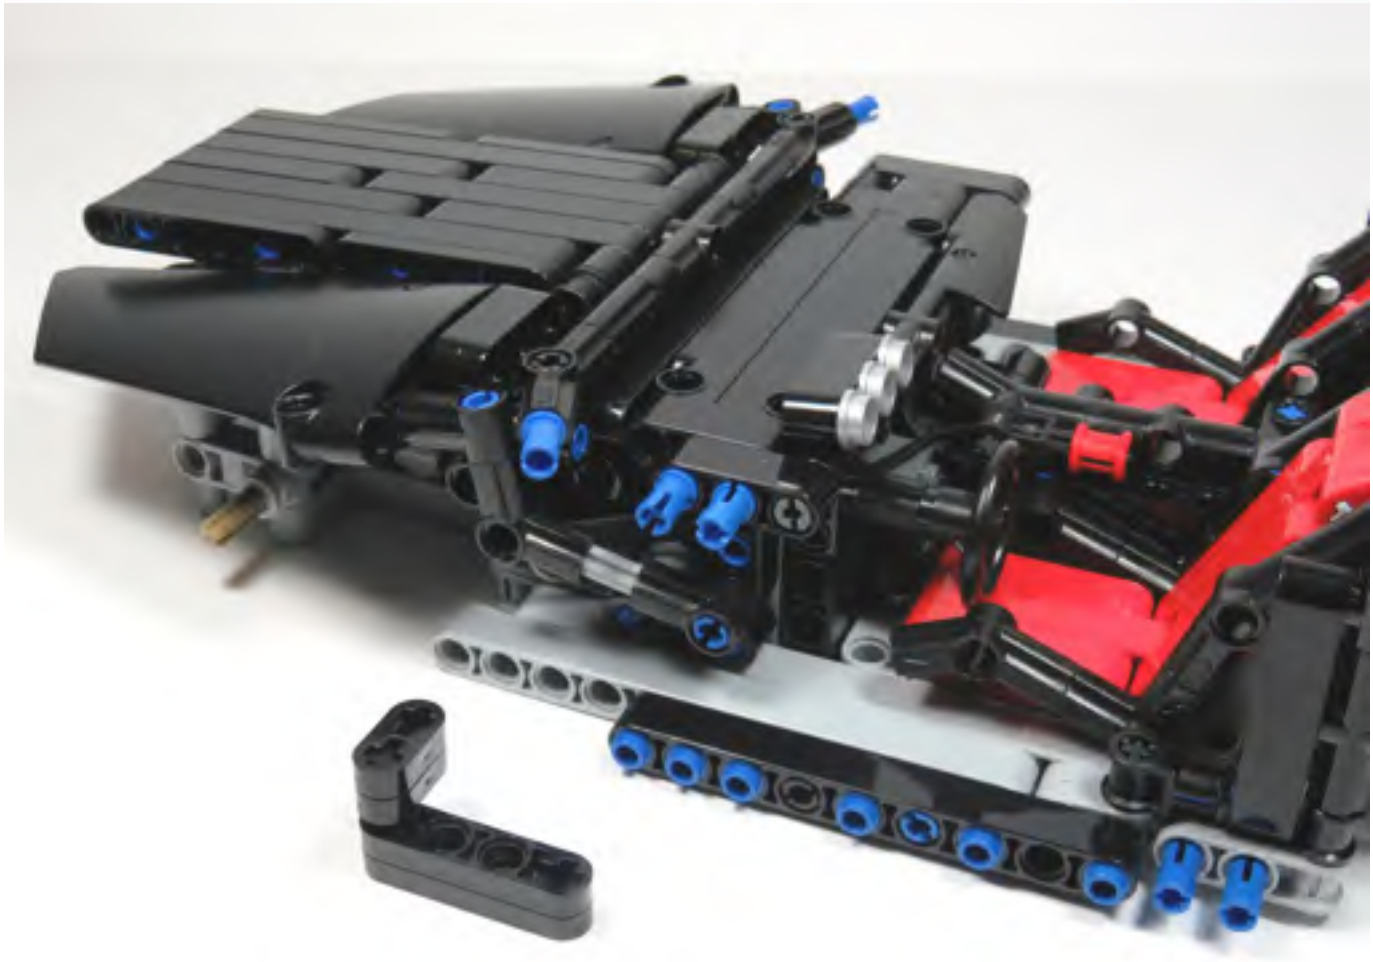

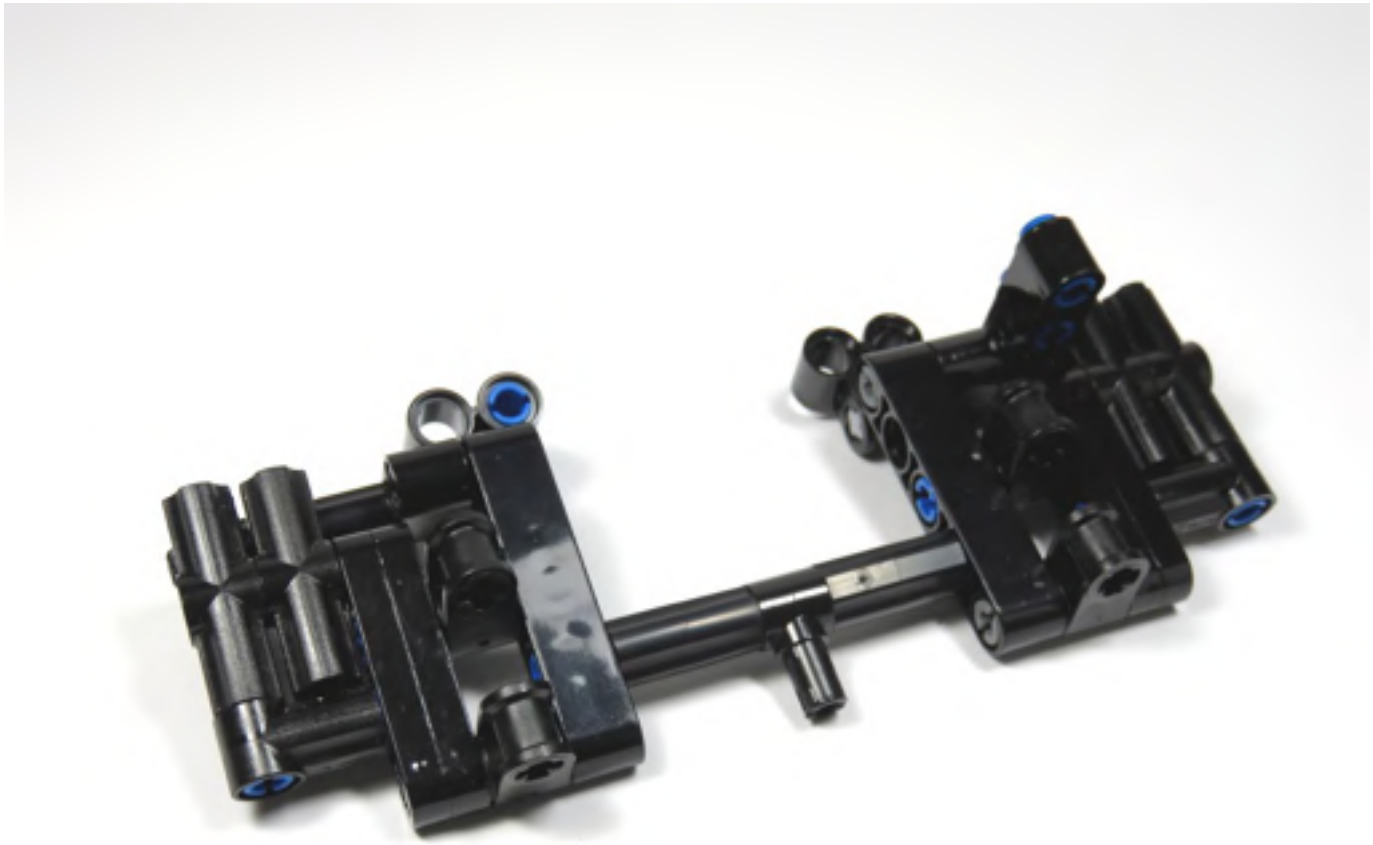

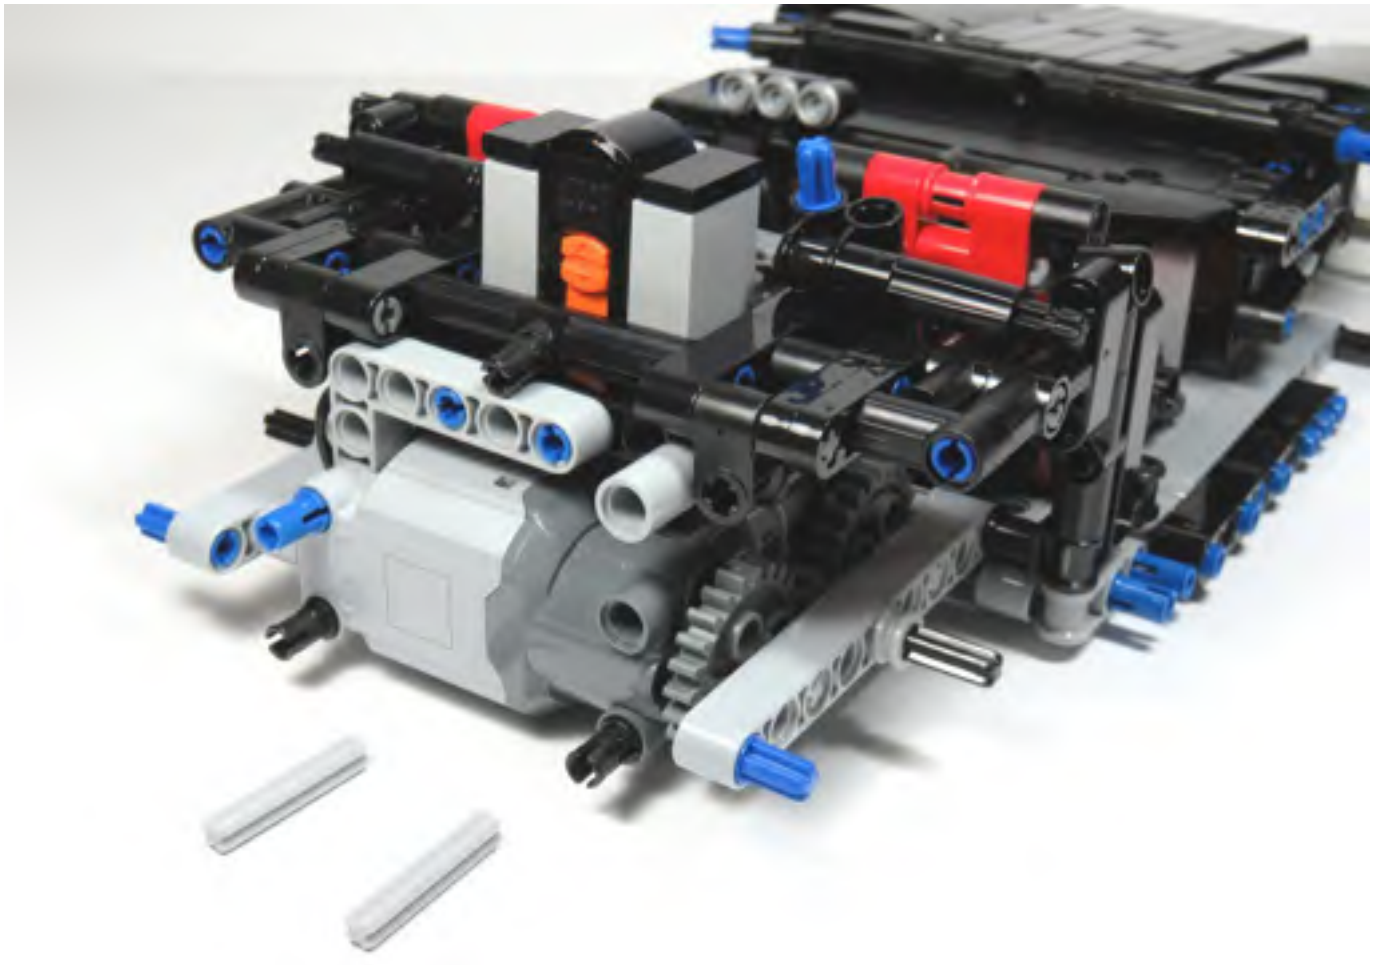

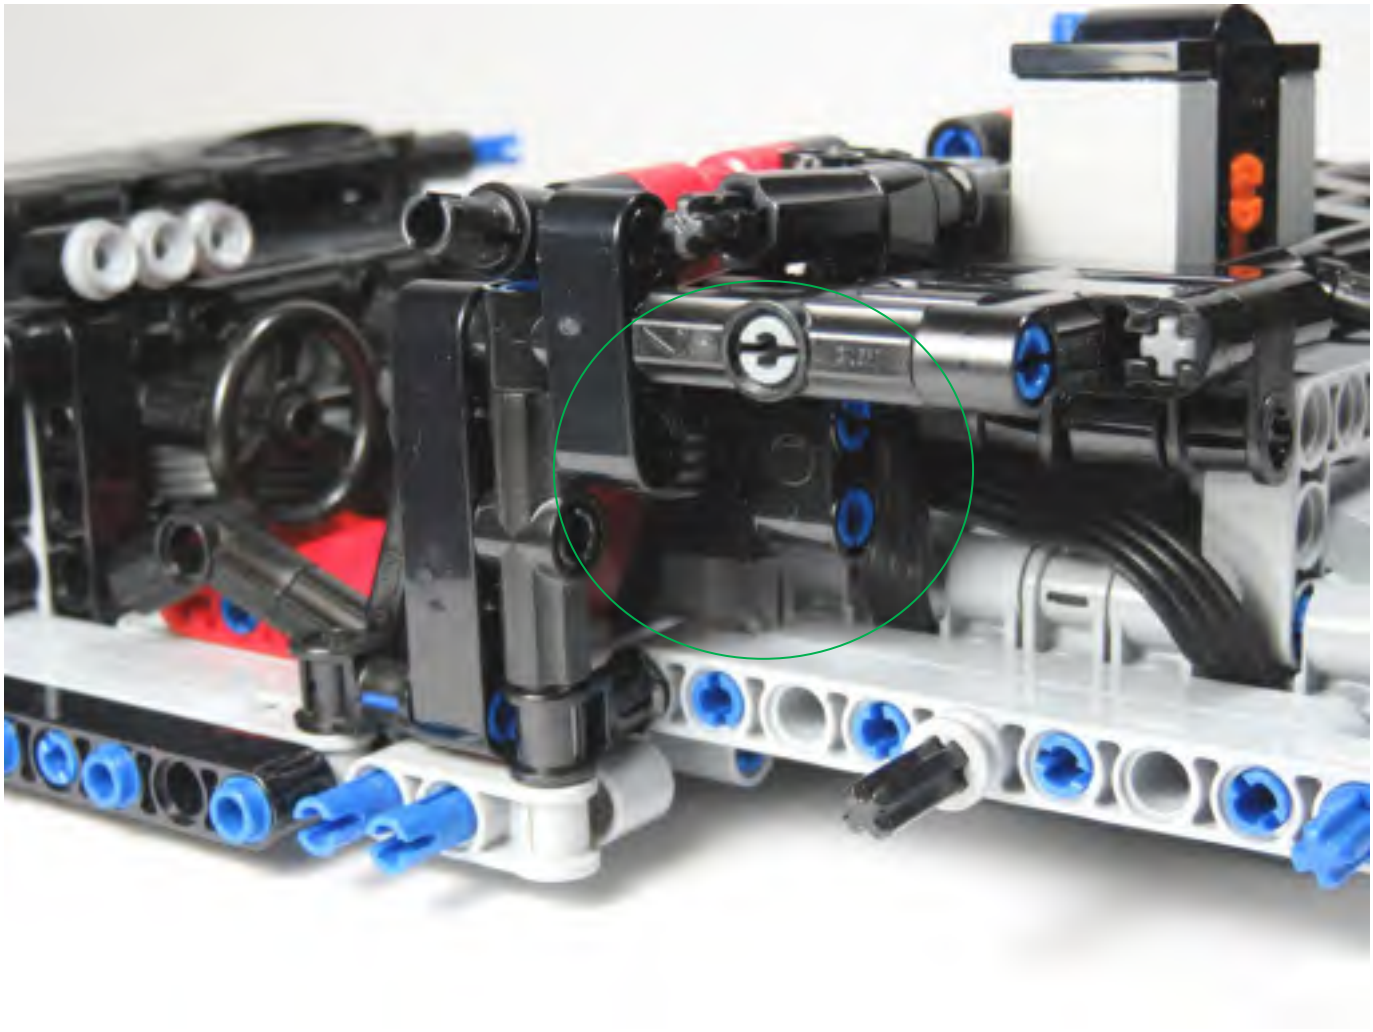

Connect LED light square. This is a bit tricky.

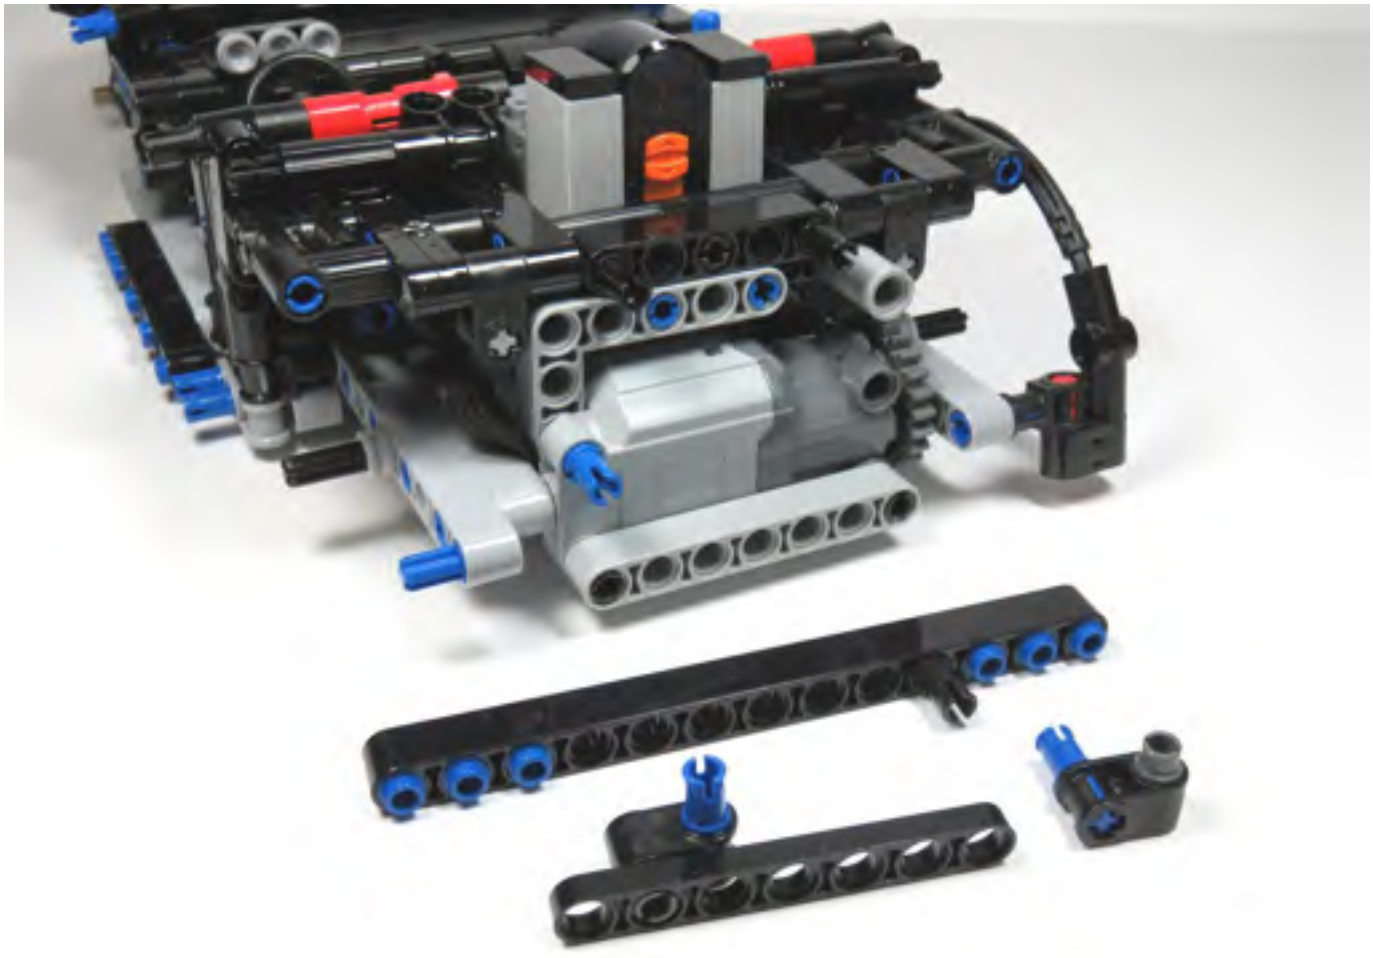

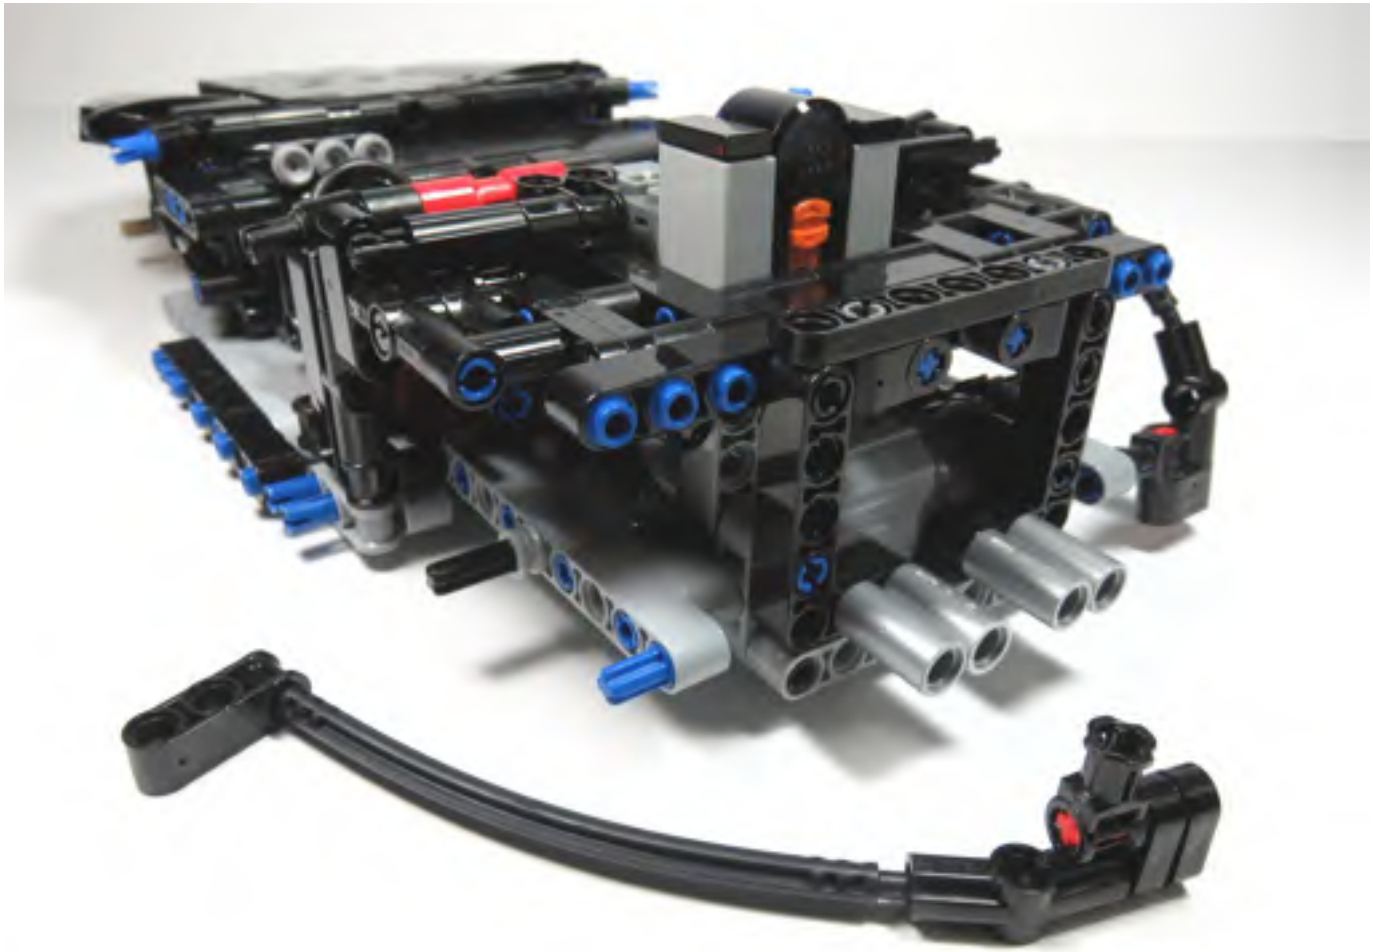

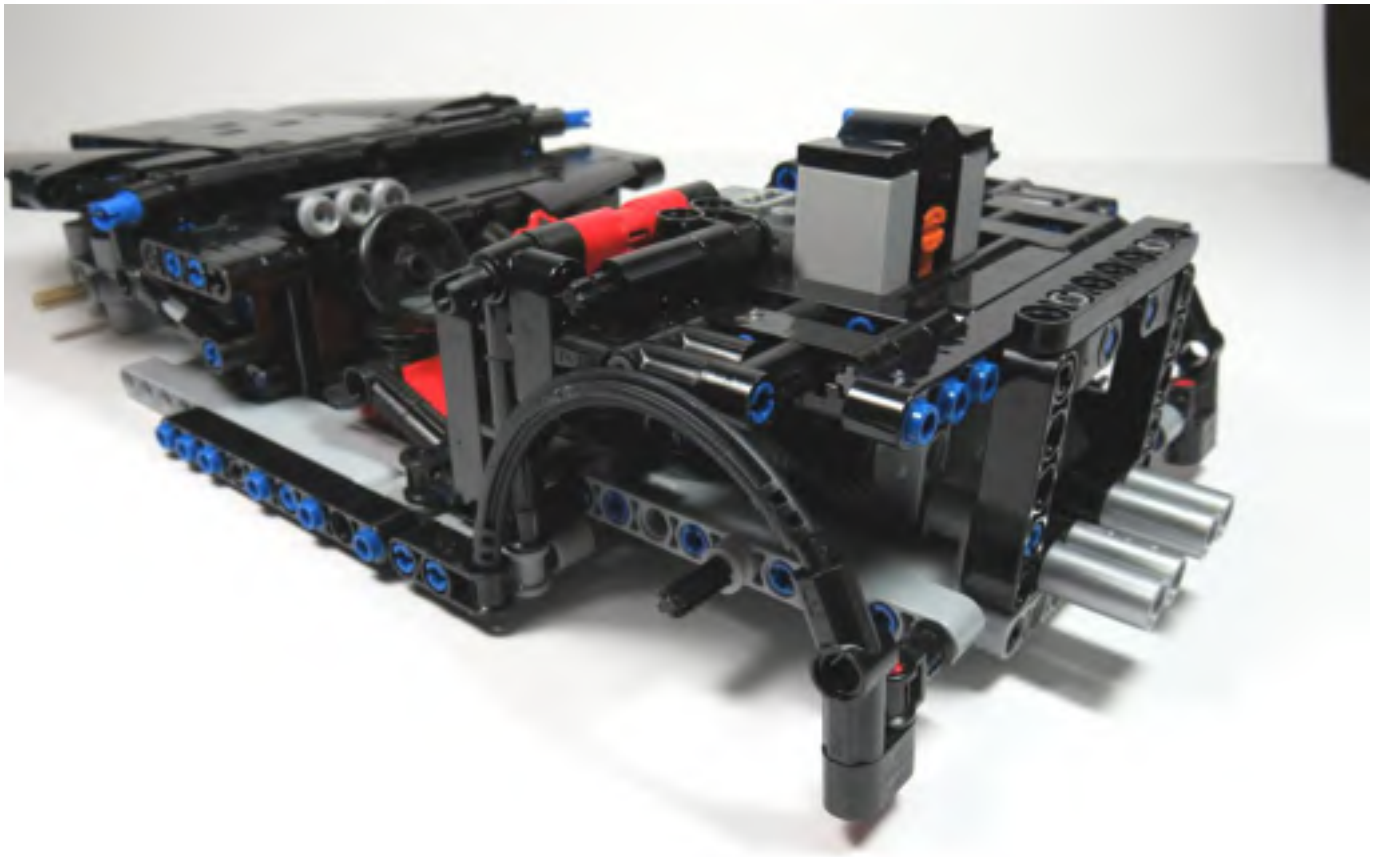

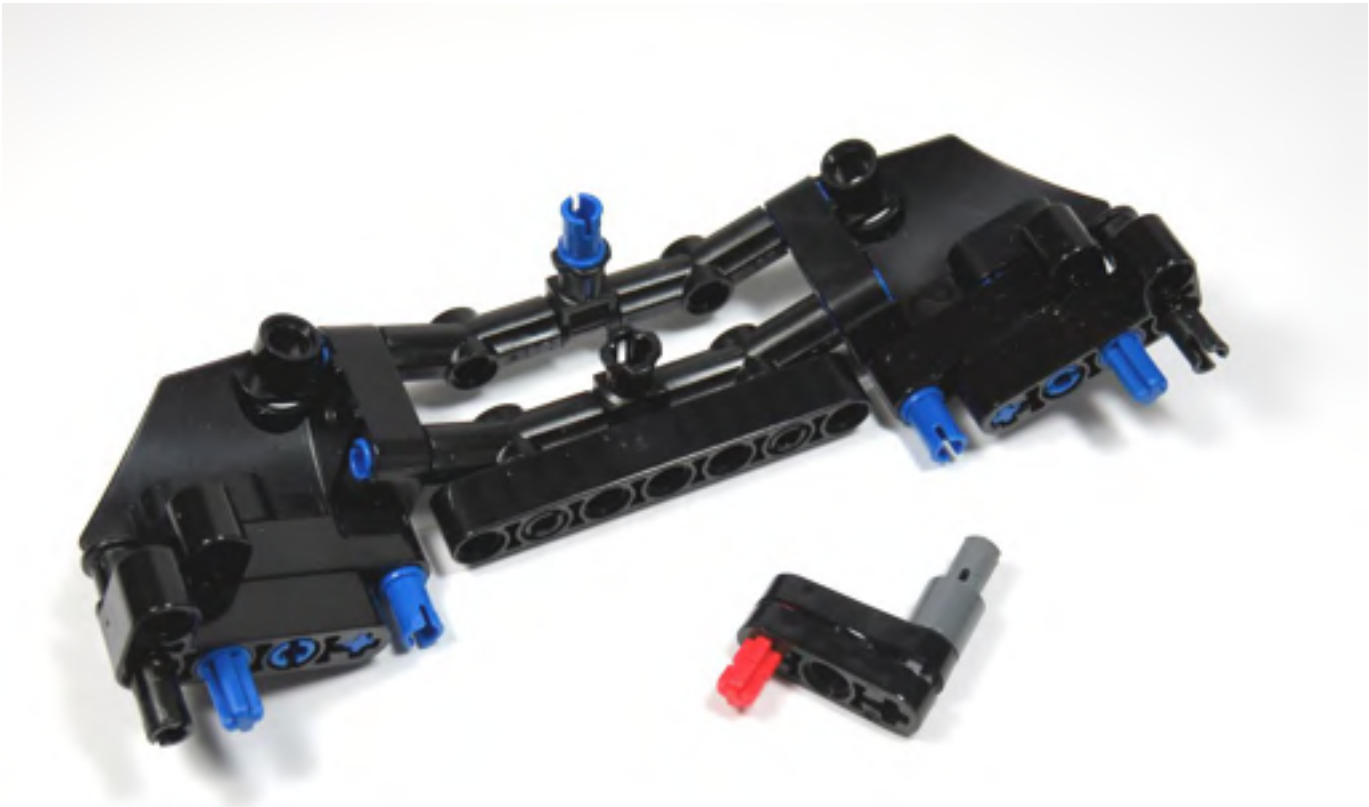

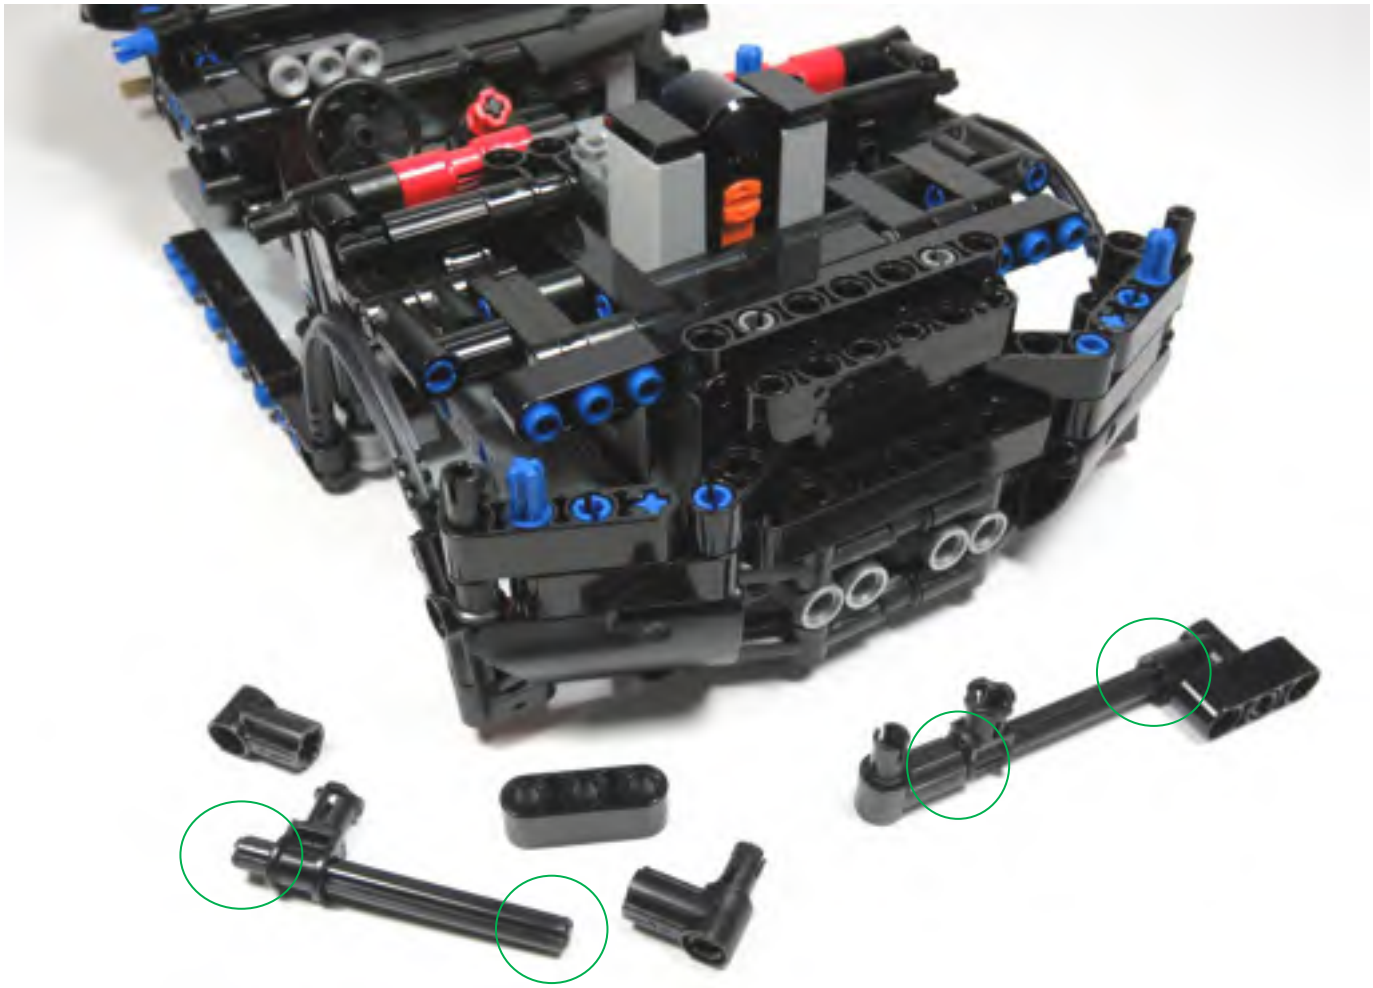

Bit of an illegal connection at circled points. Axle & connector only goes 3/4's of the way in

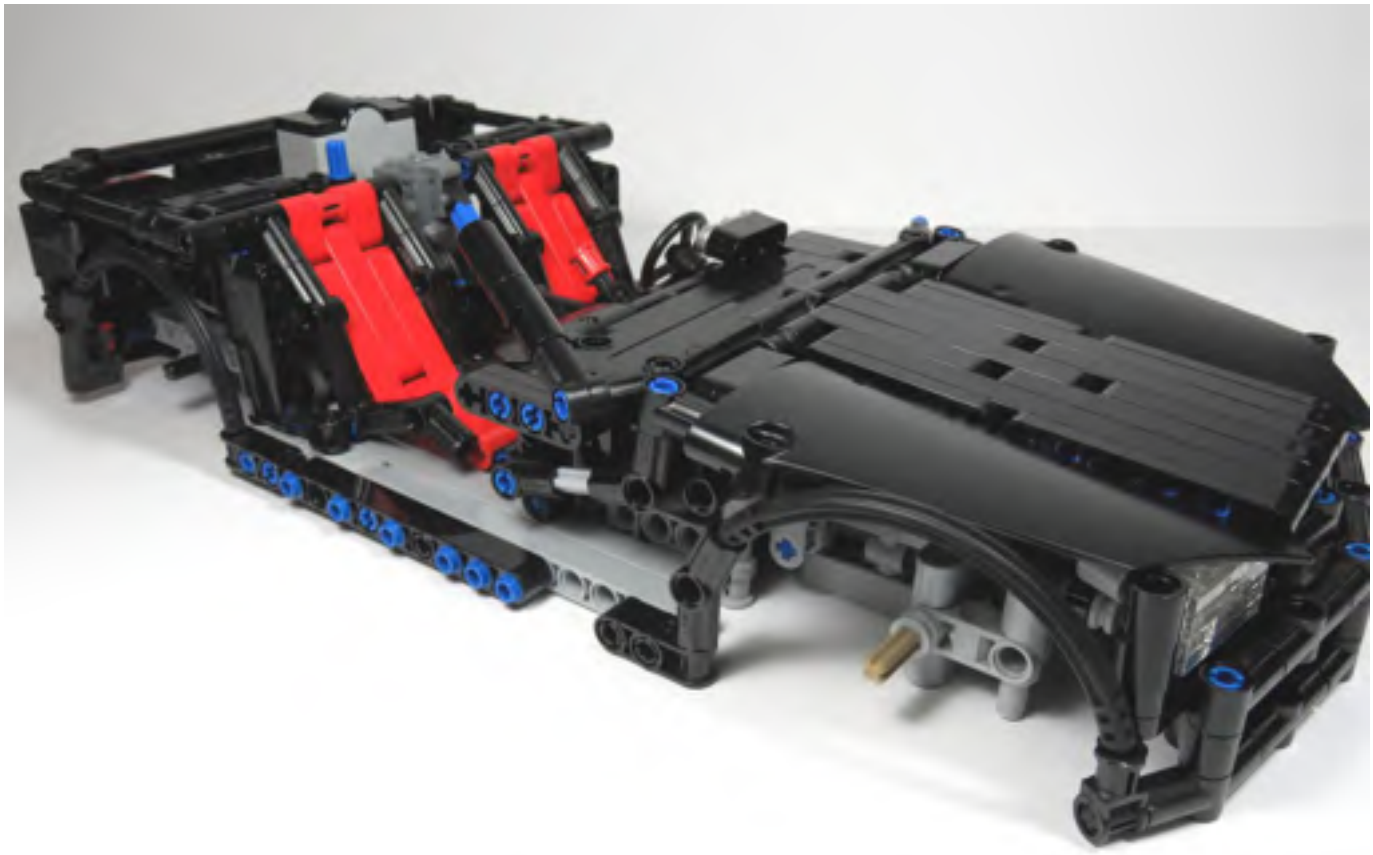

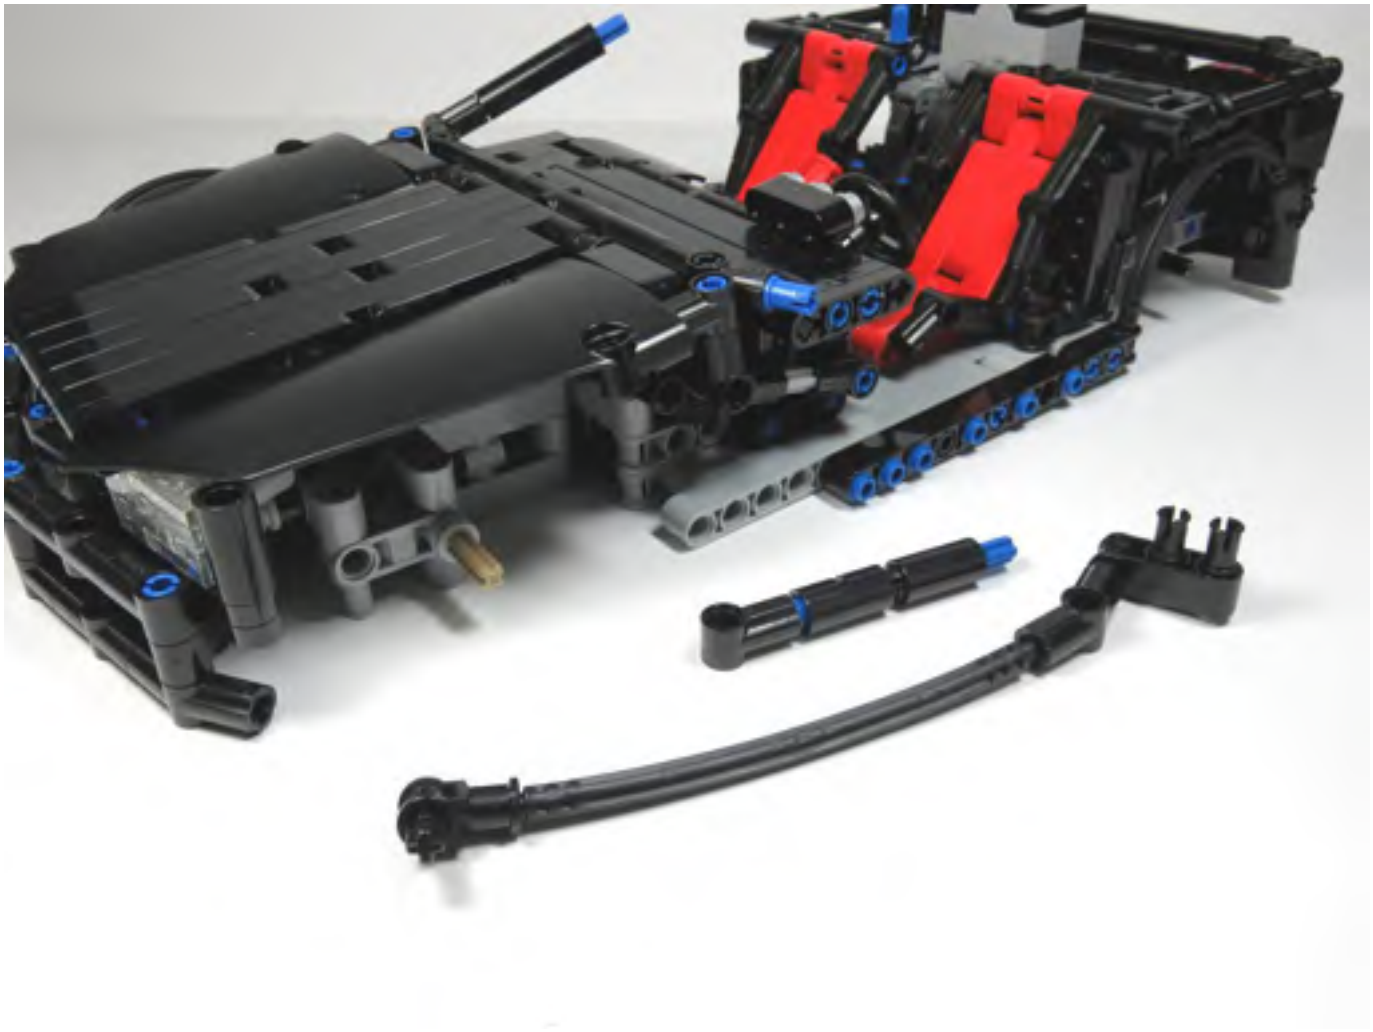

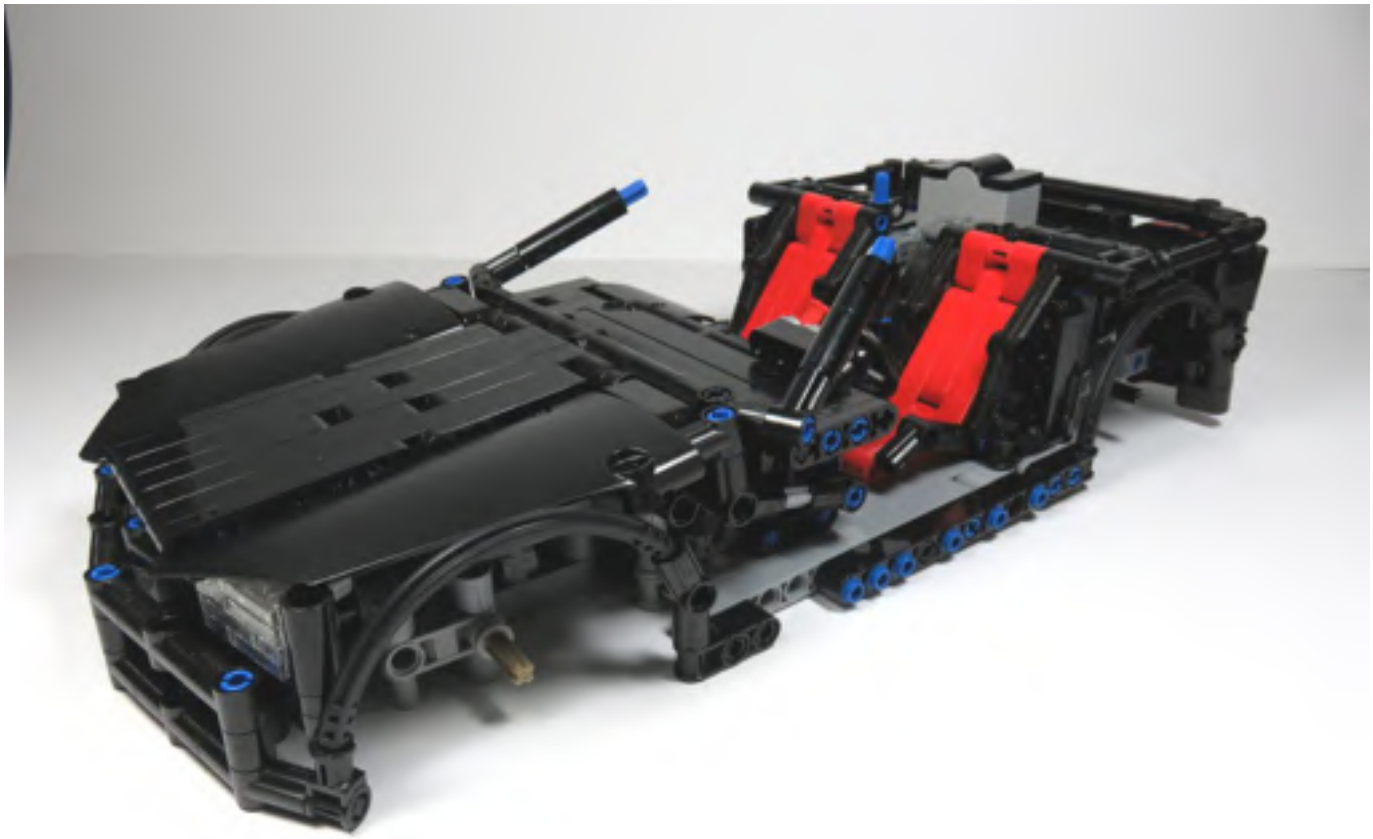

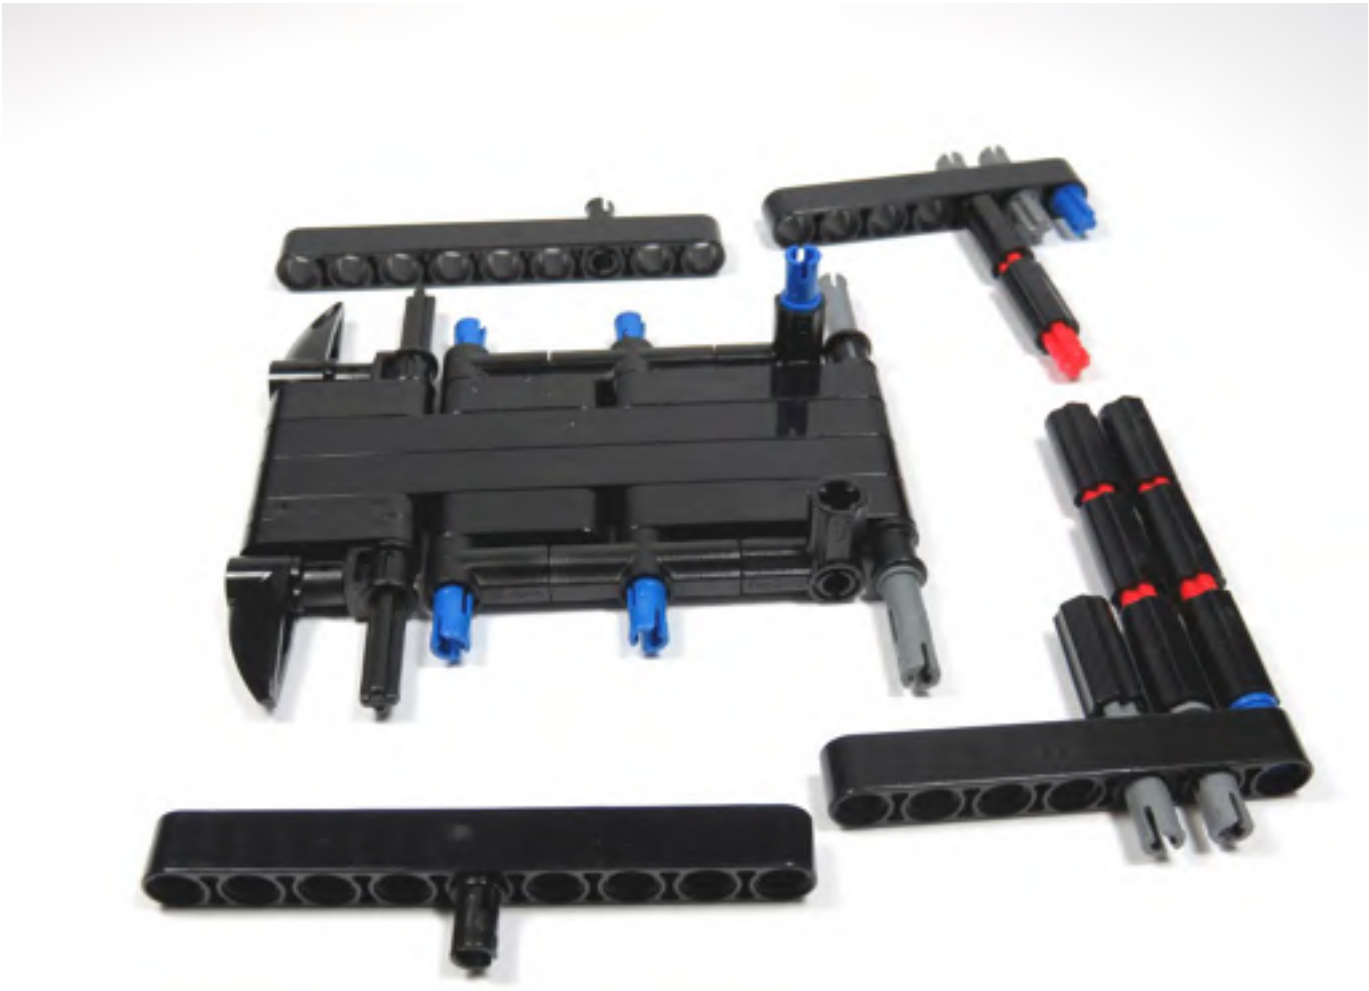

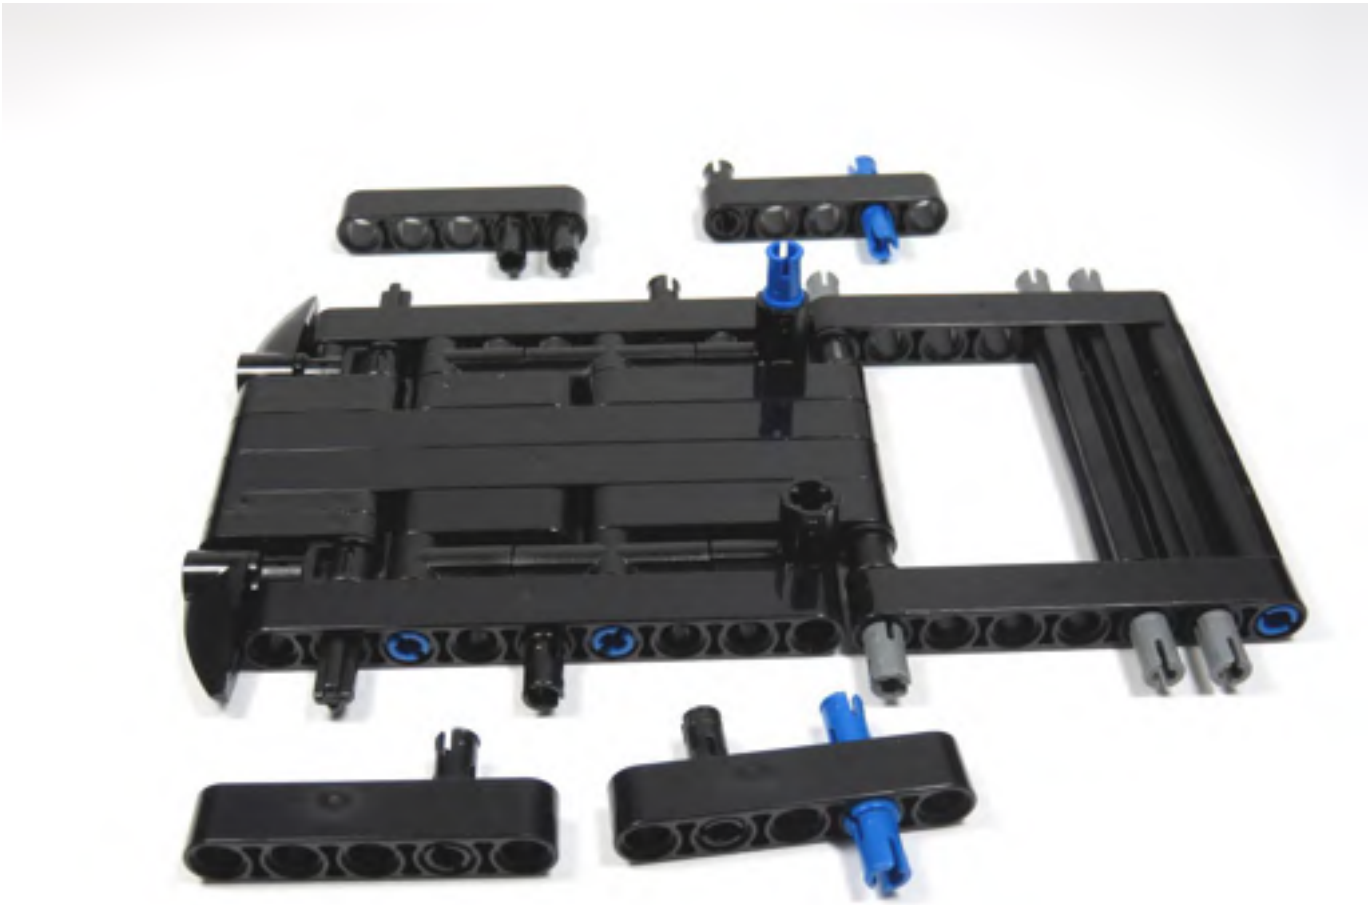

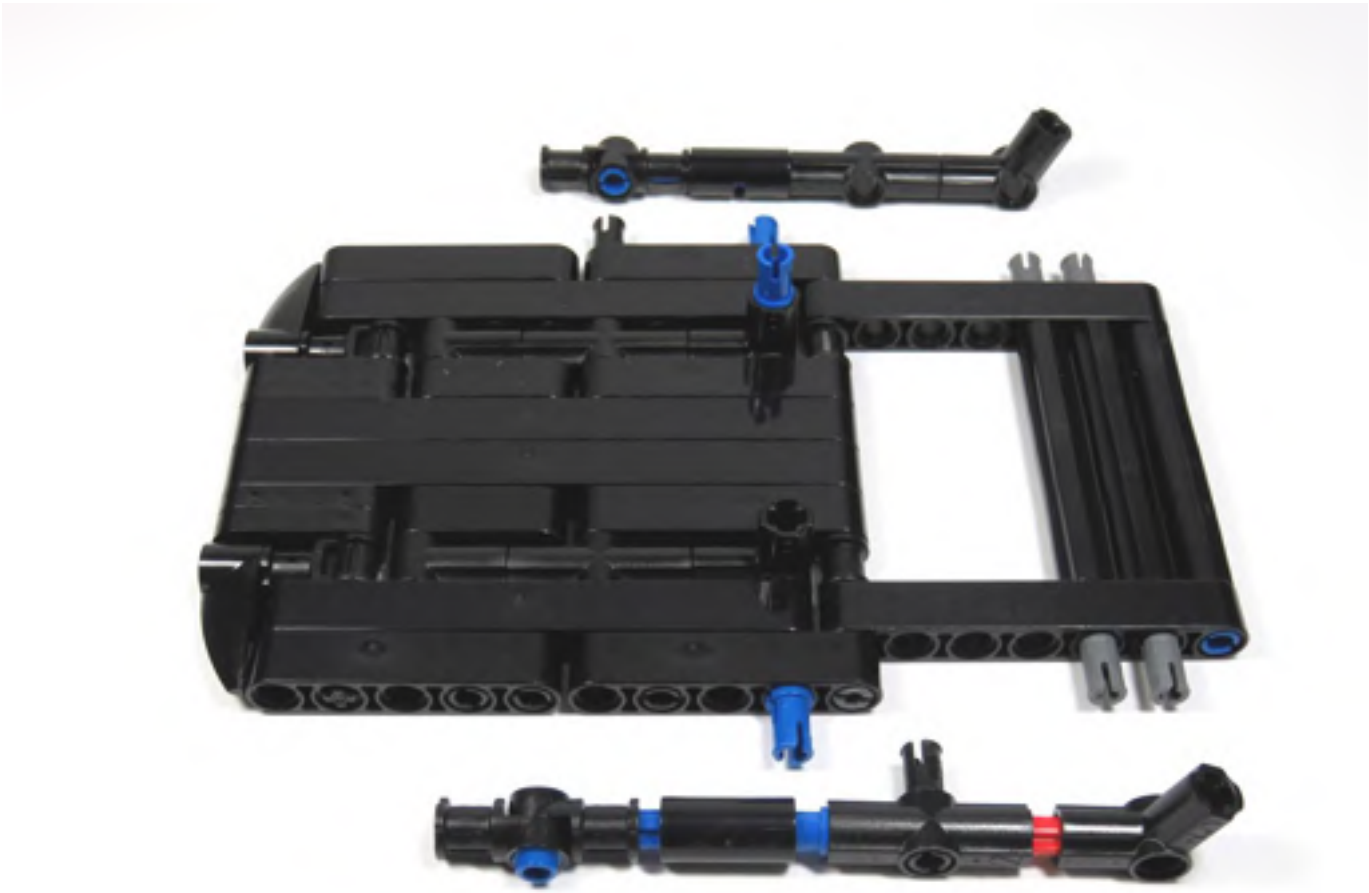

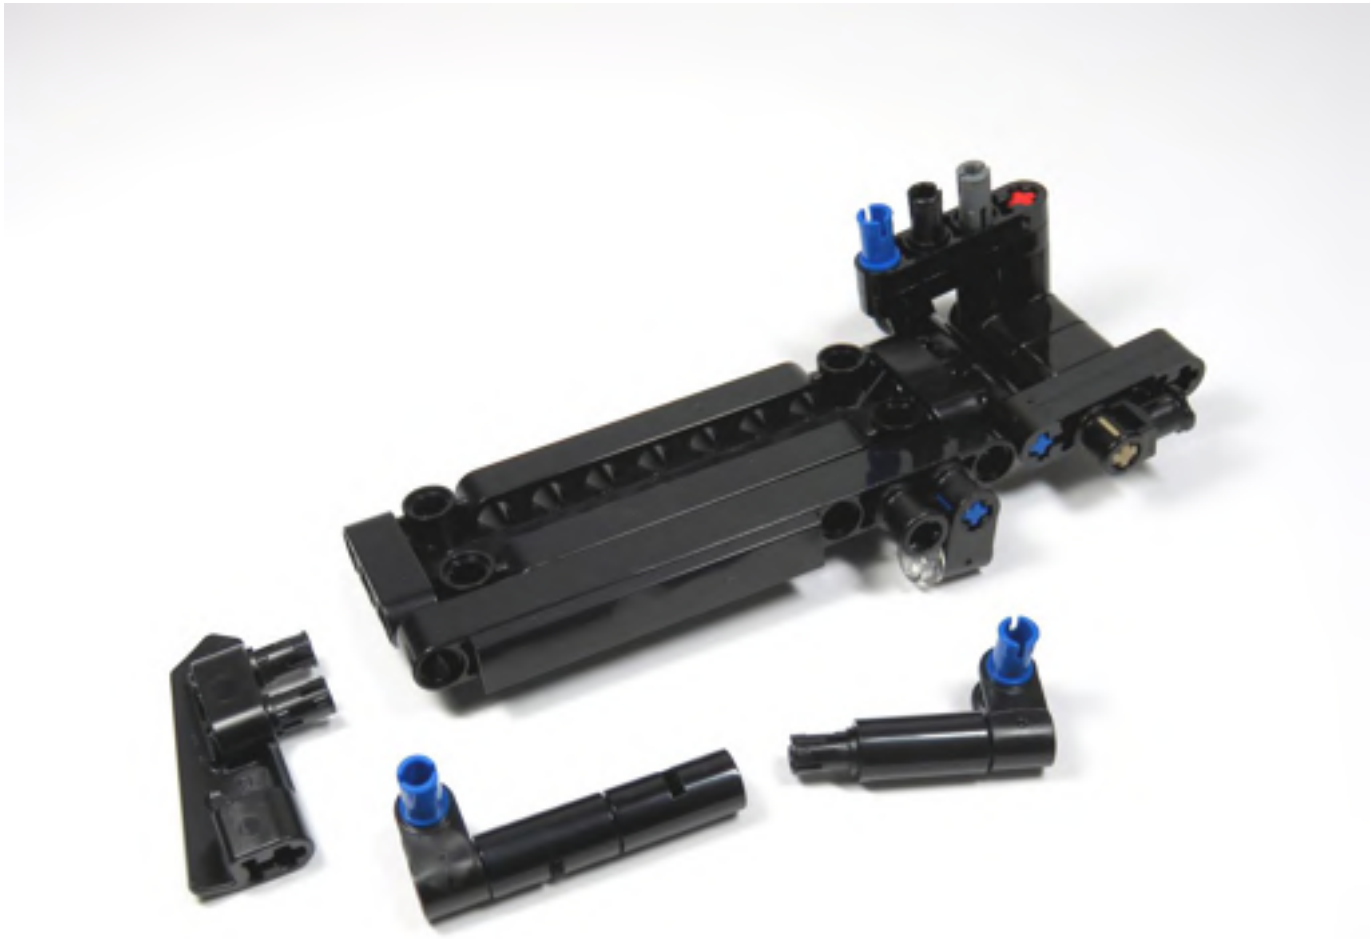

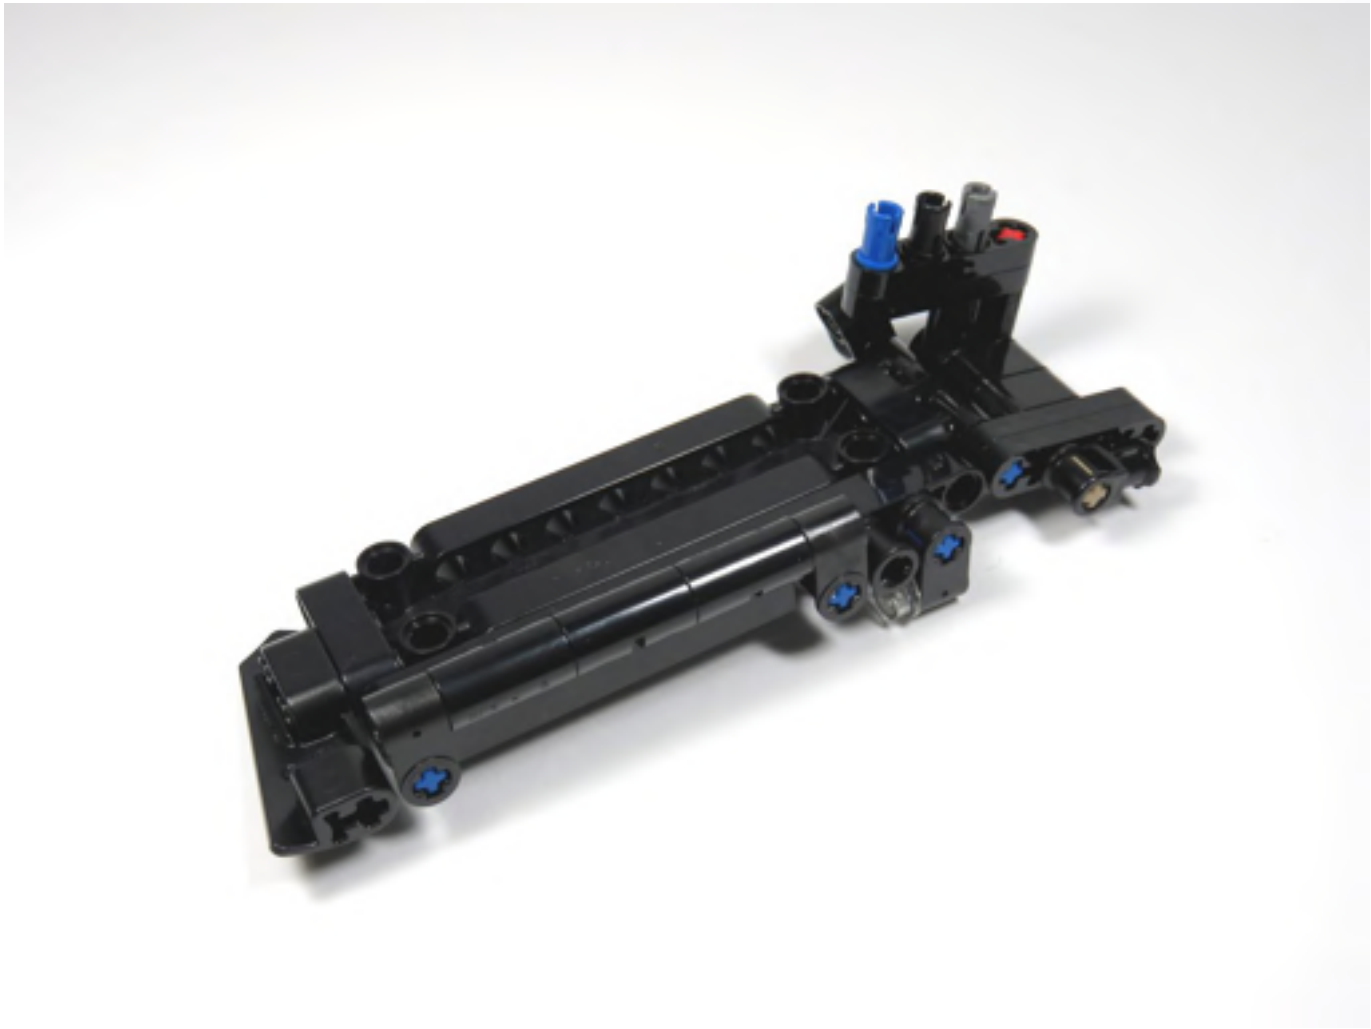

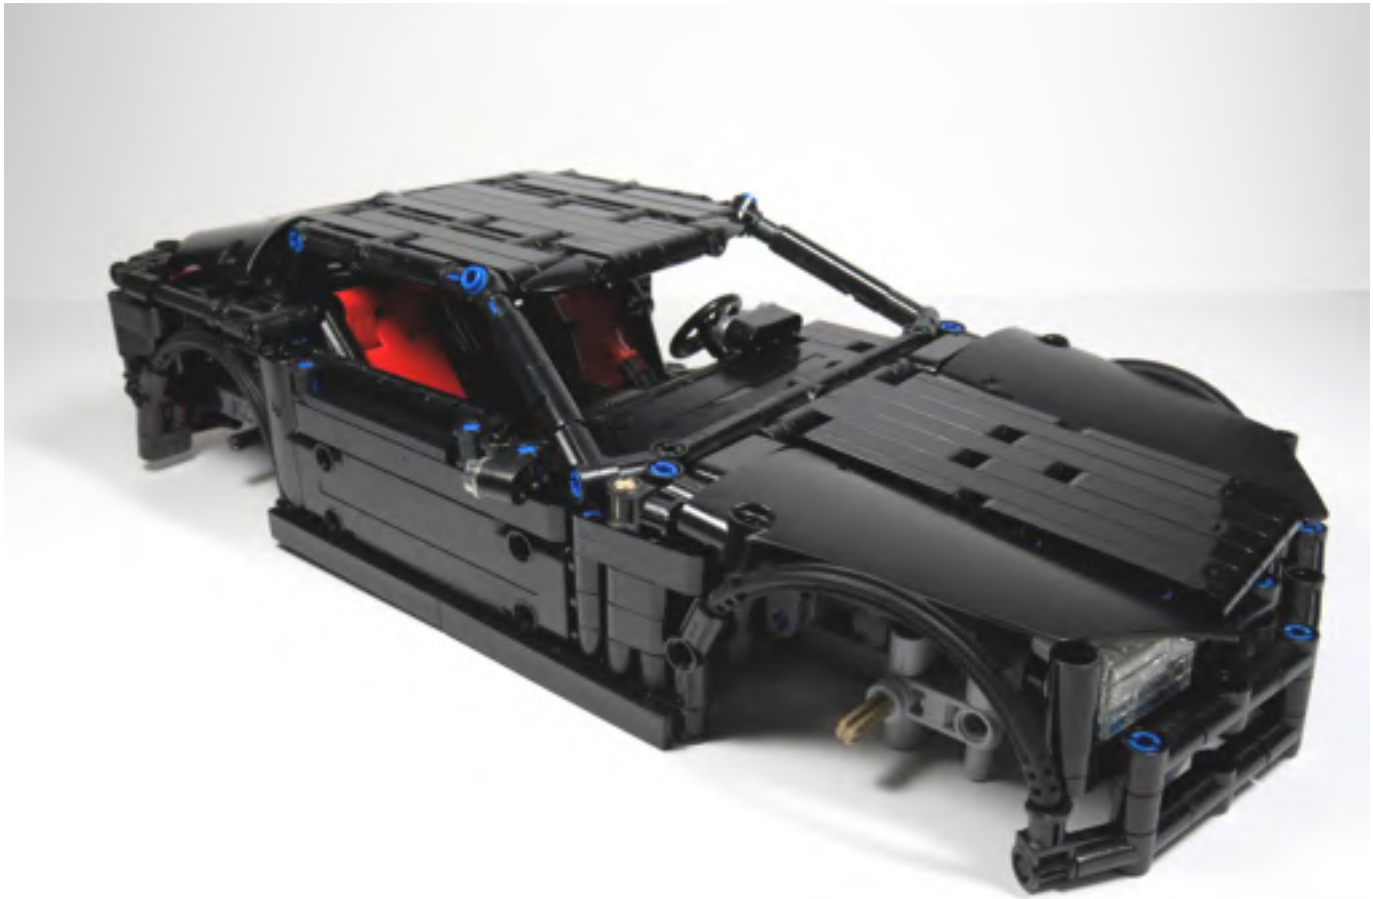

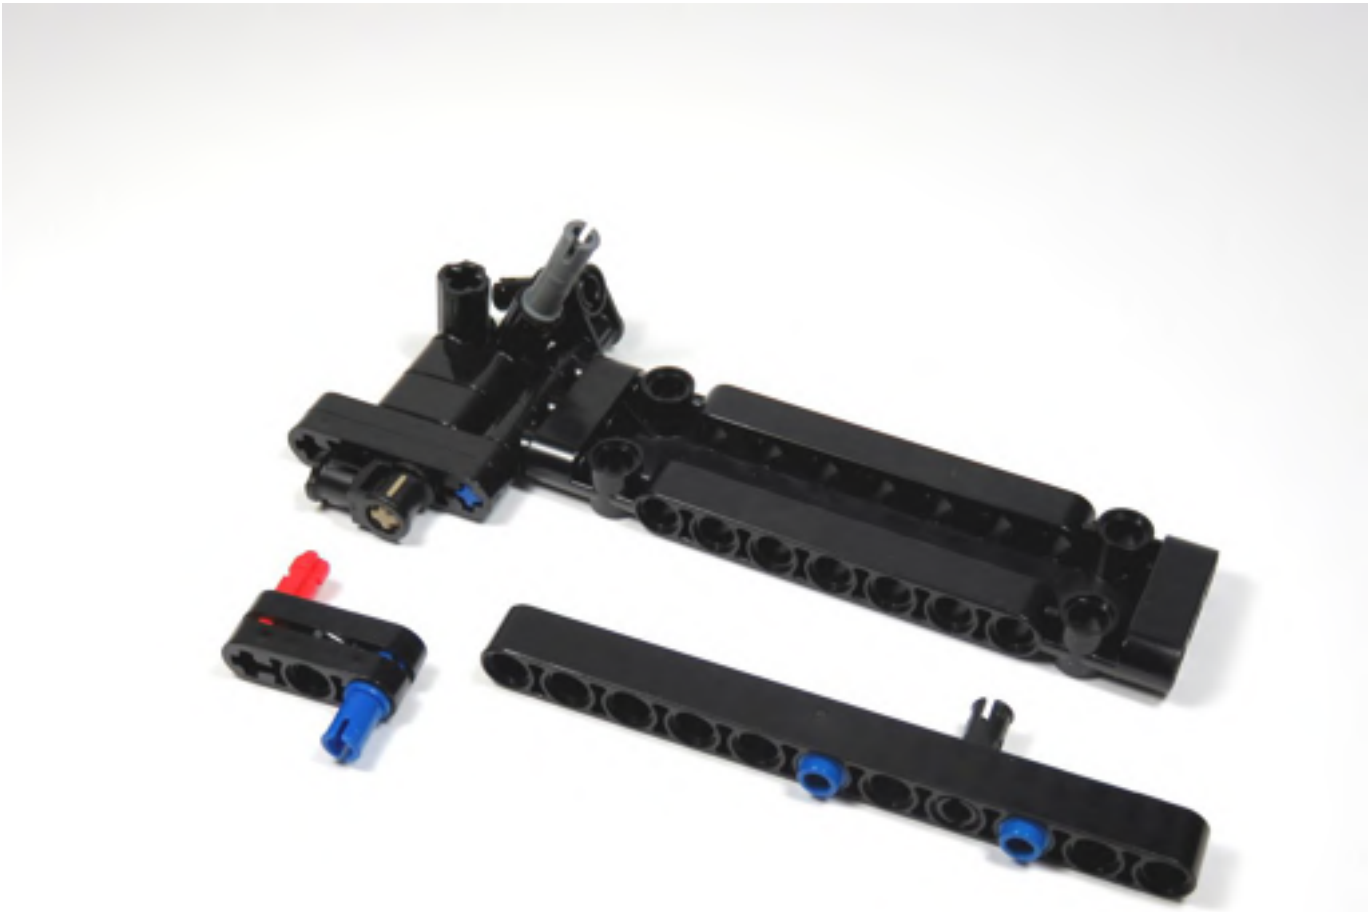

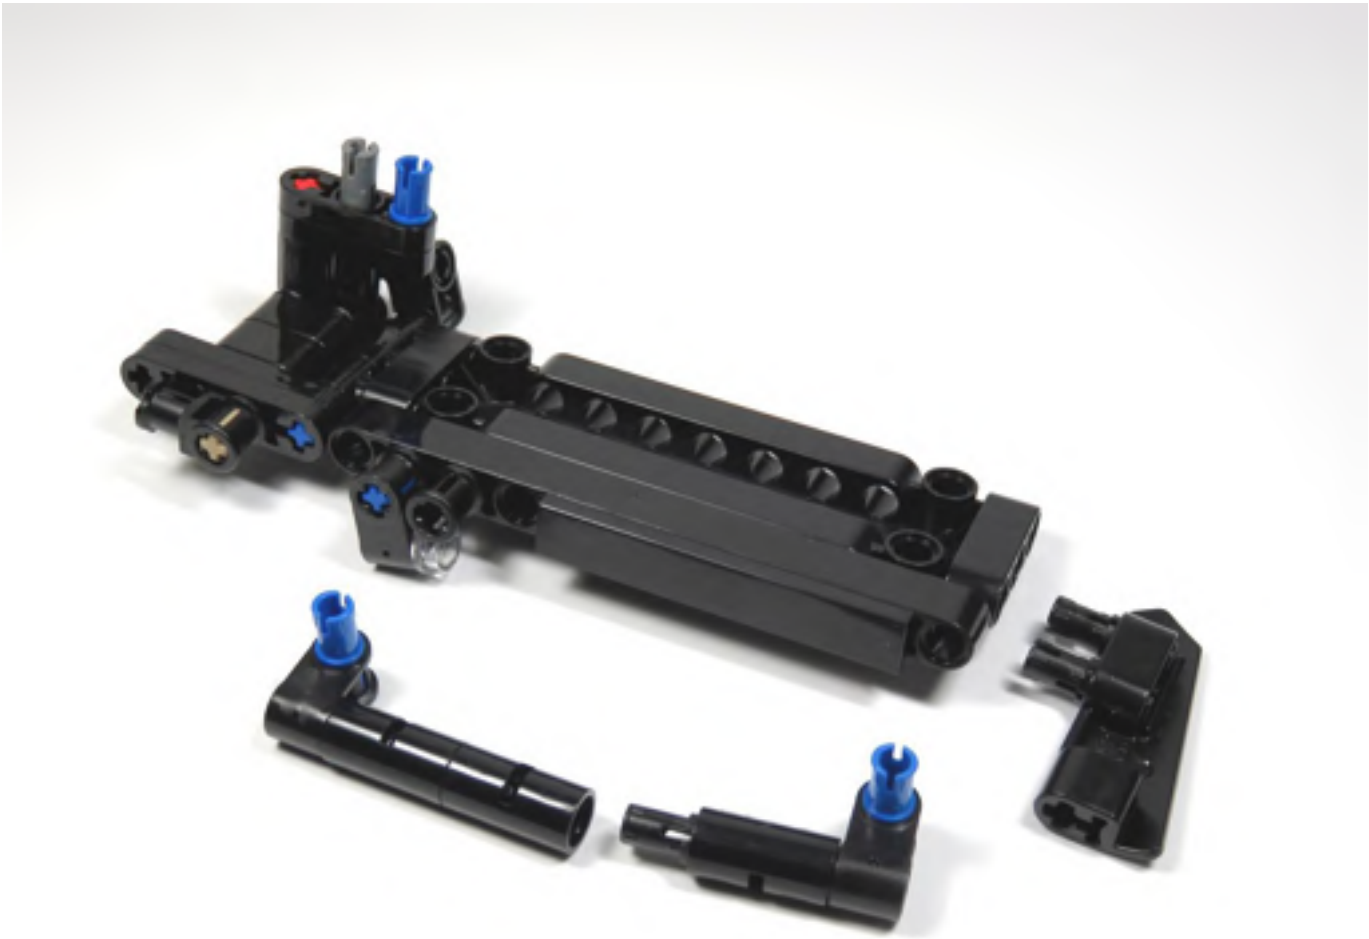

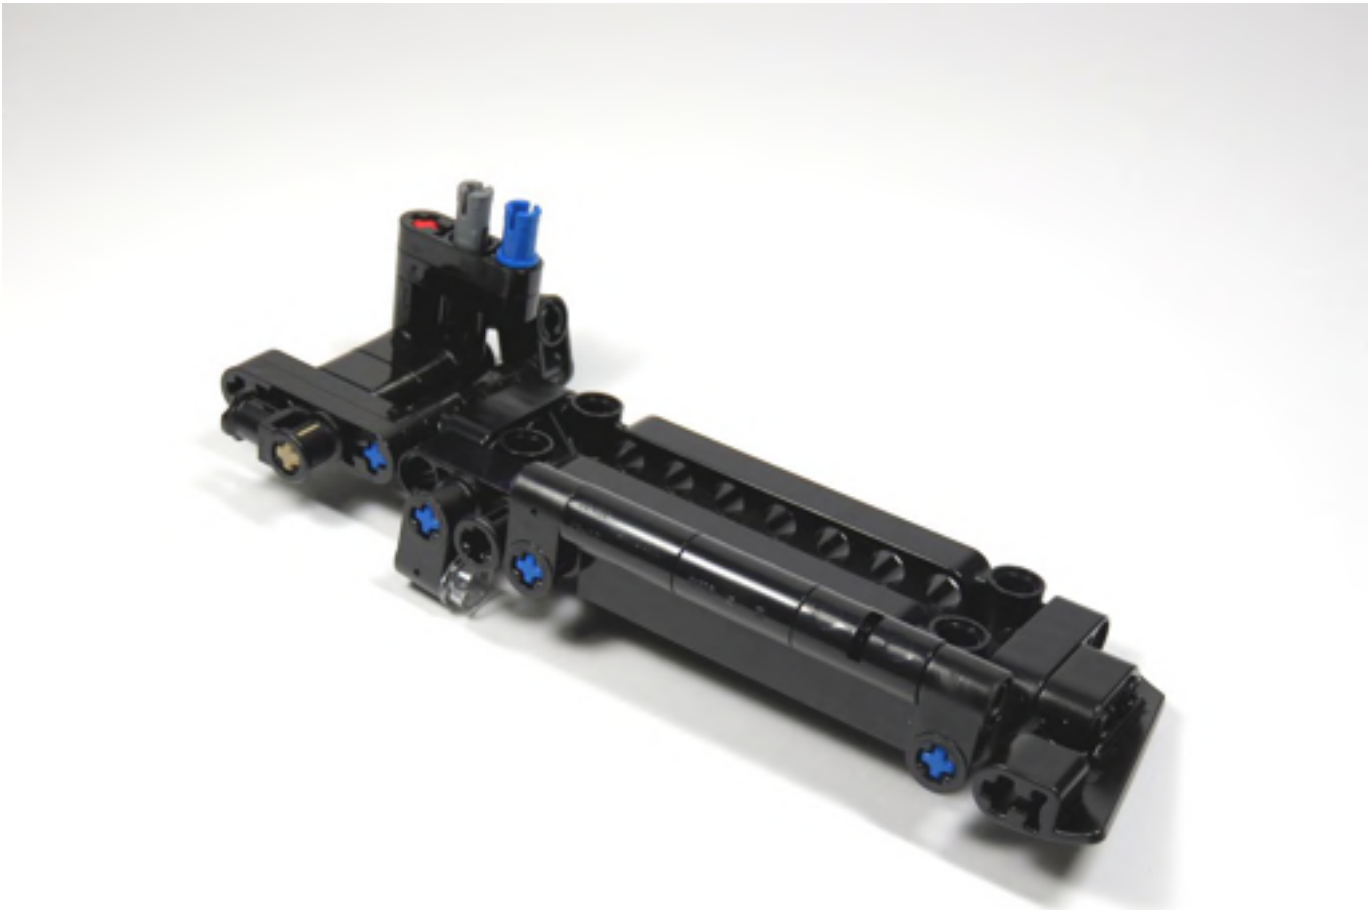

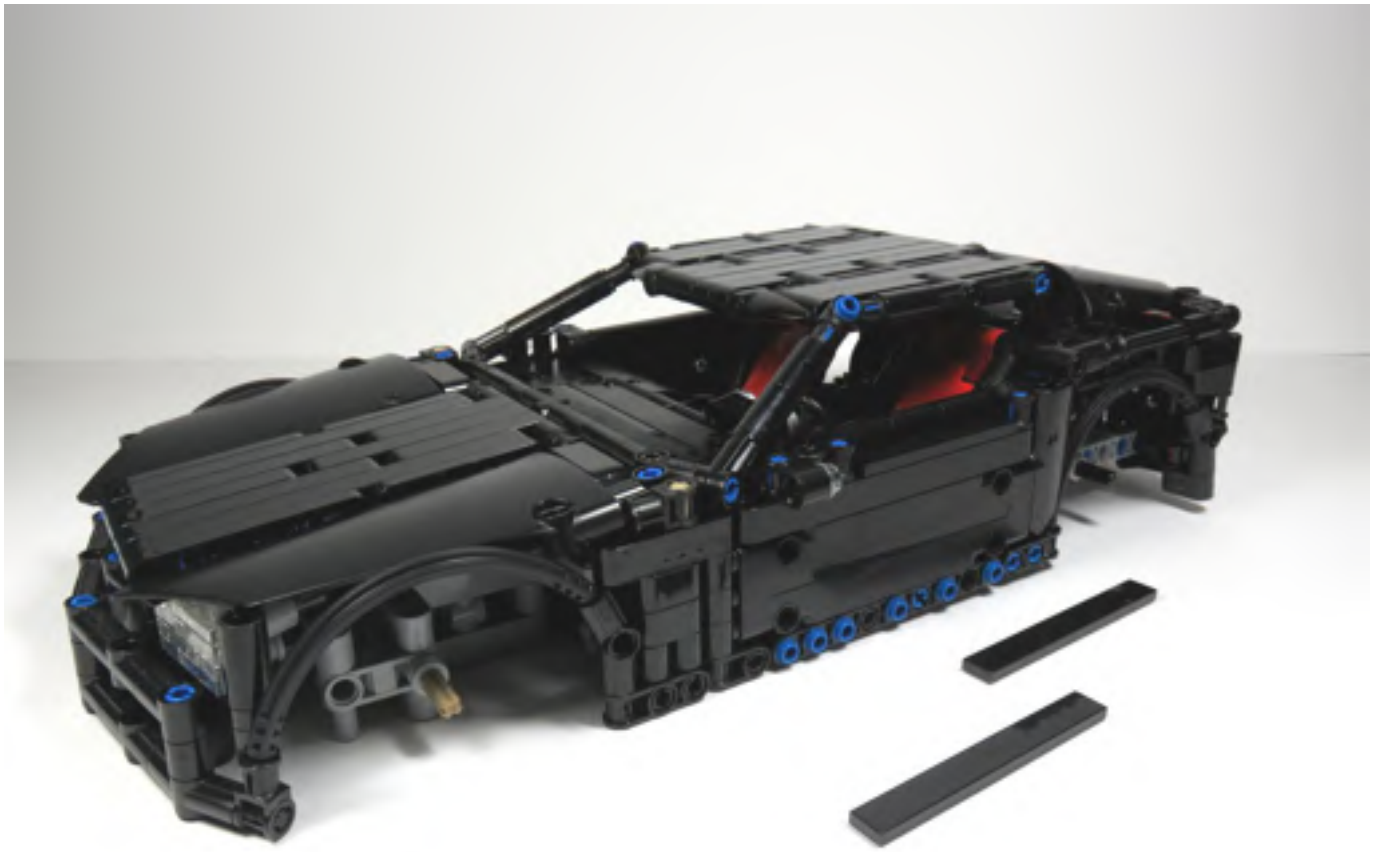

Finished!