

注意：

不包含印刷零件、贴纸、人仔、以及人仔相关零件、道具。

NOTICE:



NO printed parts, stickers, minifigures or related mini tools contained.

THE CHRYSLER BUILDING



Building Instructions





1

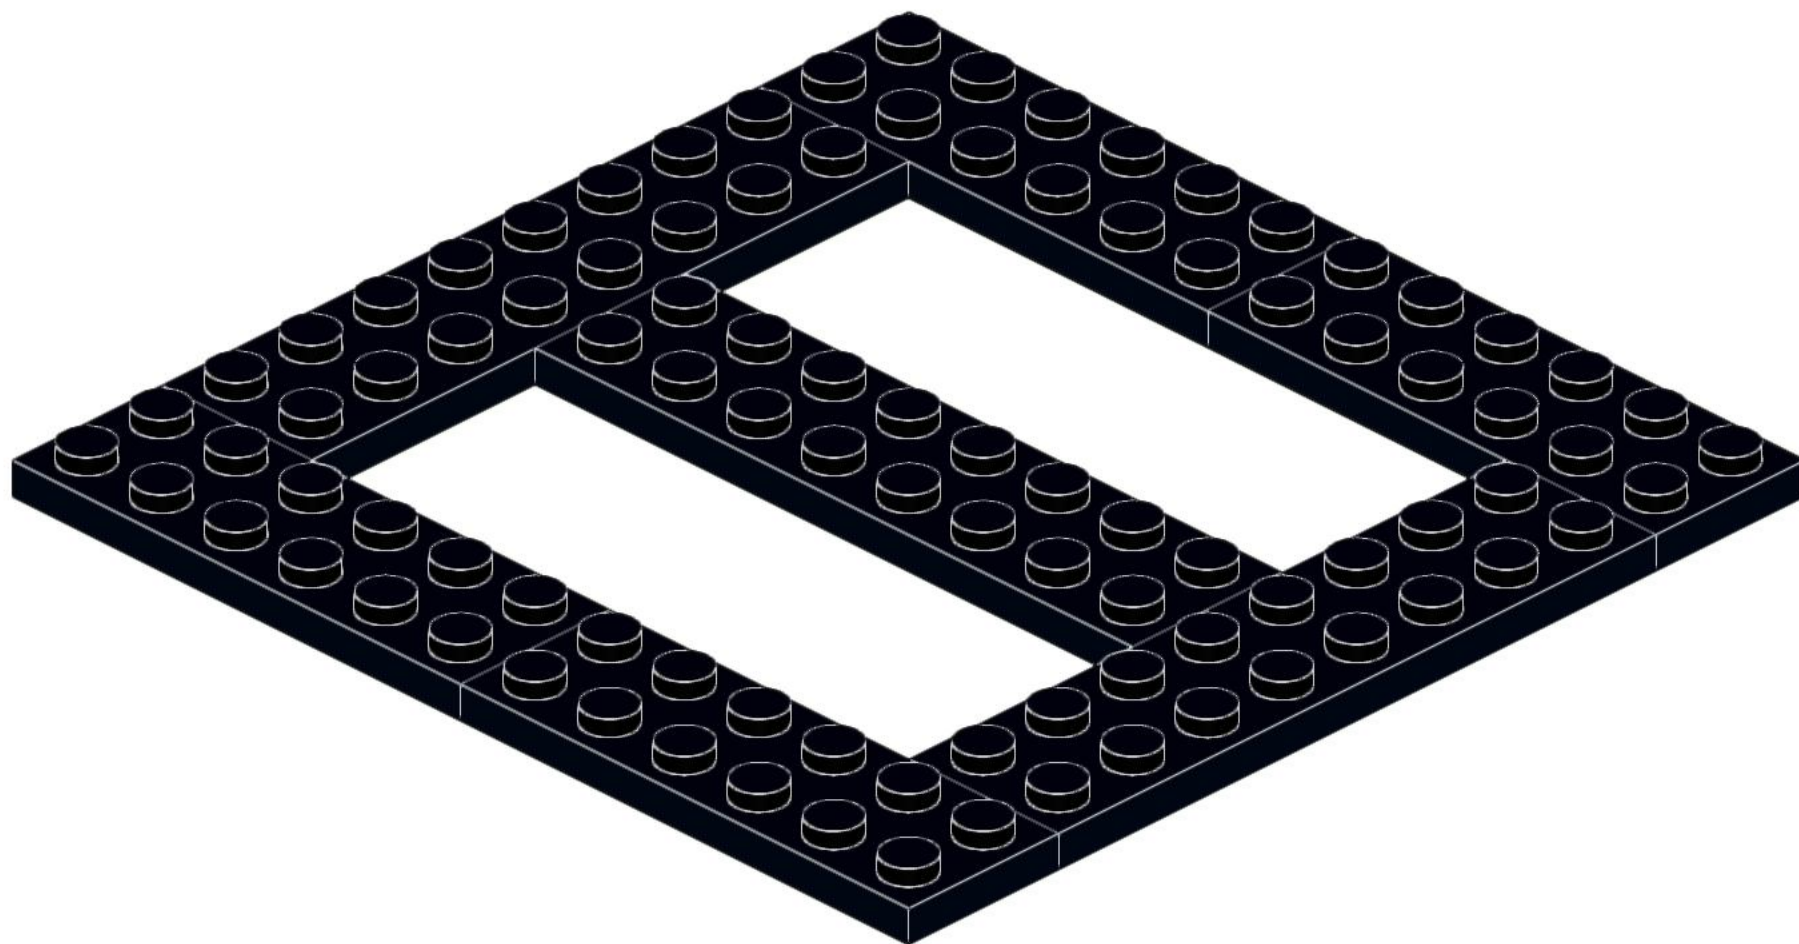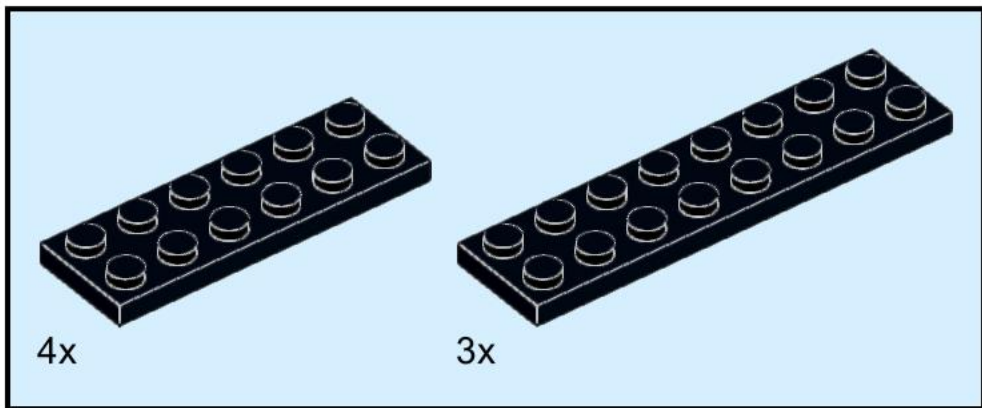

2

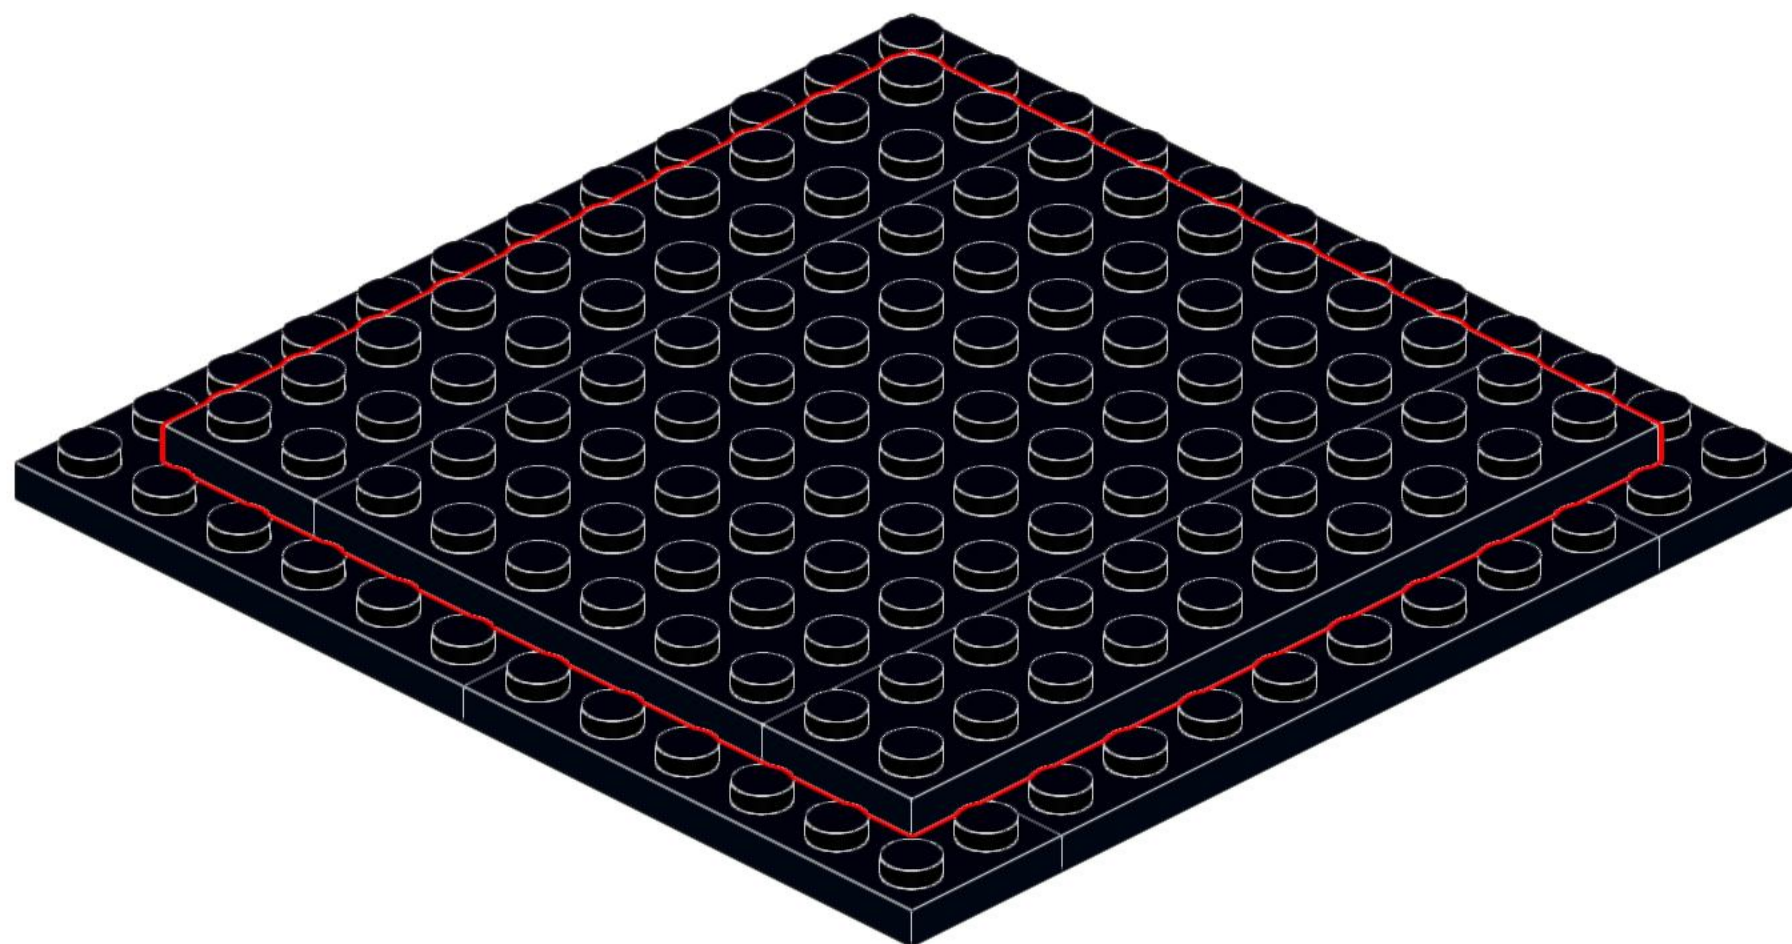
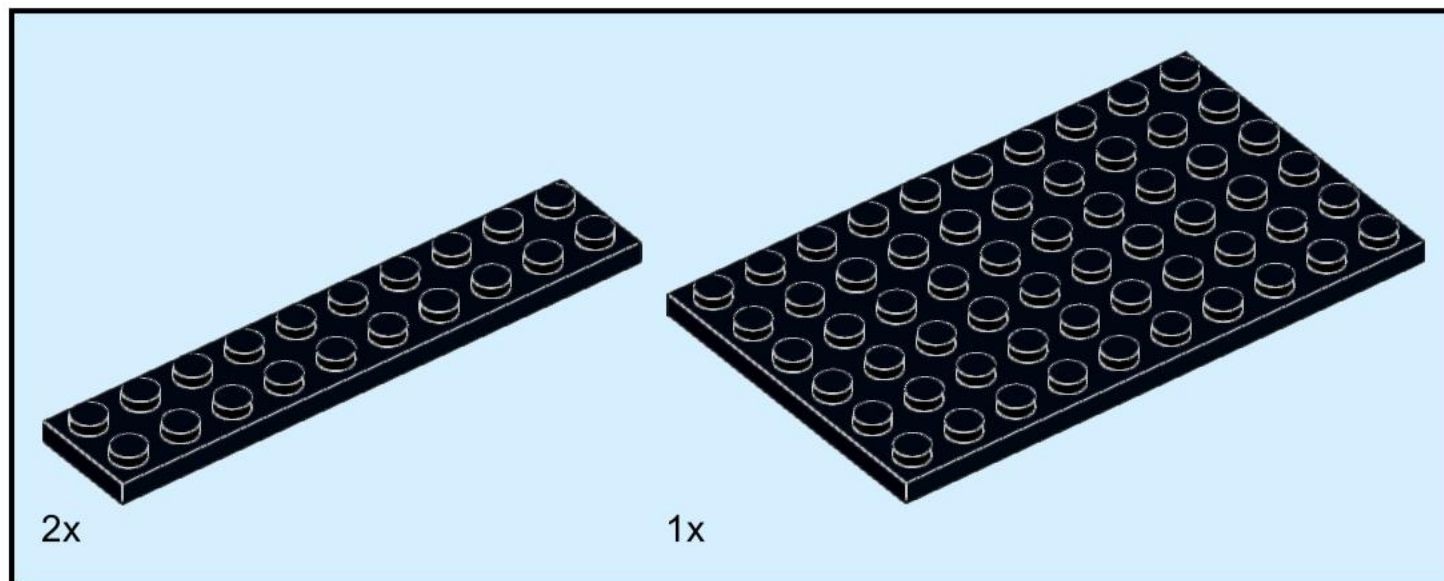


3

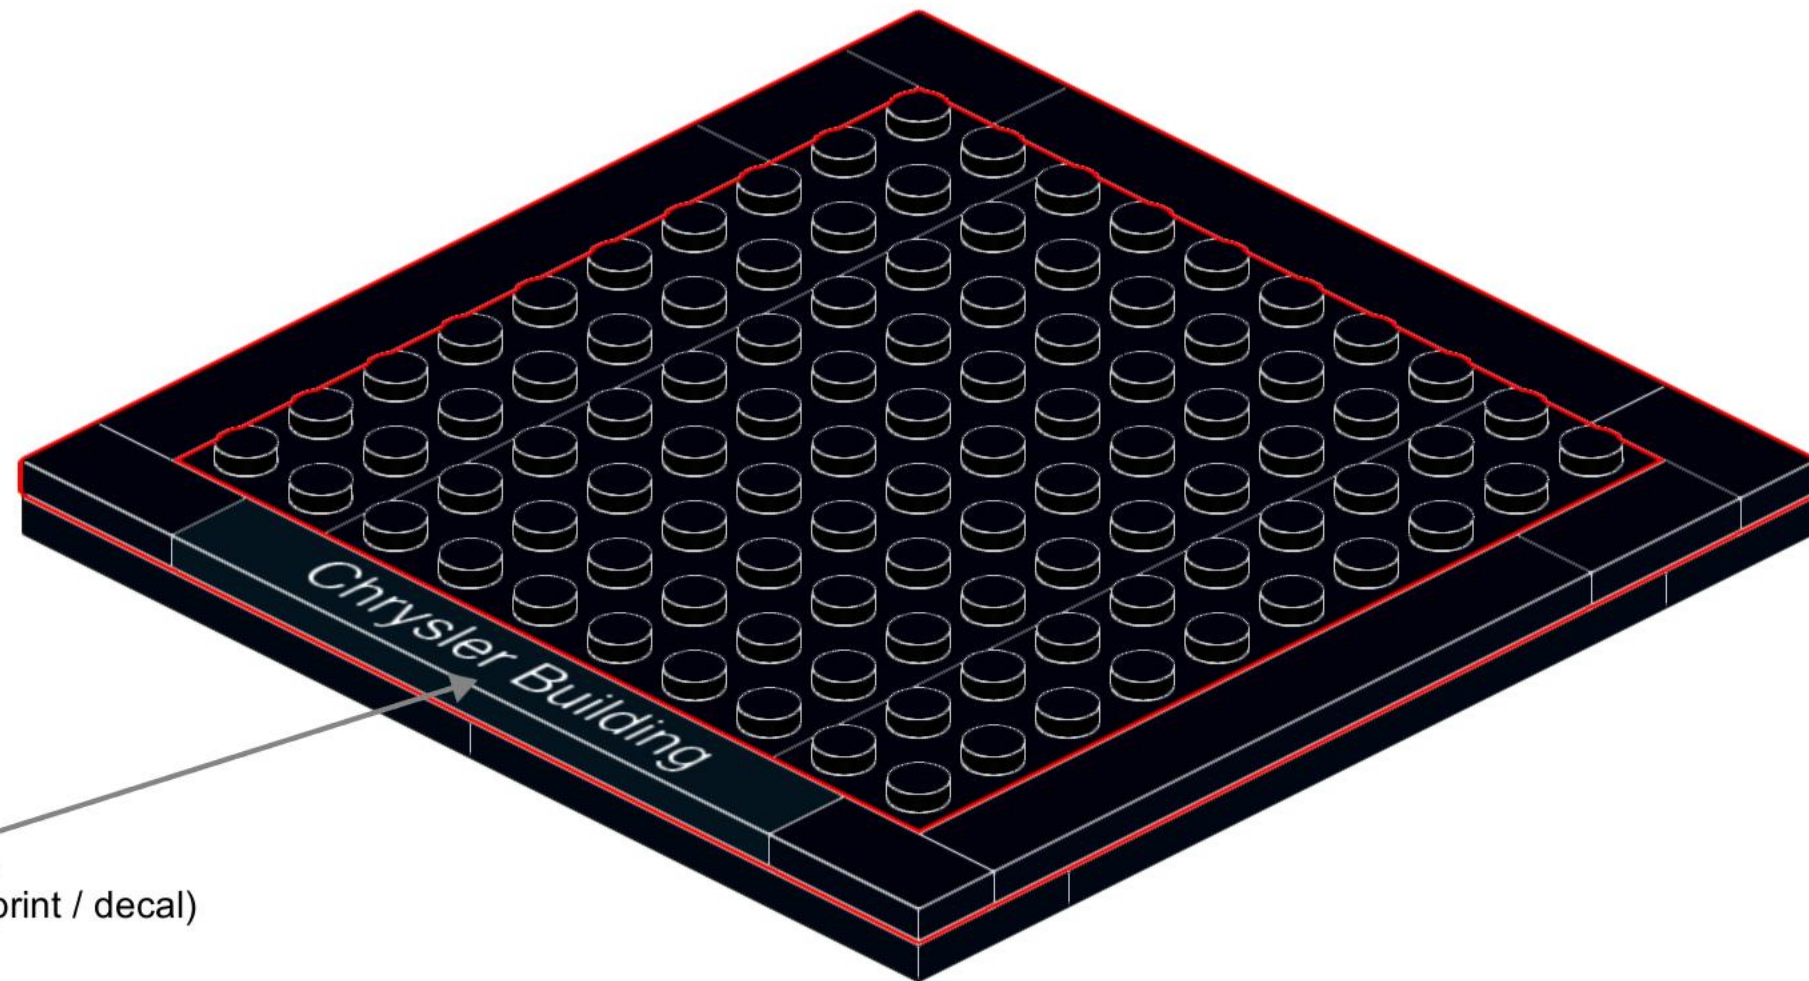
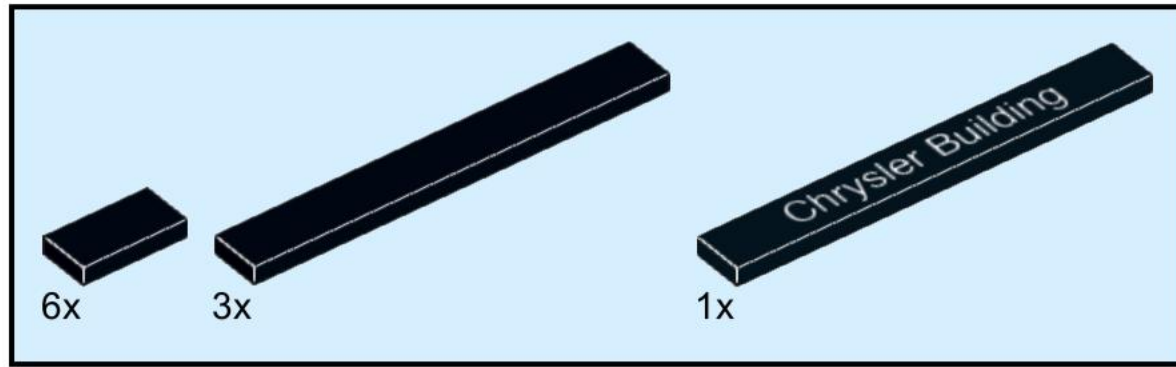


Nameplate
(sticker or print / decal)



4

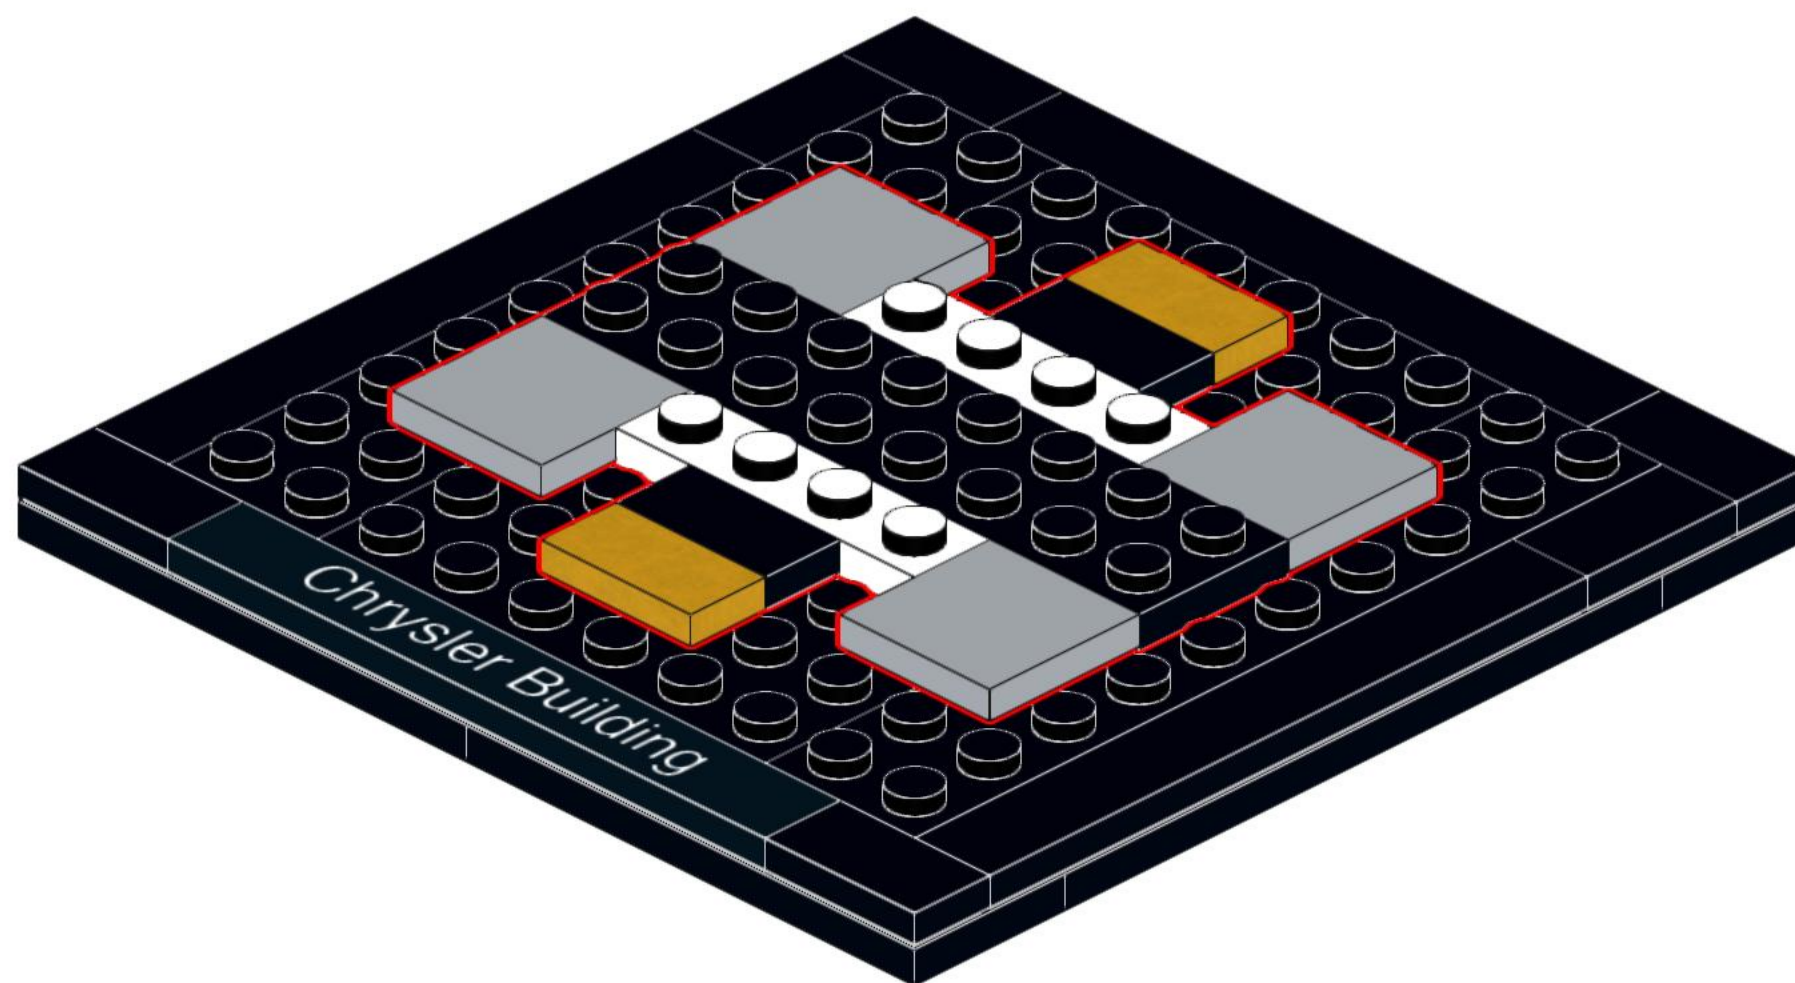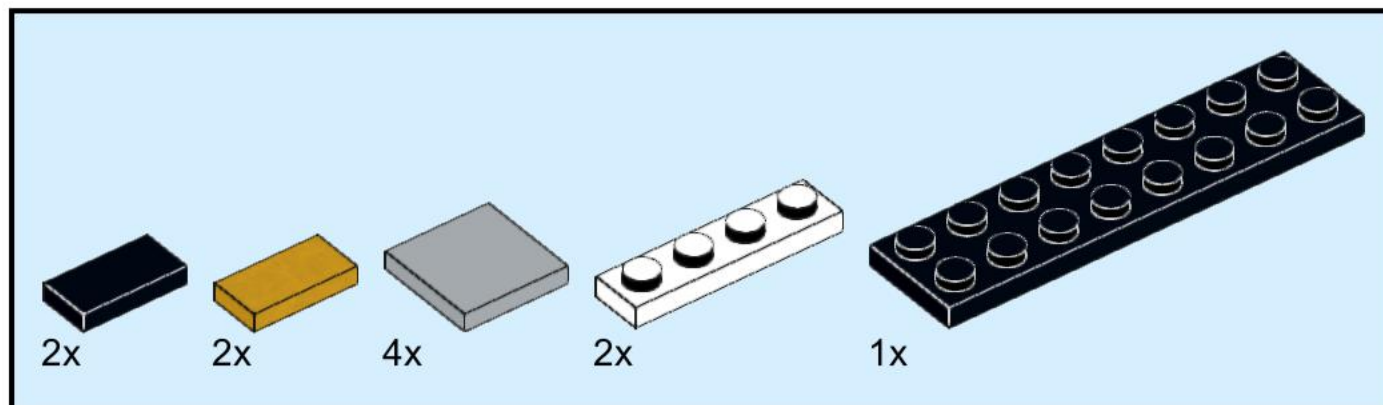



5

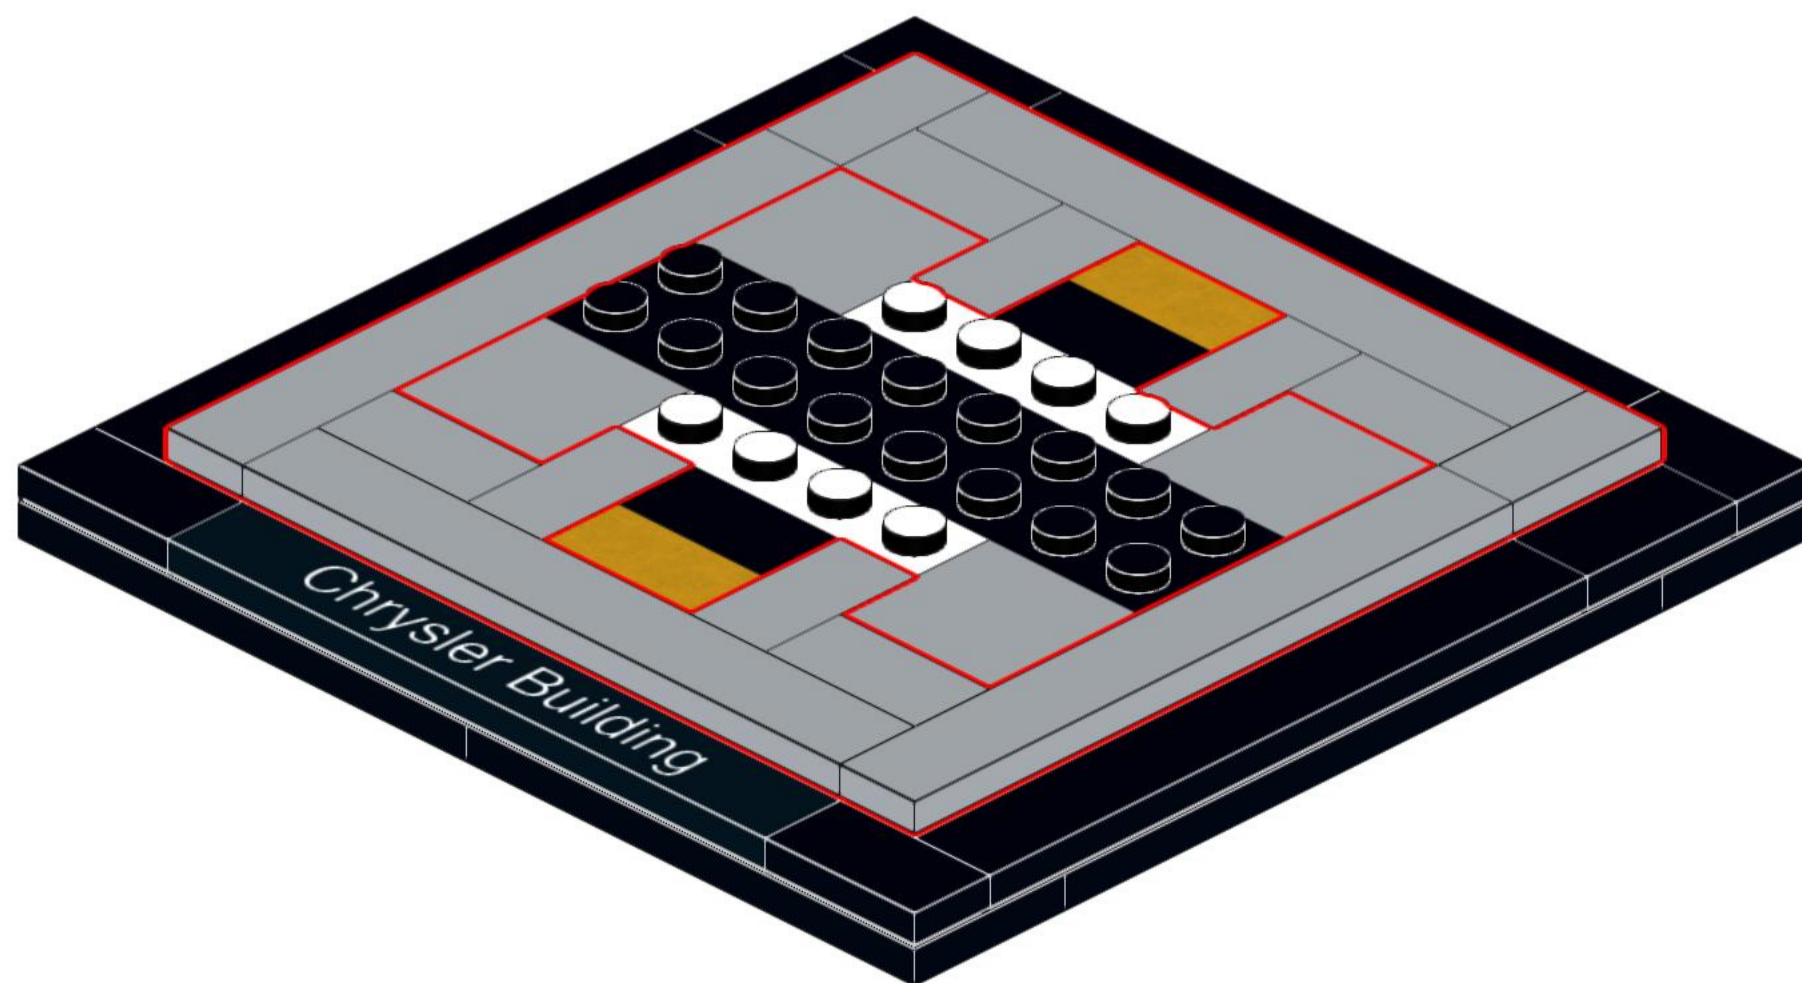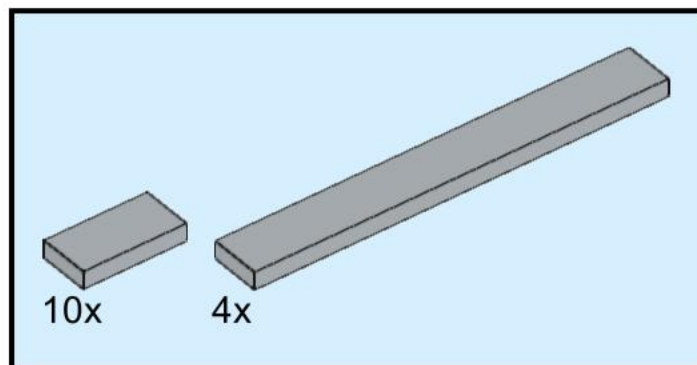



6

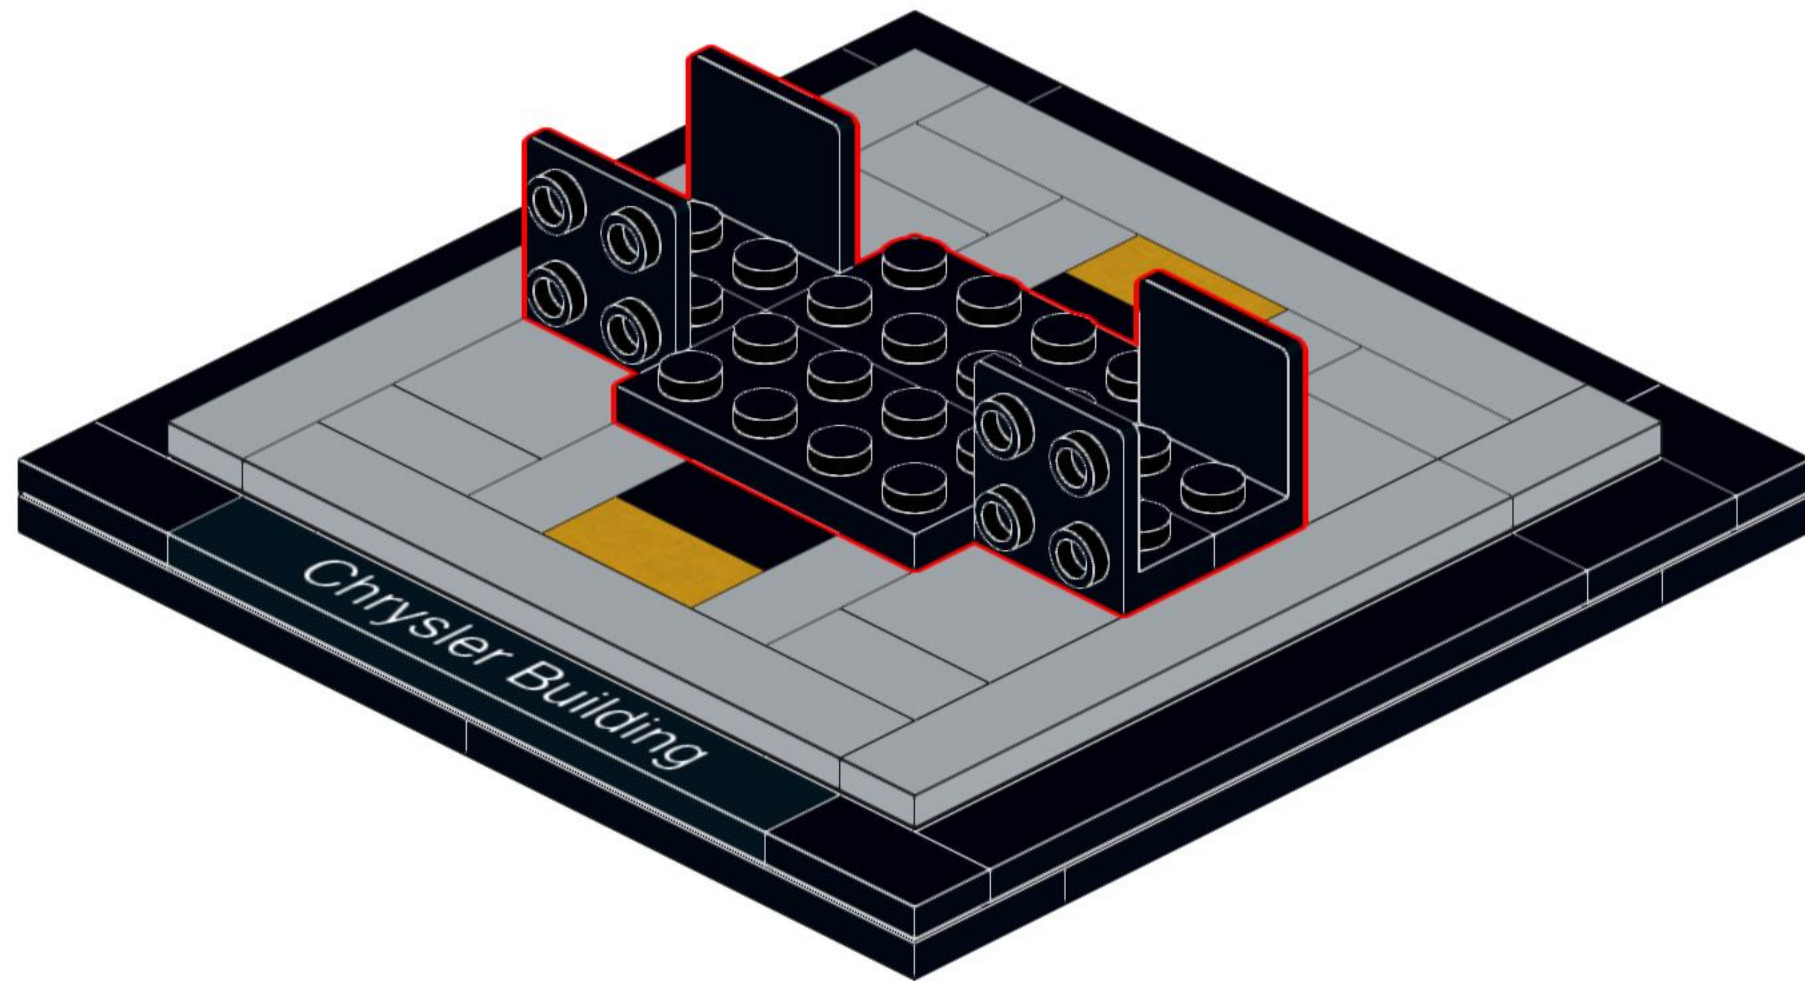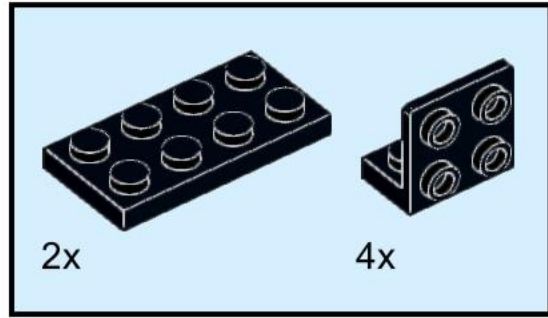



7

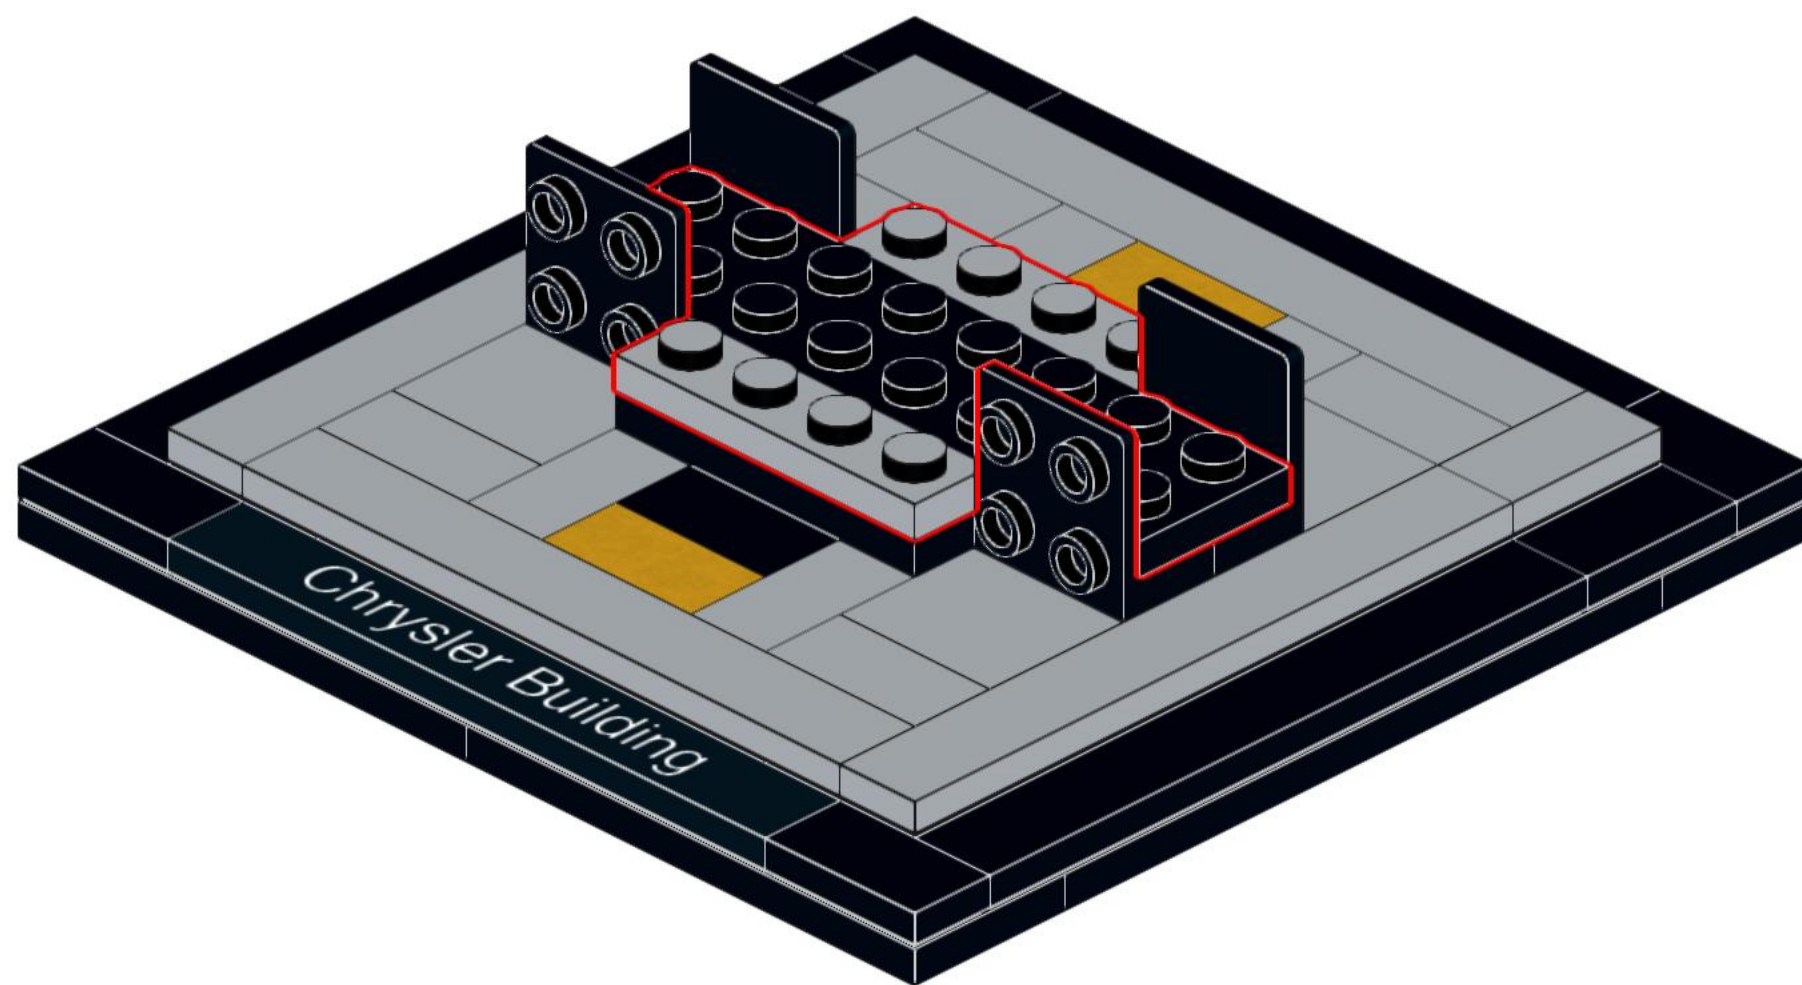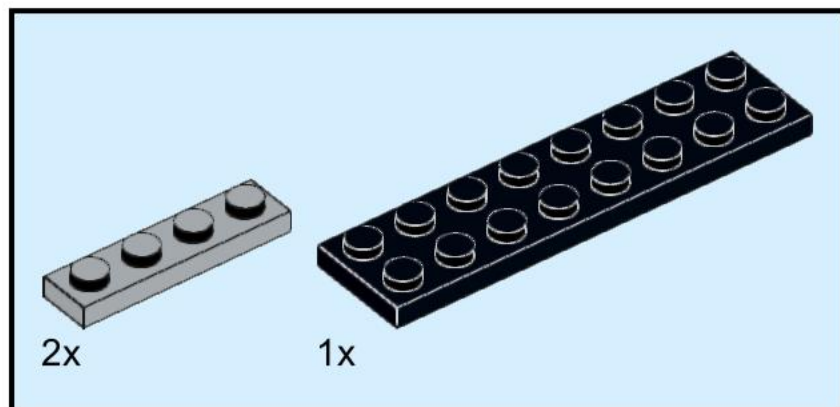



8

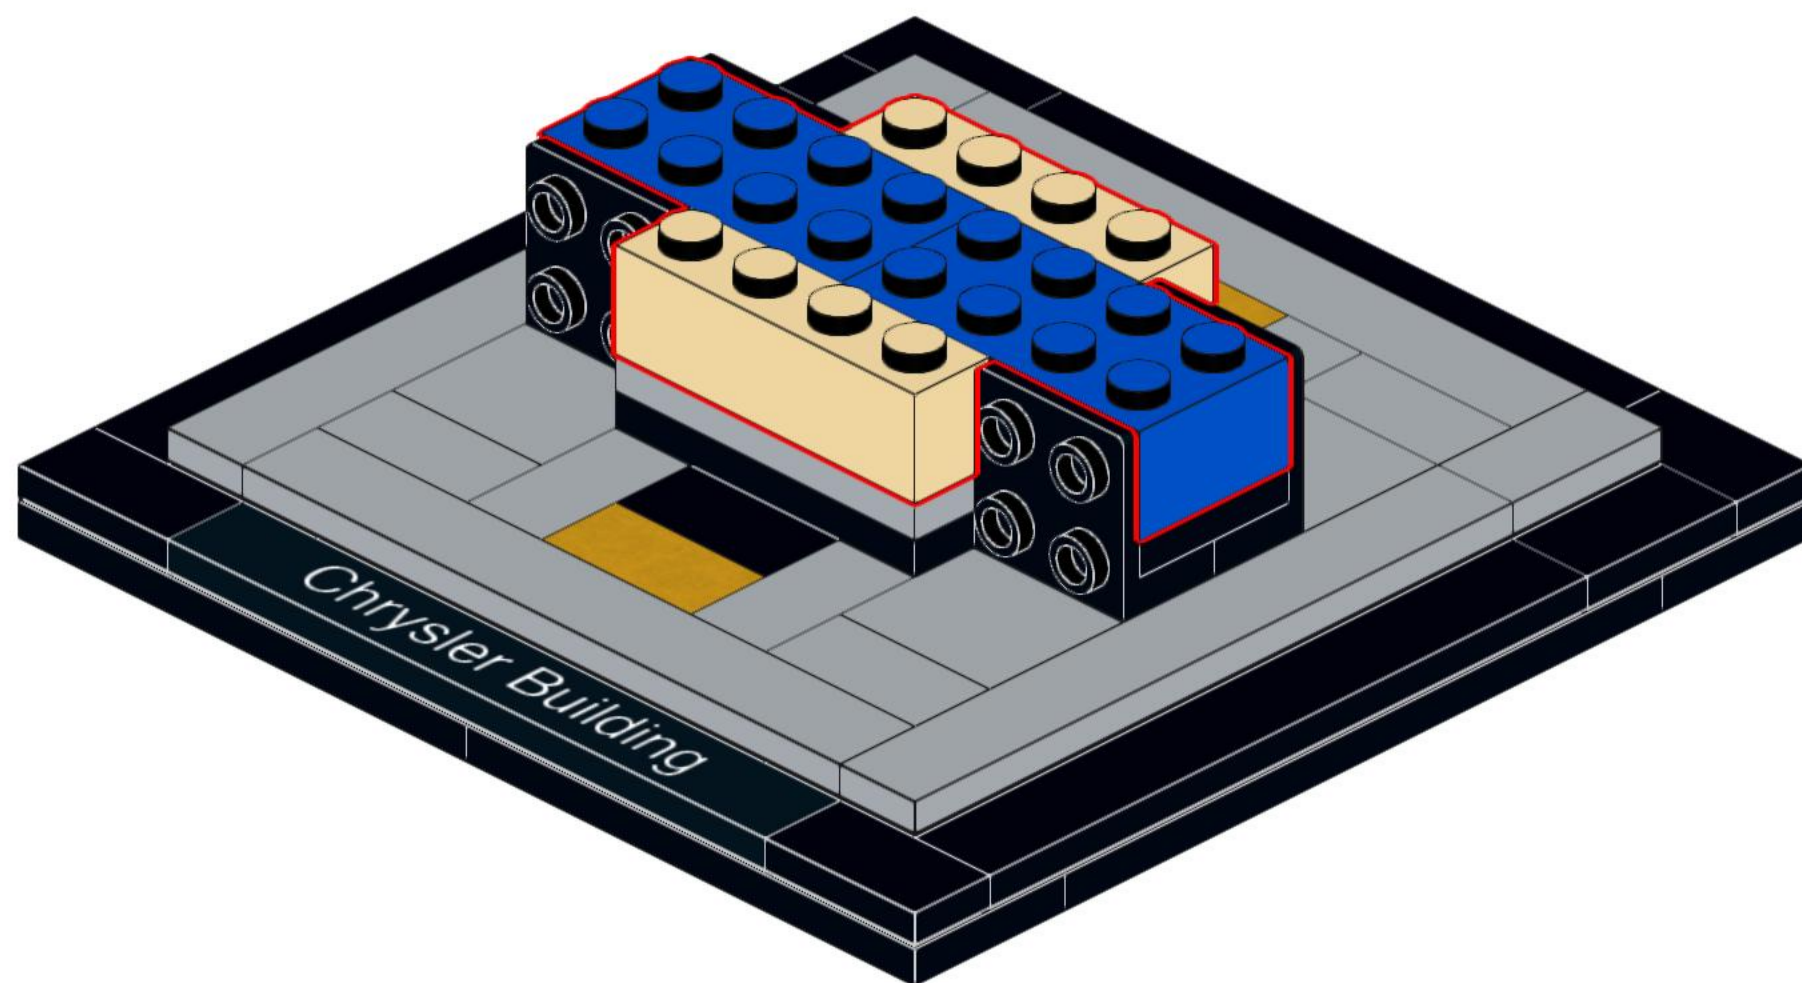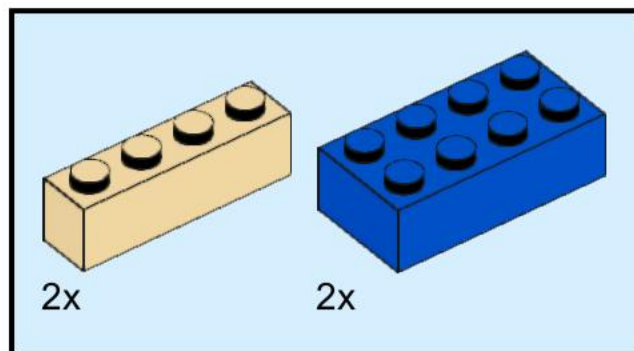



9

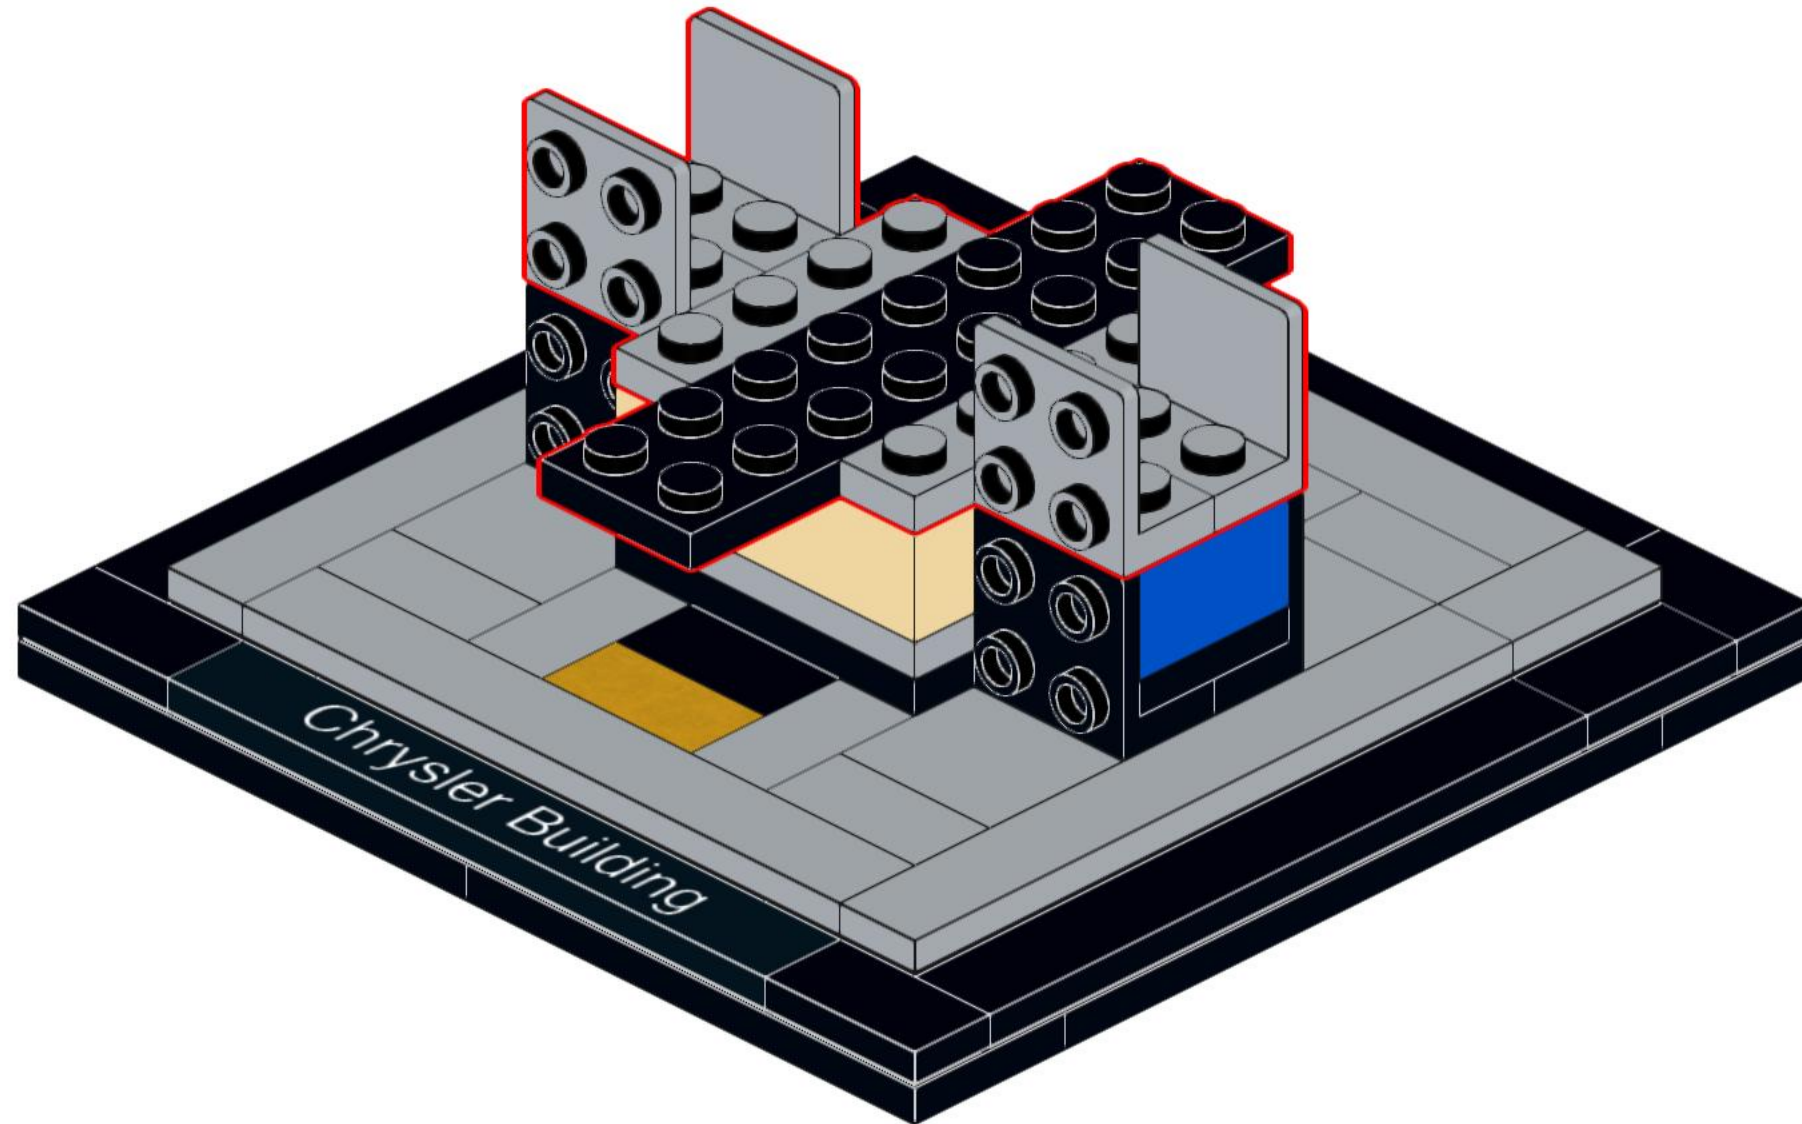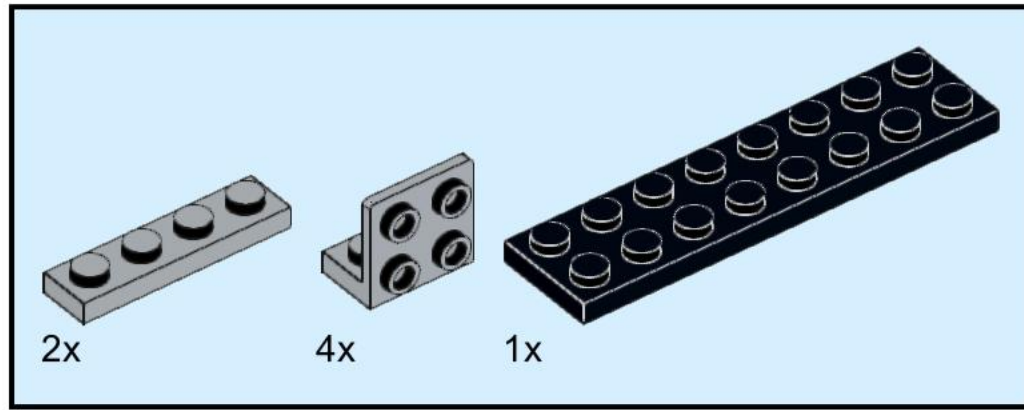



10

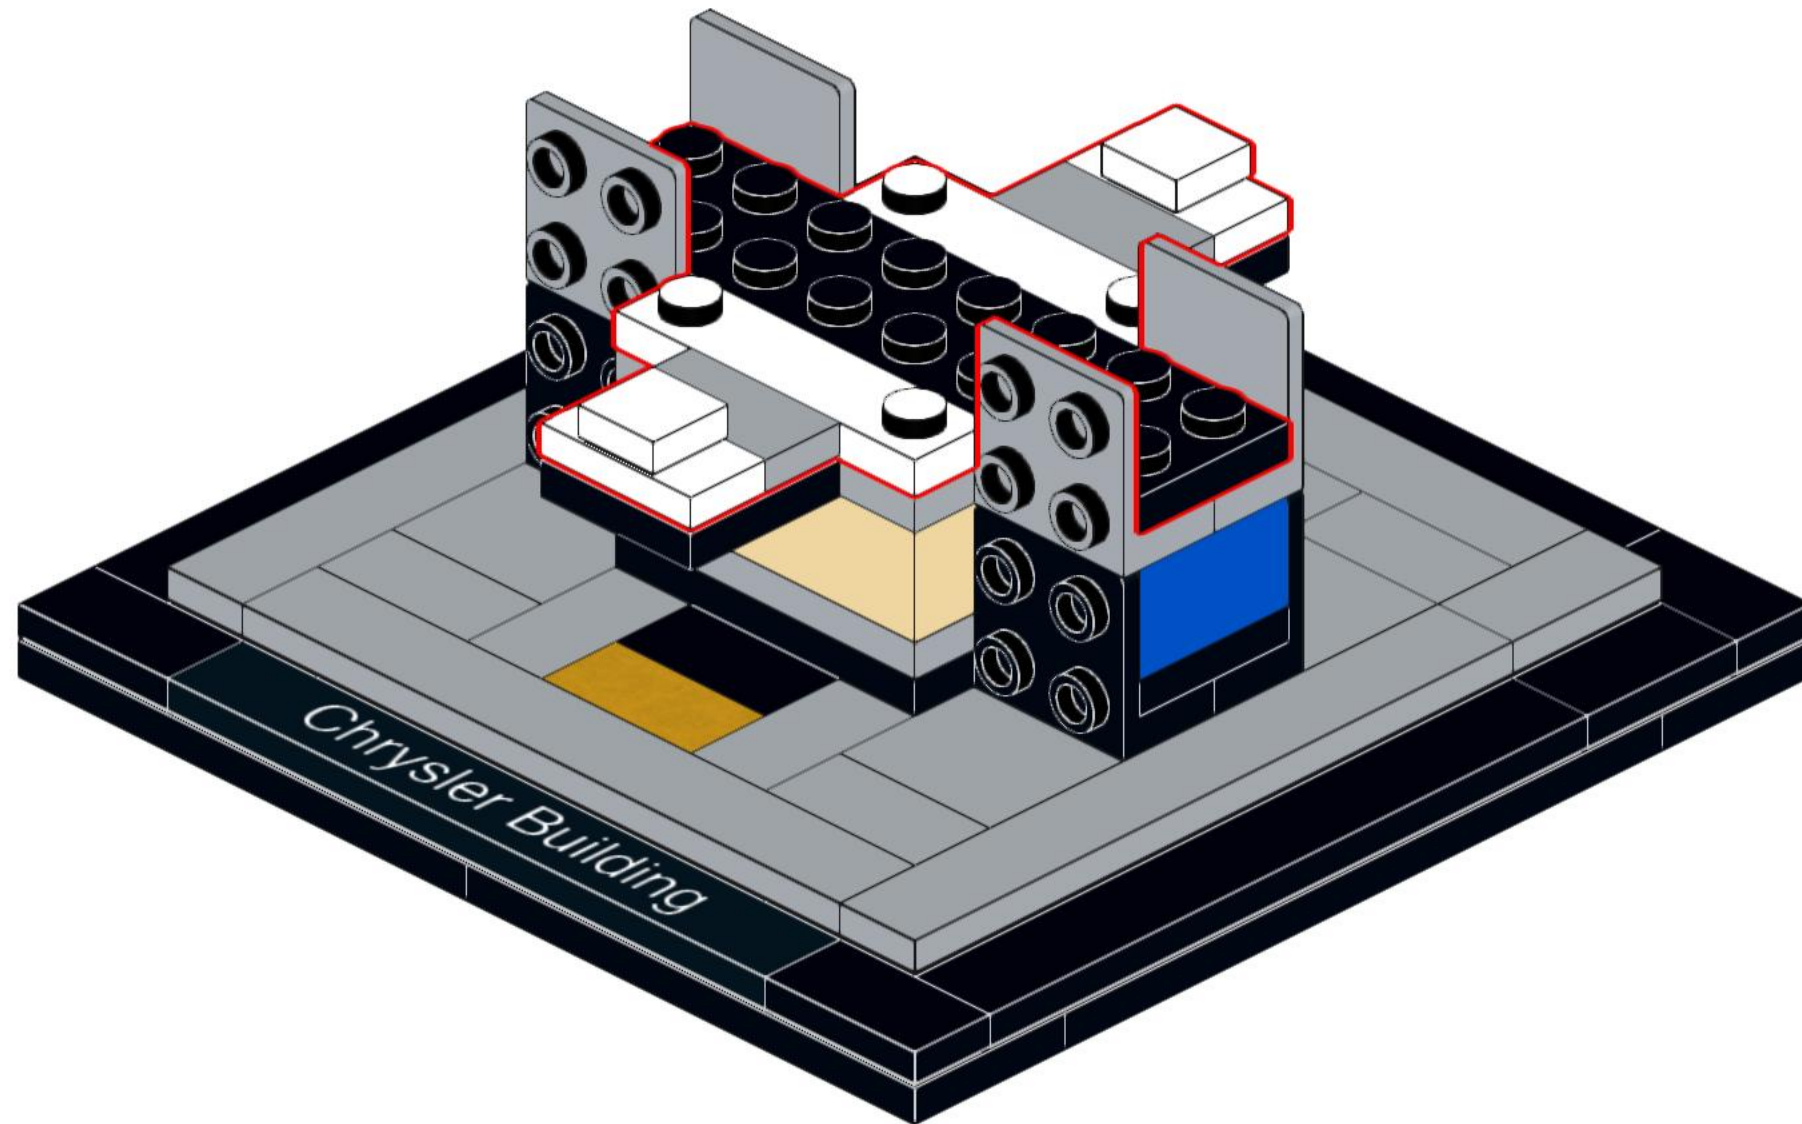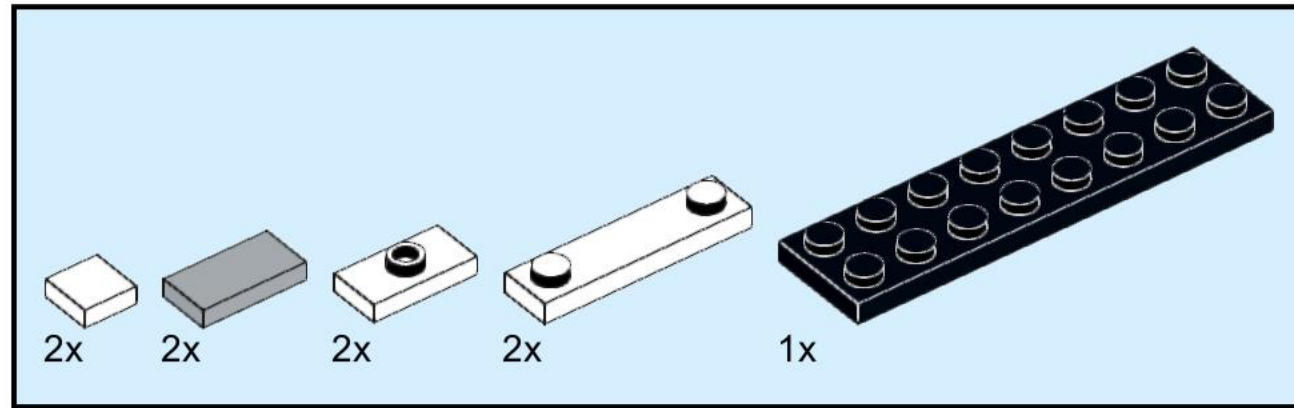



11

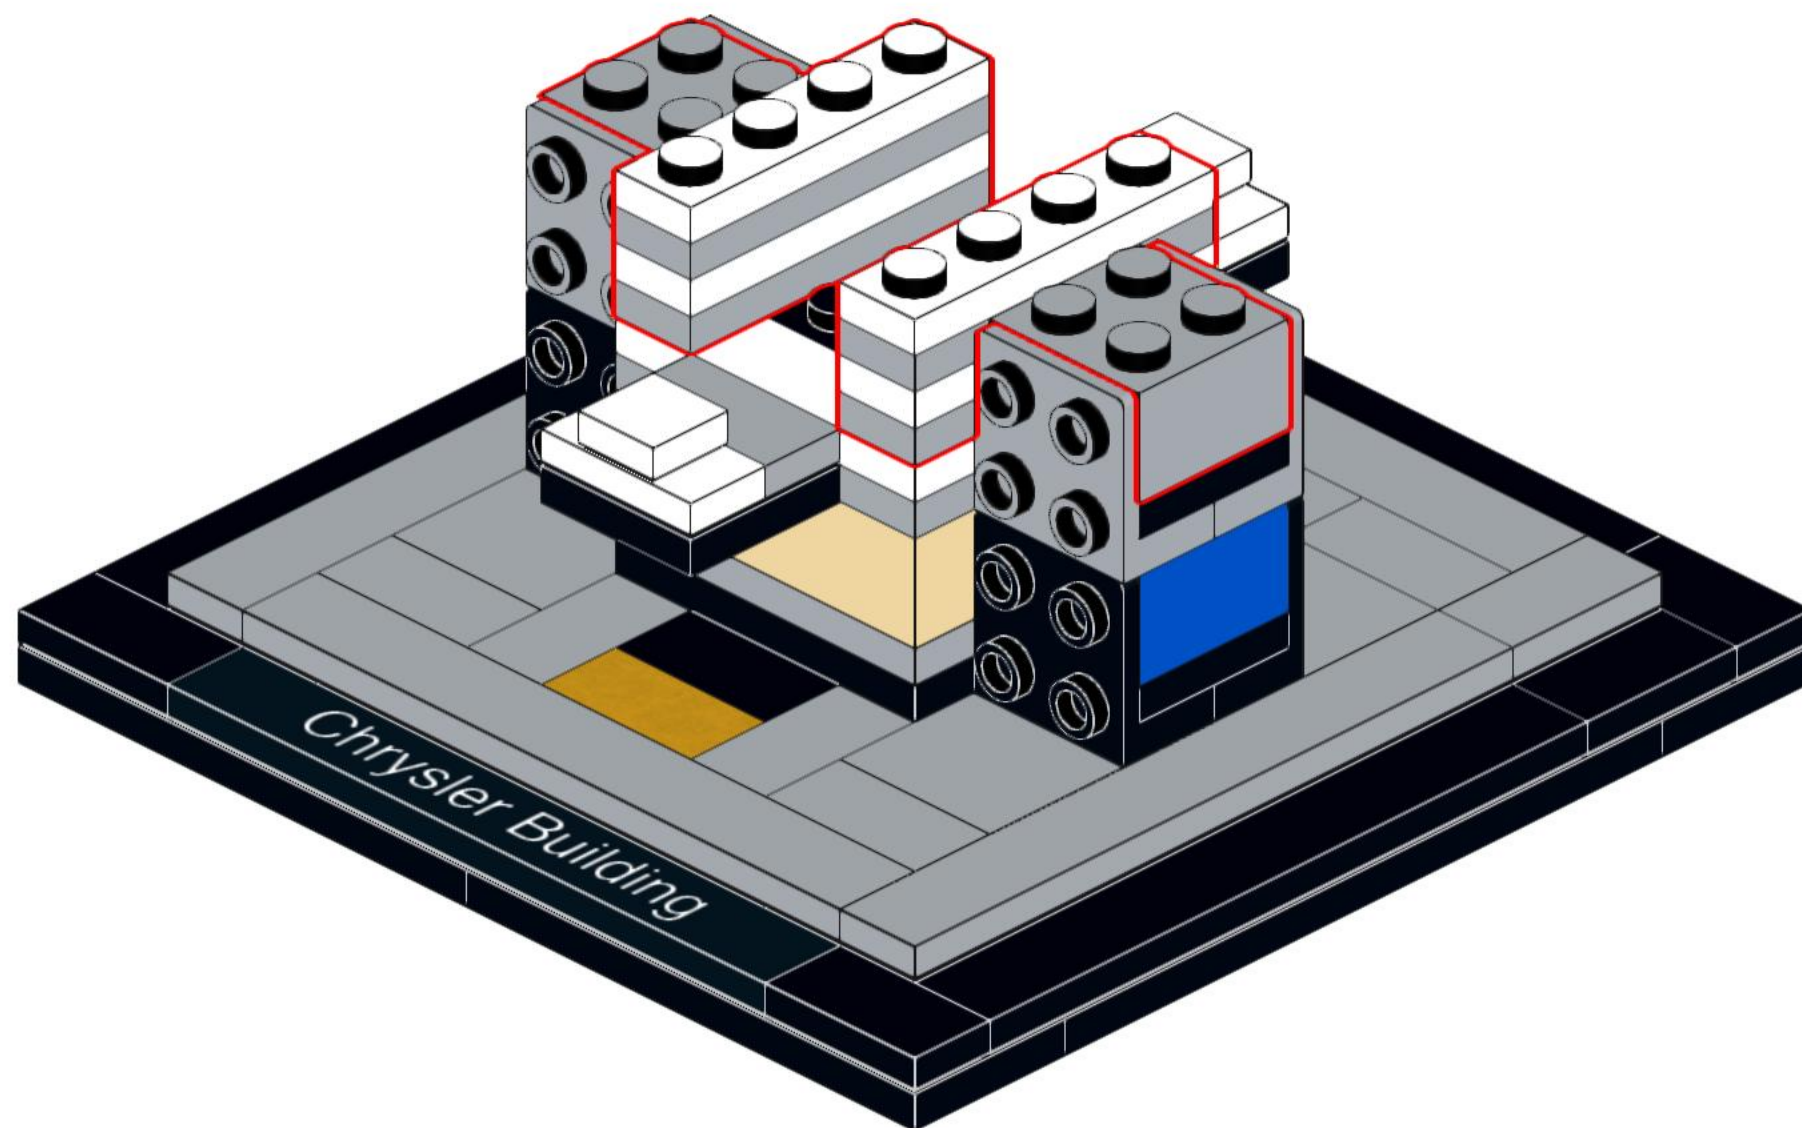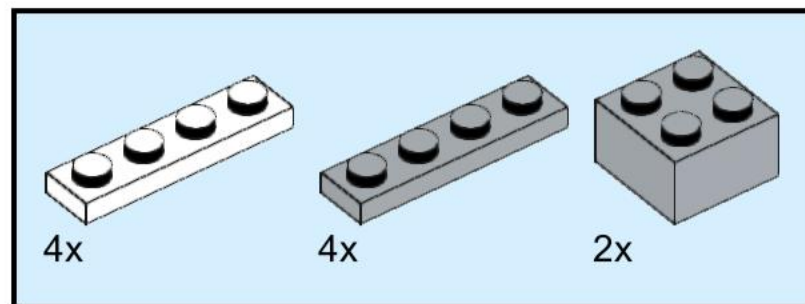




12

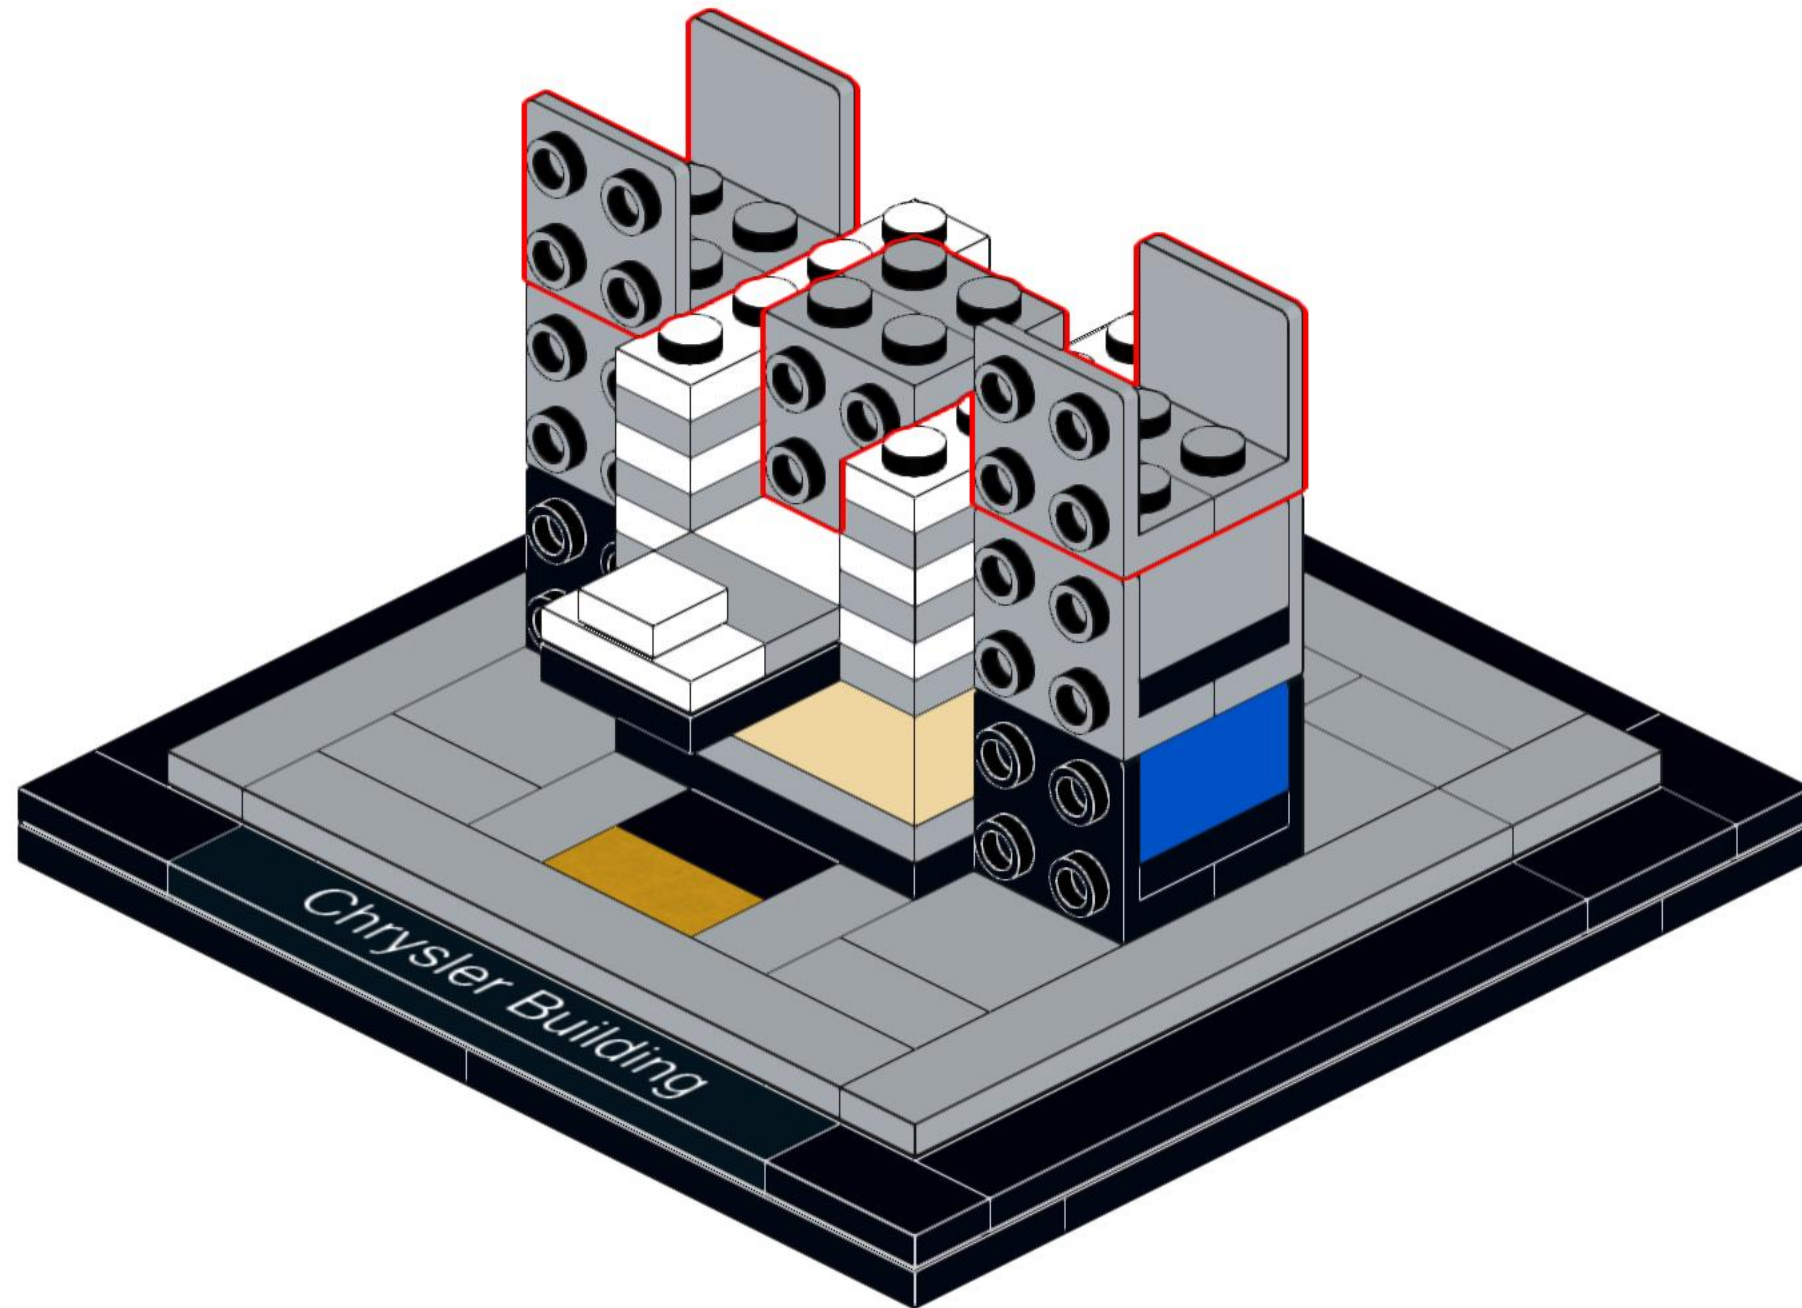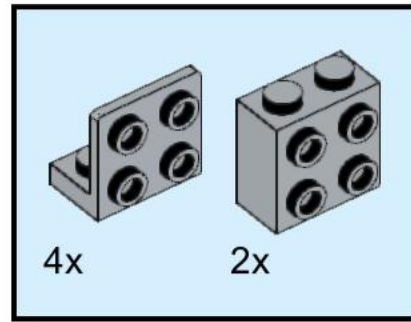



13

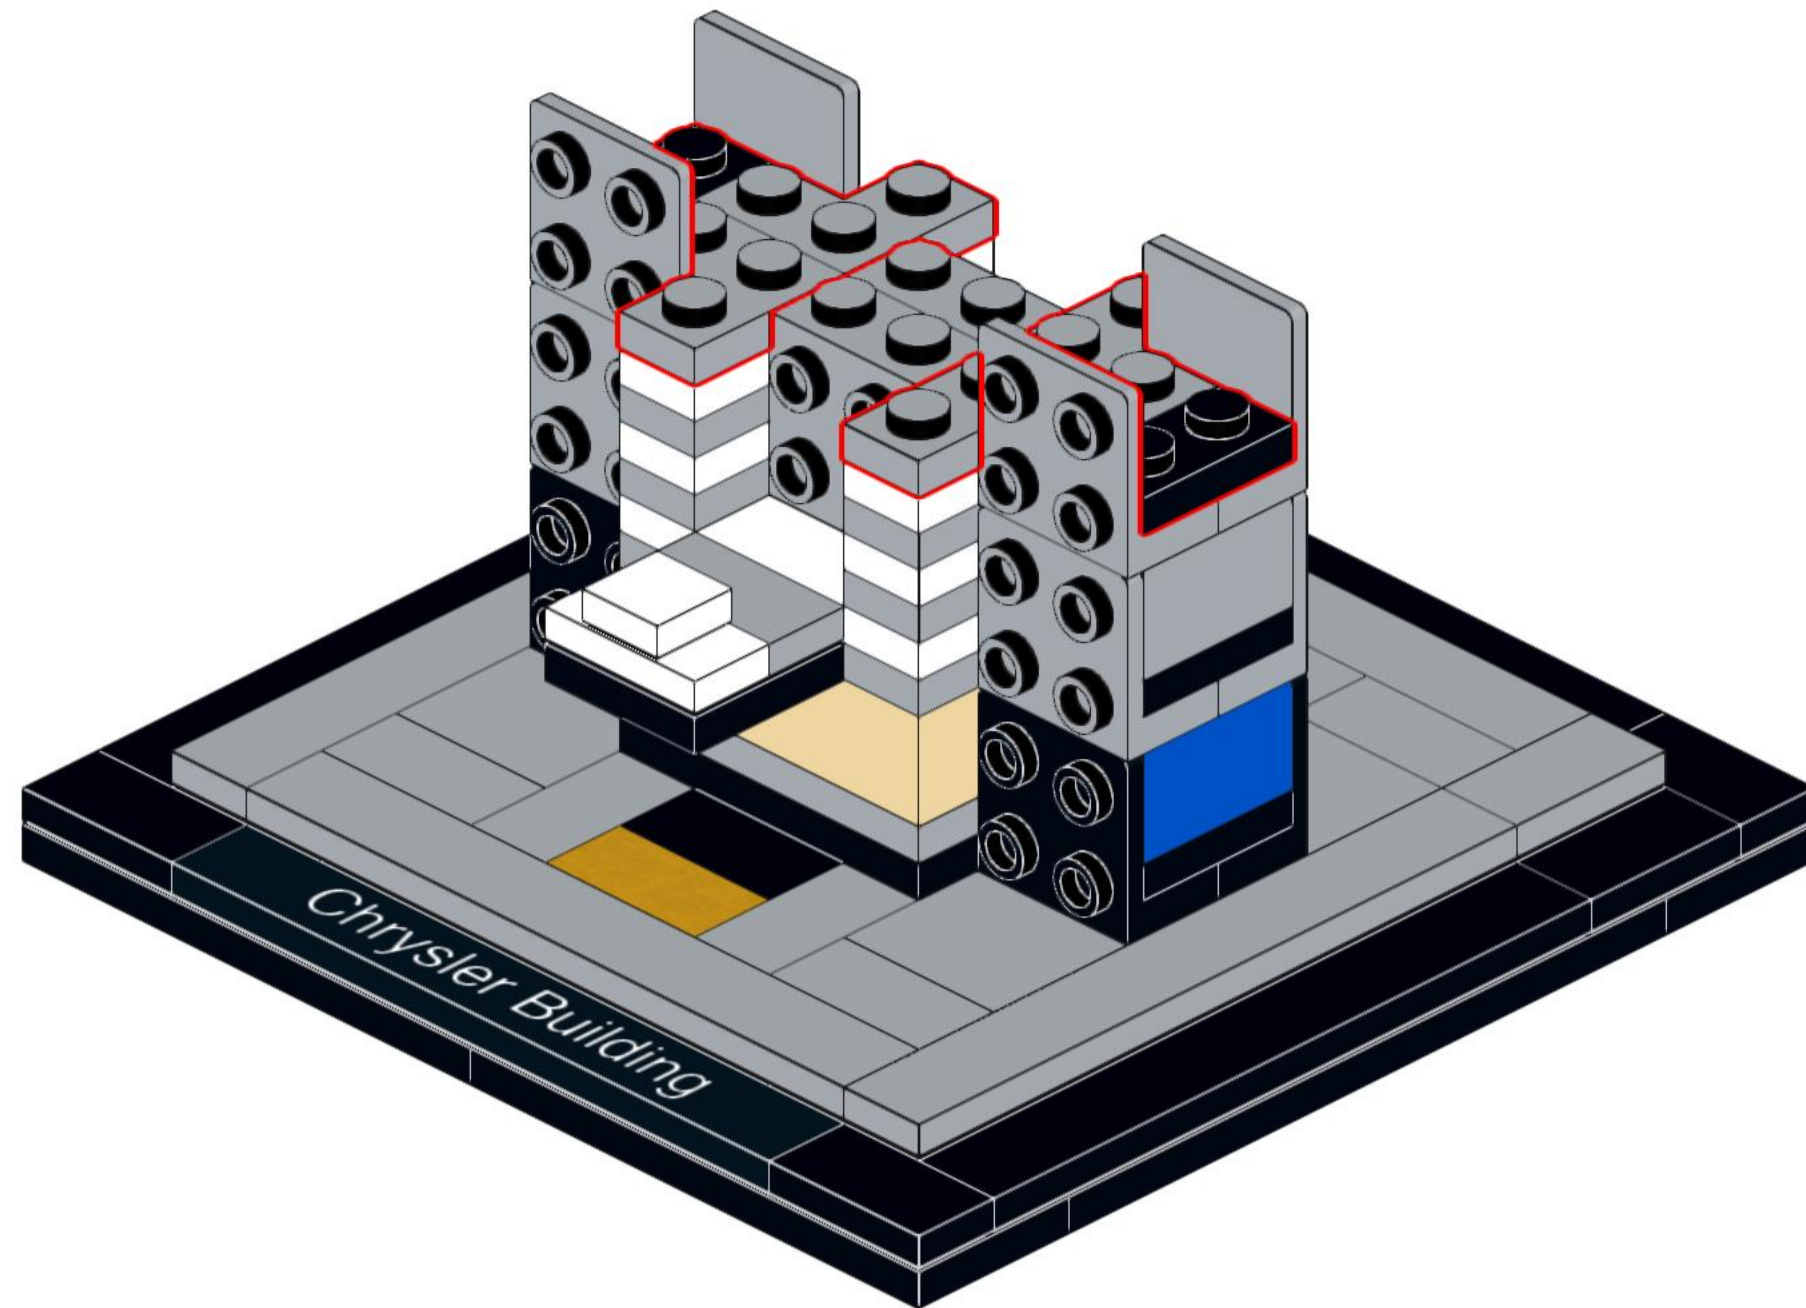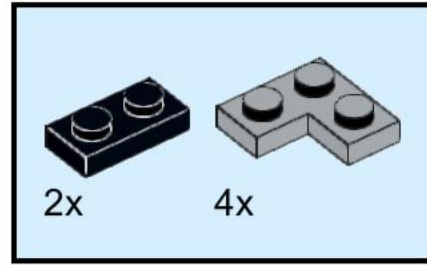



14

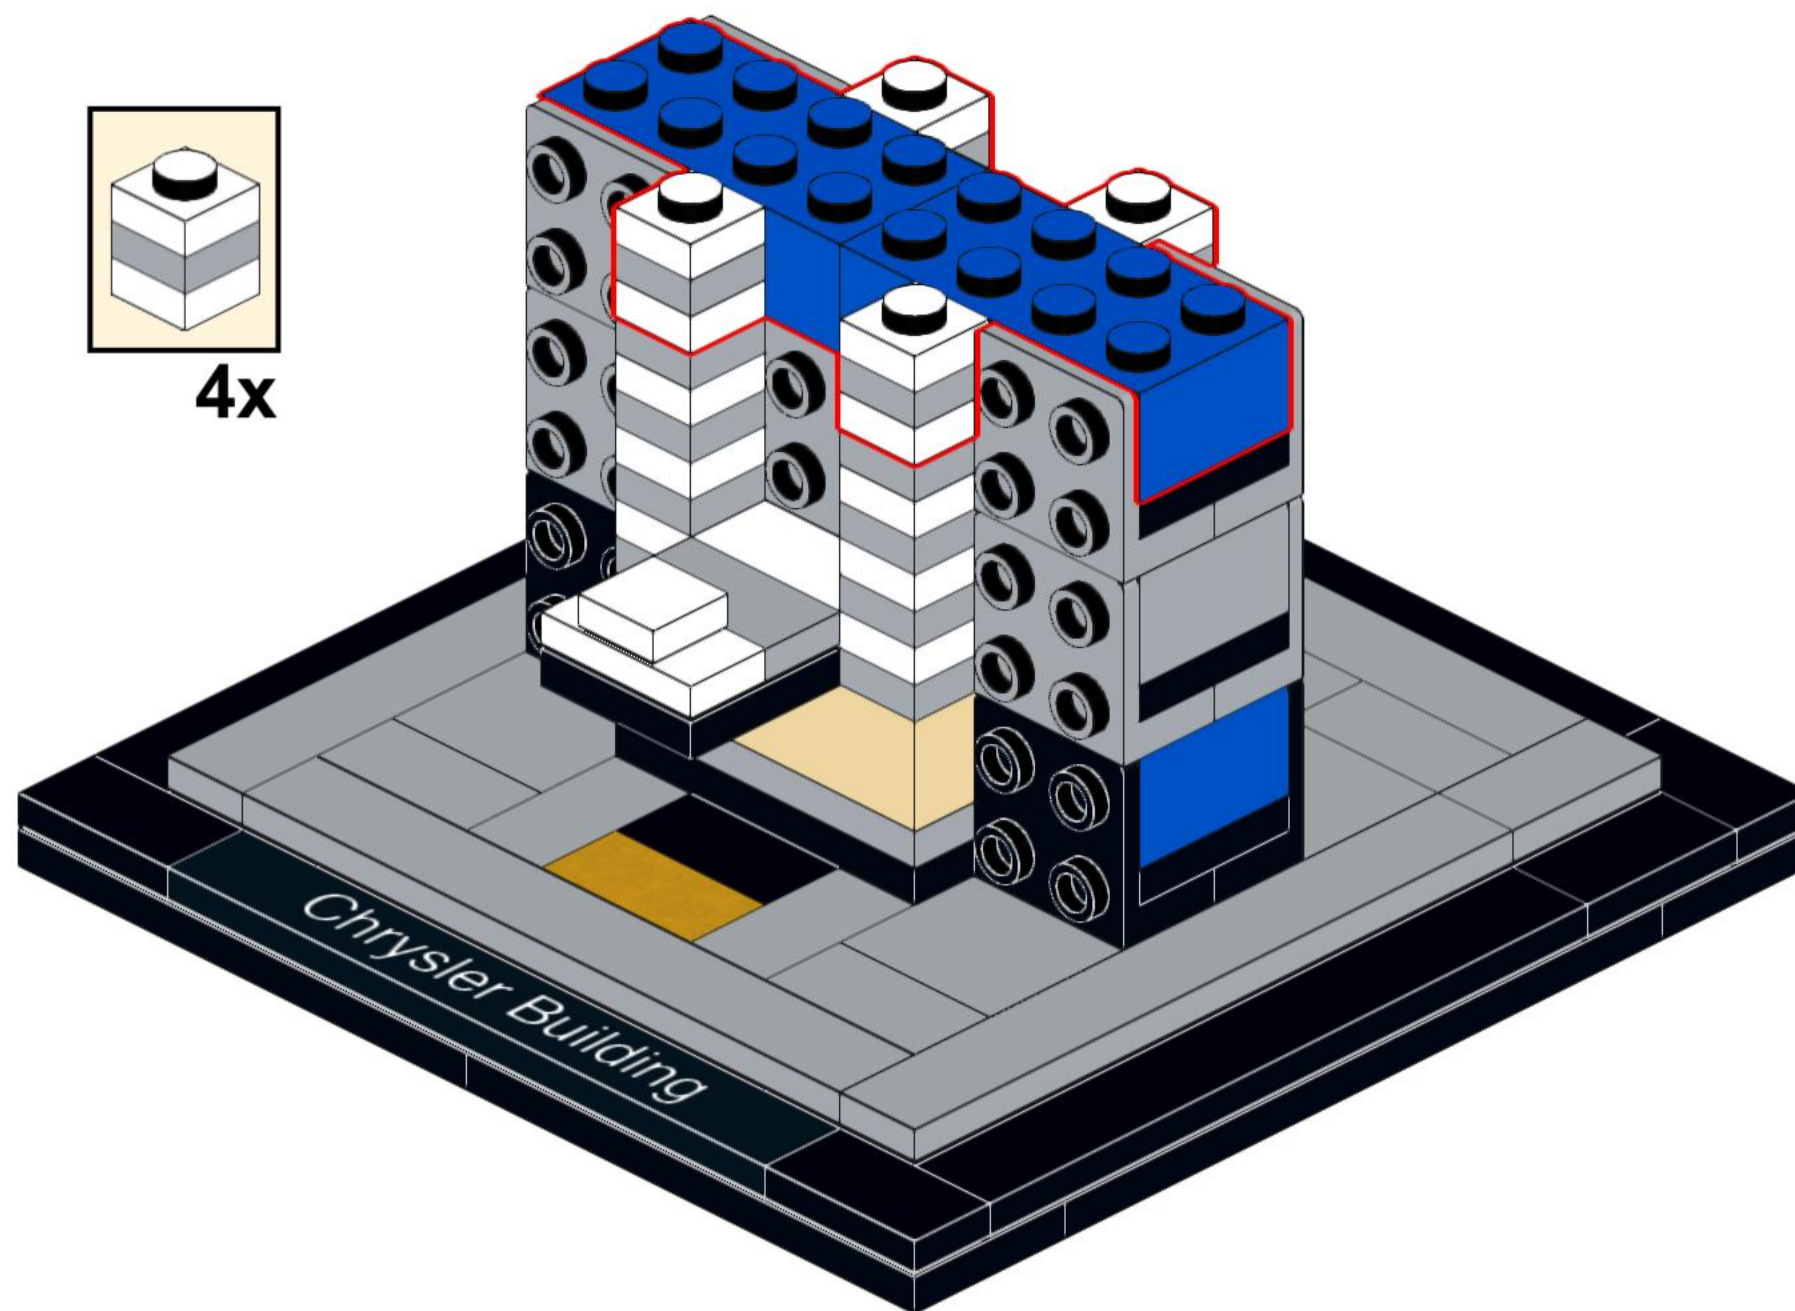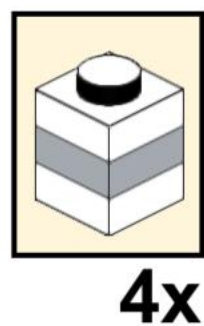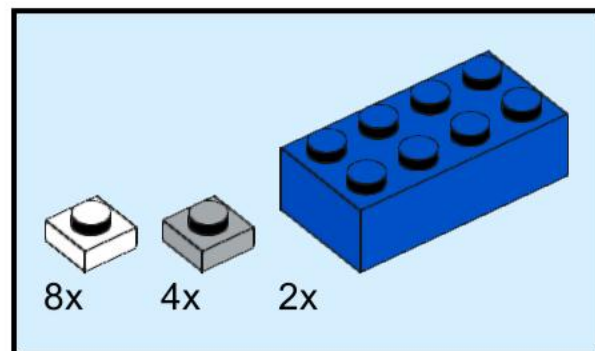



15

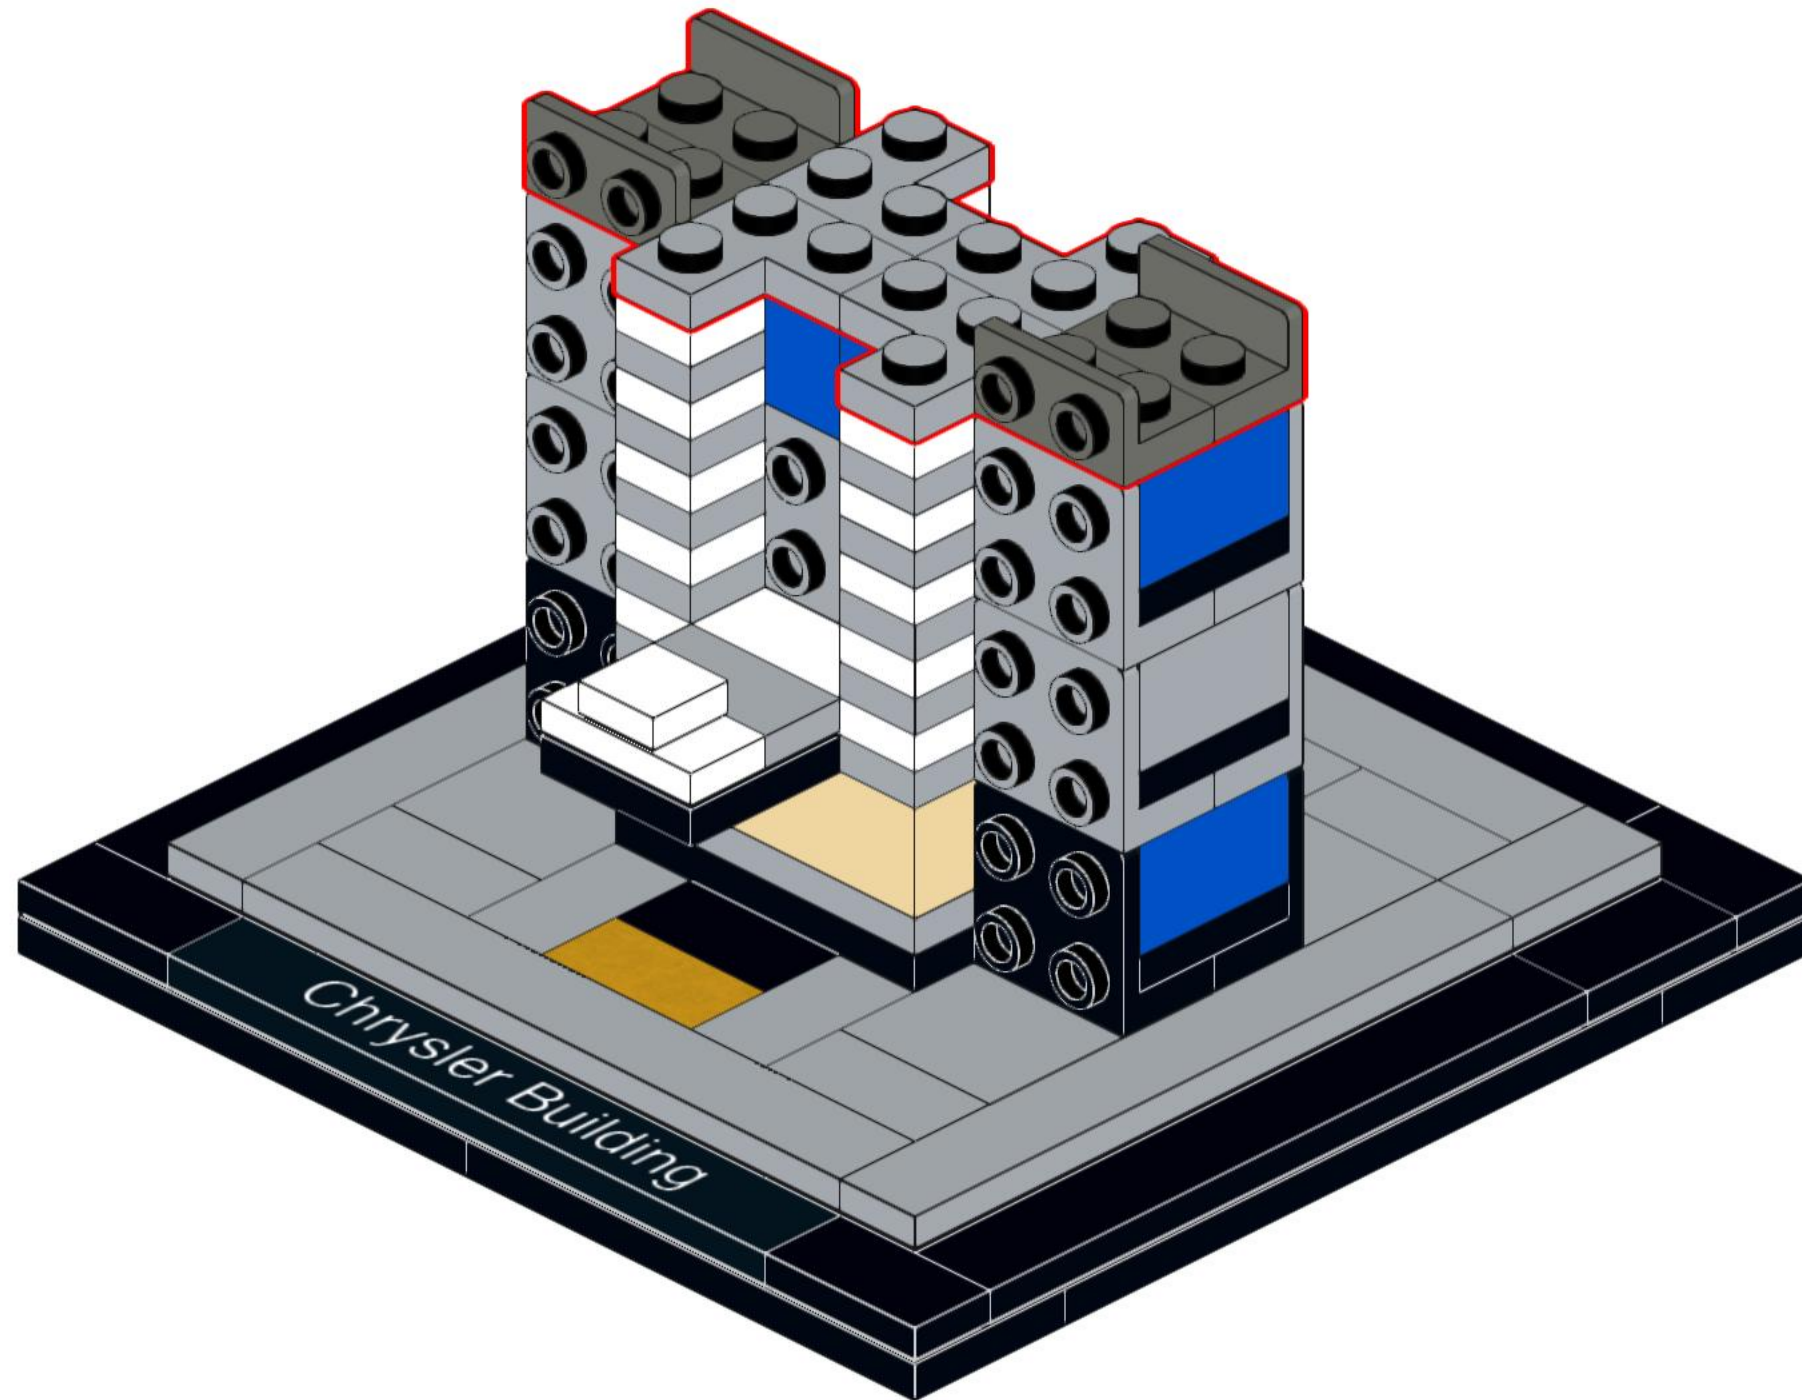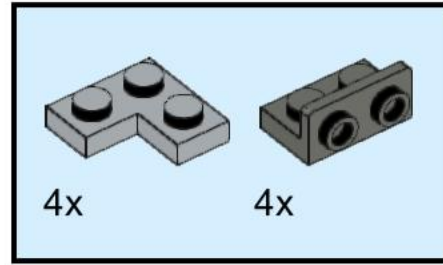



16

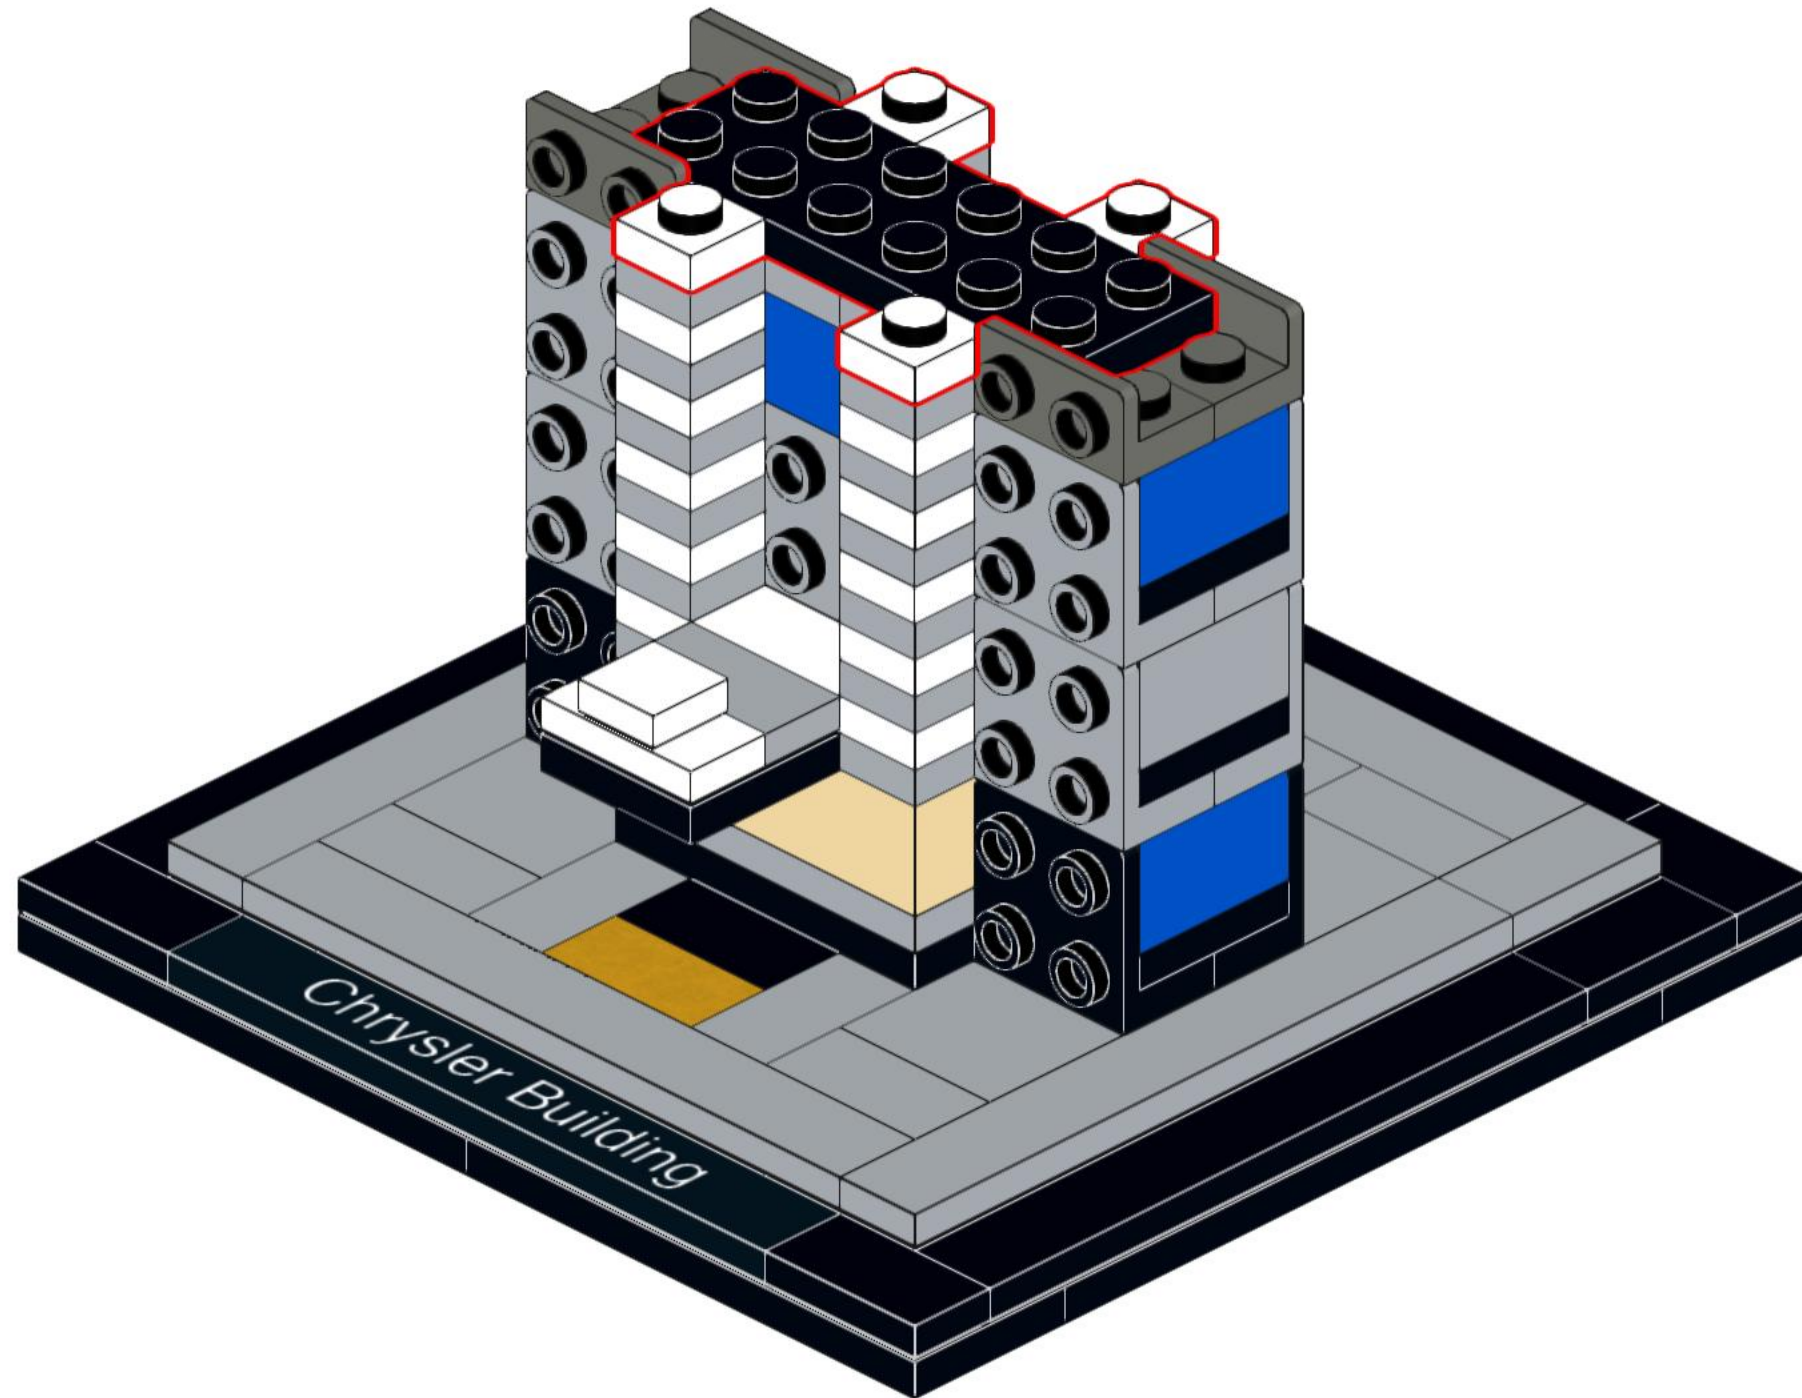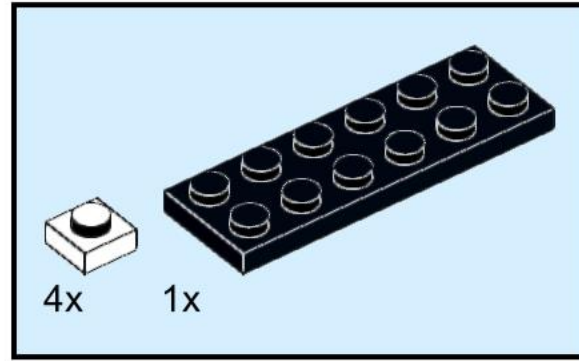



17

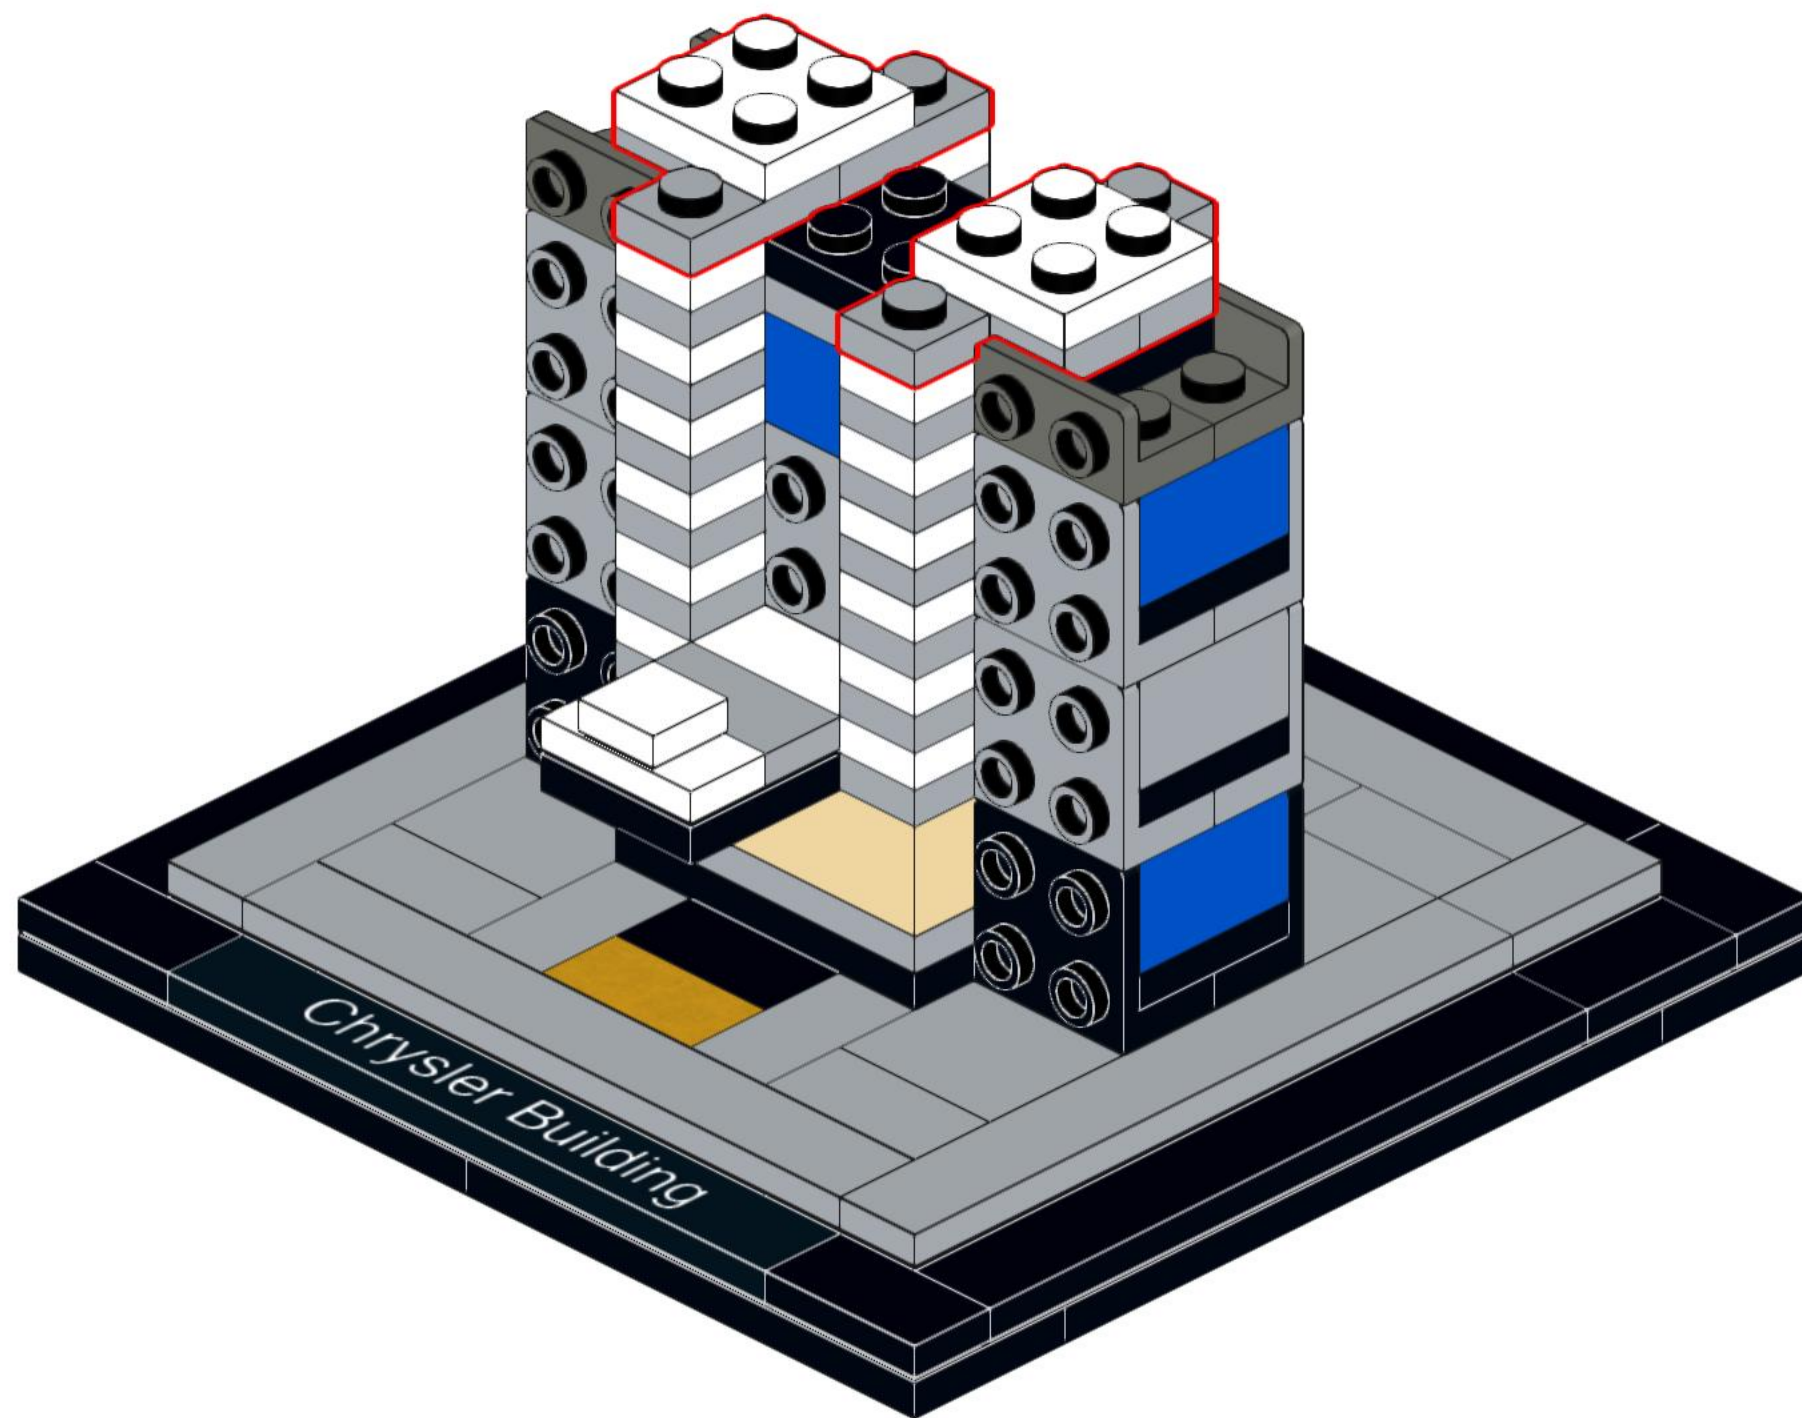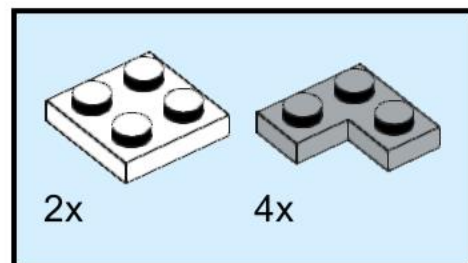



18

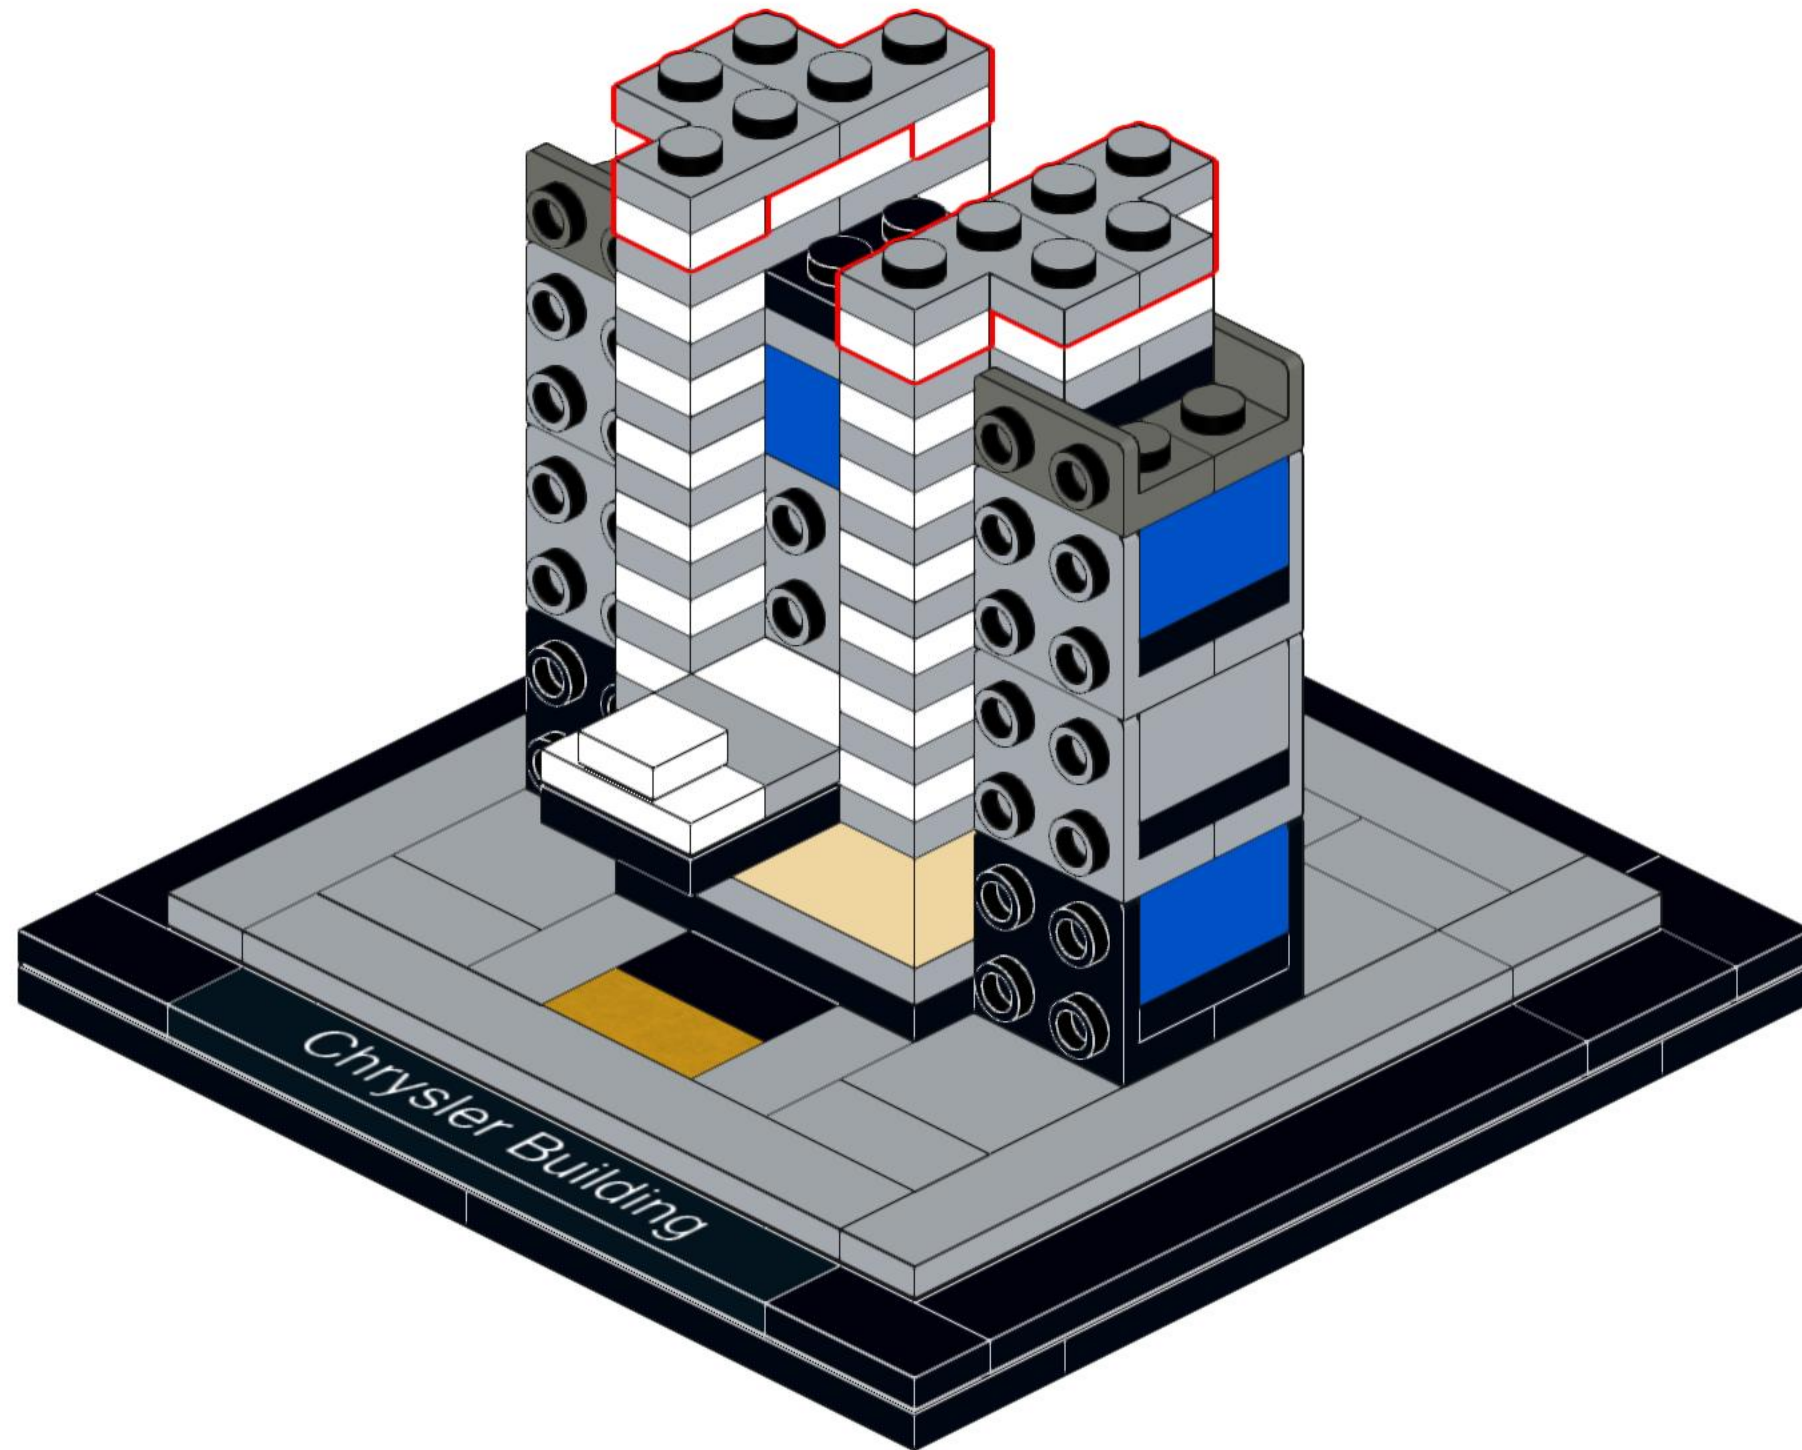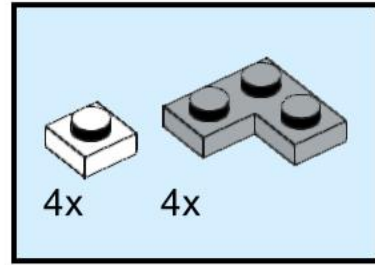



19

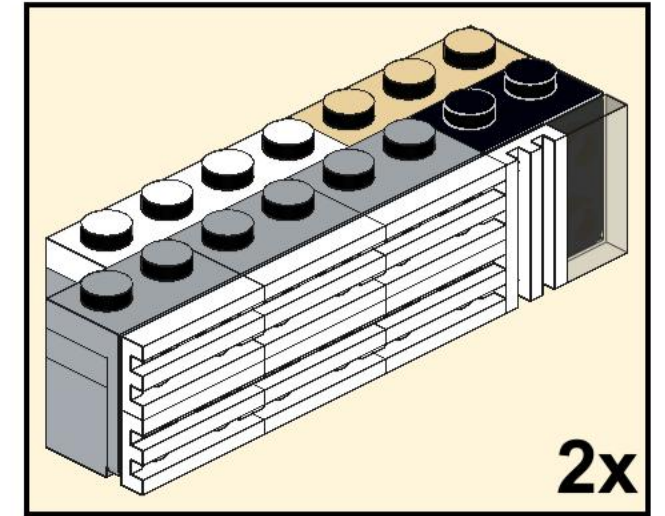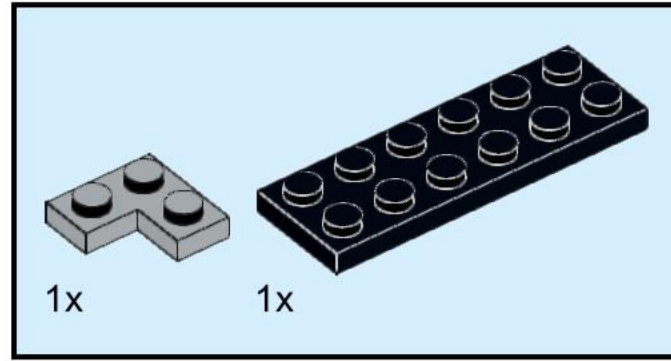



20

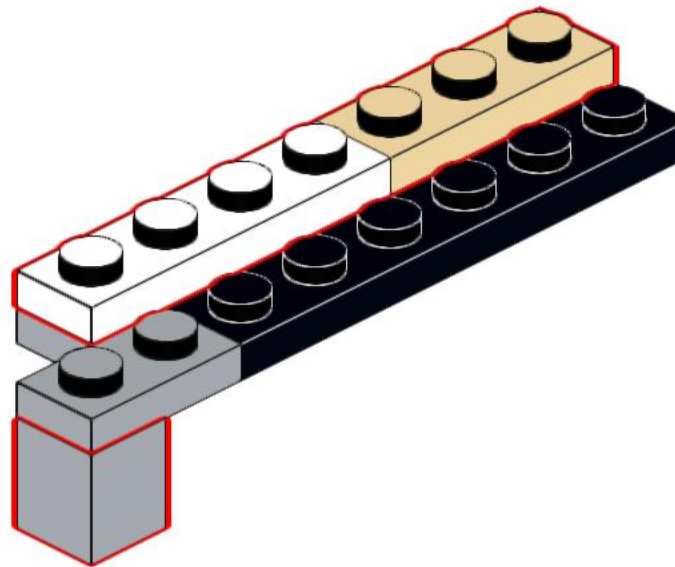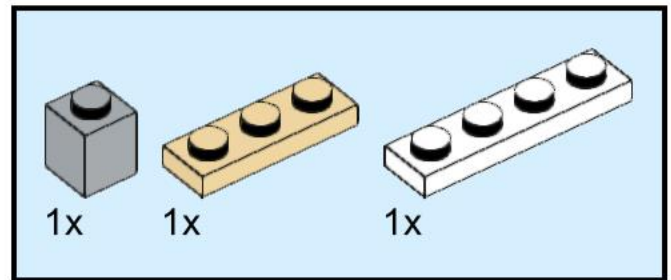


21

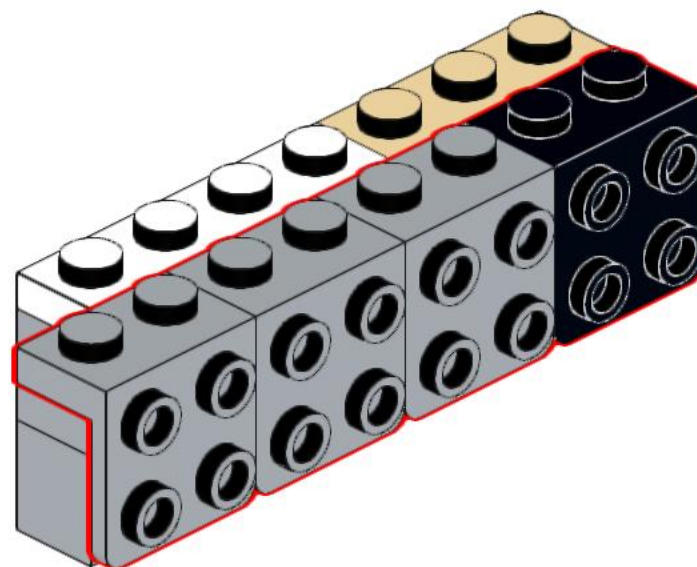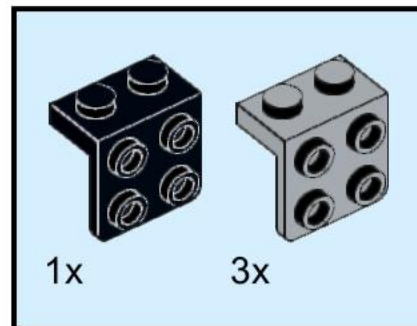



22

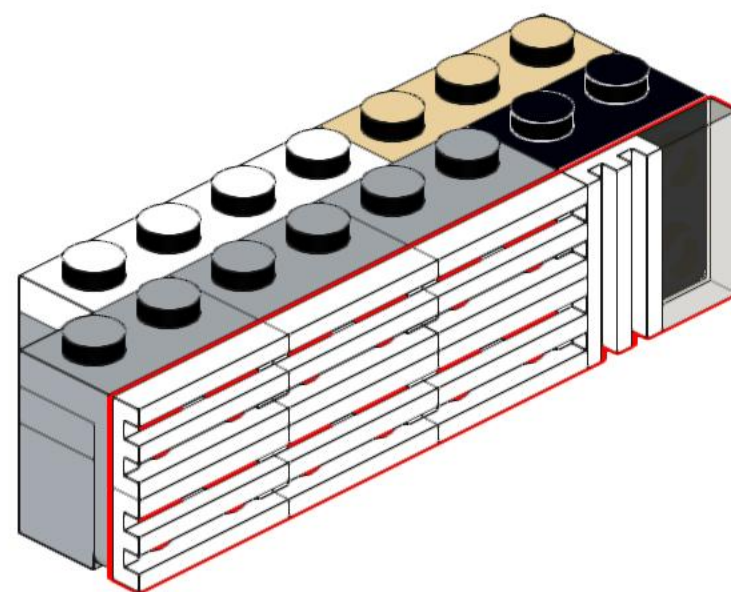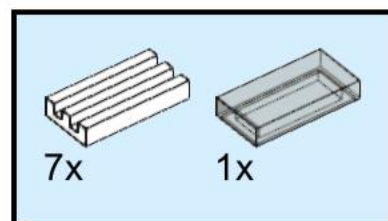



23

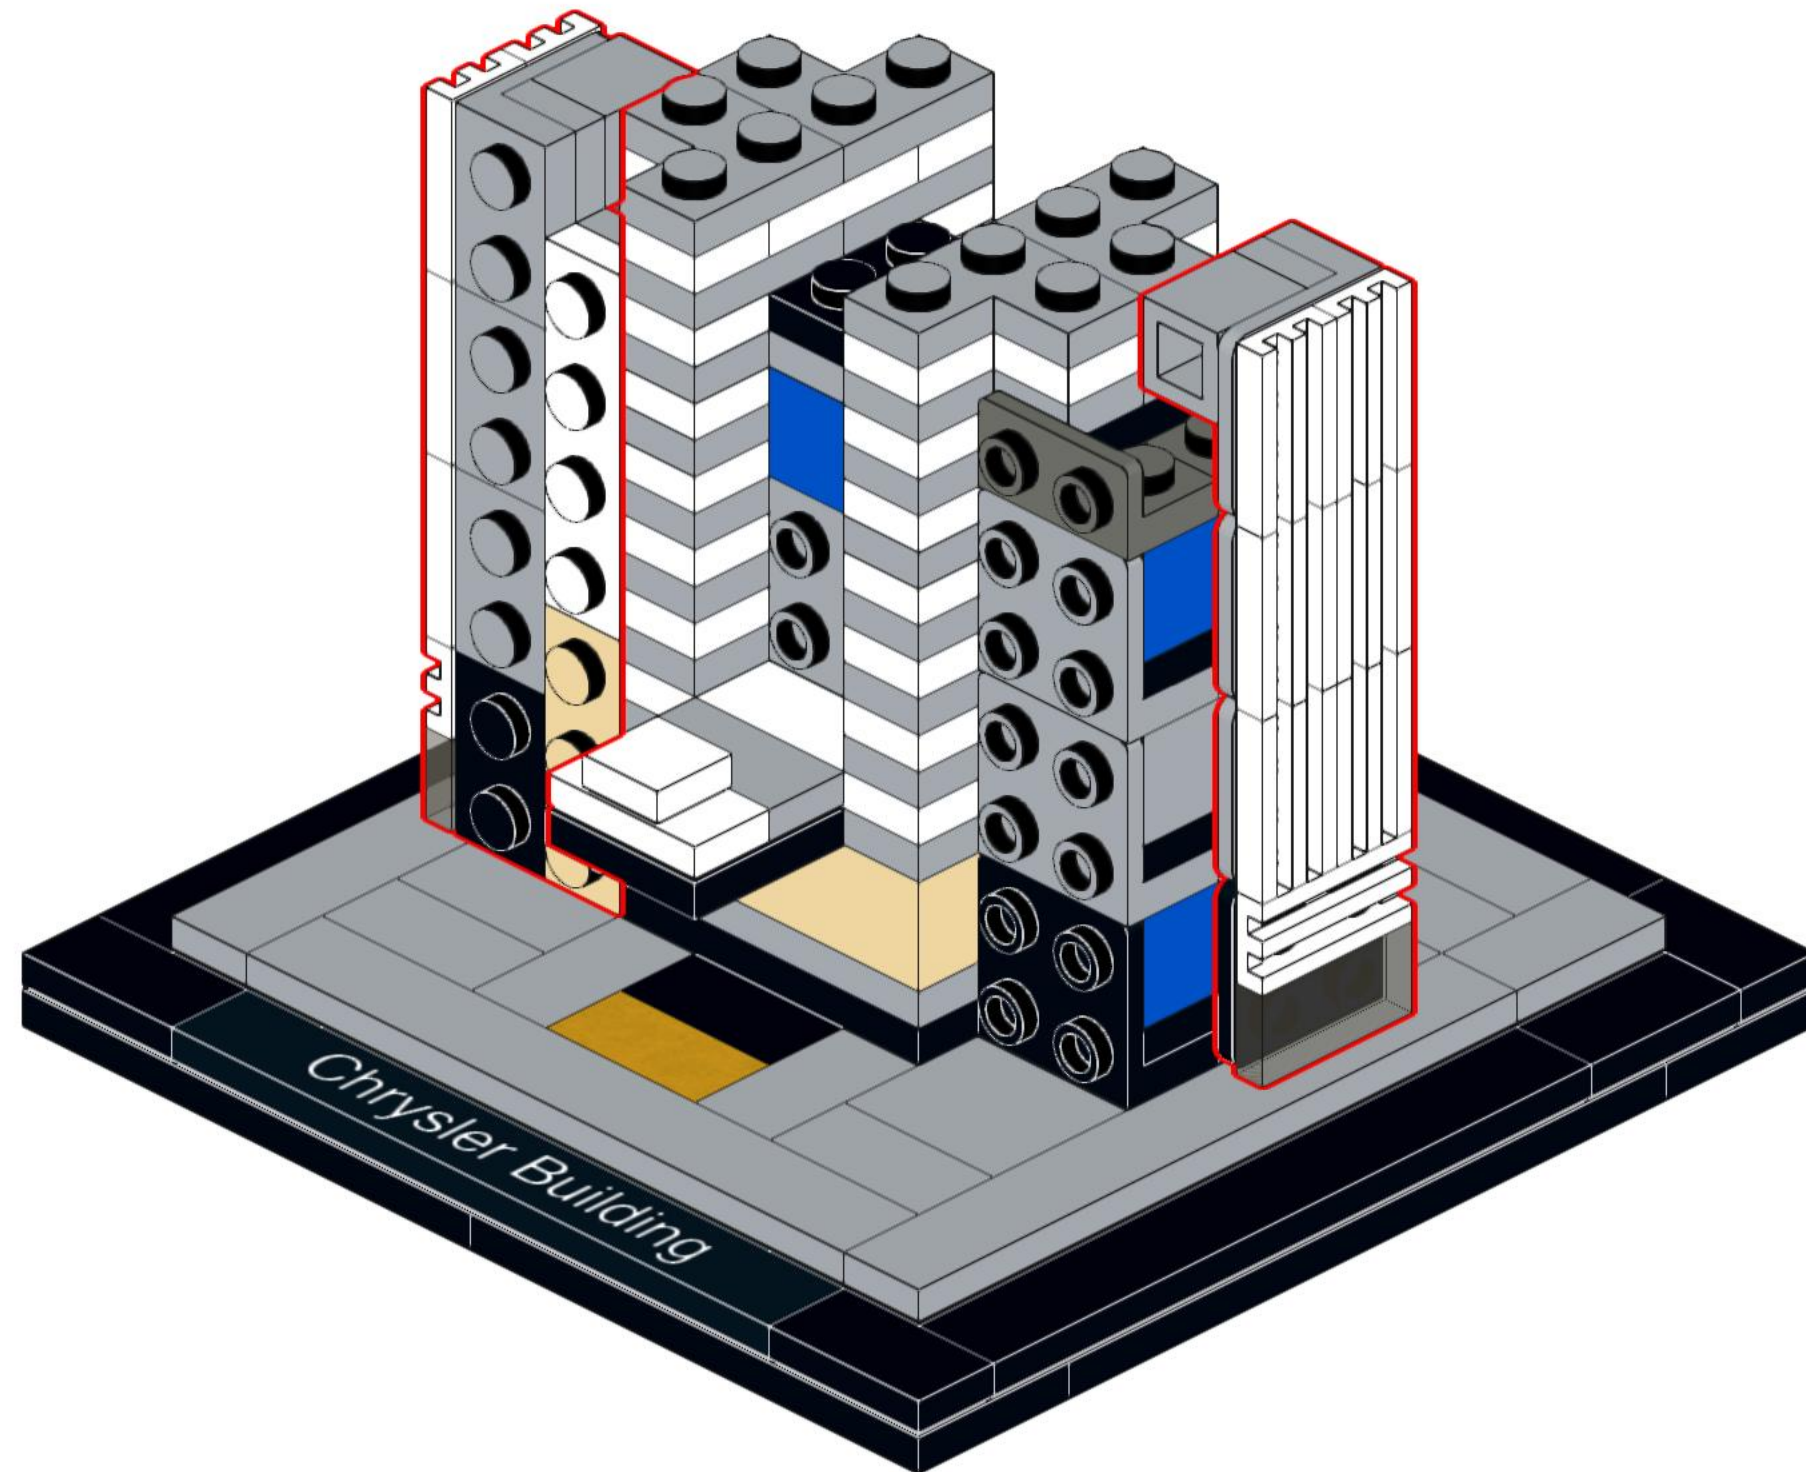



24

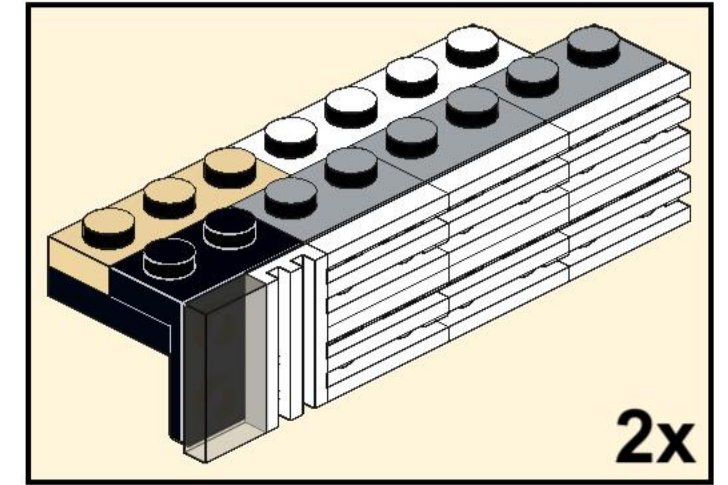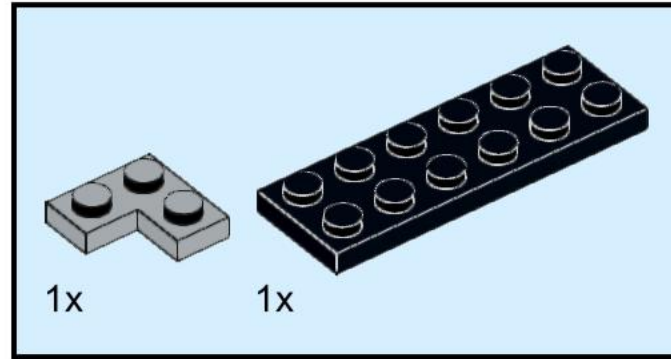



25

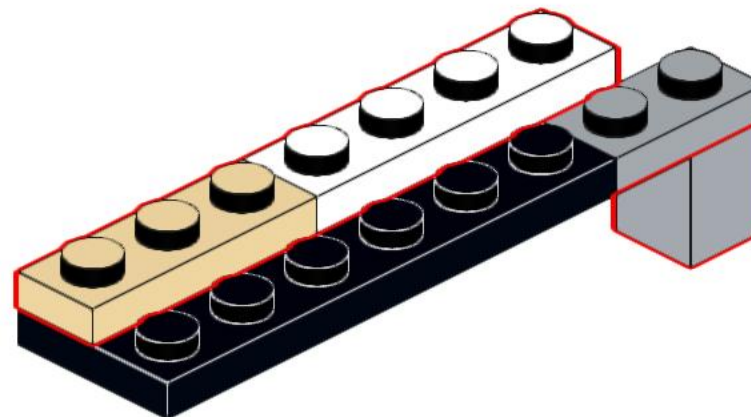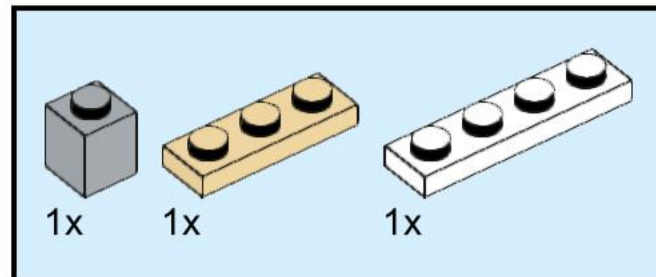


26


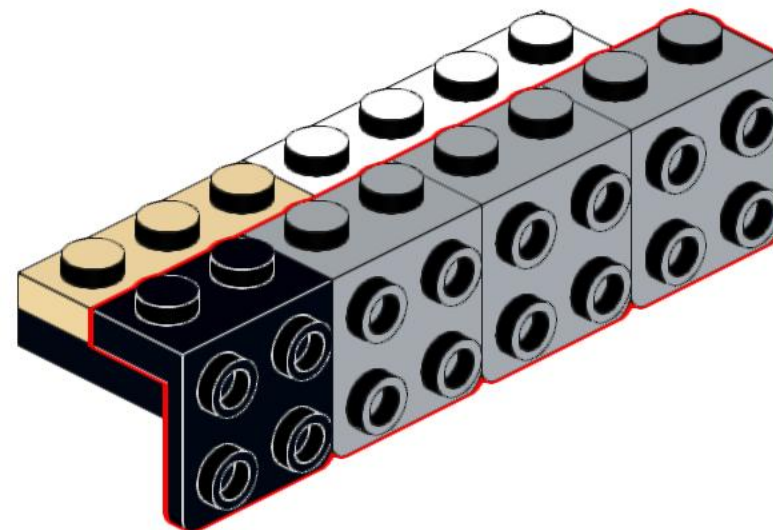
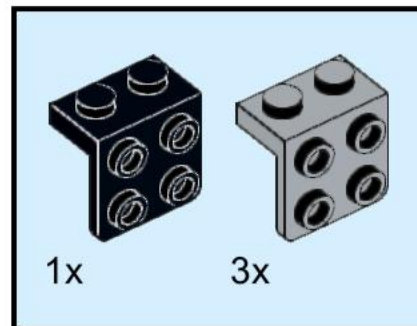


27

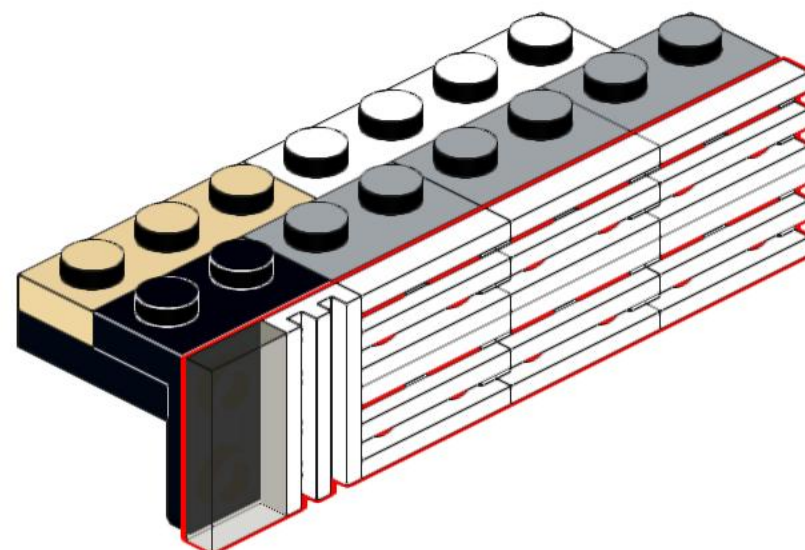
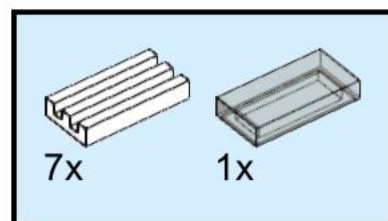


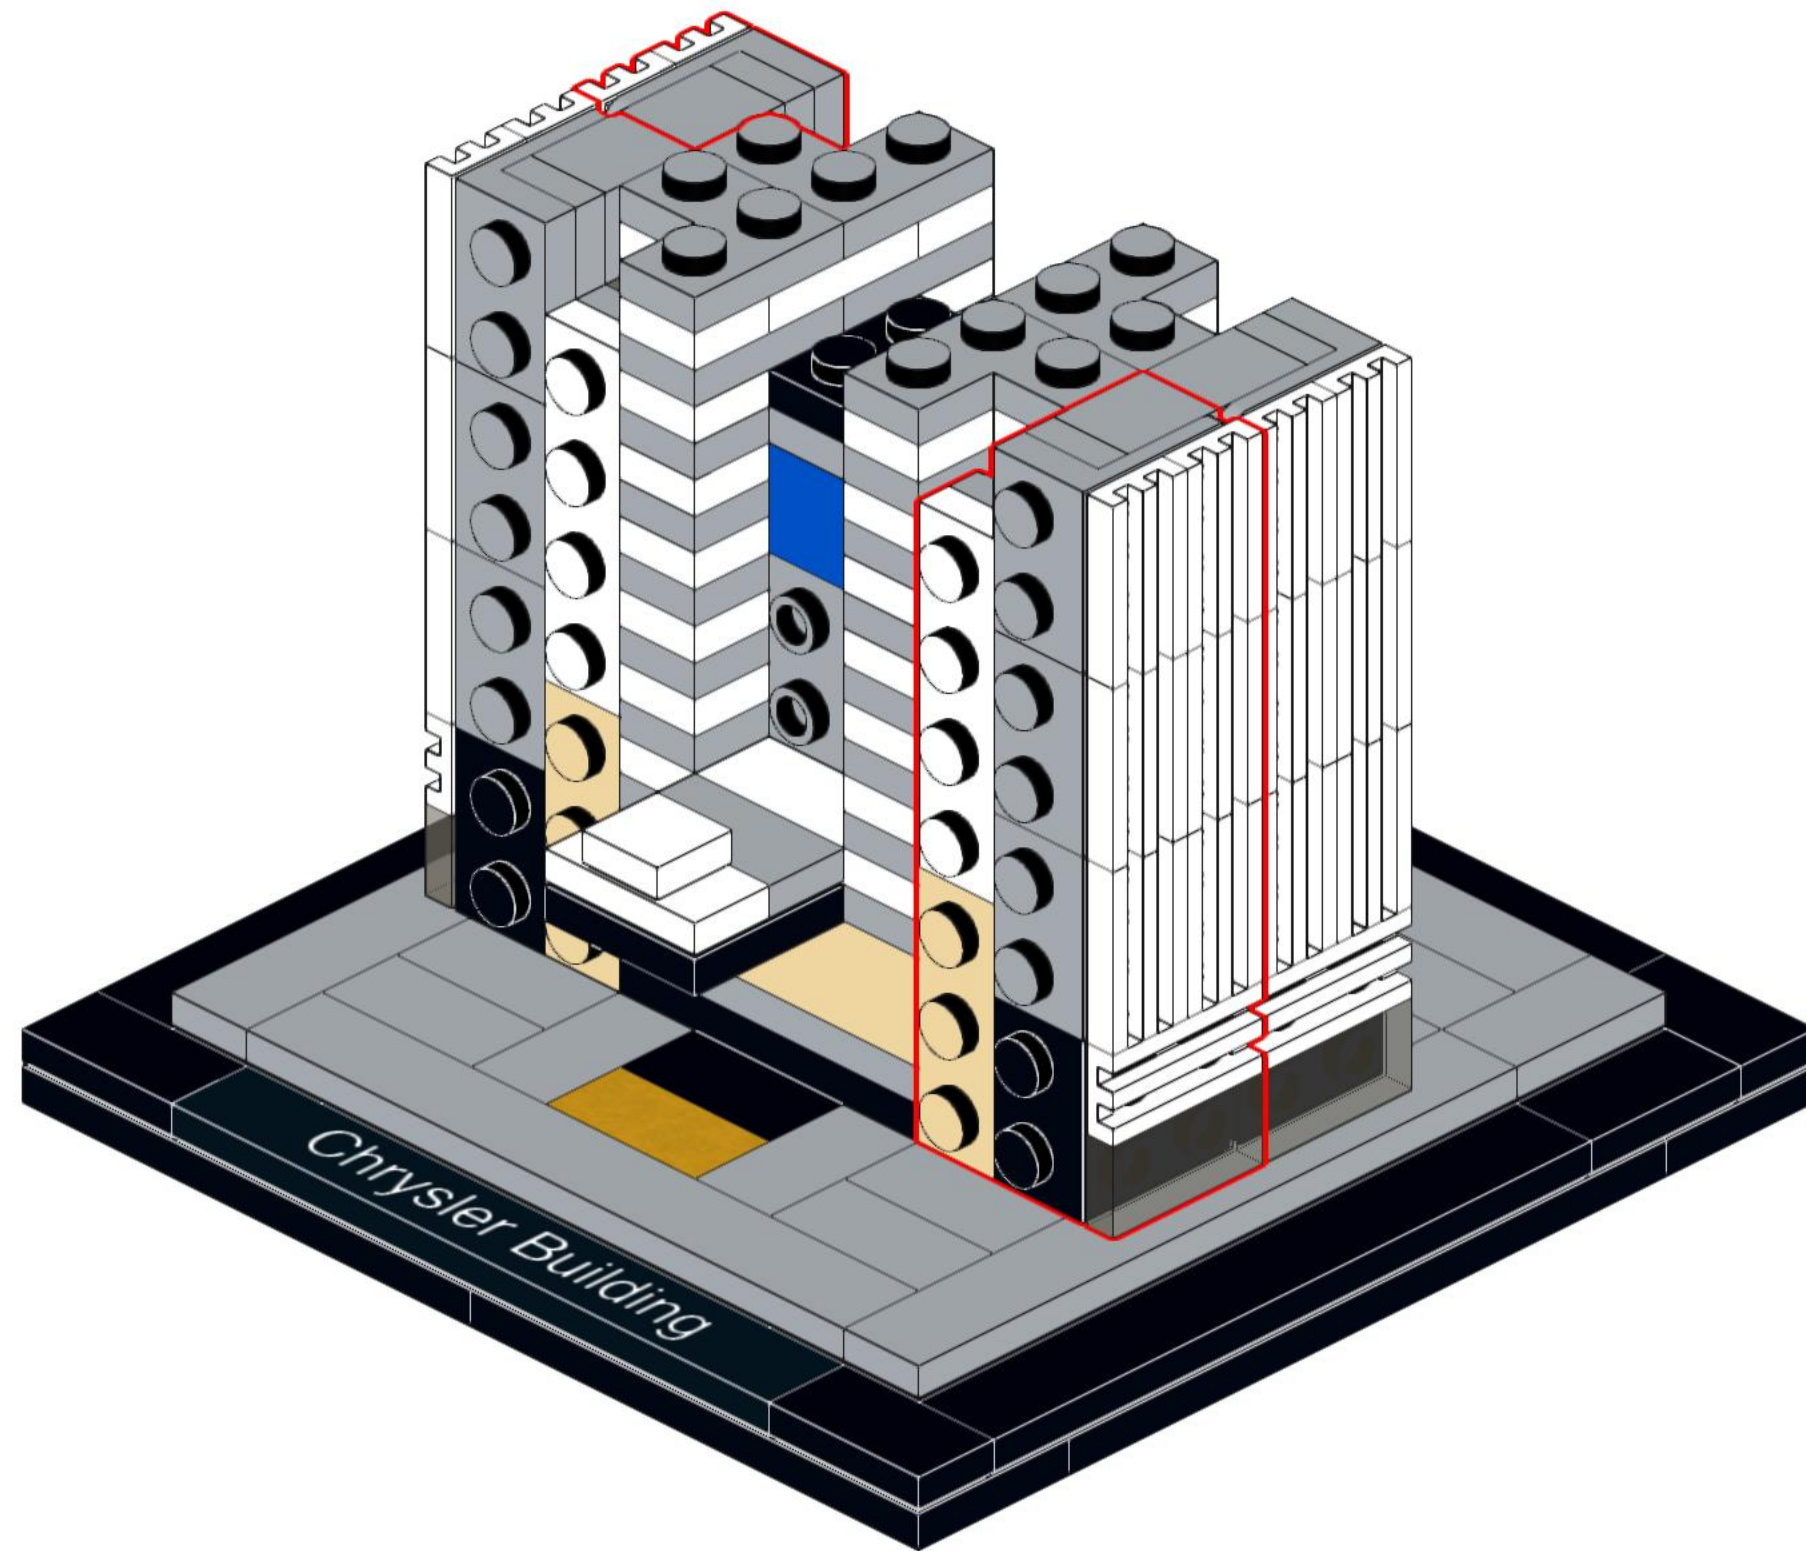



29

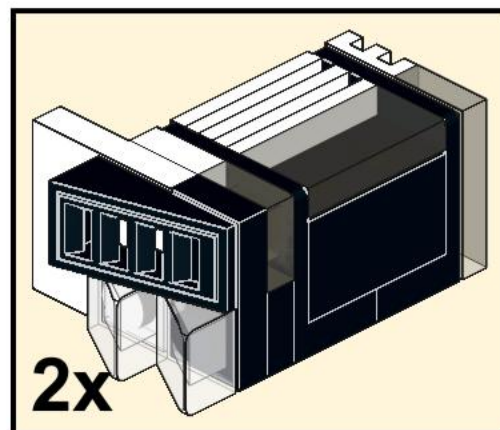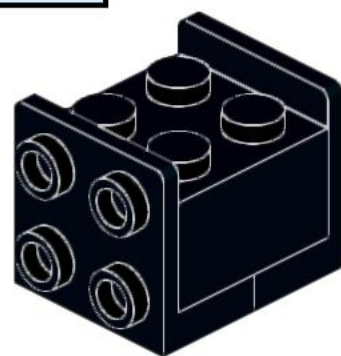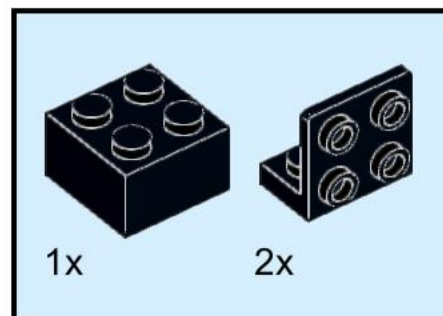



30

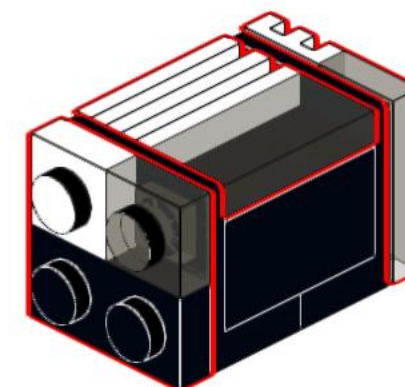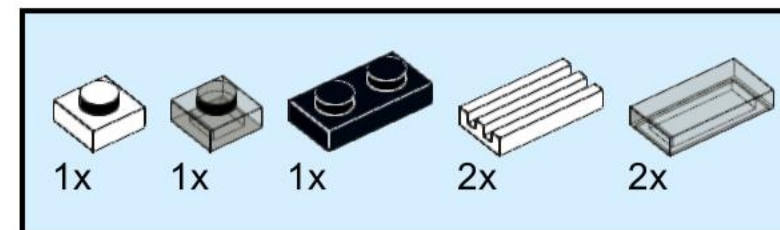


31

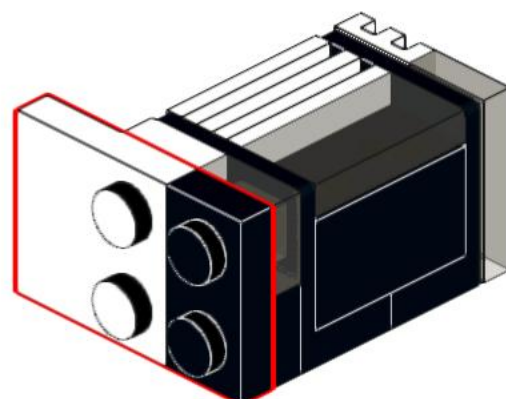
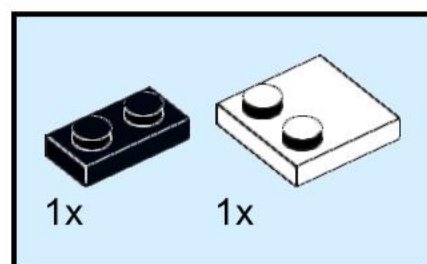


32

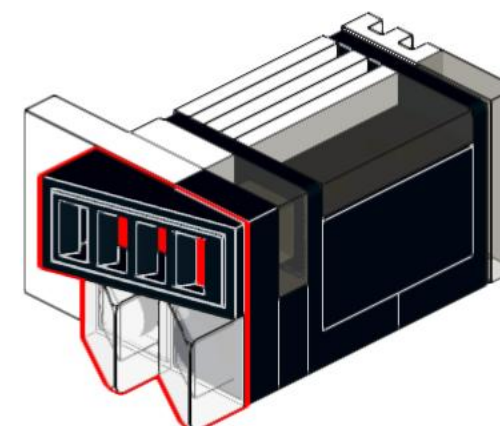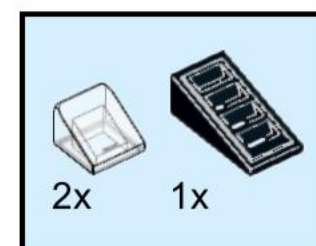

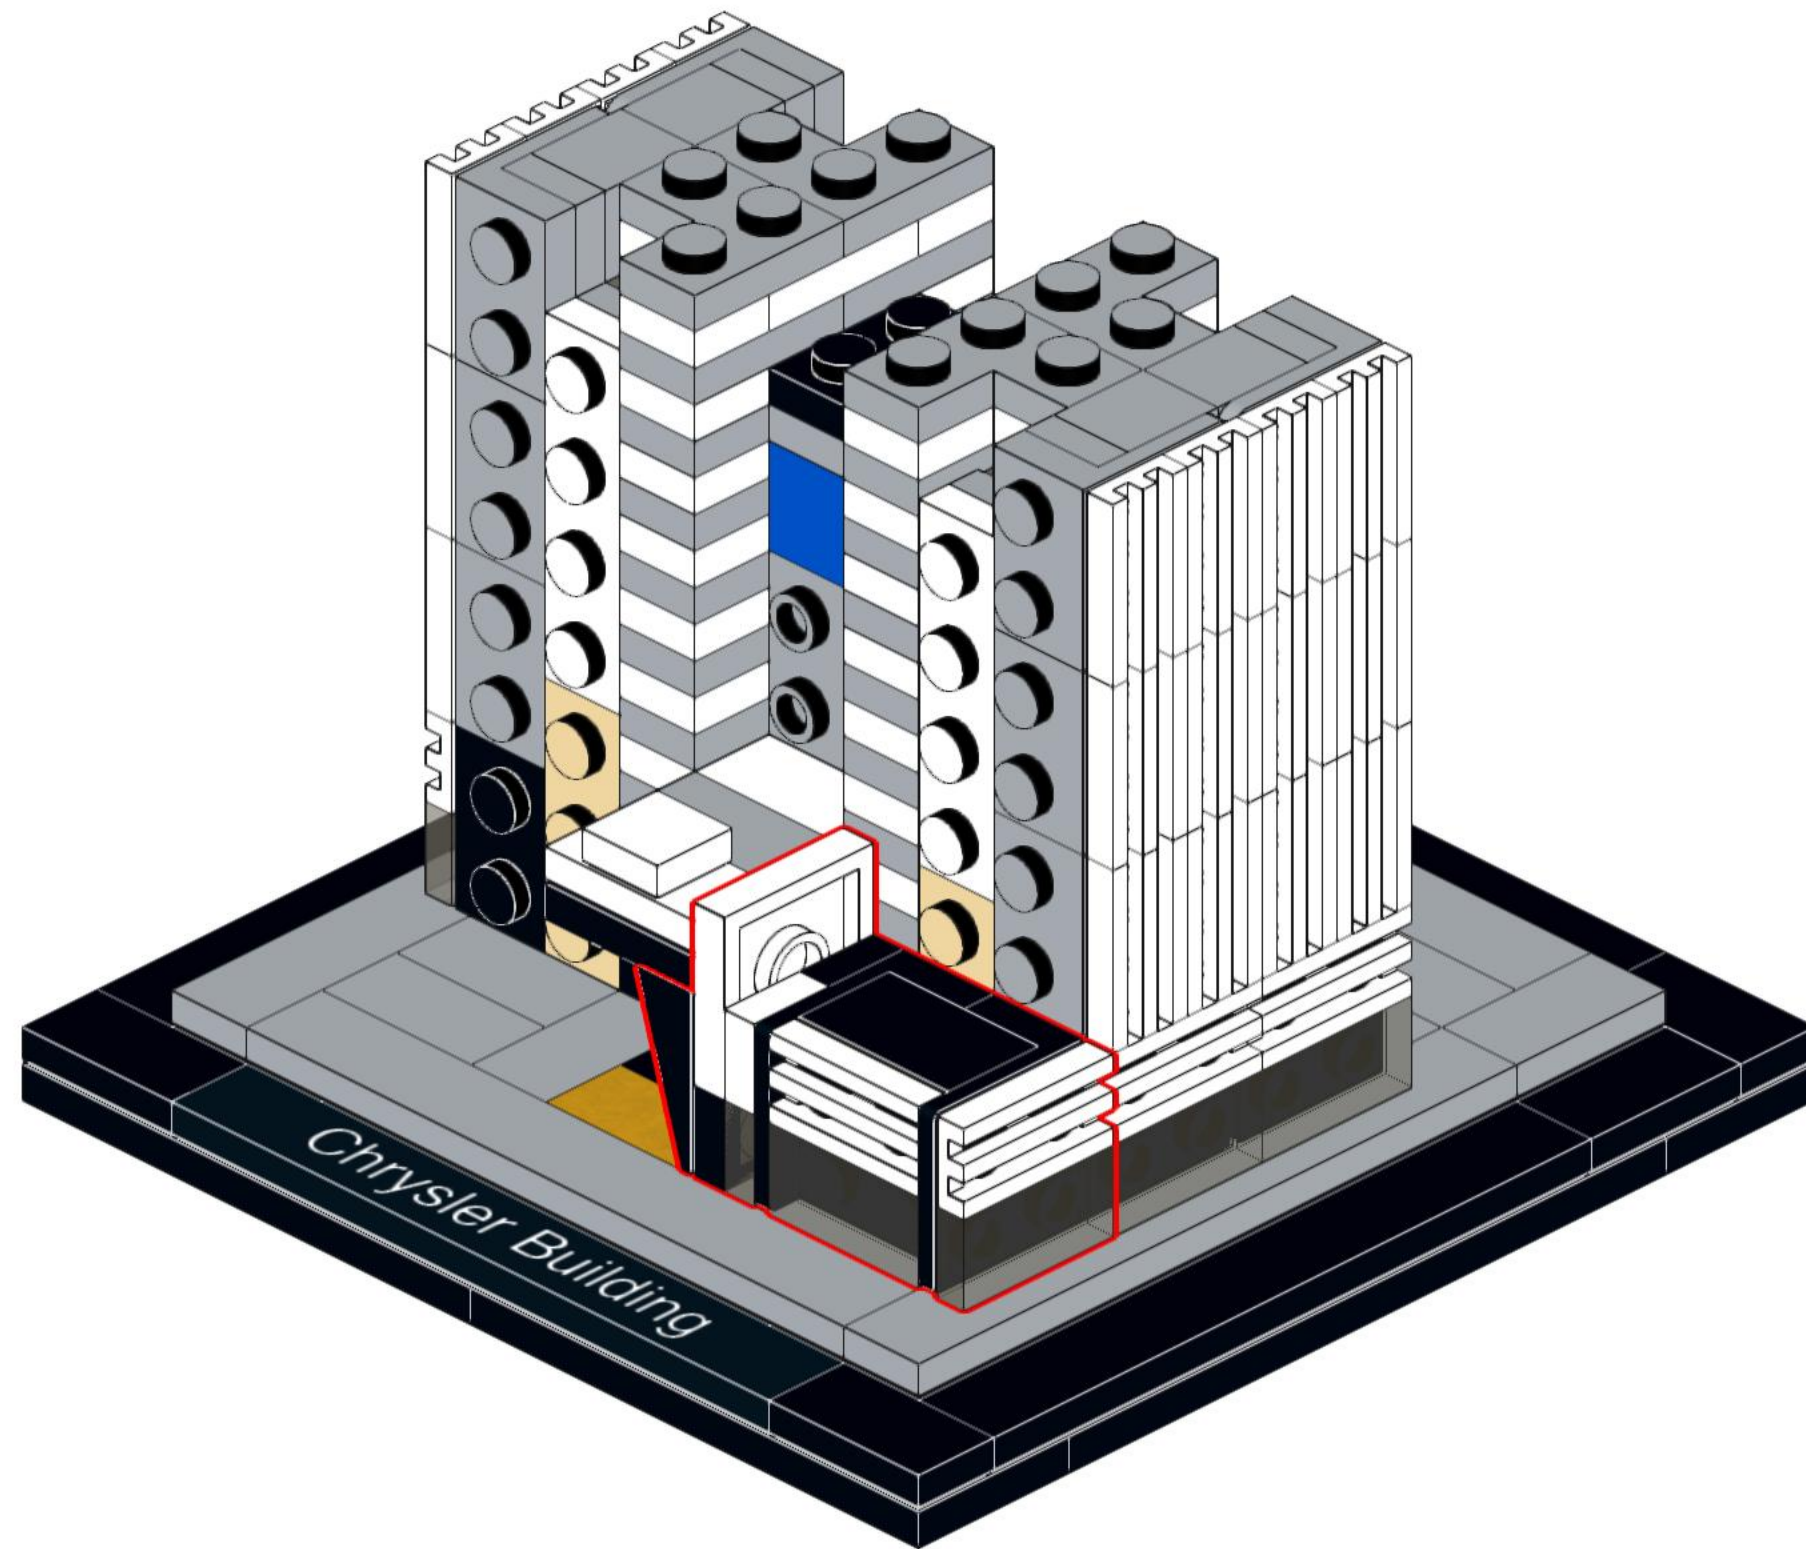




34

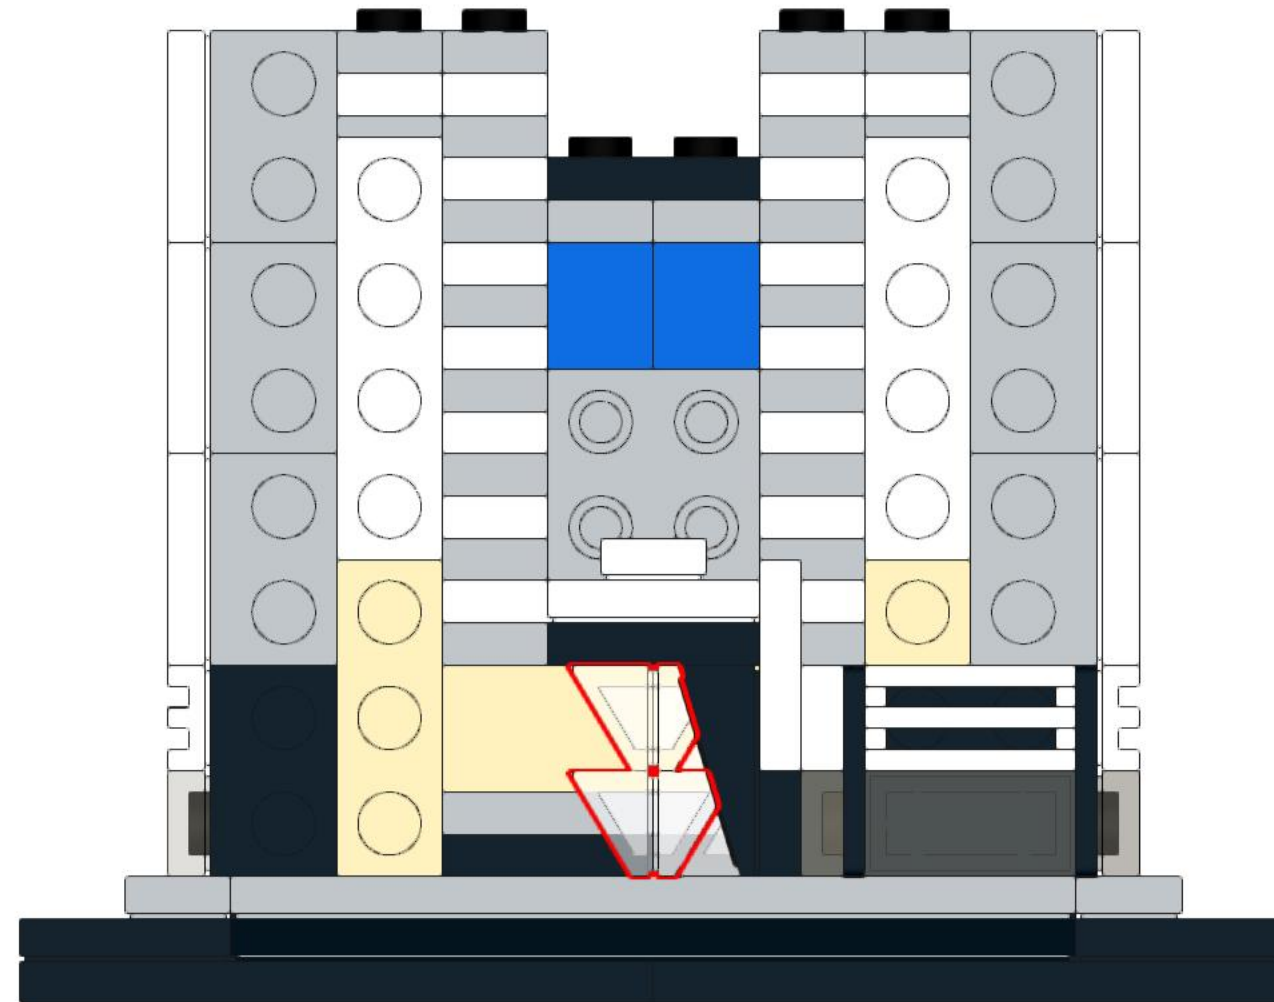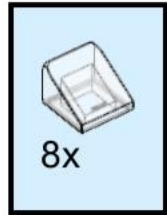



Hold the model sideways and carefully place the wedge pieces as shown, then fix them in place with the subassembly shown on the next page.

Repeat for the other side.



35

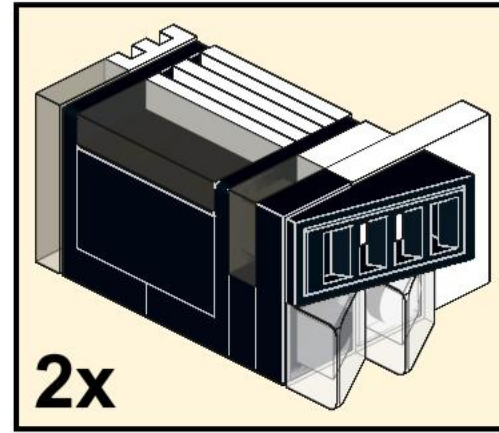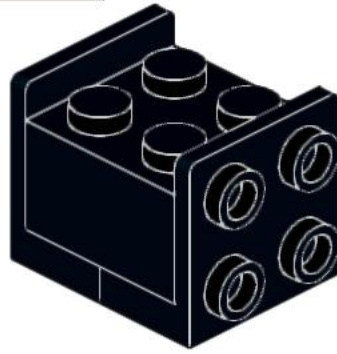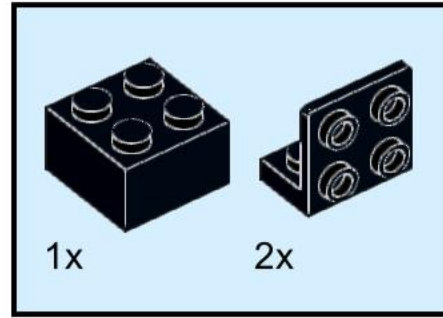



36

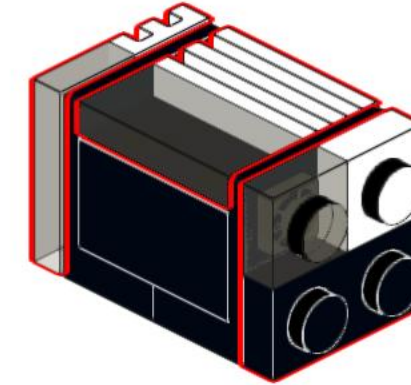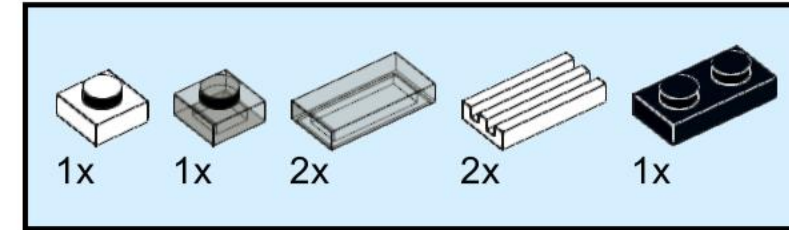


37

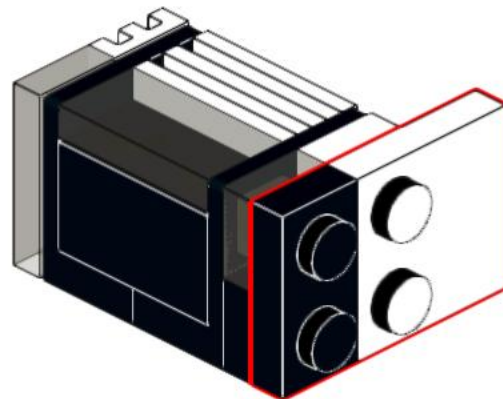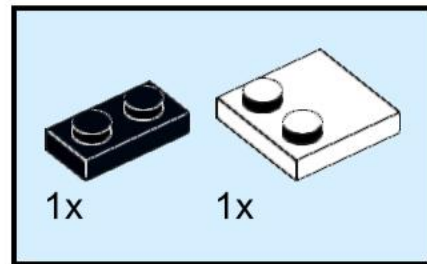




38

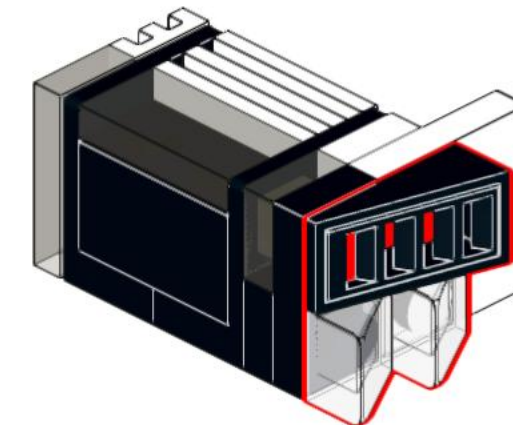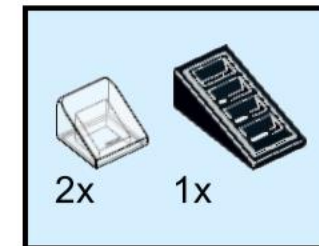



39

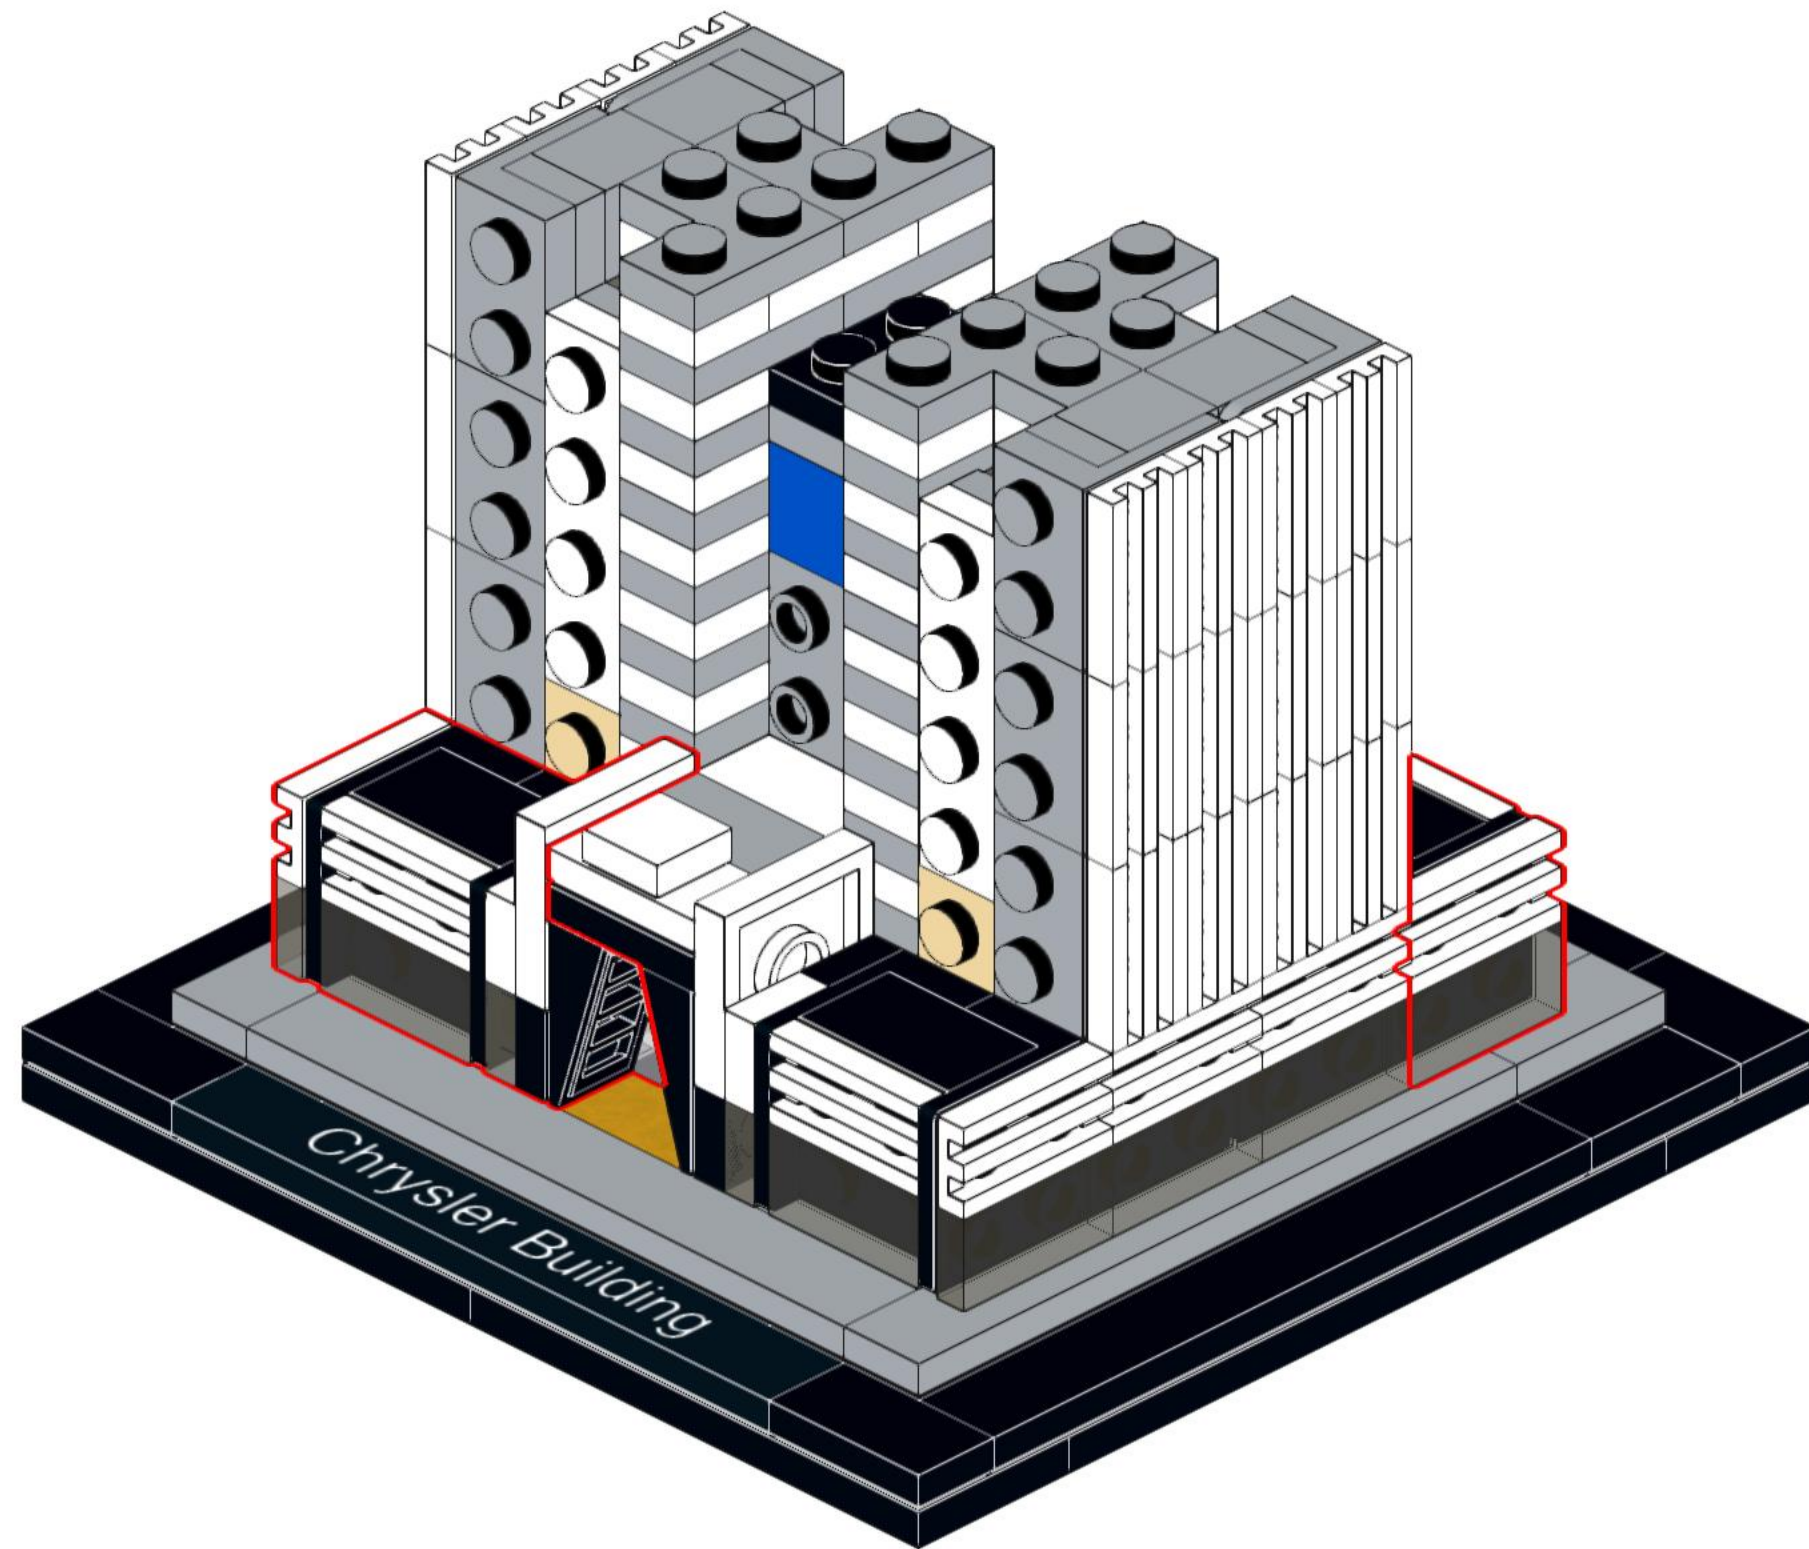




40

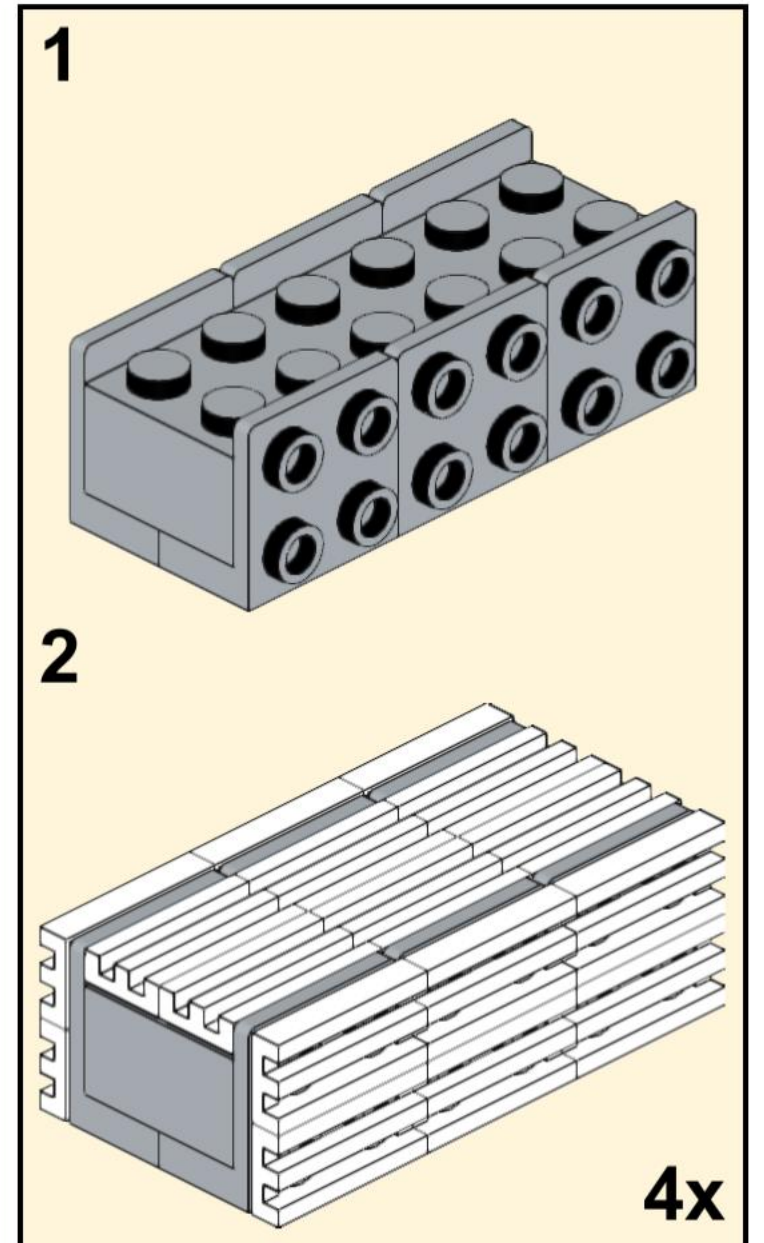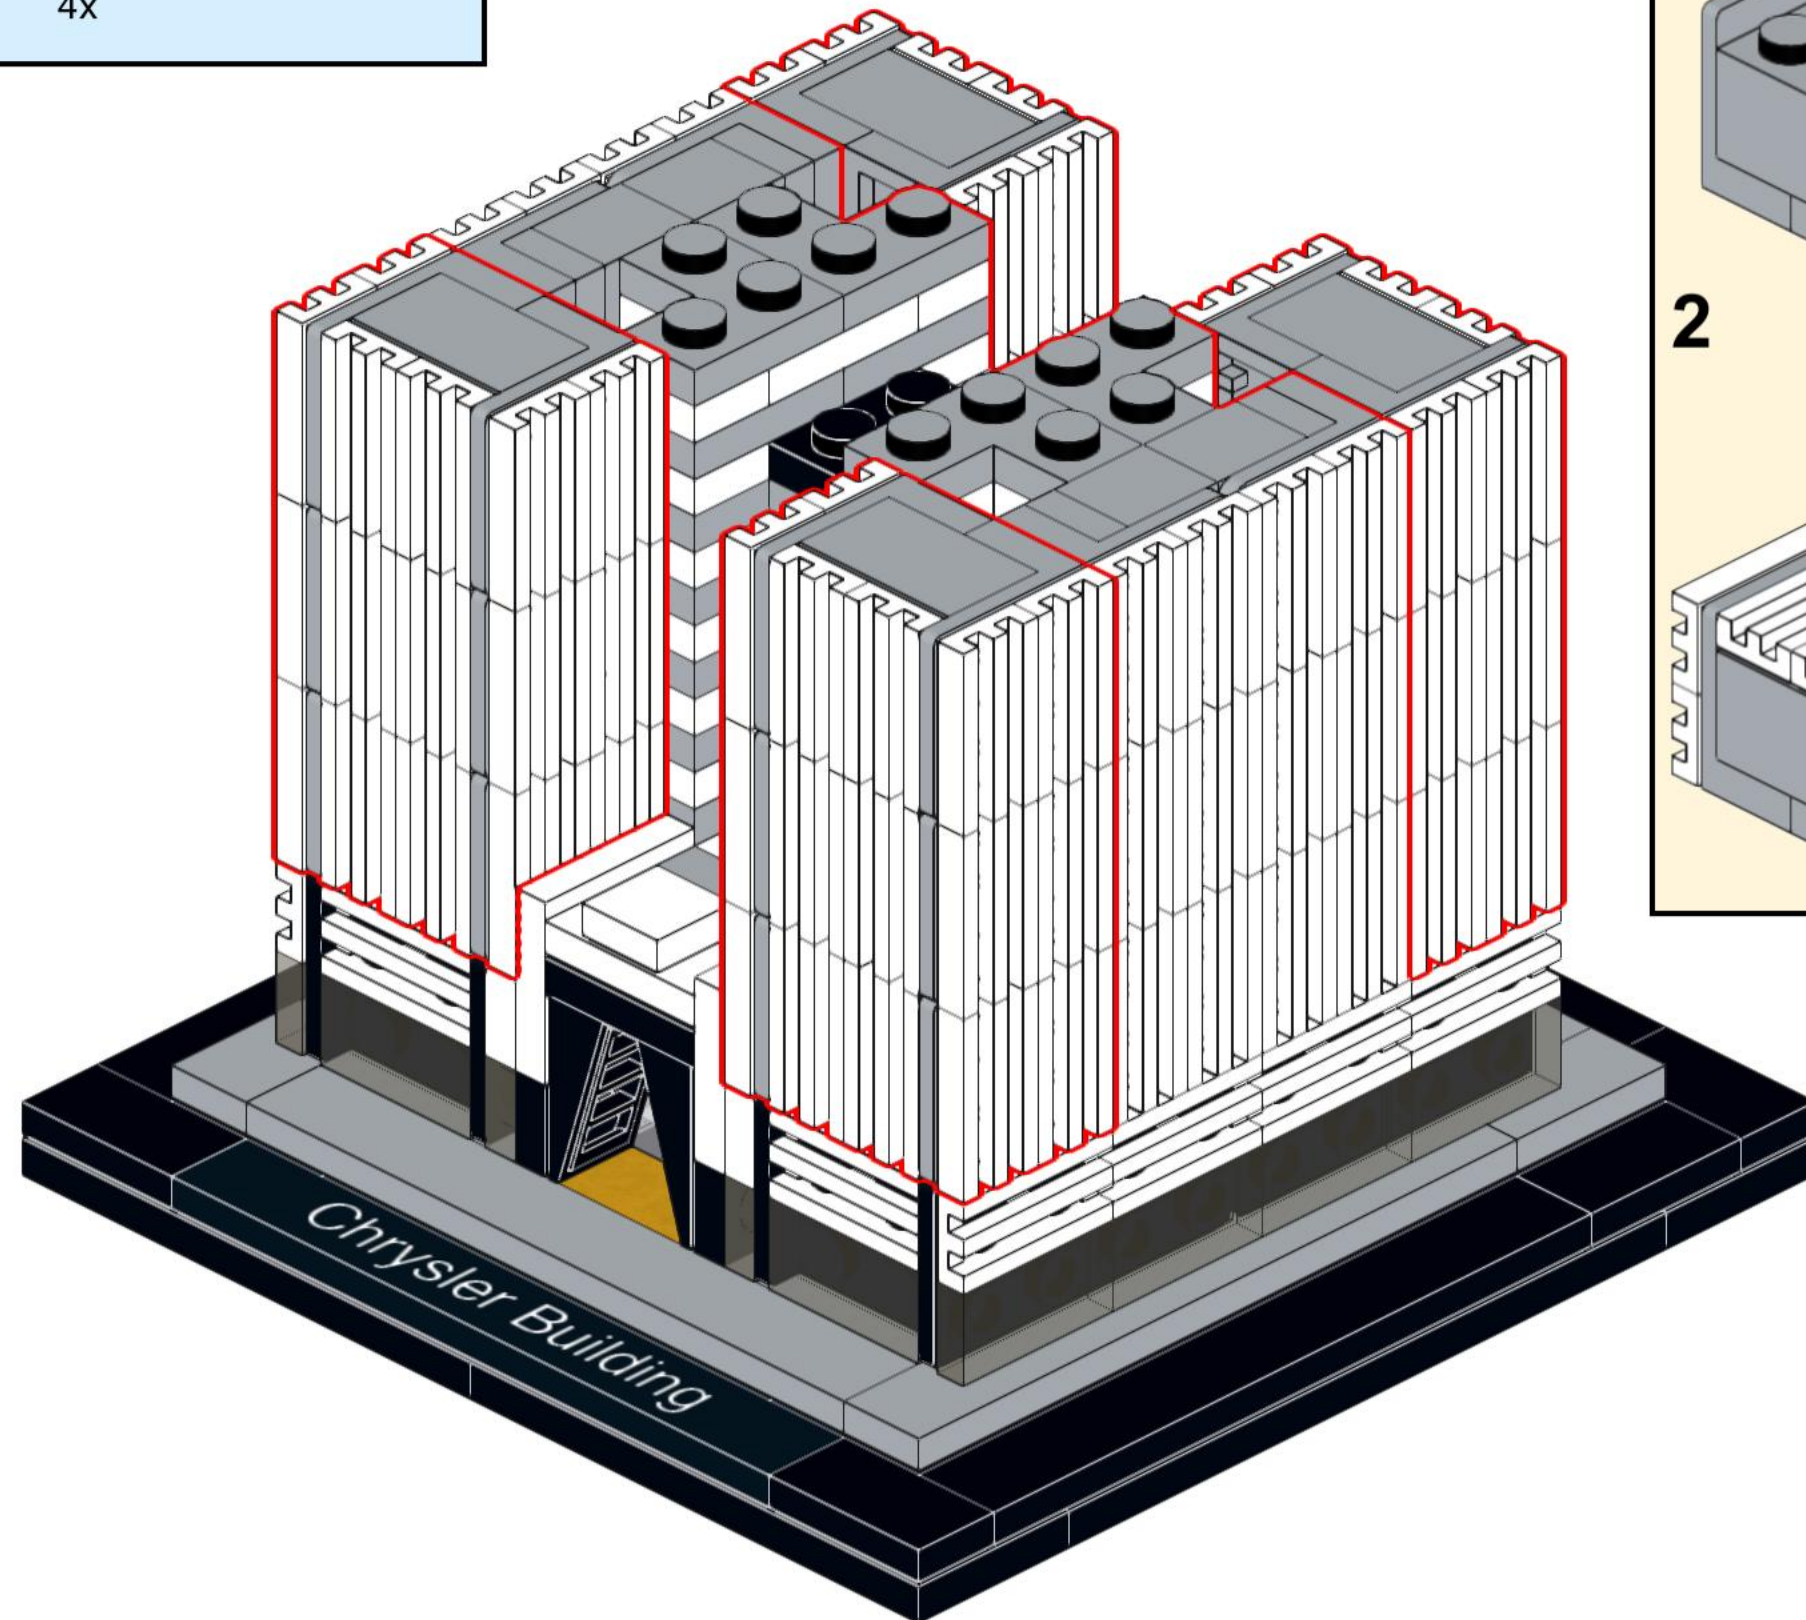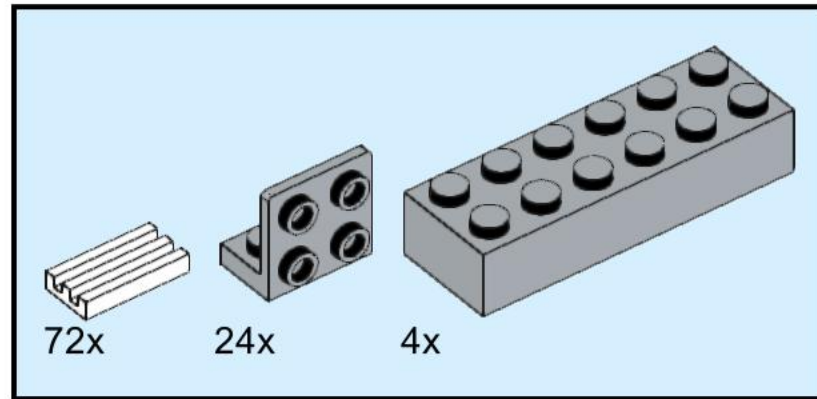



41

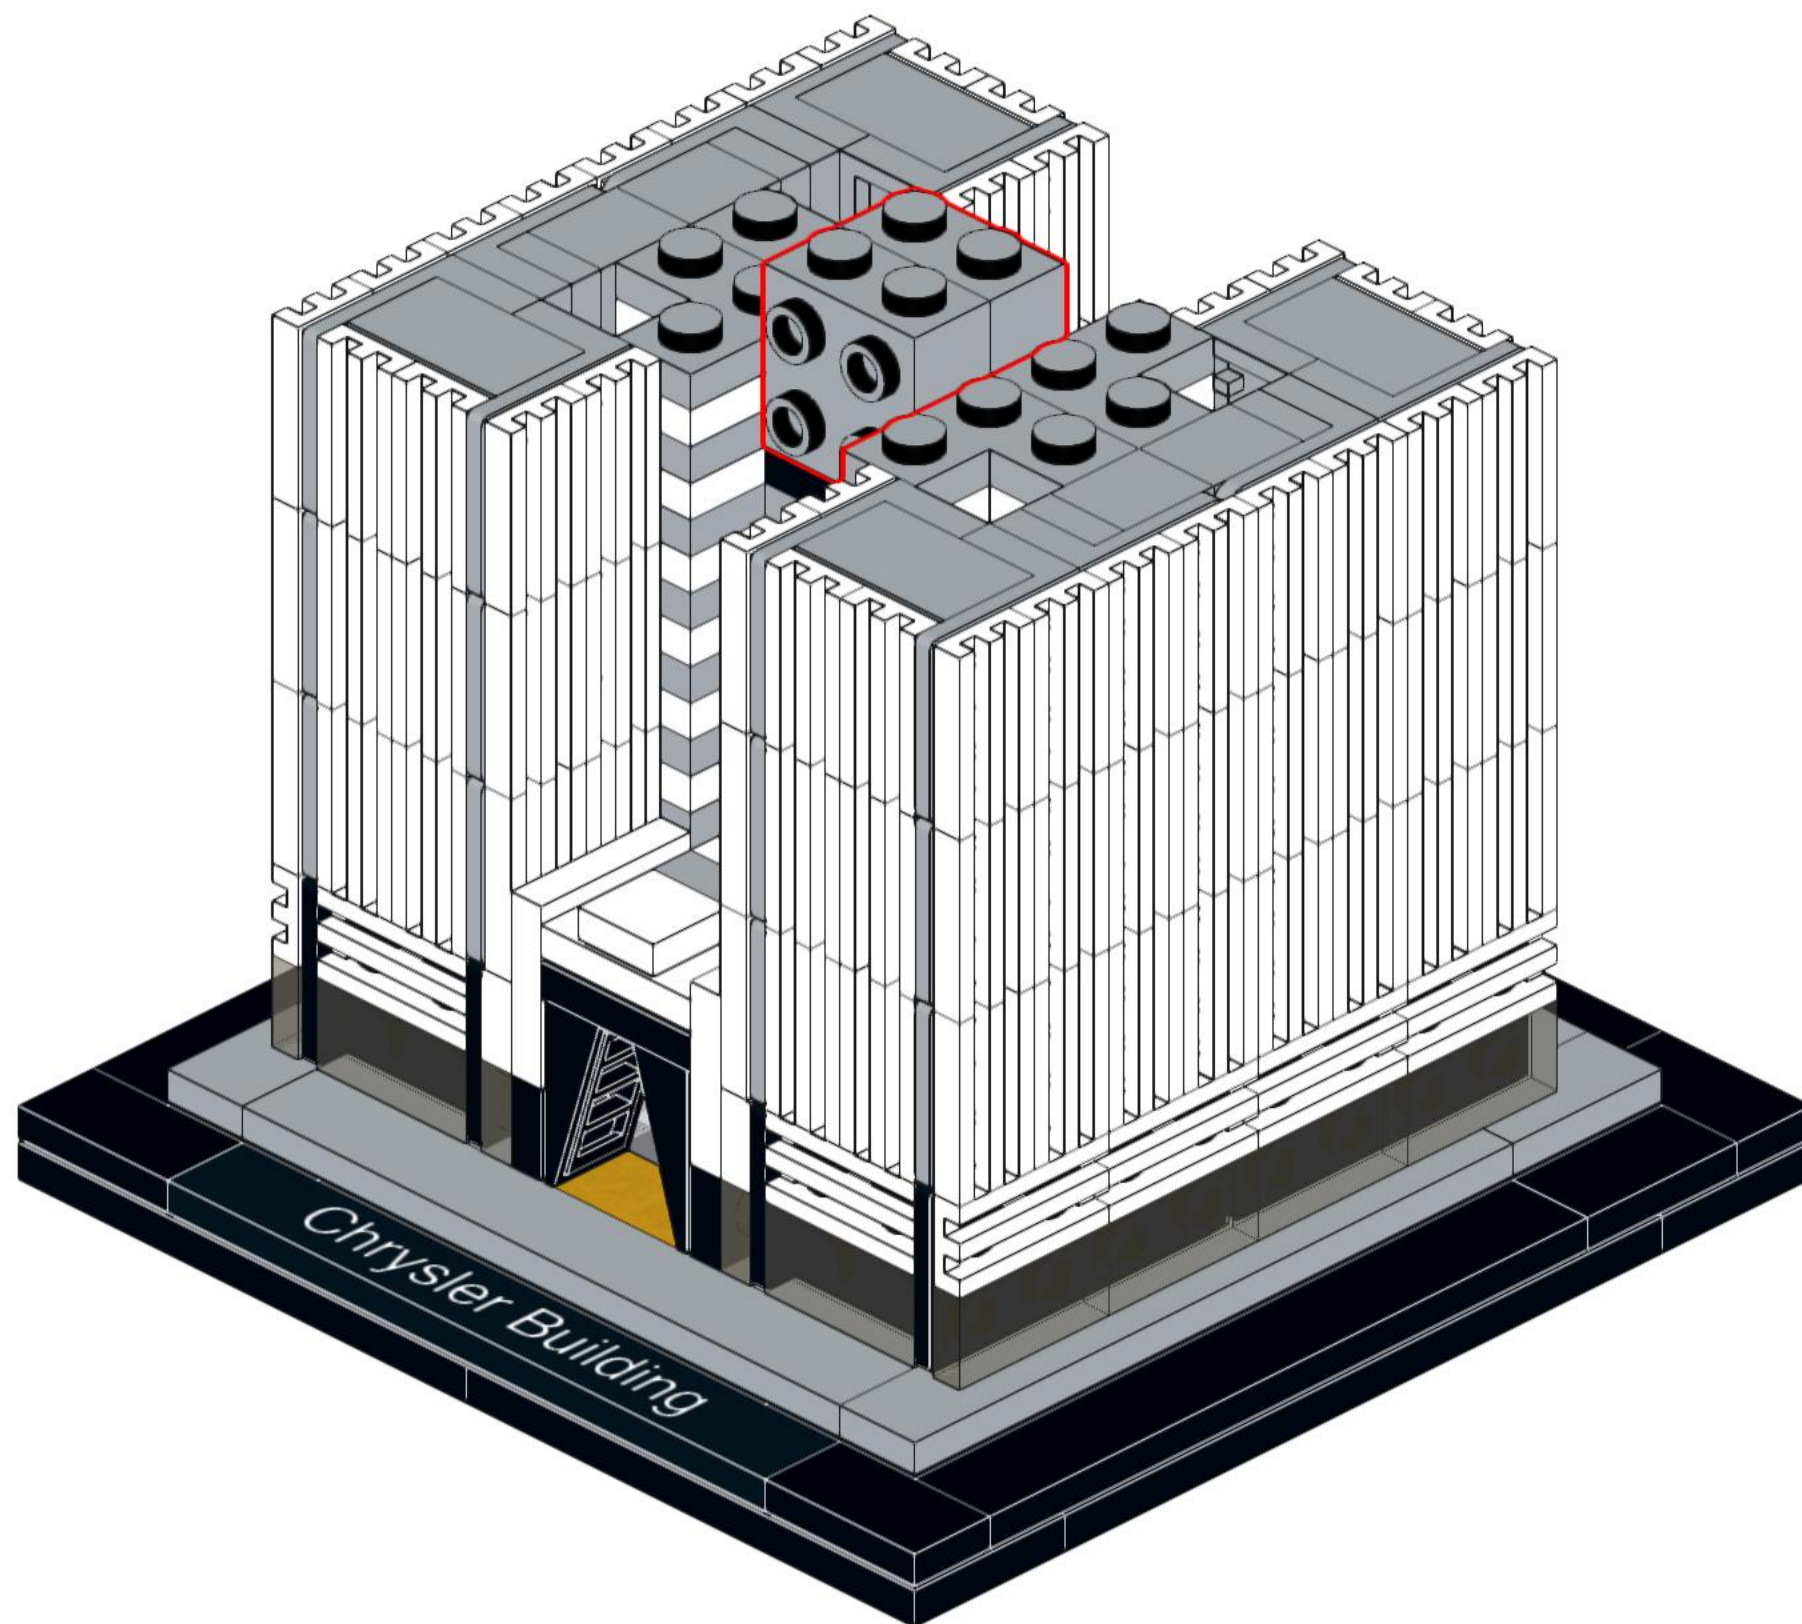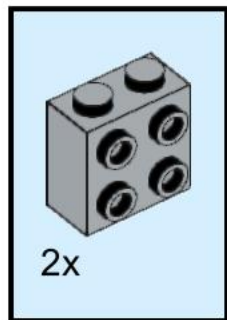




42

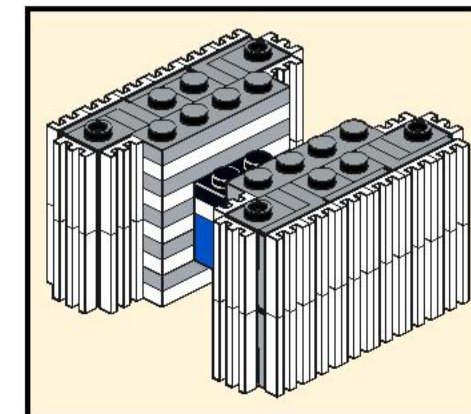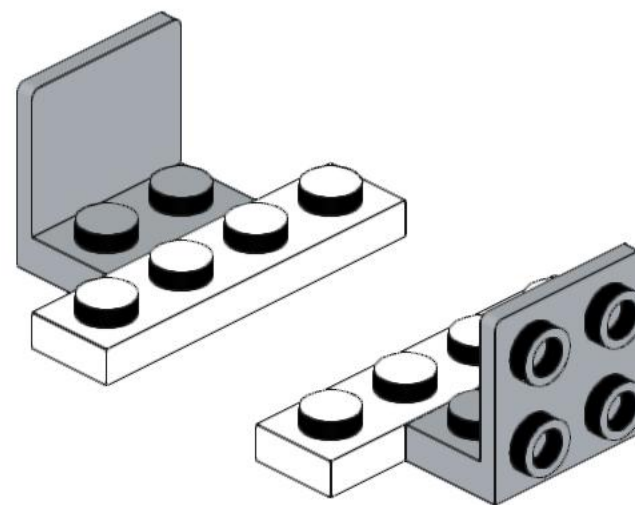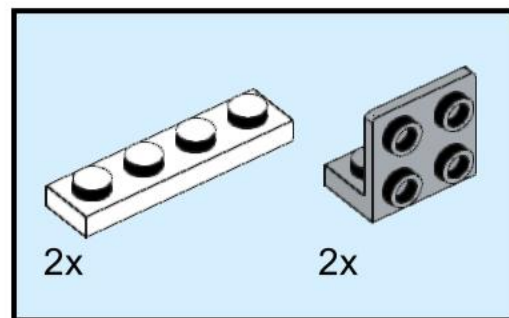

43

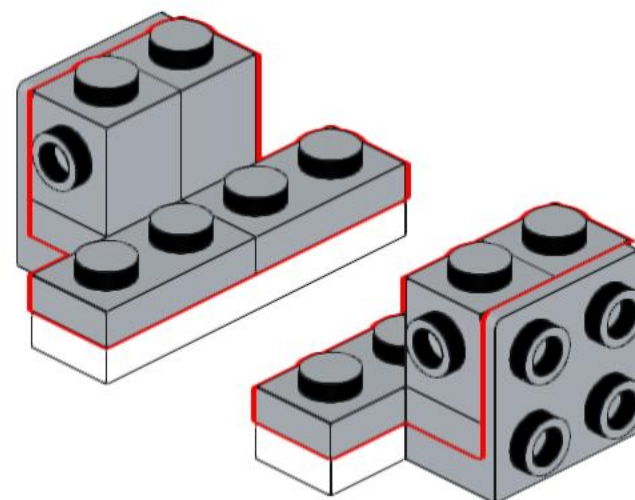
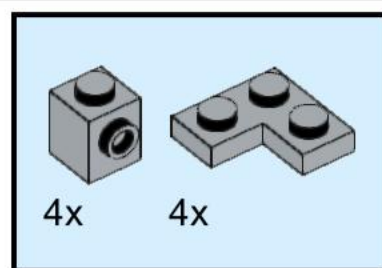


44

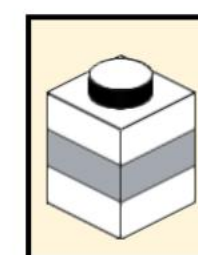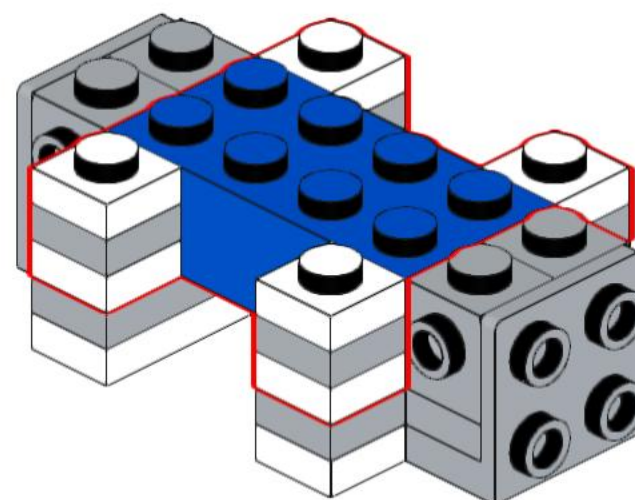
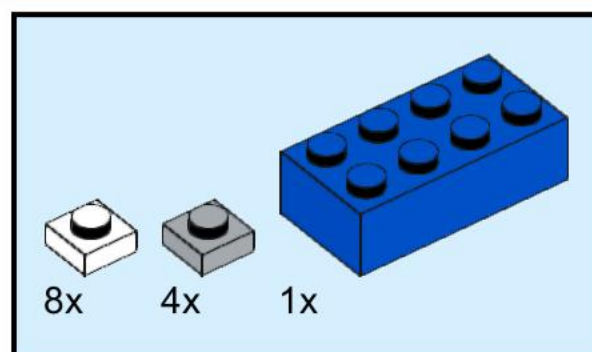


4x



45

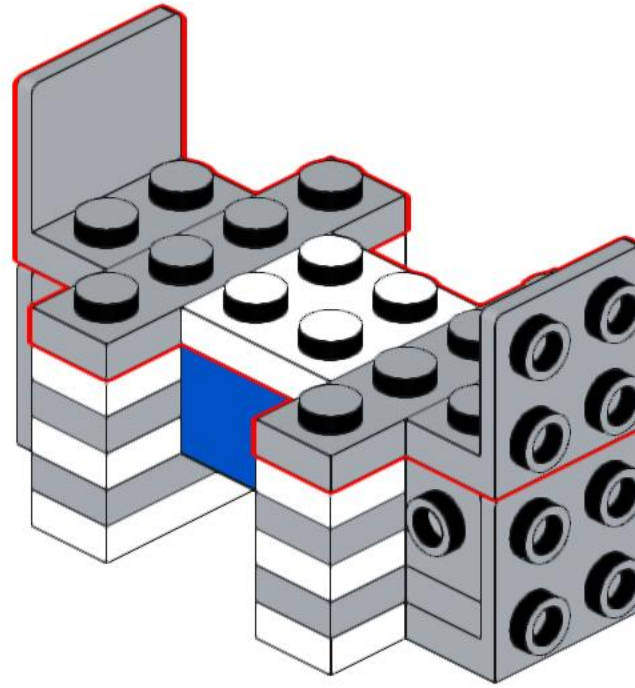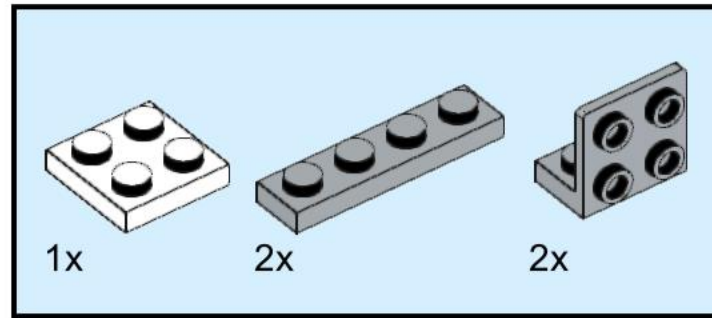



46

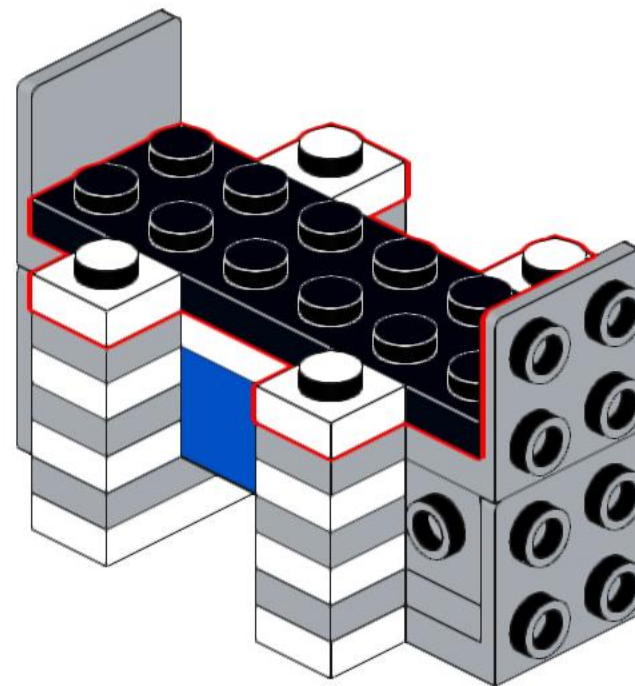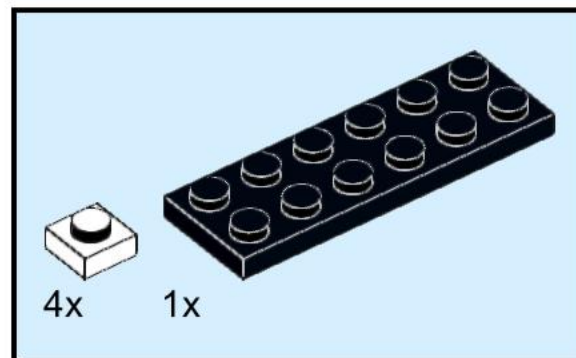




47

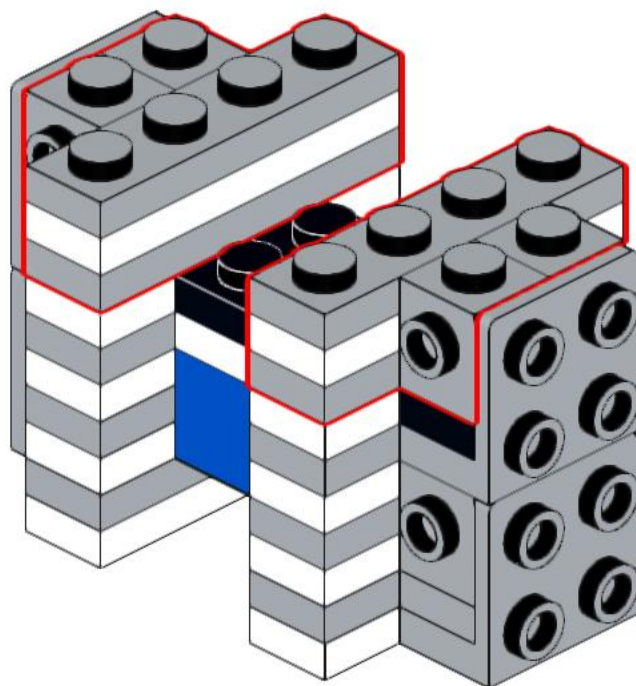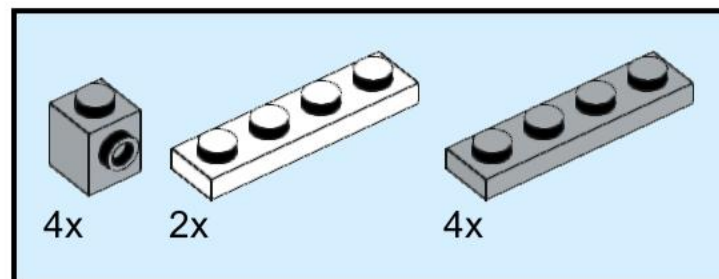




48

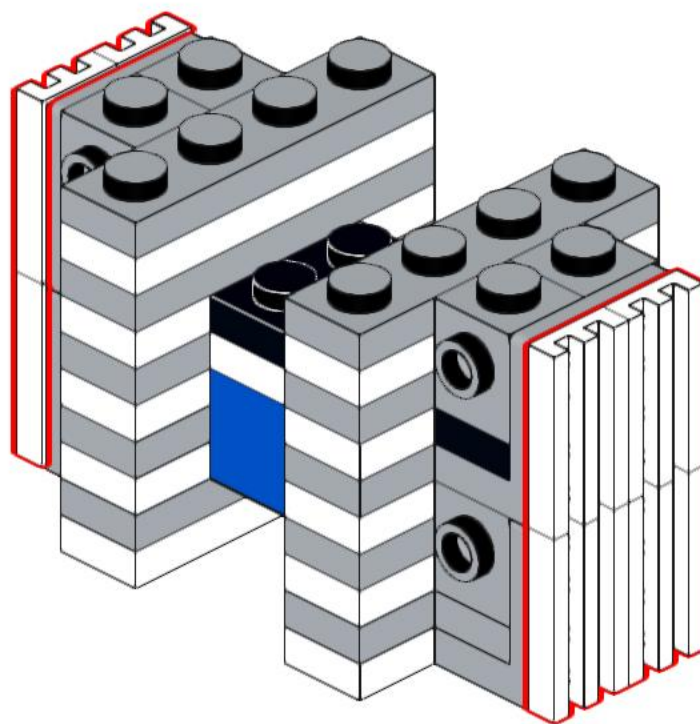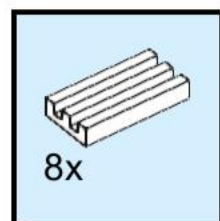


49

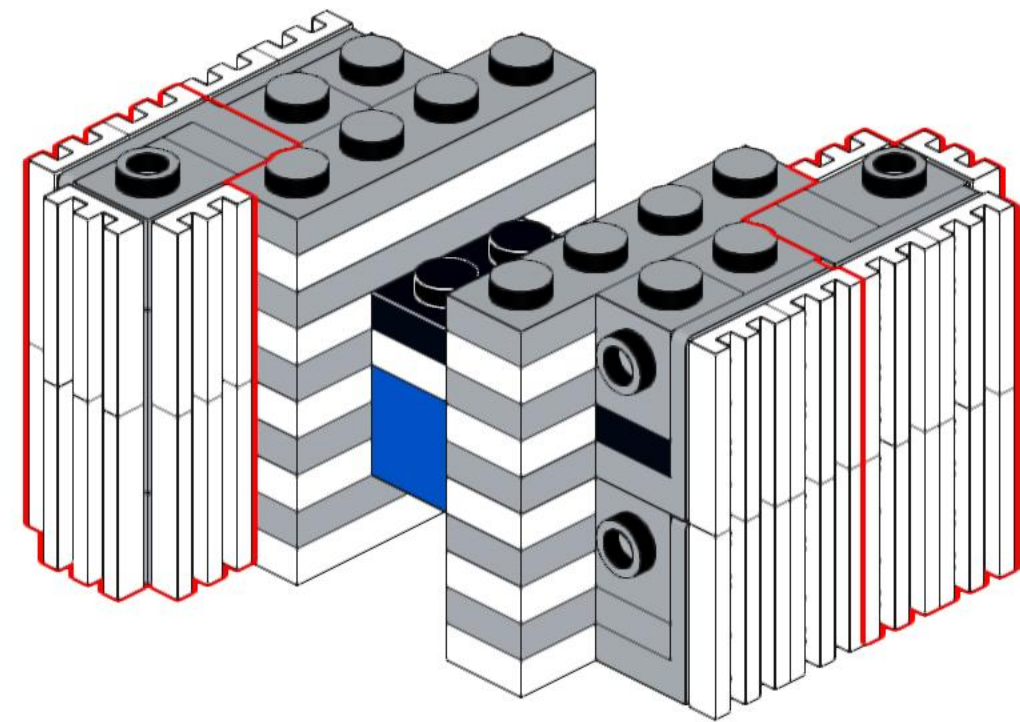
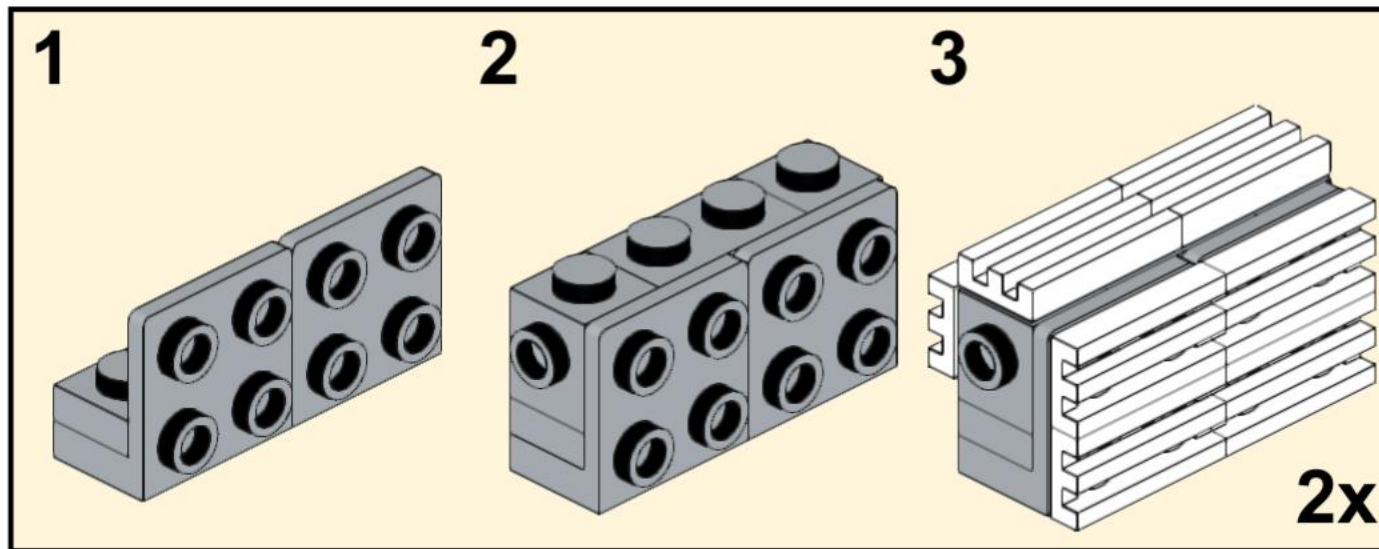
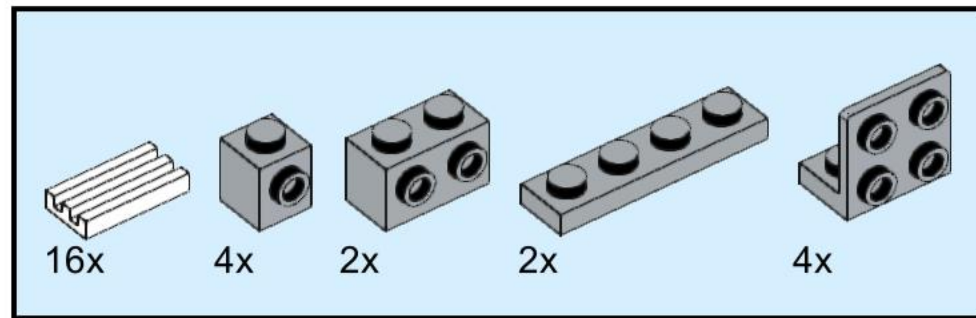


50

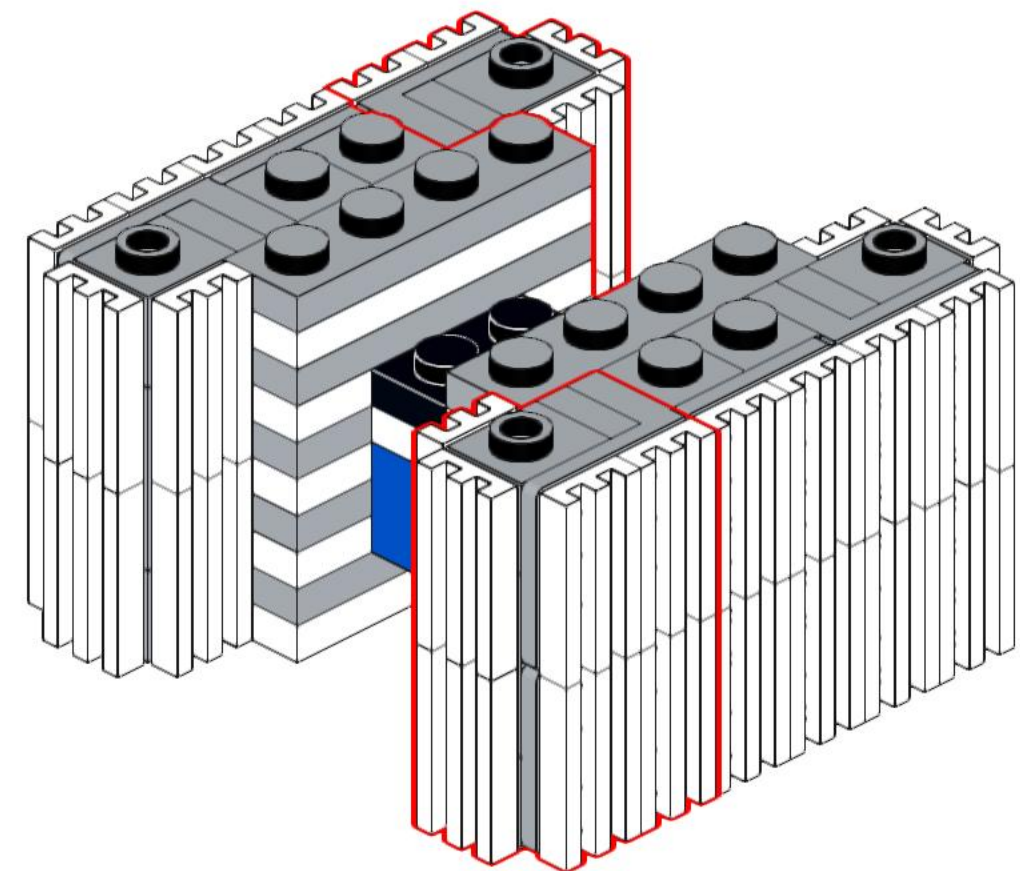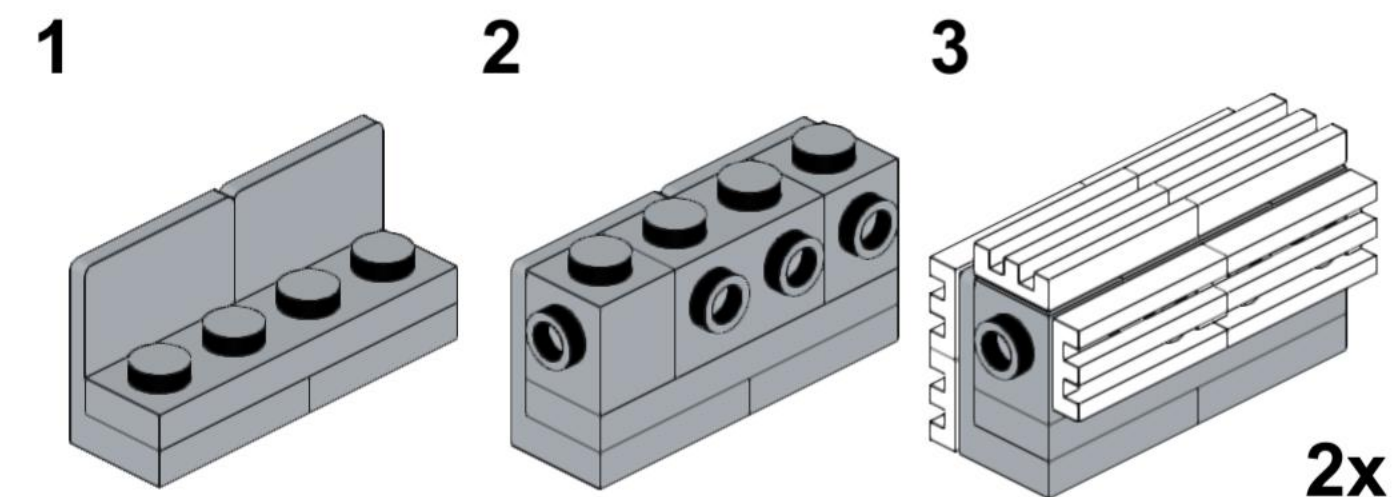
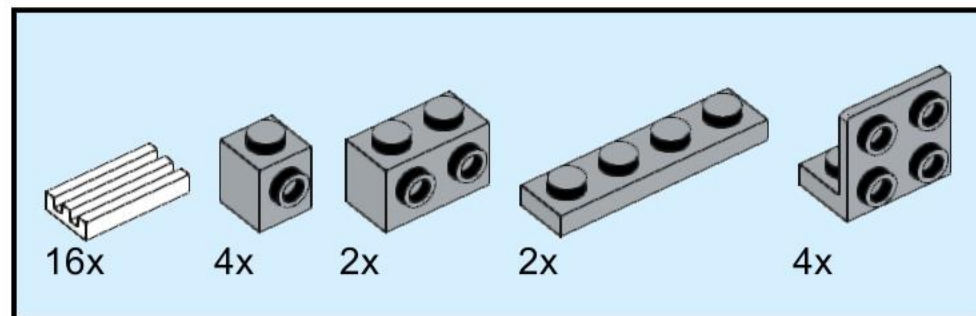


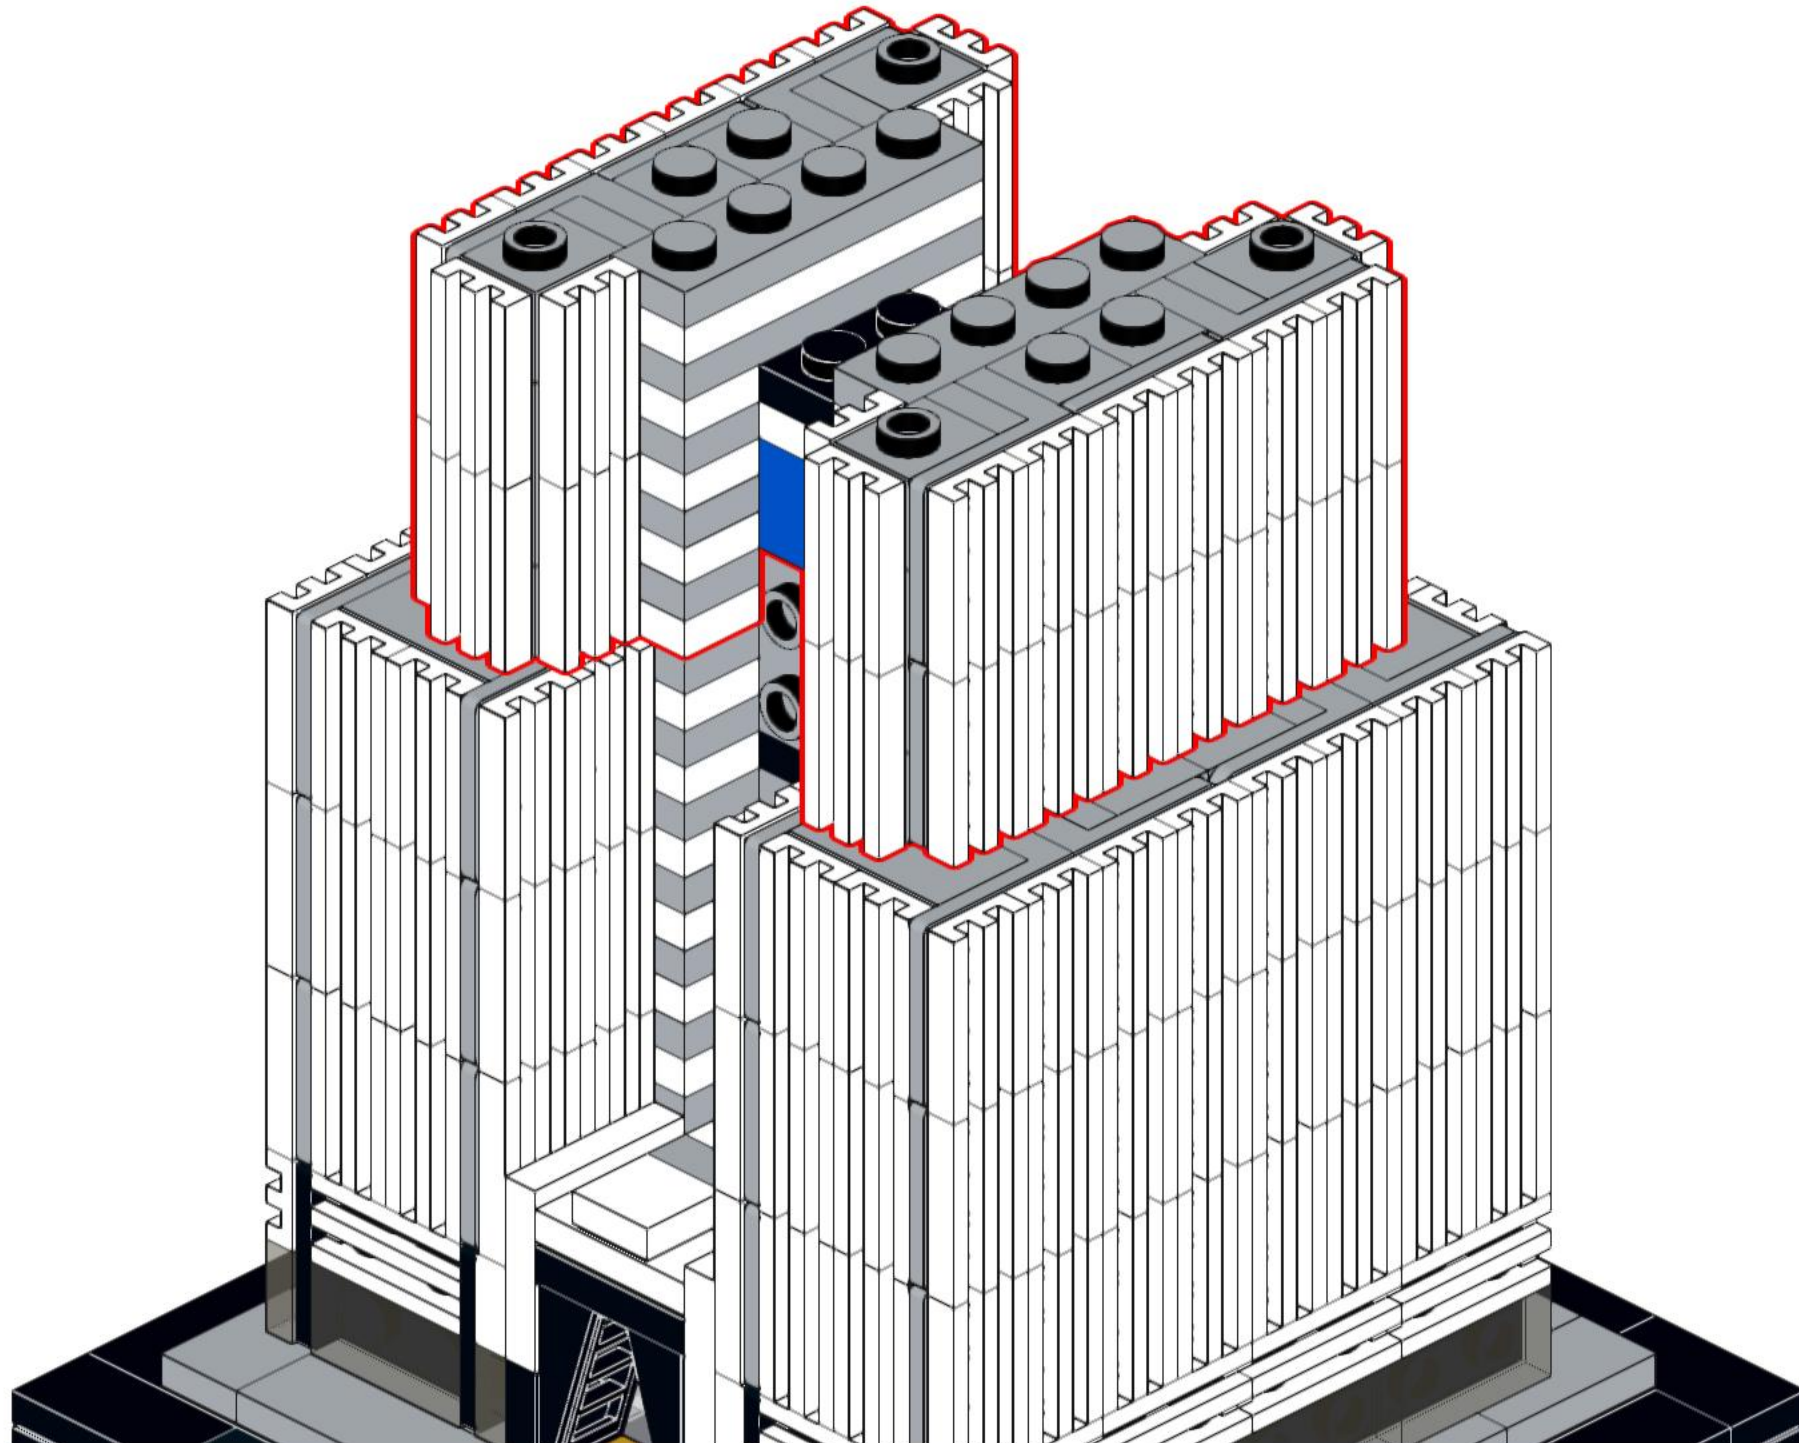




52

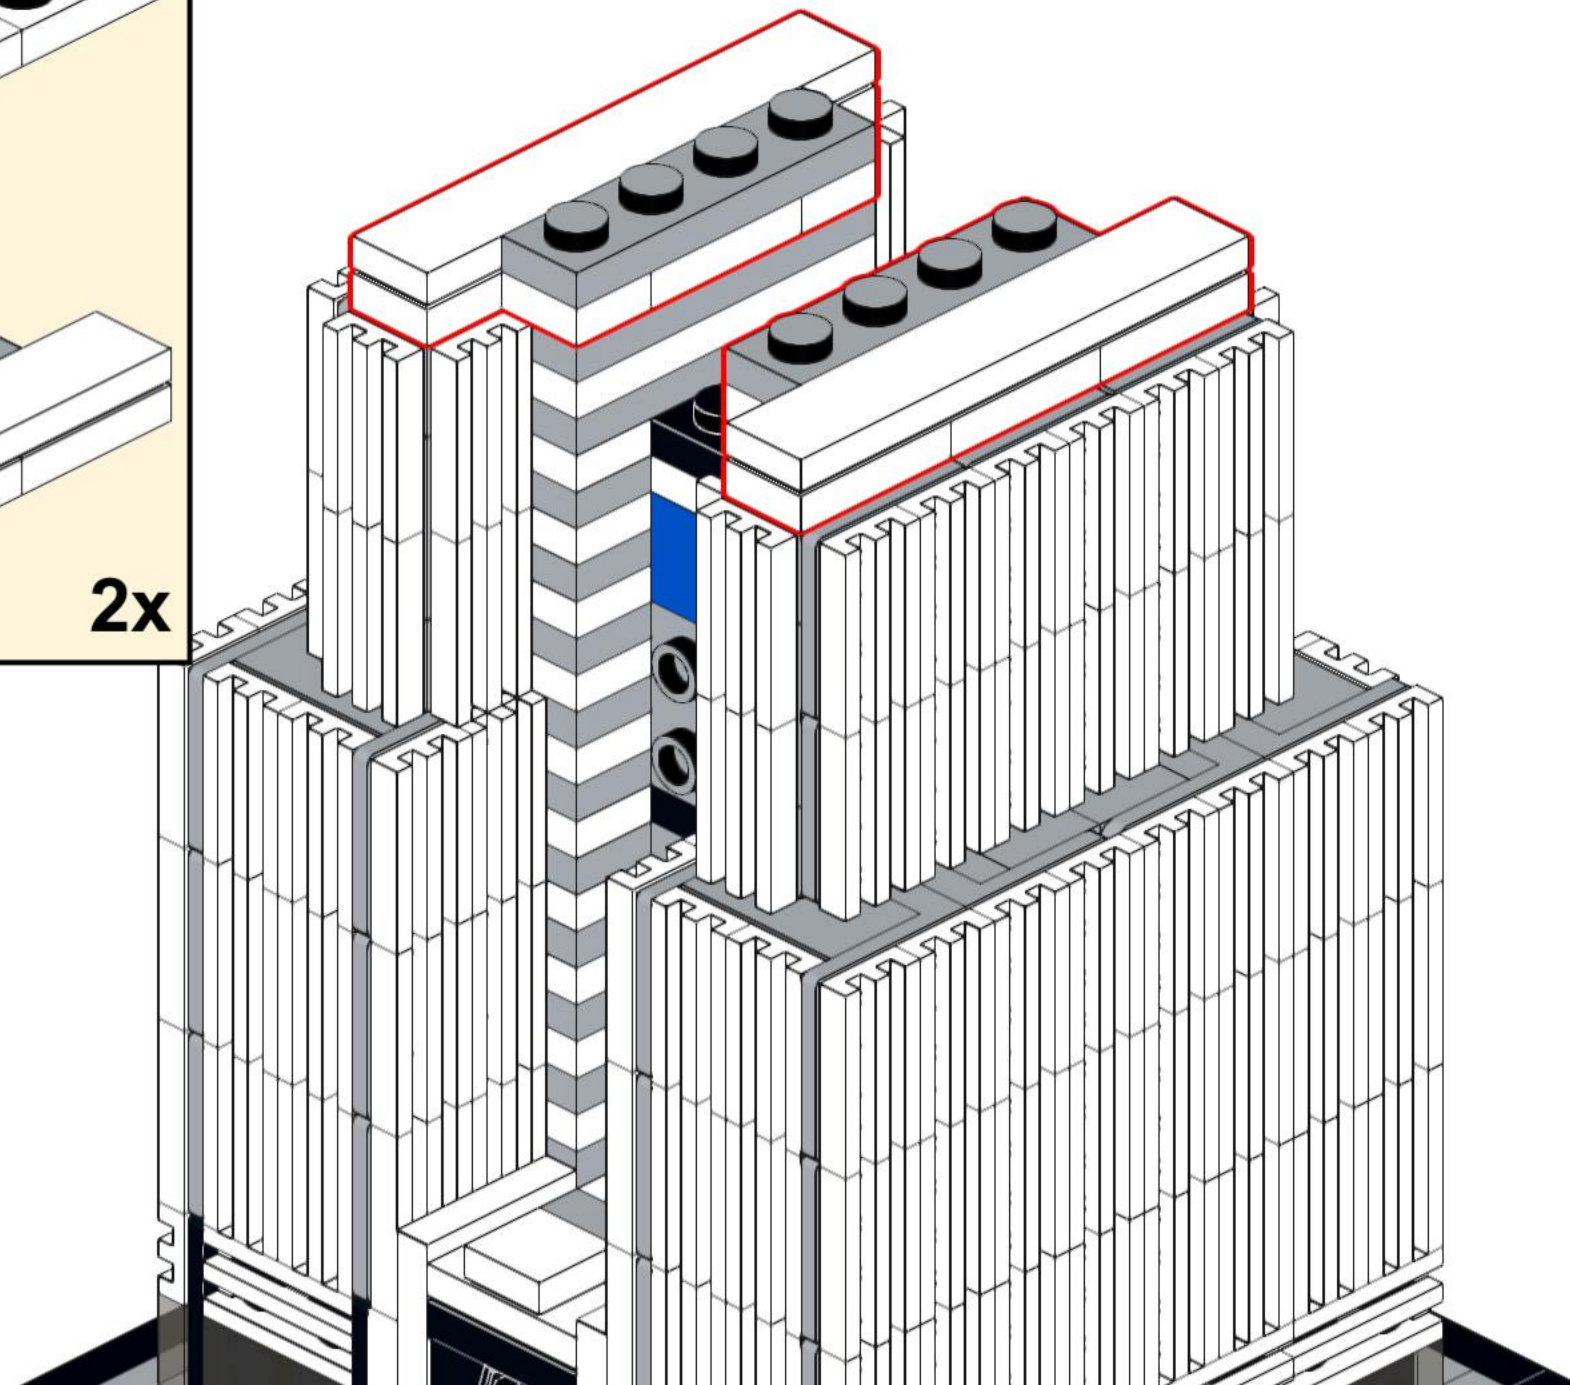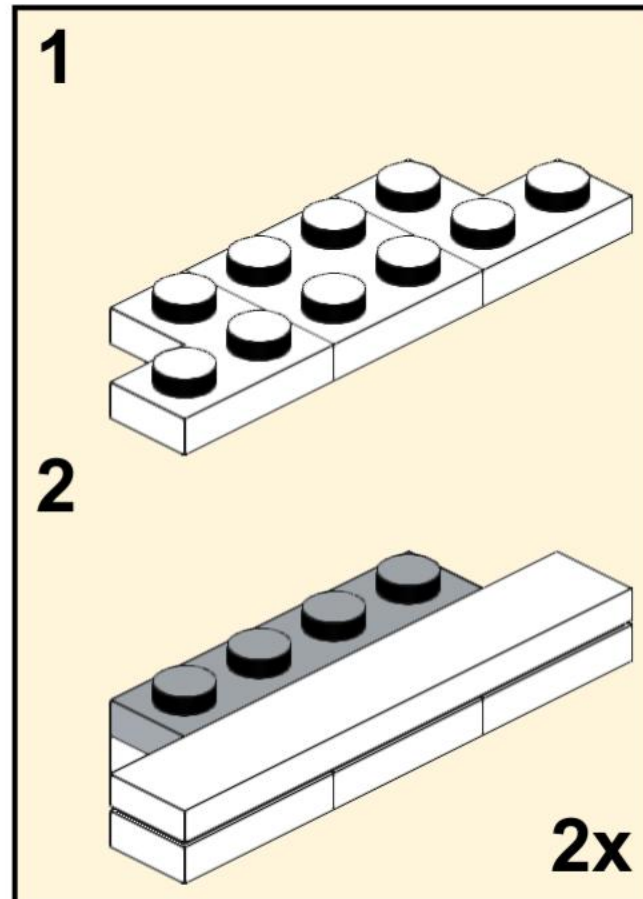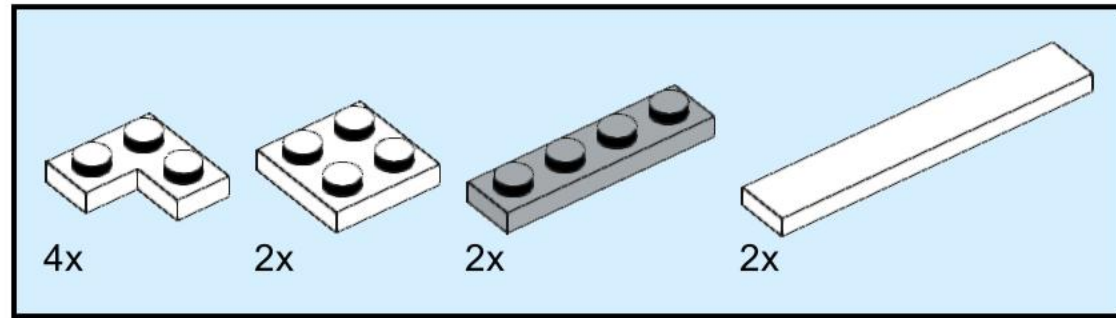



53

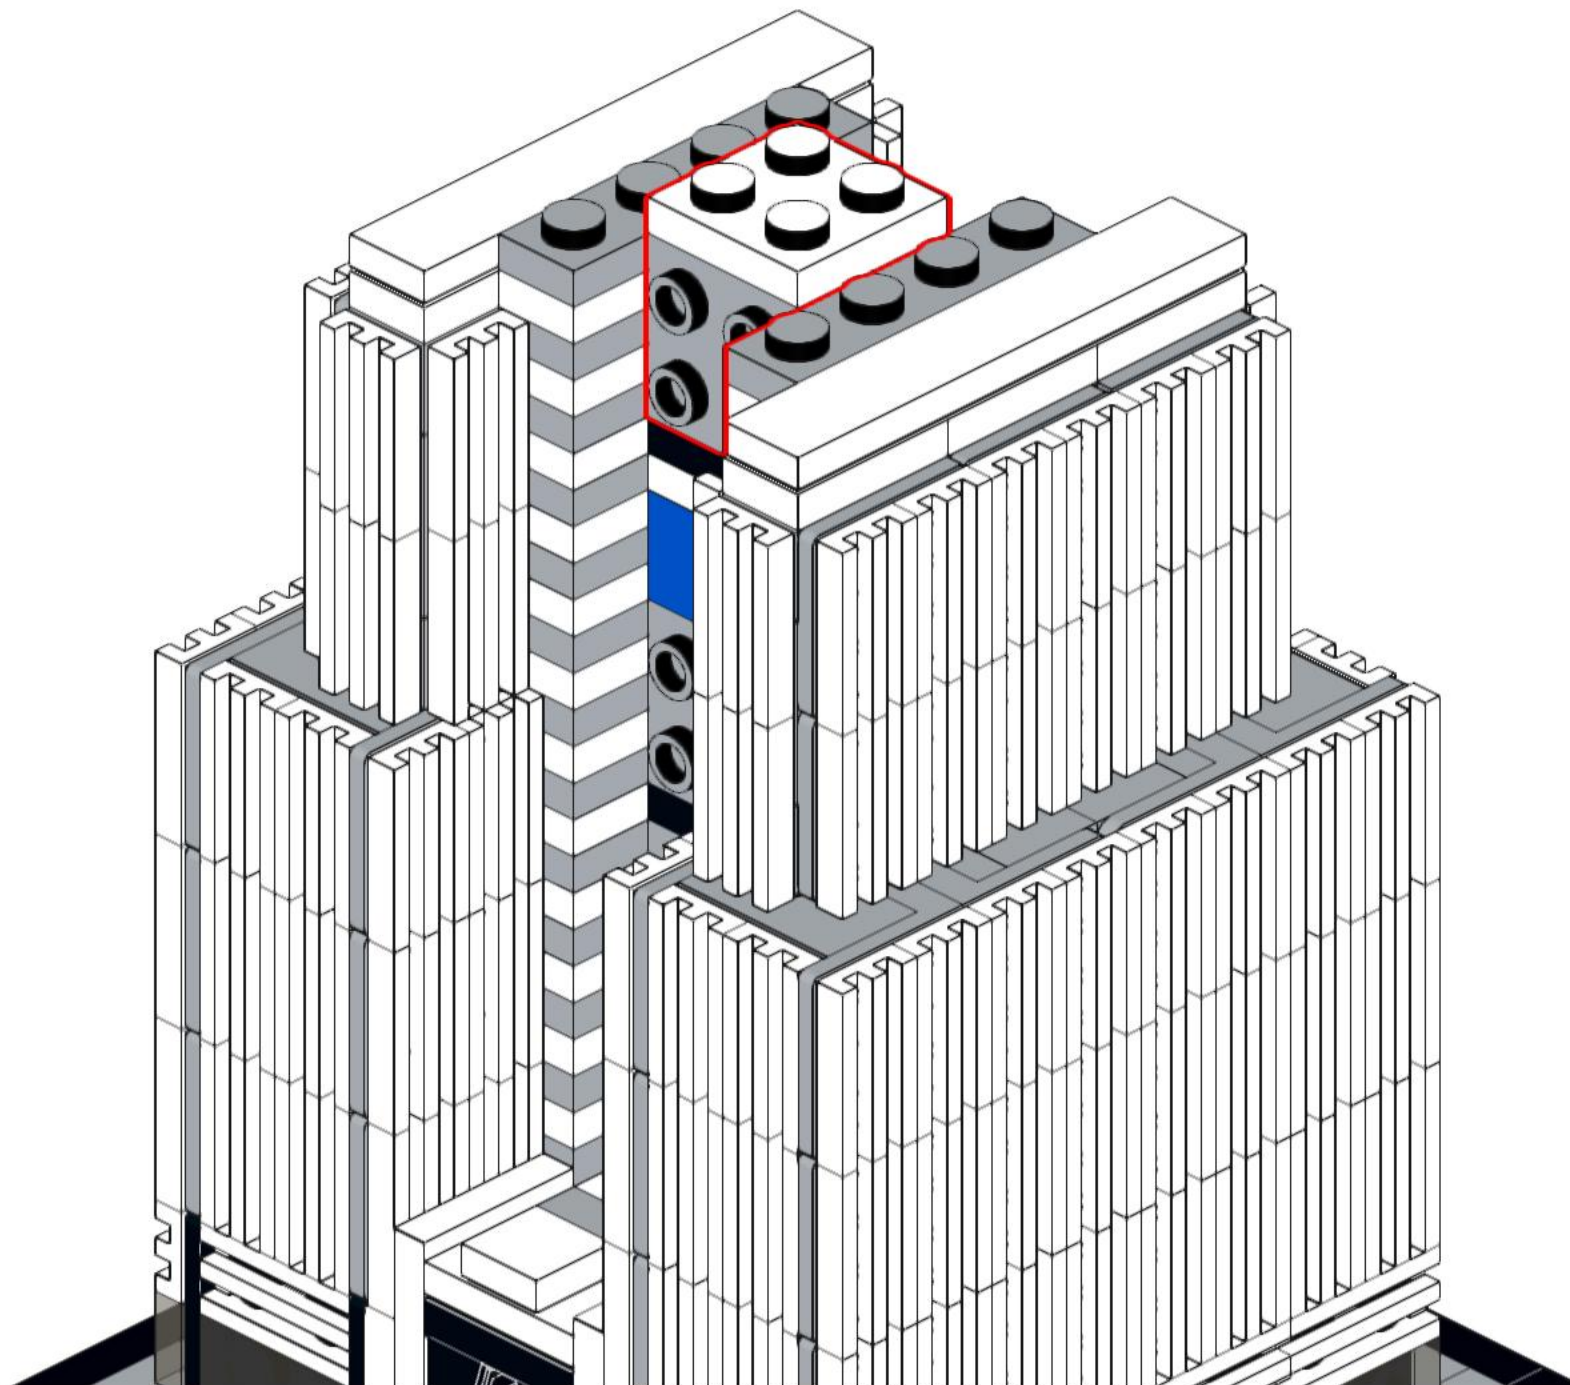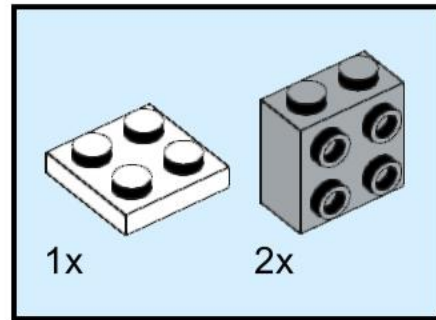



54

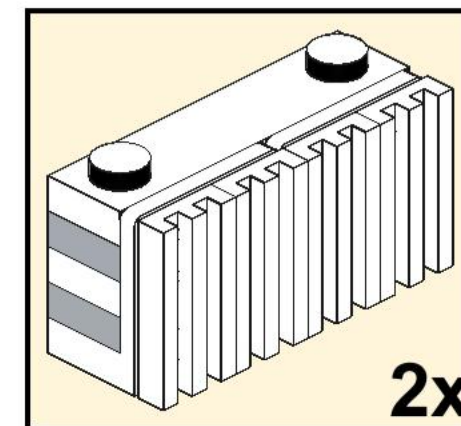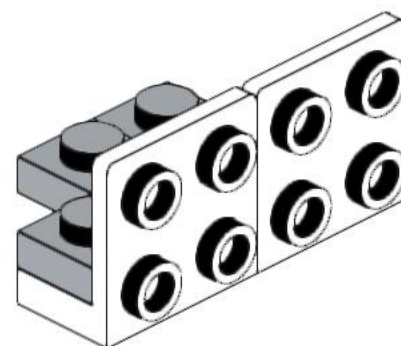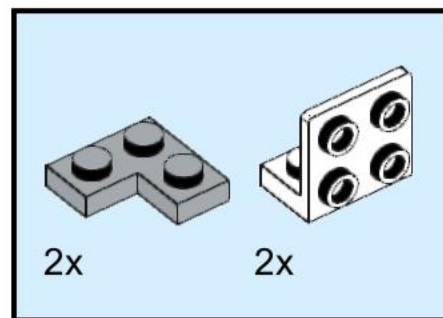



55

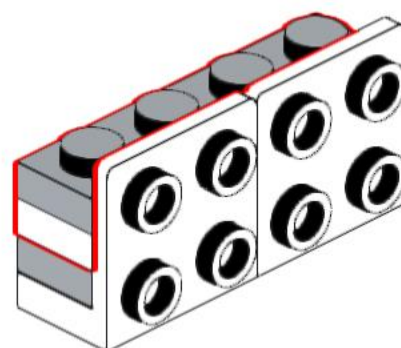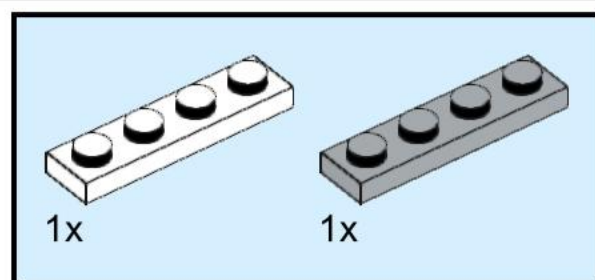



56

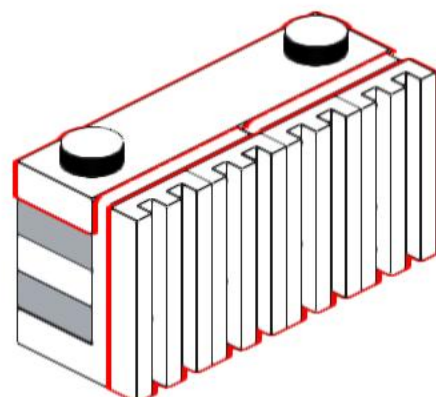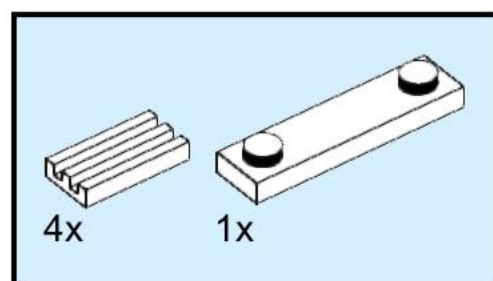



57

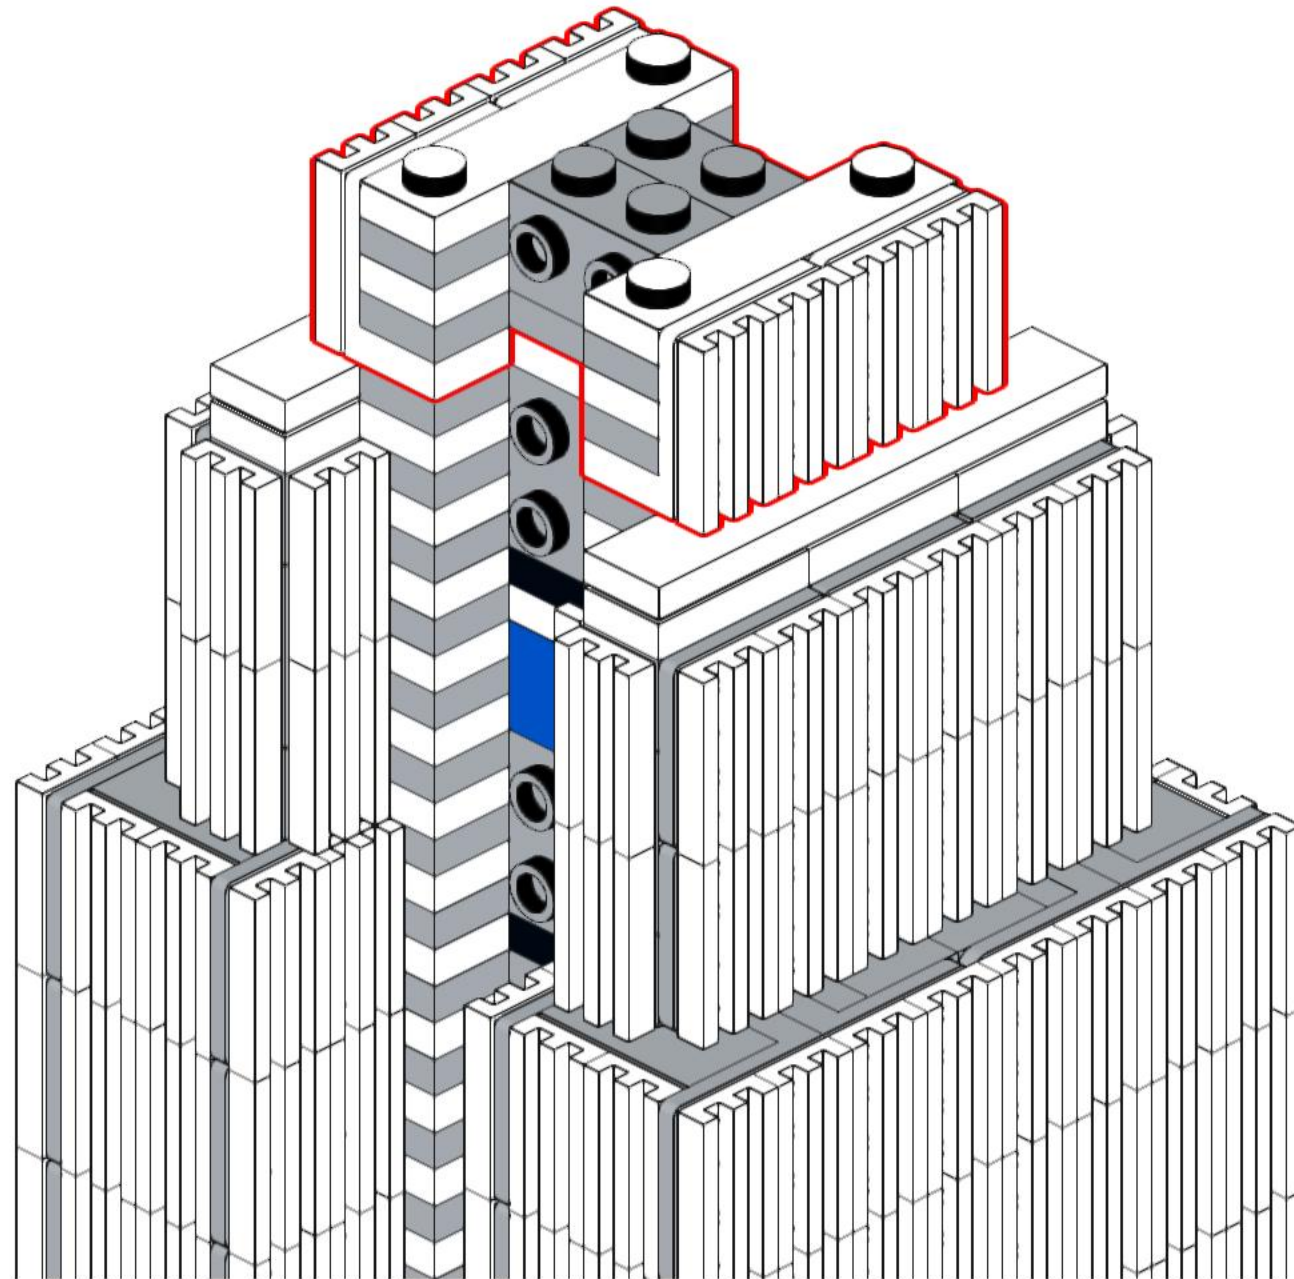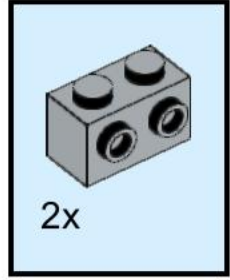



58

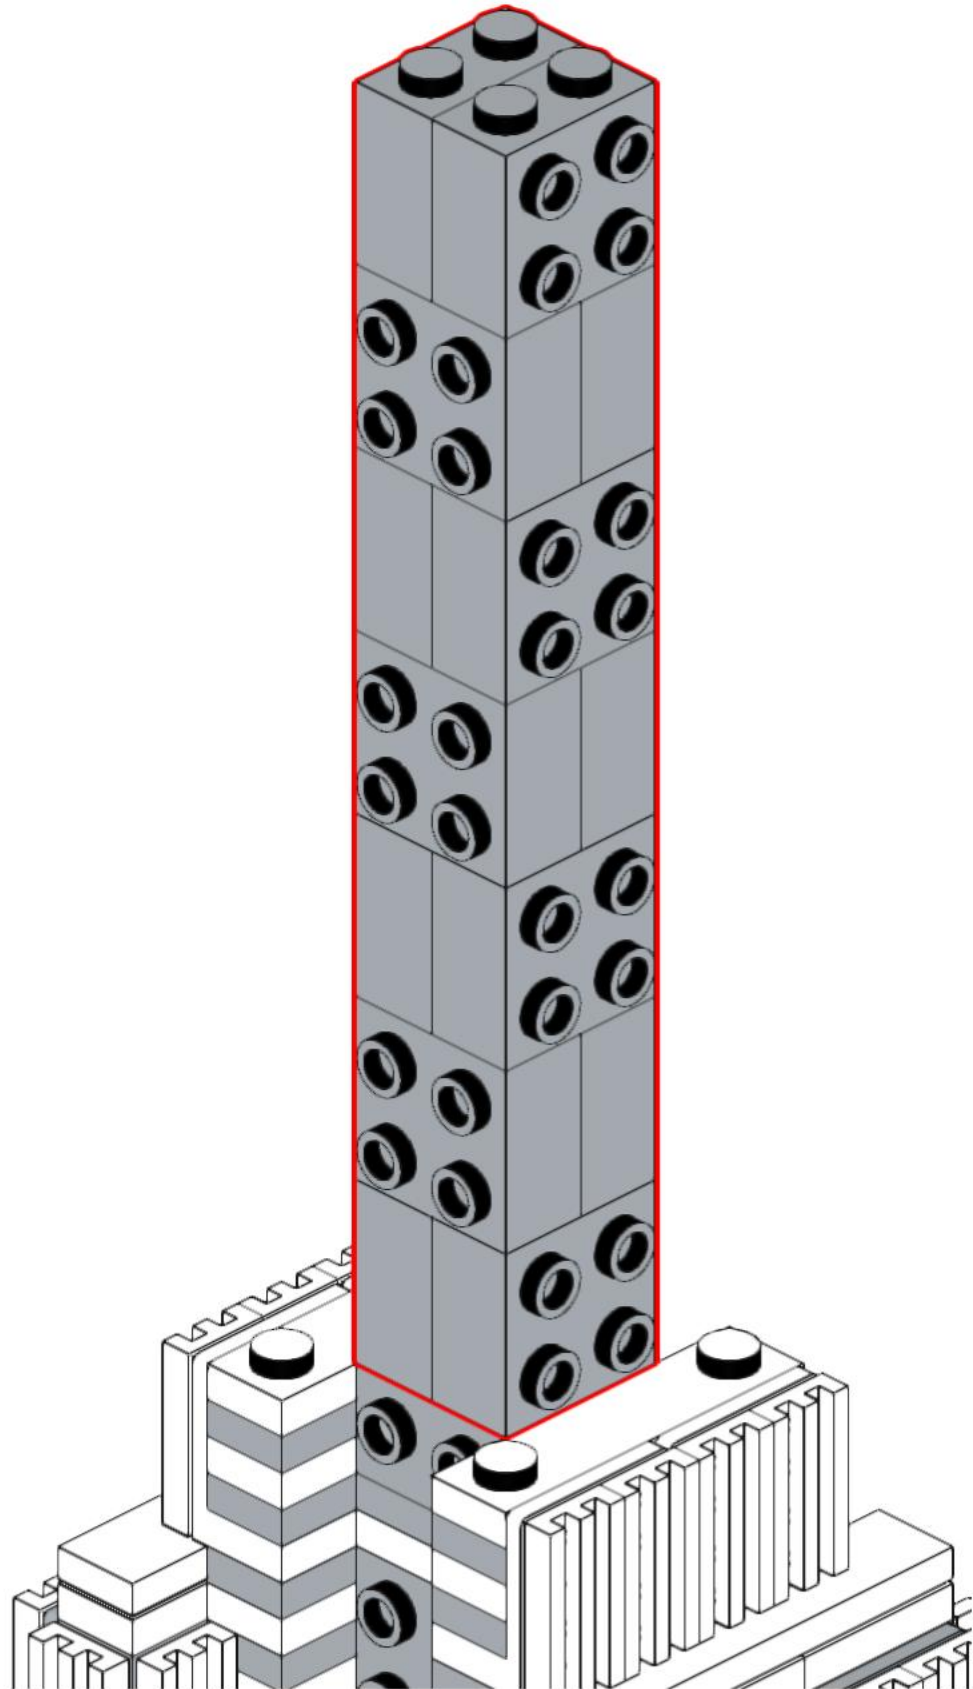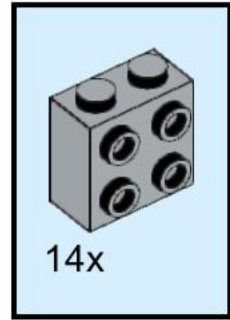



59

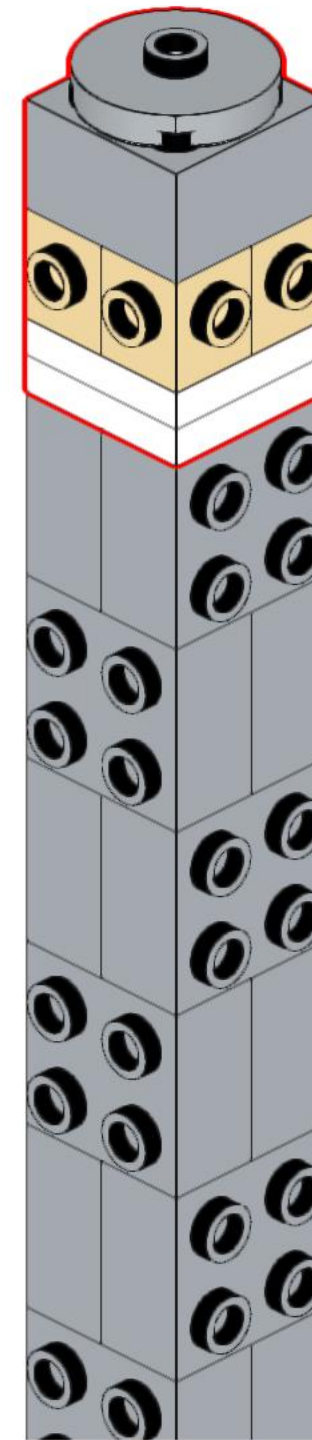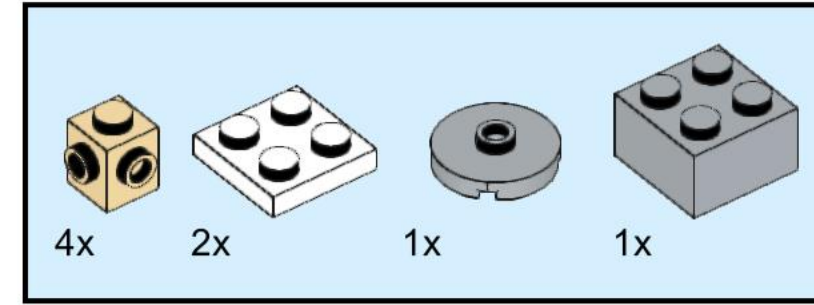



60

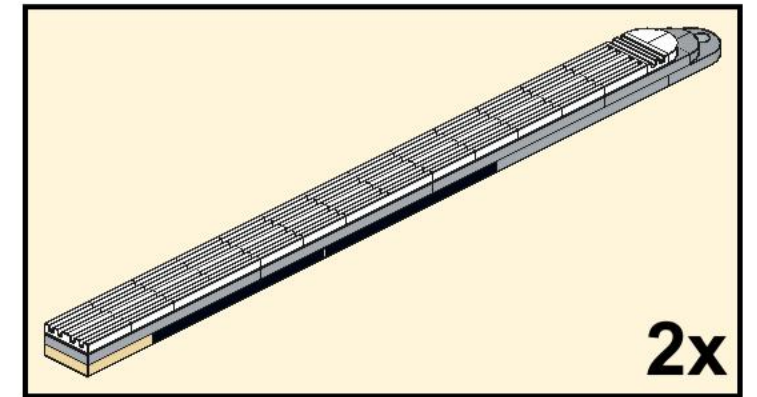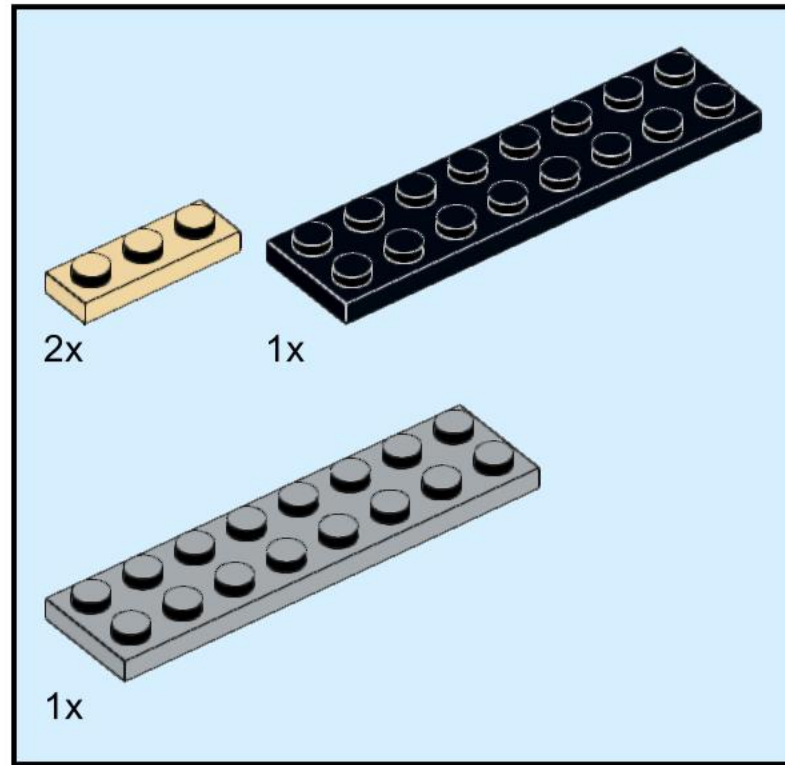



61

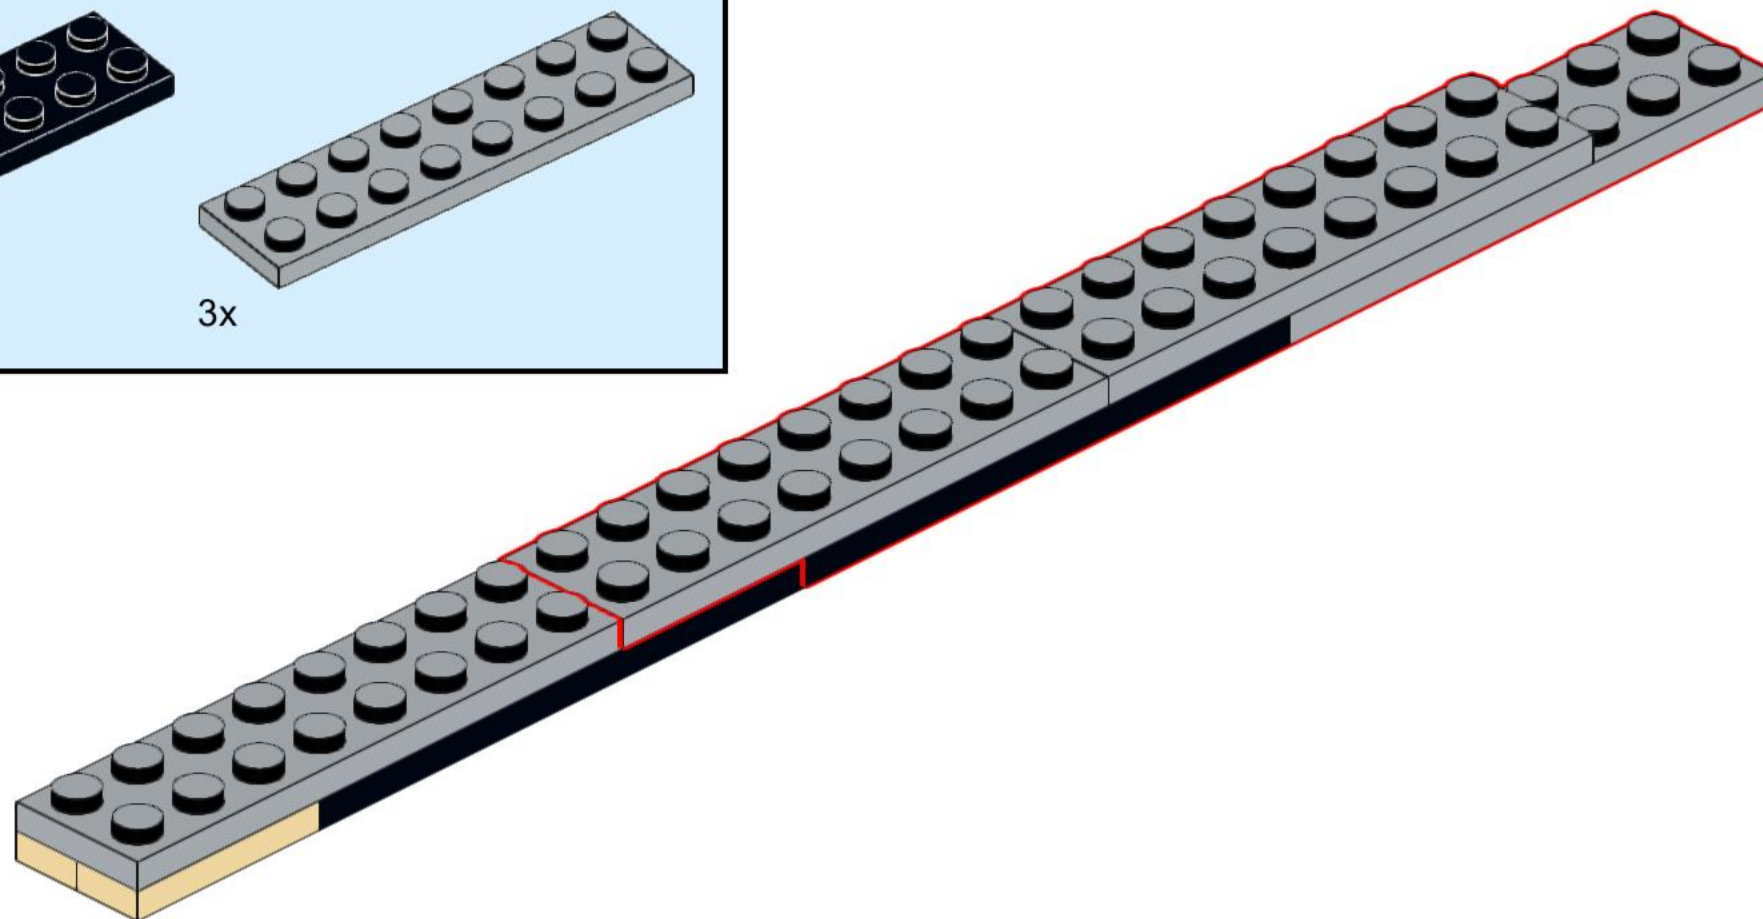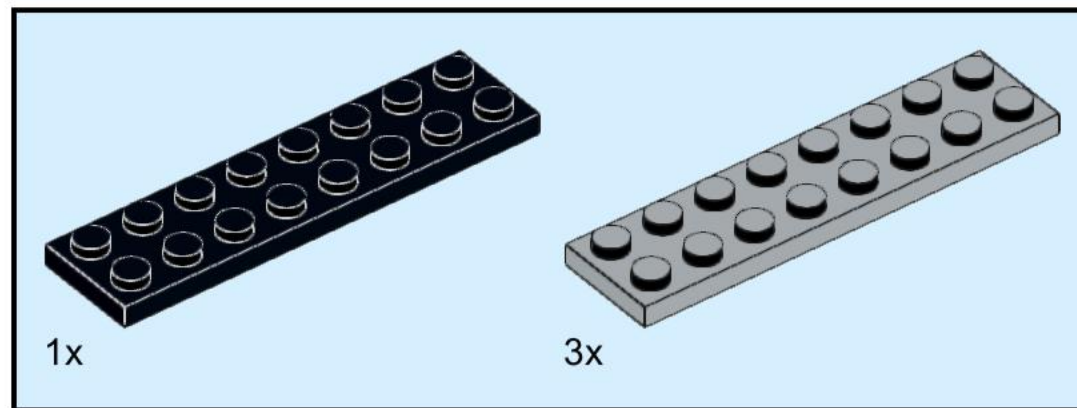


62

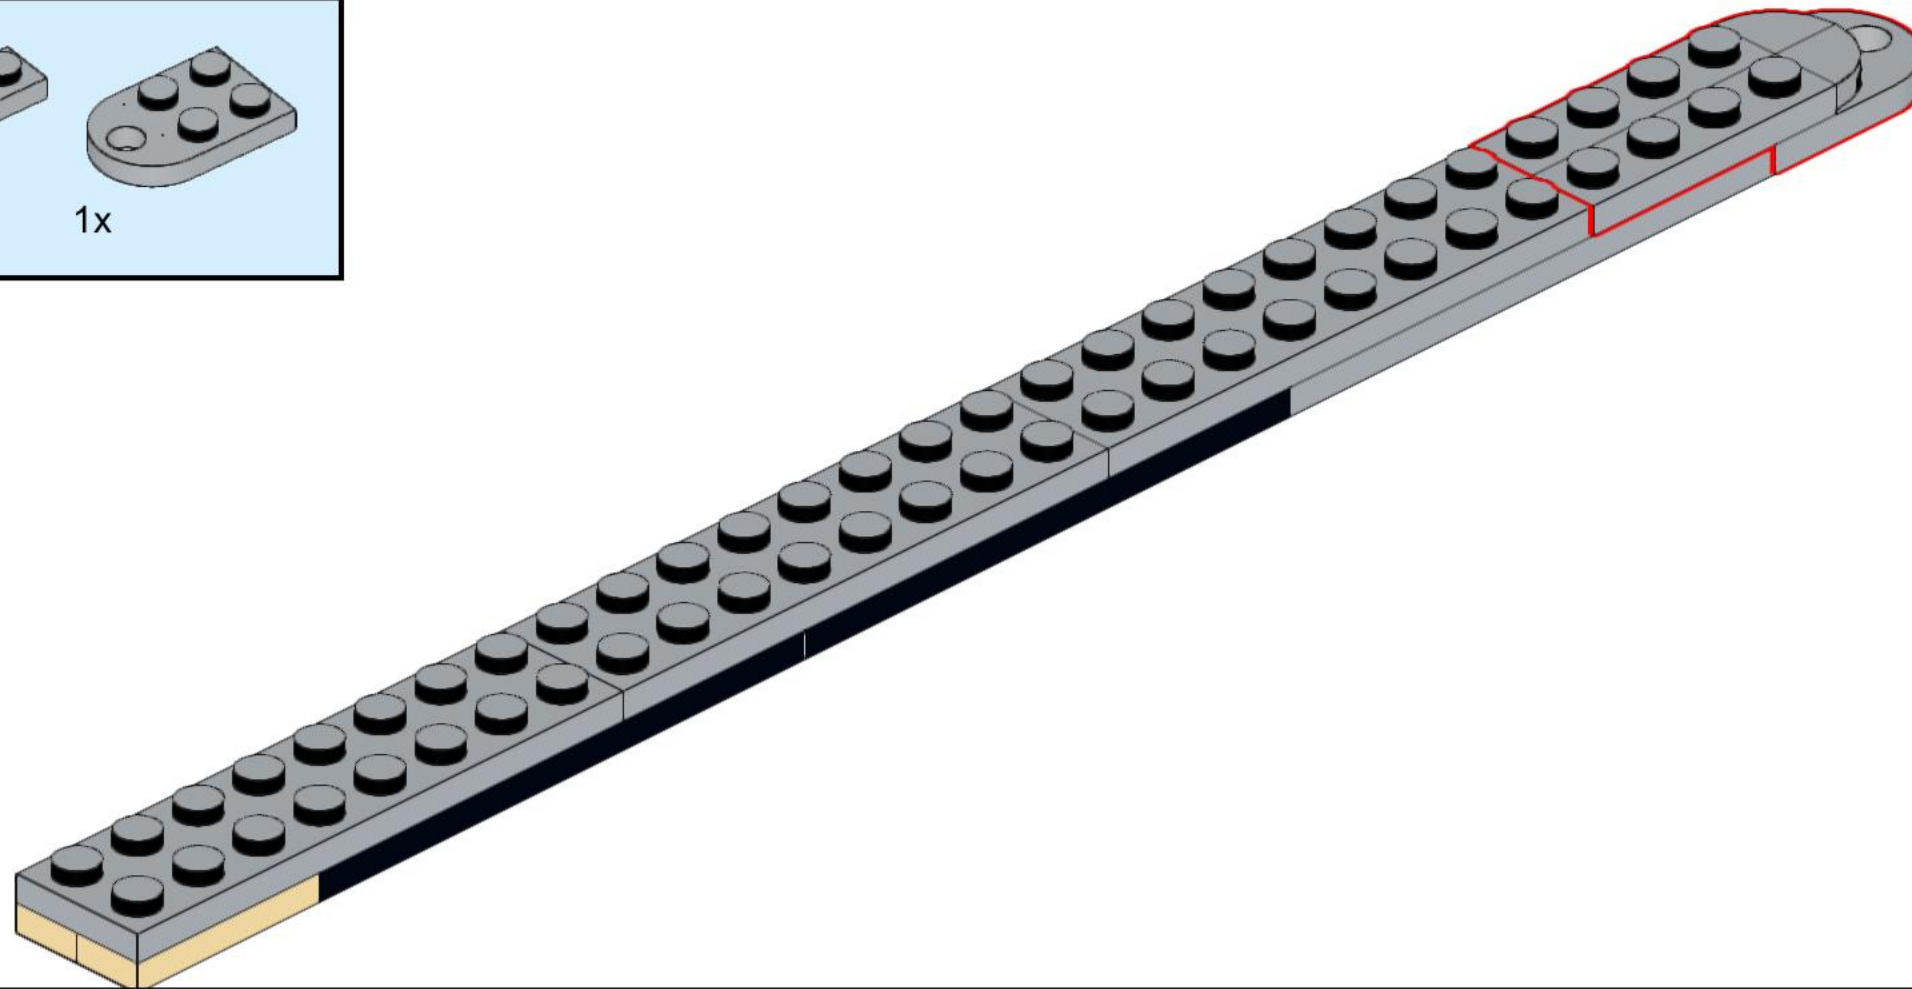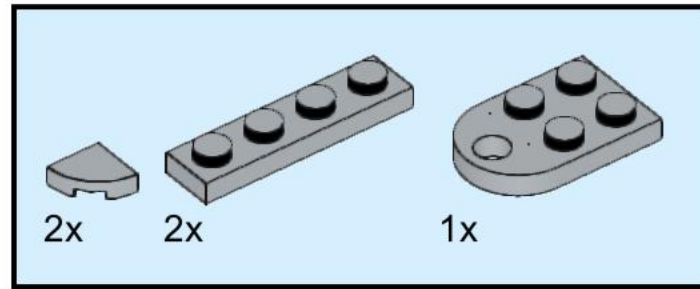




63

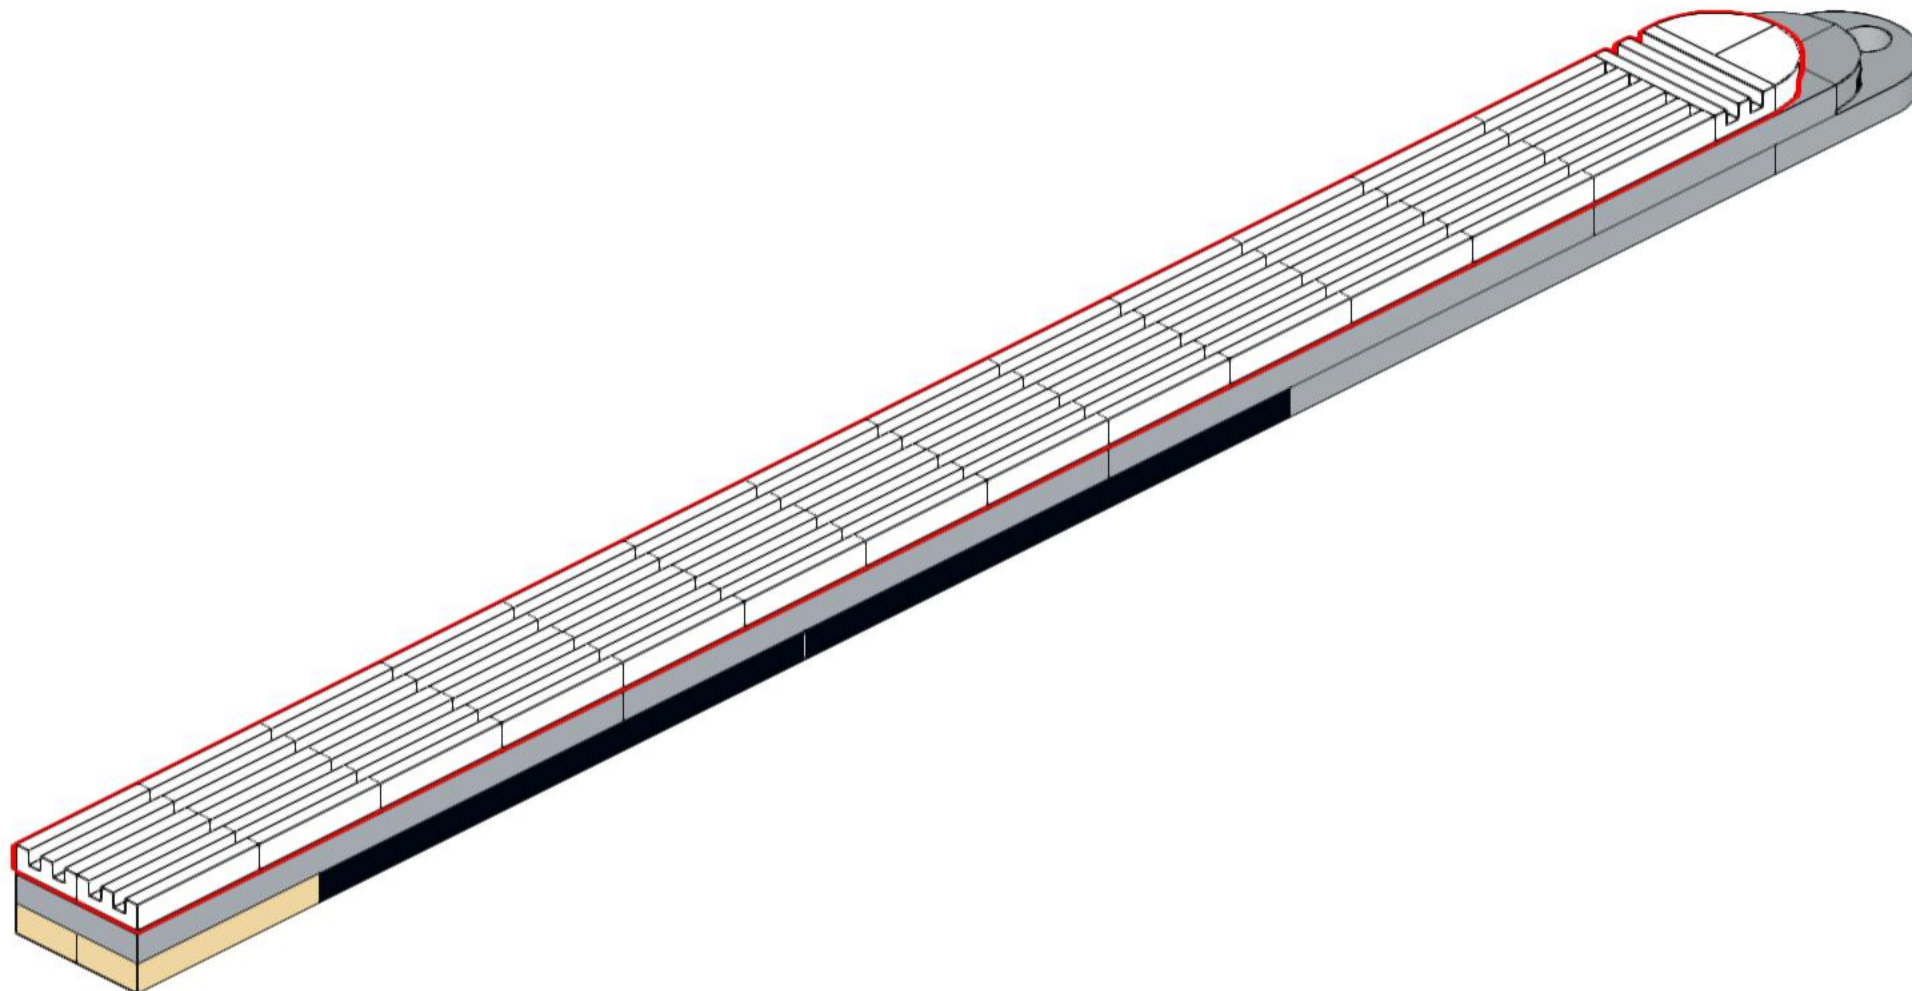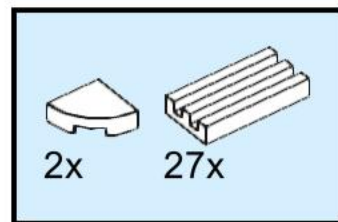

64


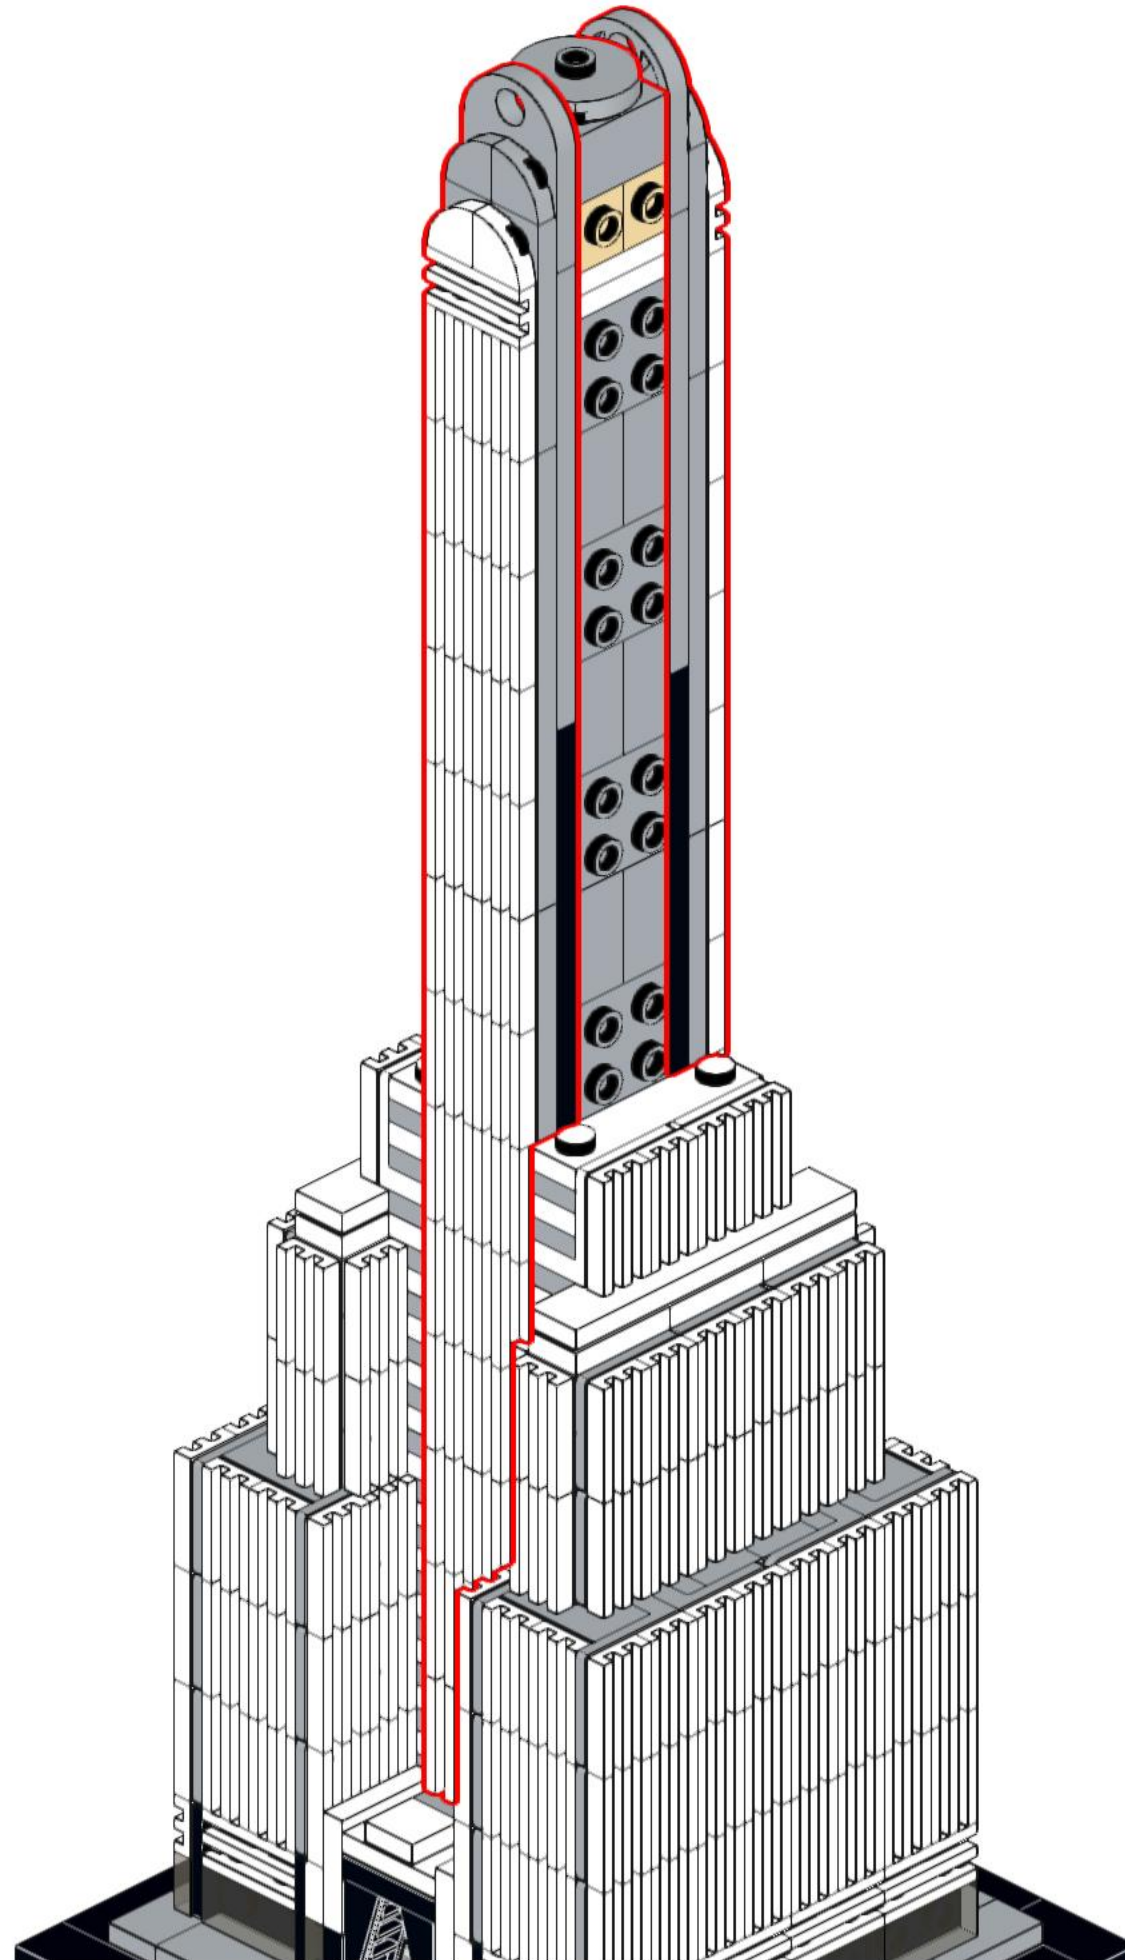


65

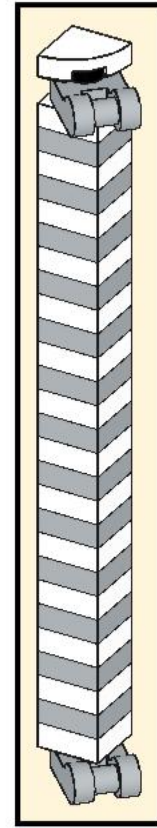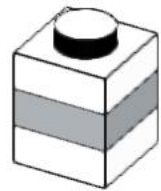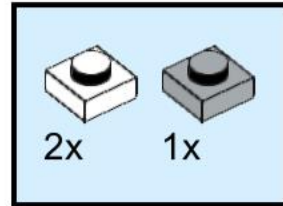


4x



66

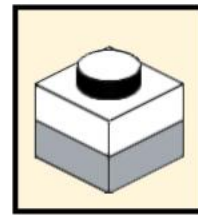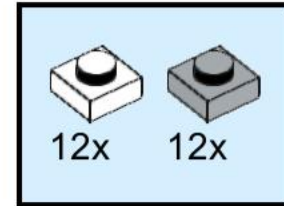


12x

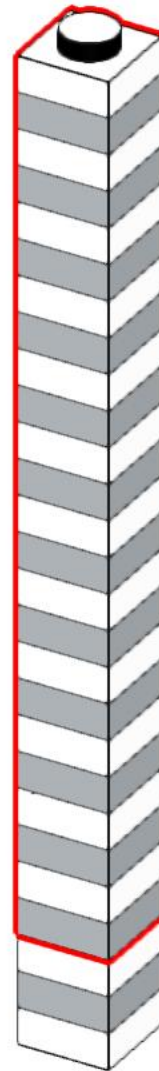

67


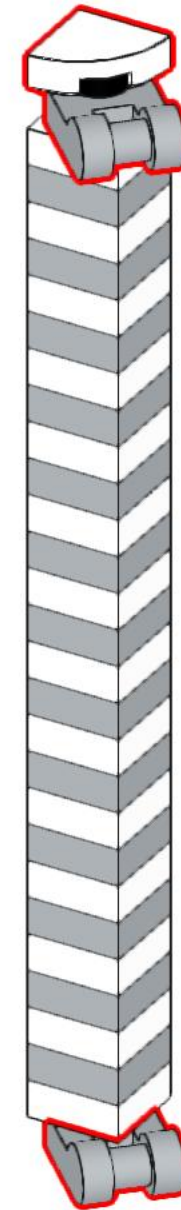
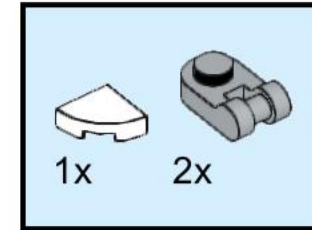


68


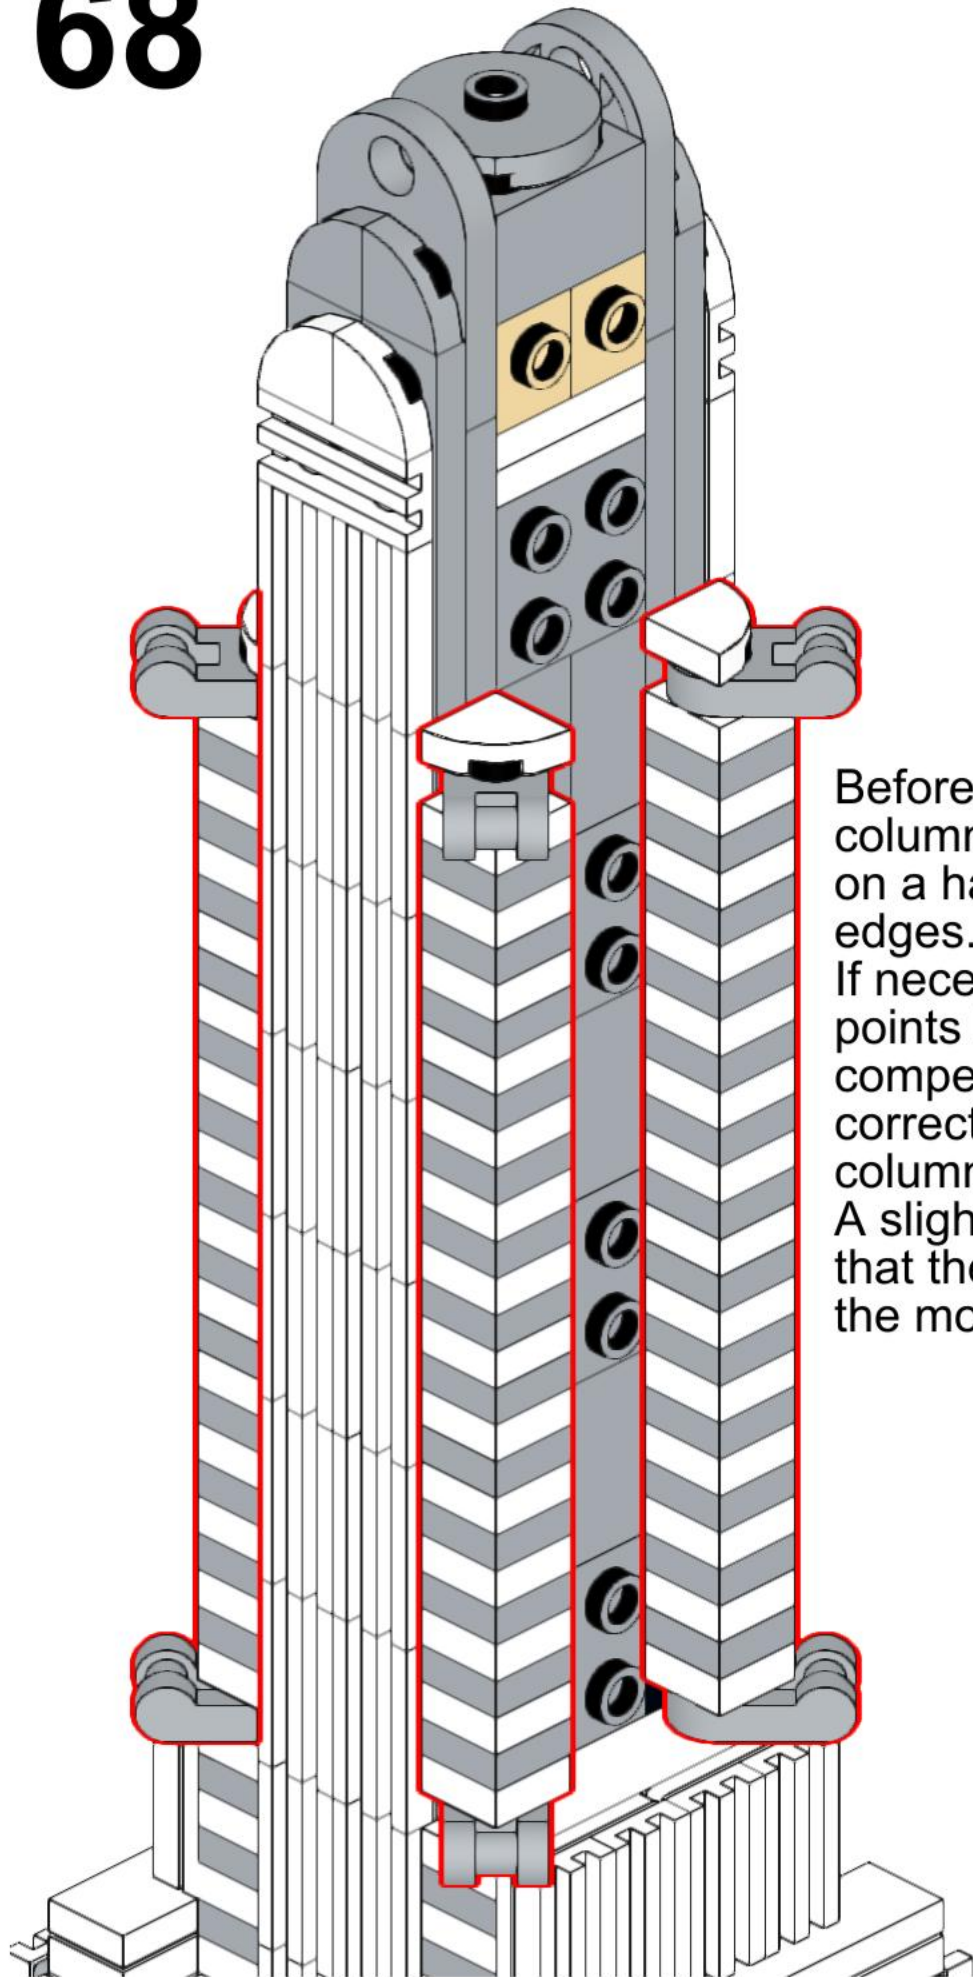


Before you install the corner columns, press each one flat on a hard surface to align the edges.
If necessary, twist at certain points by 90 degrees to compensate tolerances and correct the overall tilt of the column.
A slight inward tilt will ensure that the columns stay flush on the model core without gaps.



69

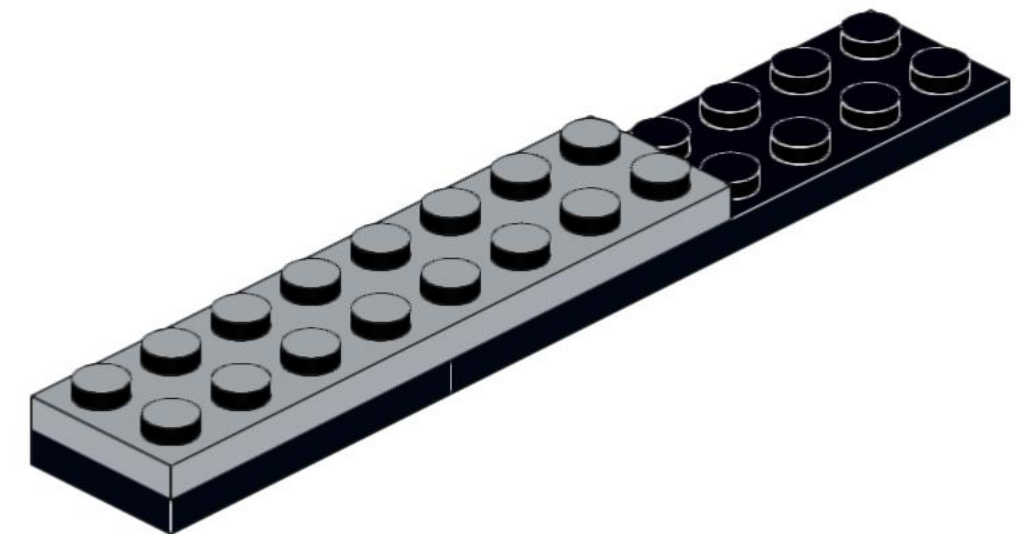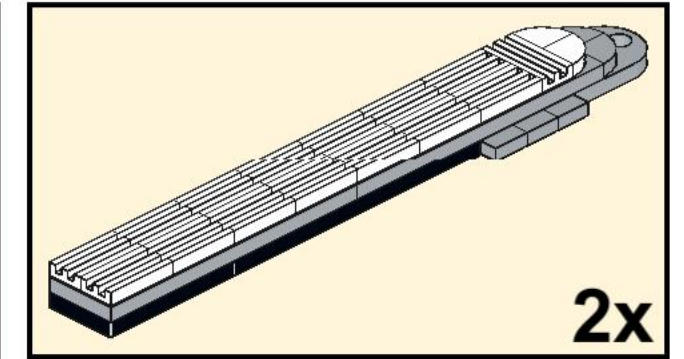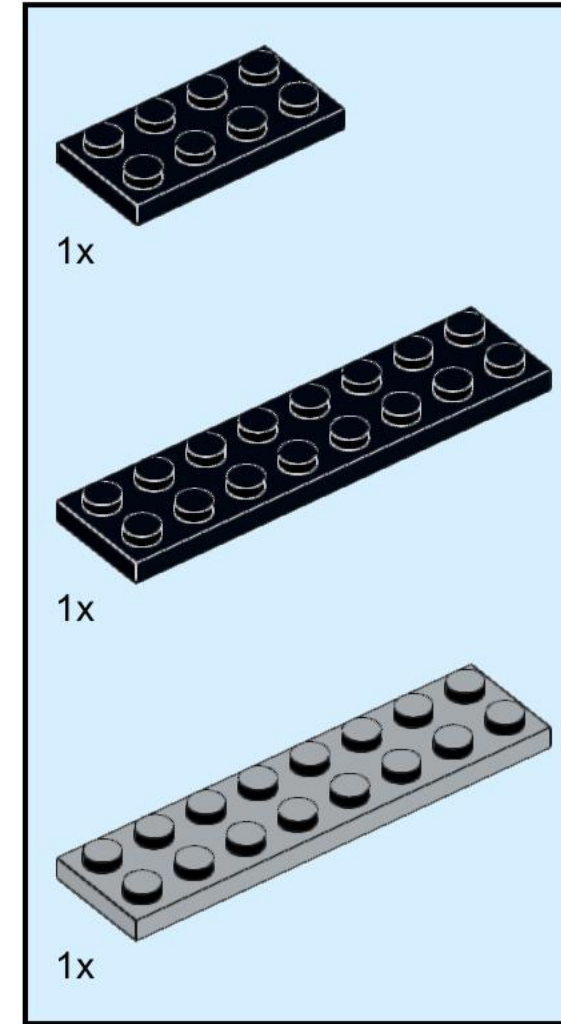


70

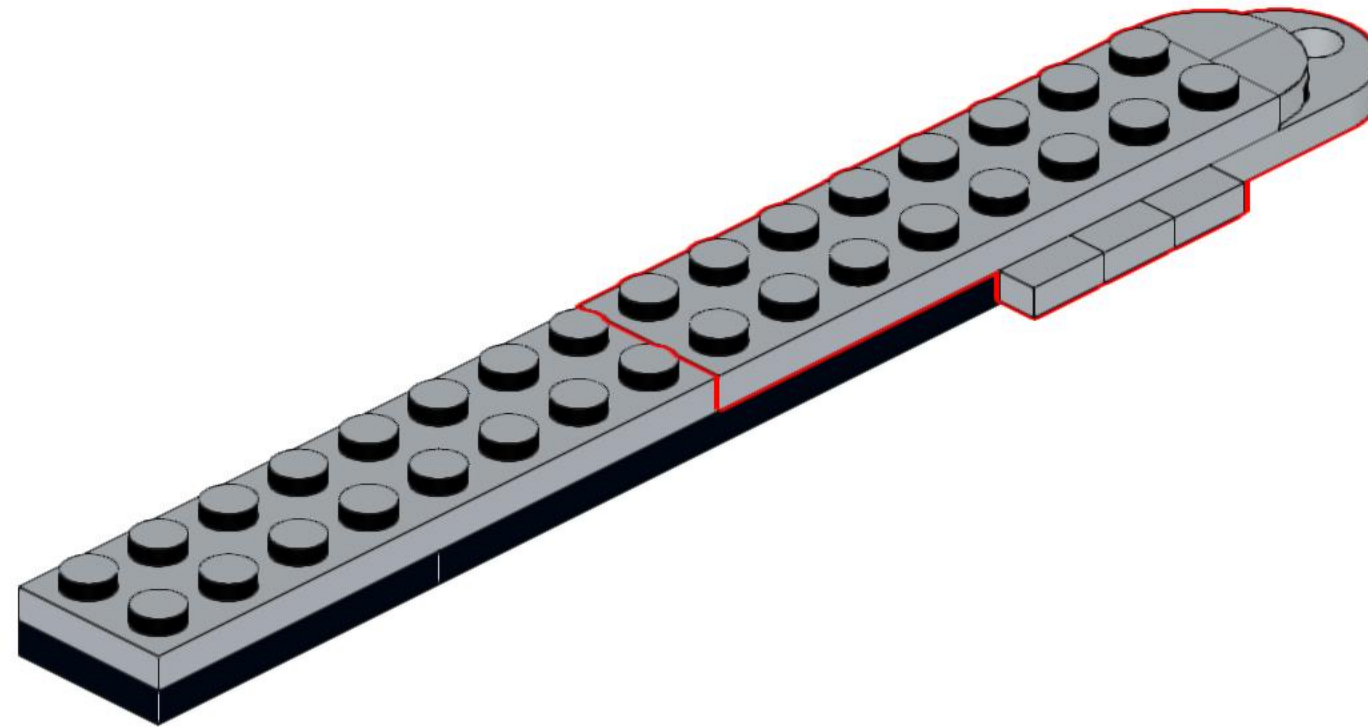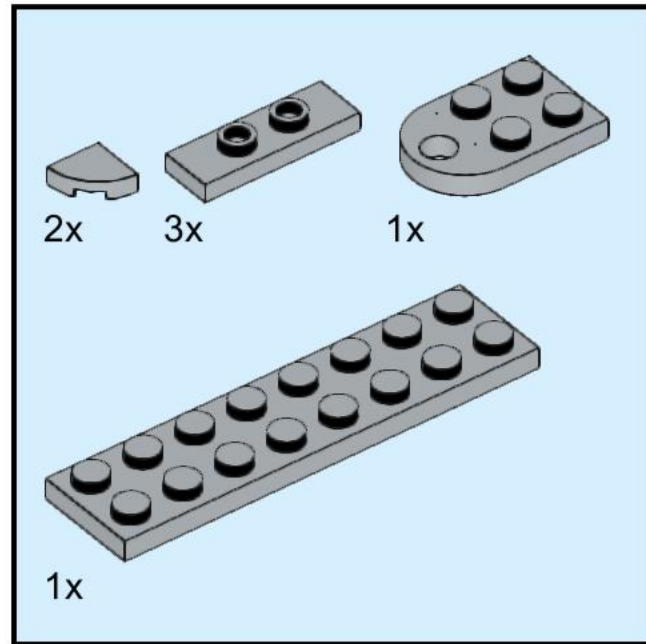

71

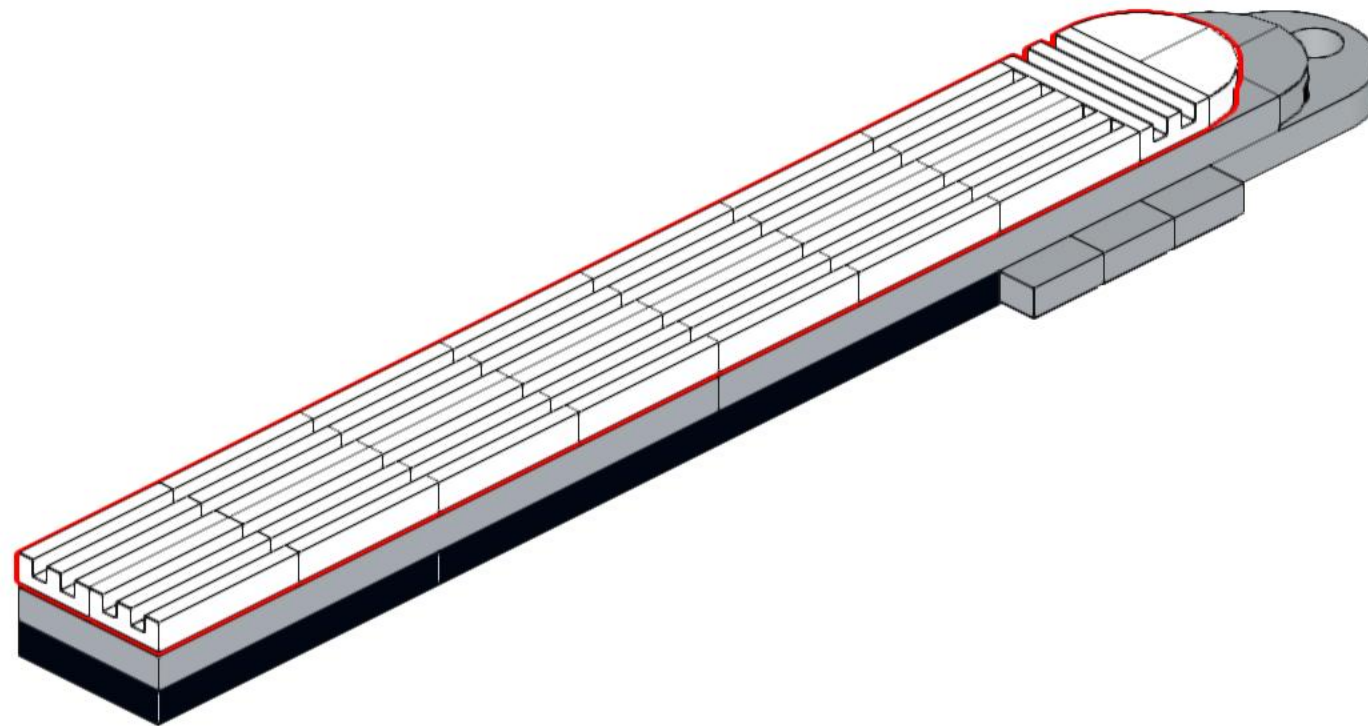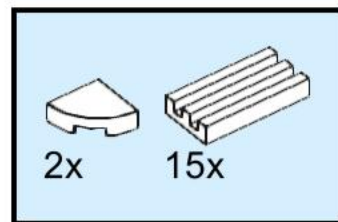

72

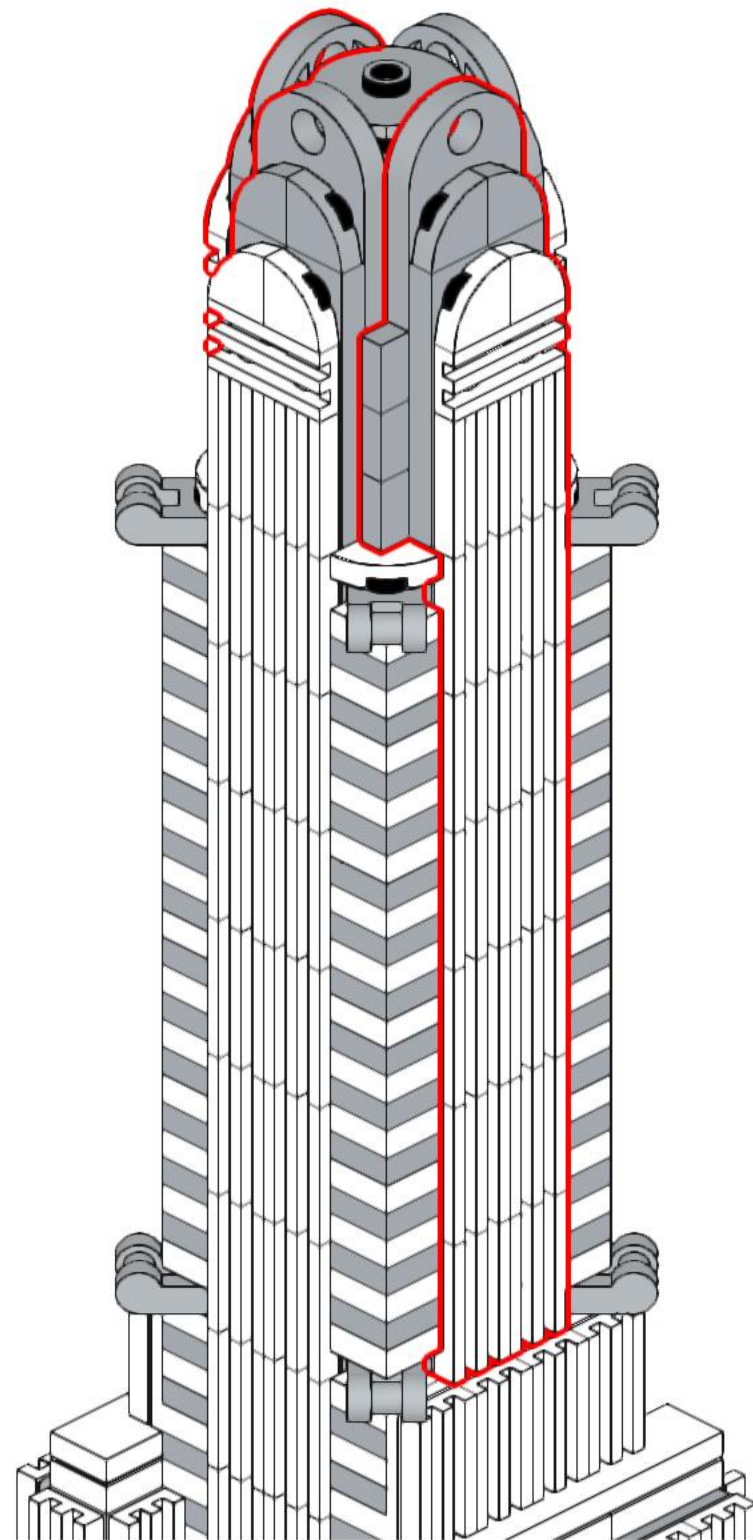

73

