



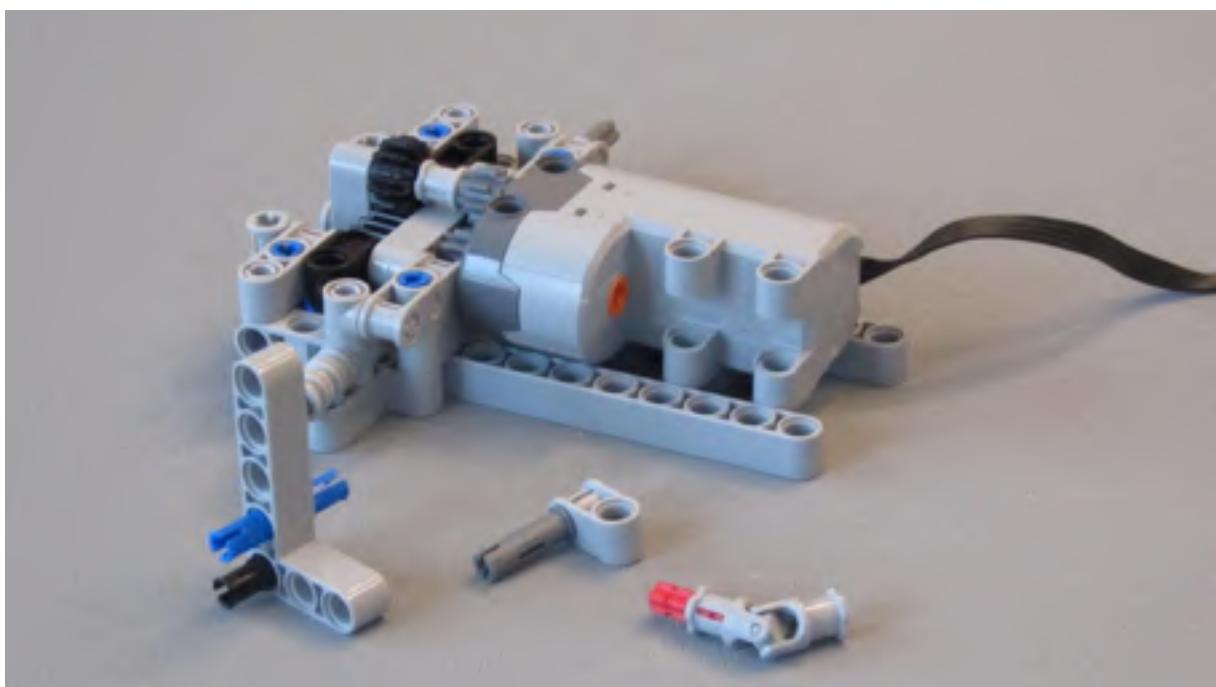
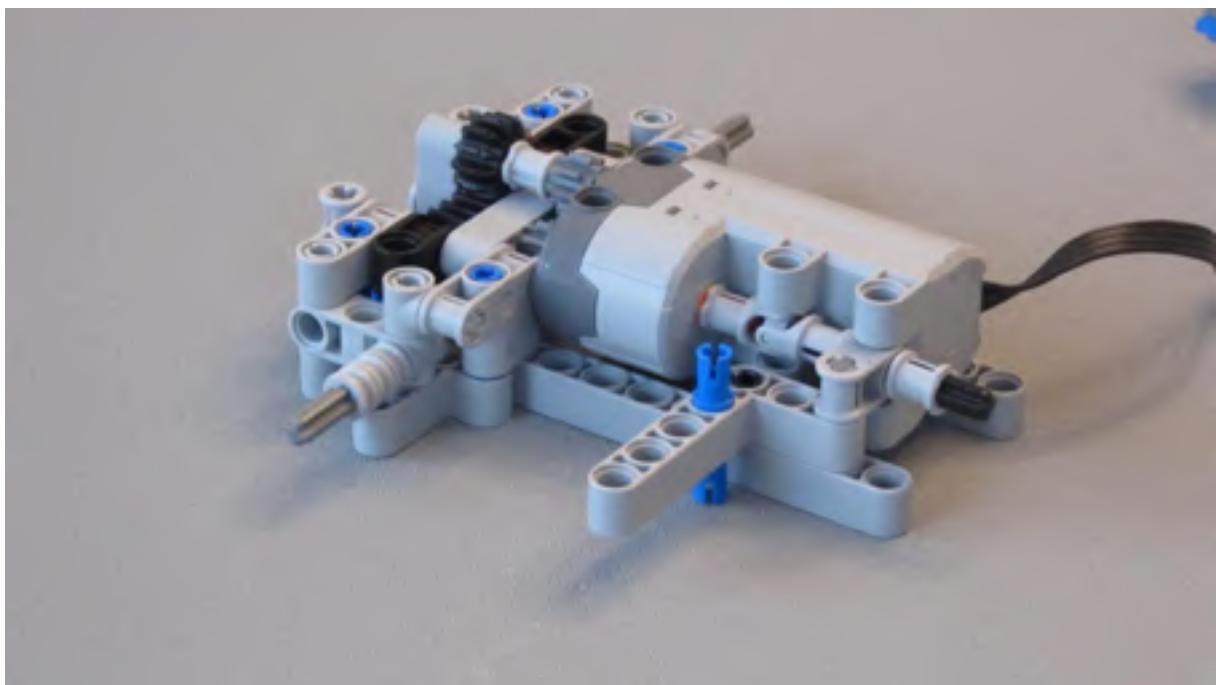
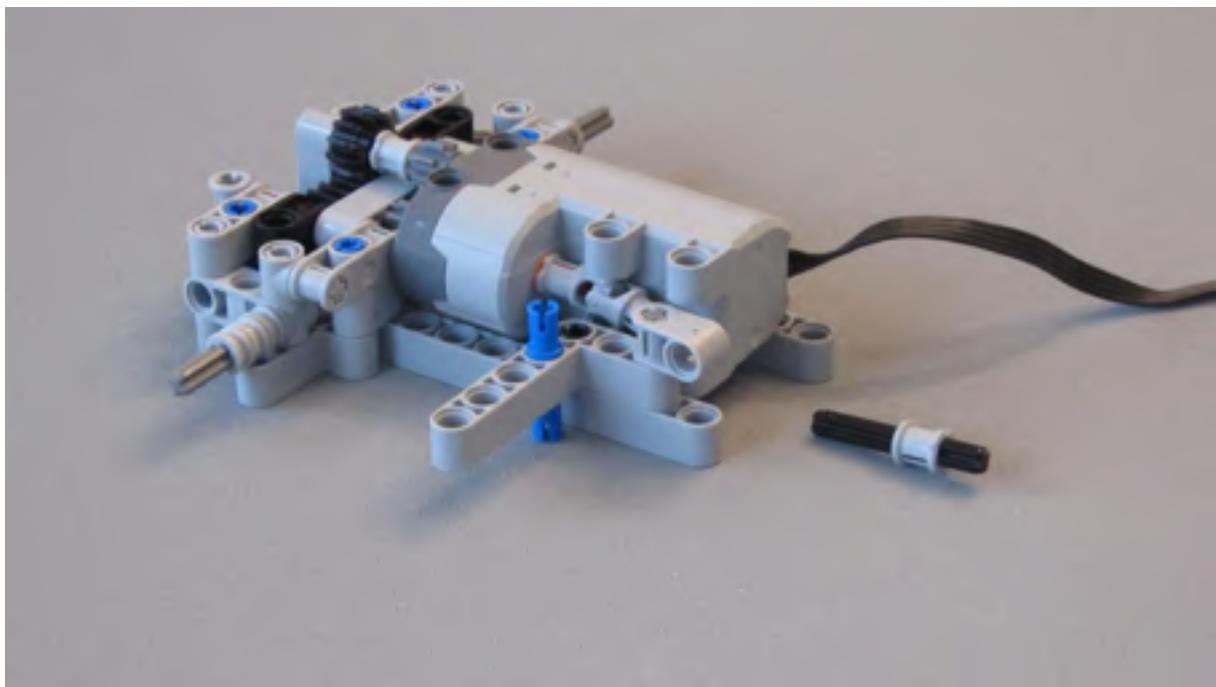




**Verify that axles are oriented as indicated and that servo and steering are in the center position!**


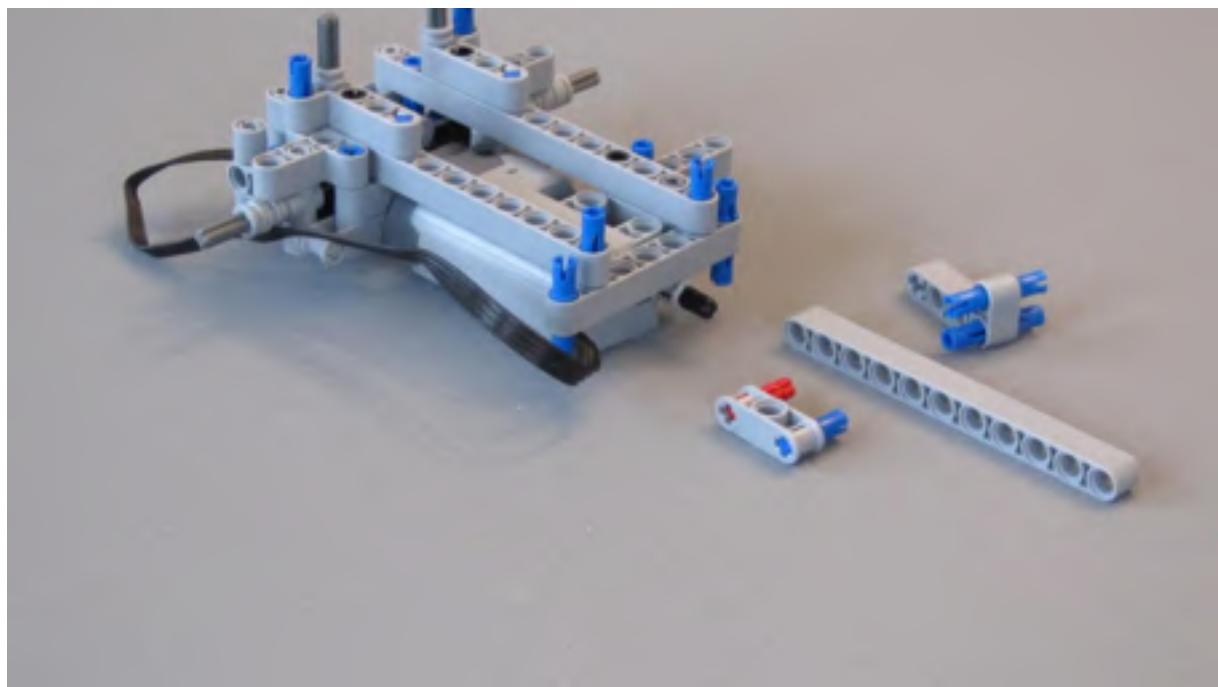



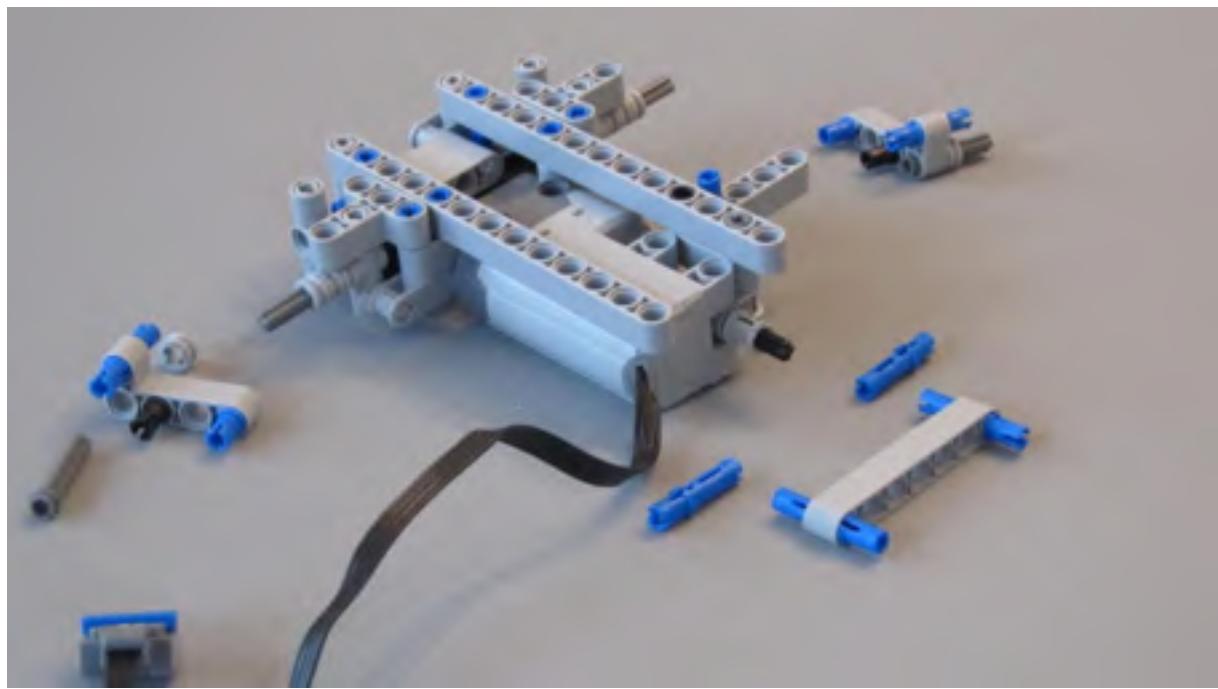



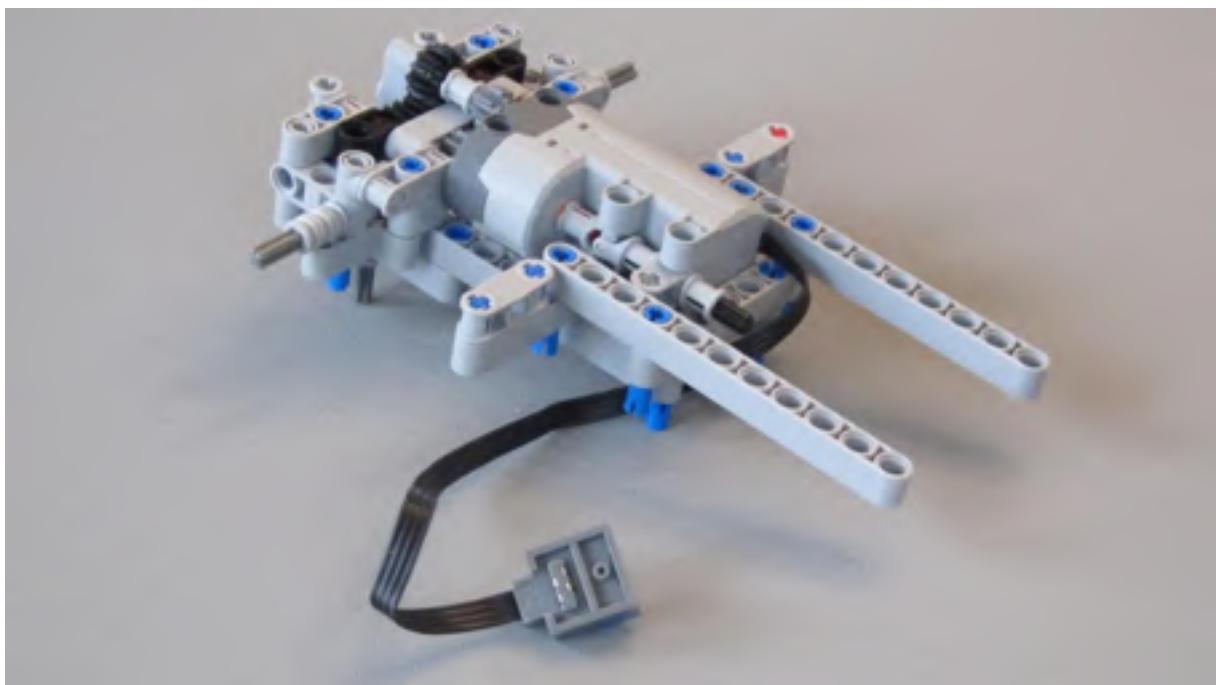



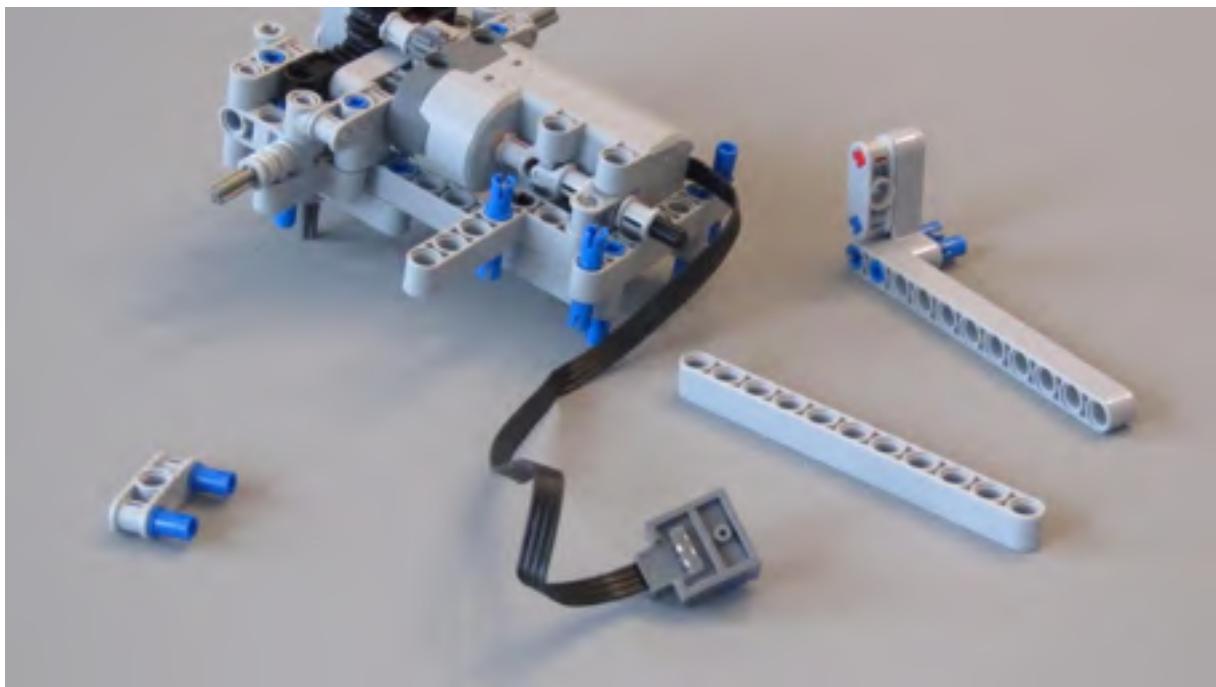


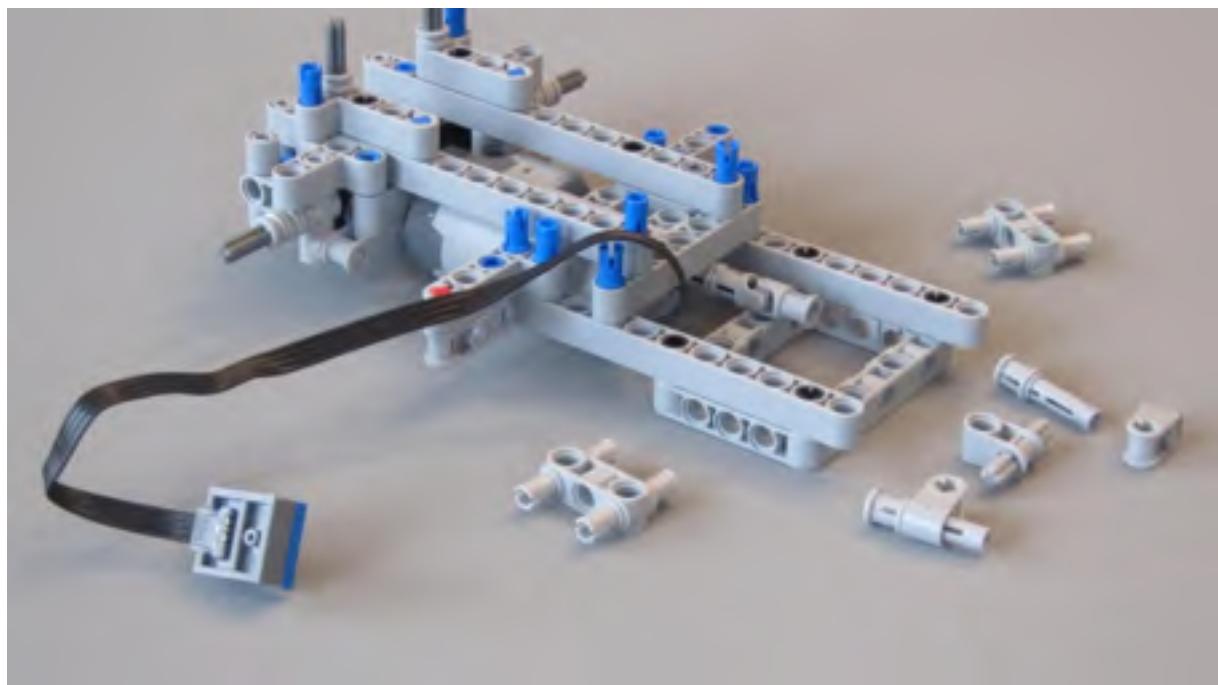
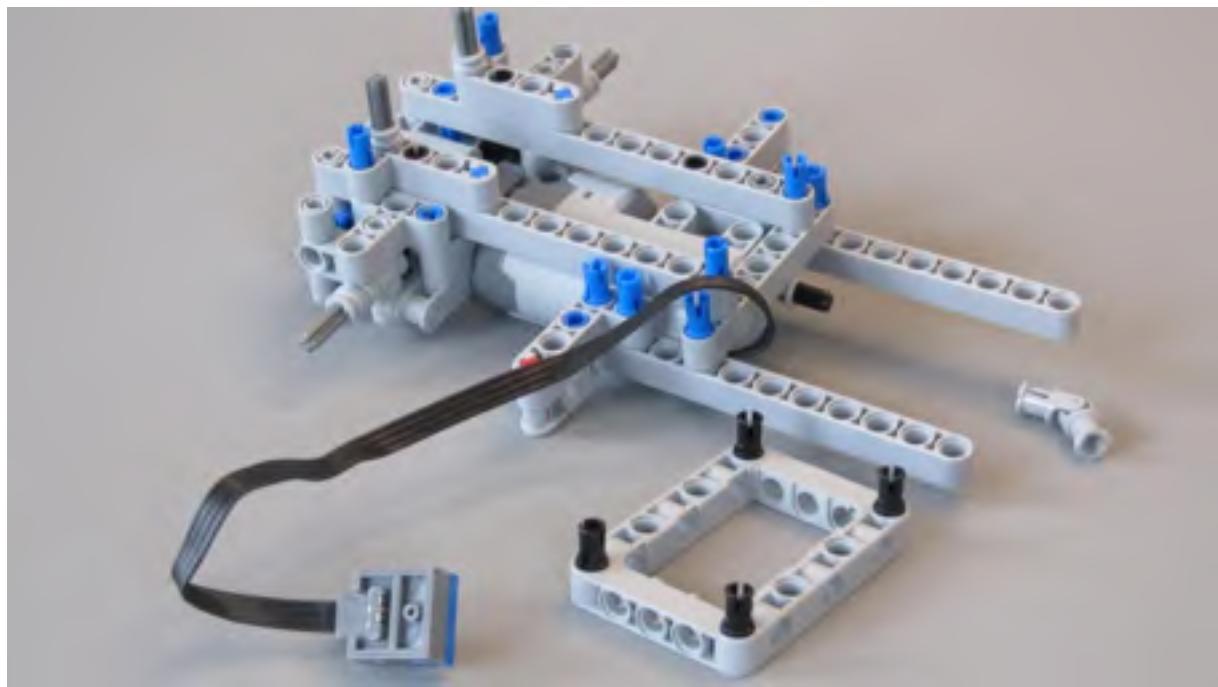


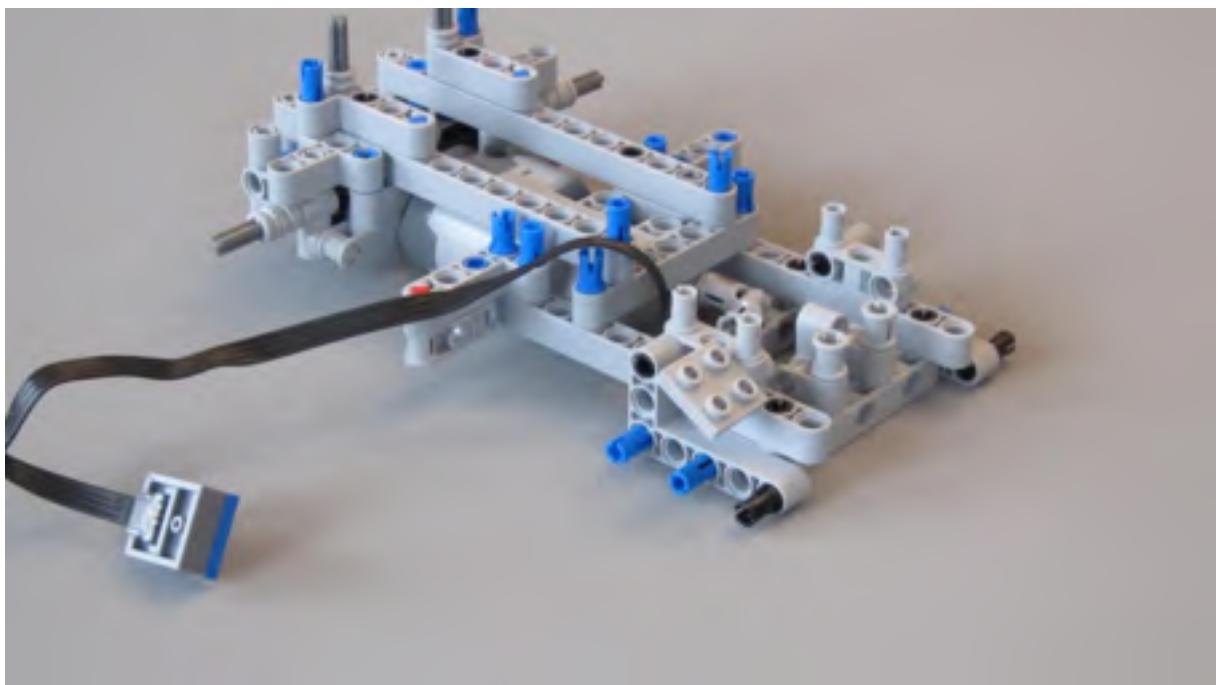
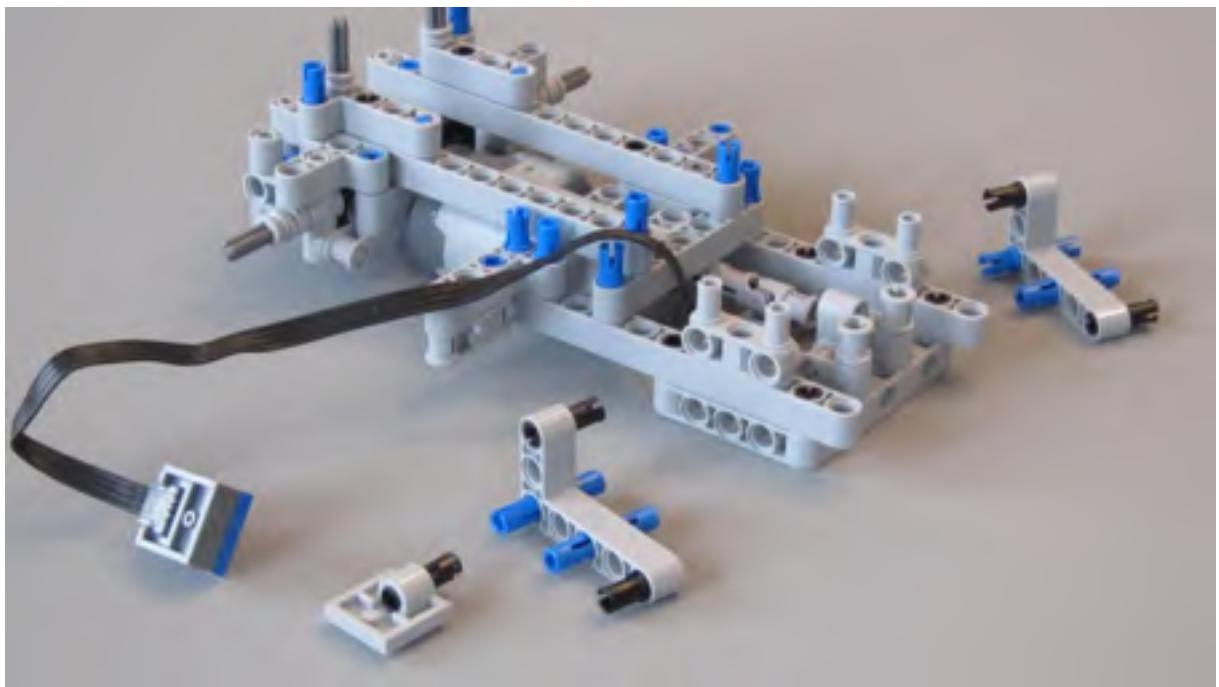


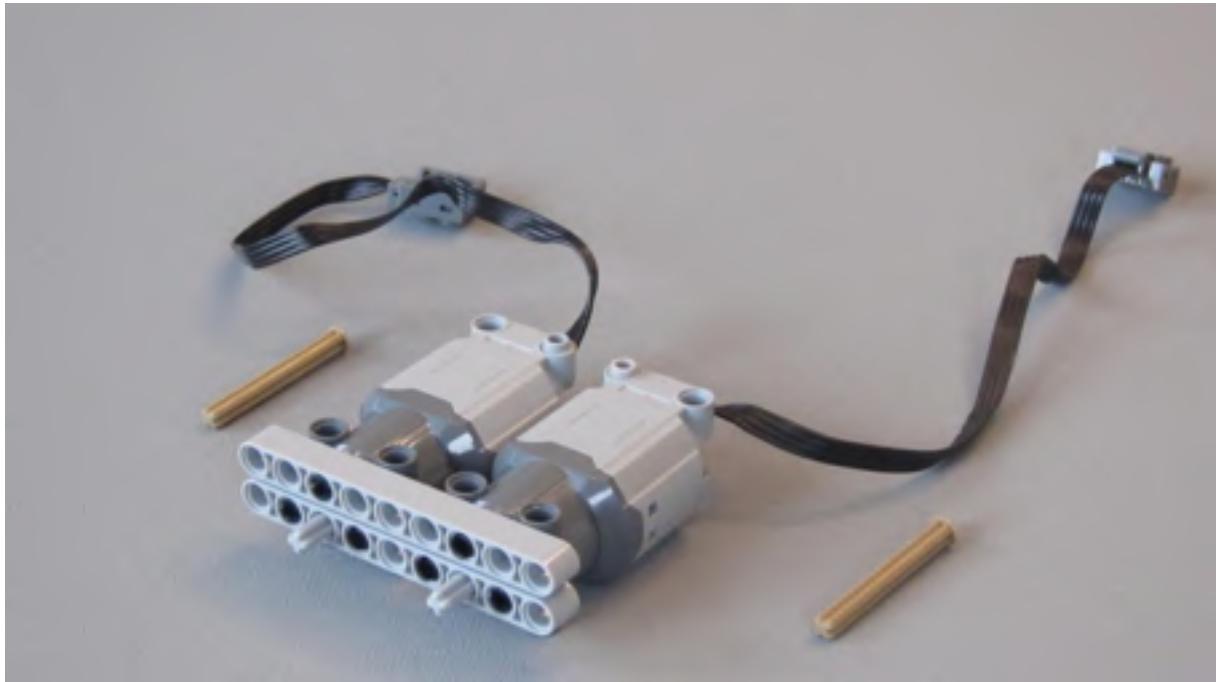
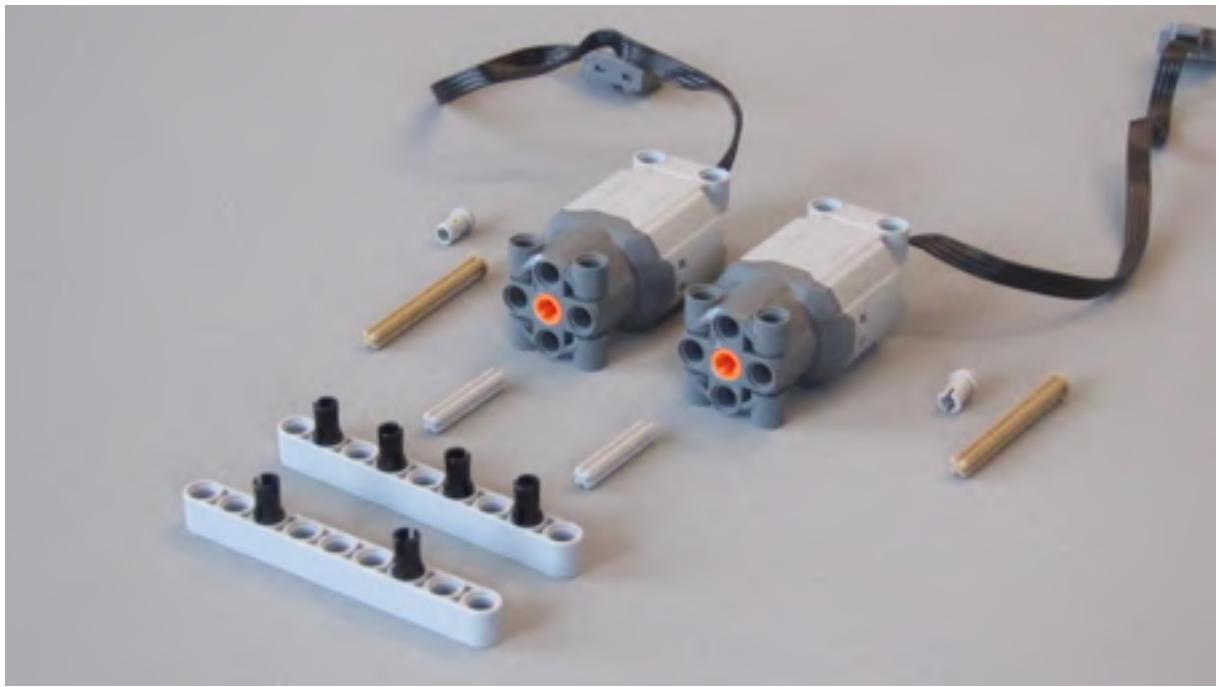


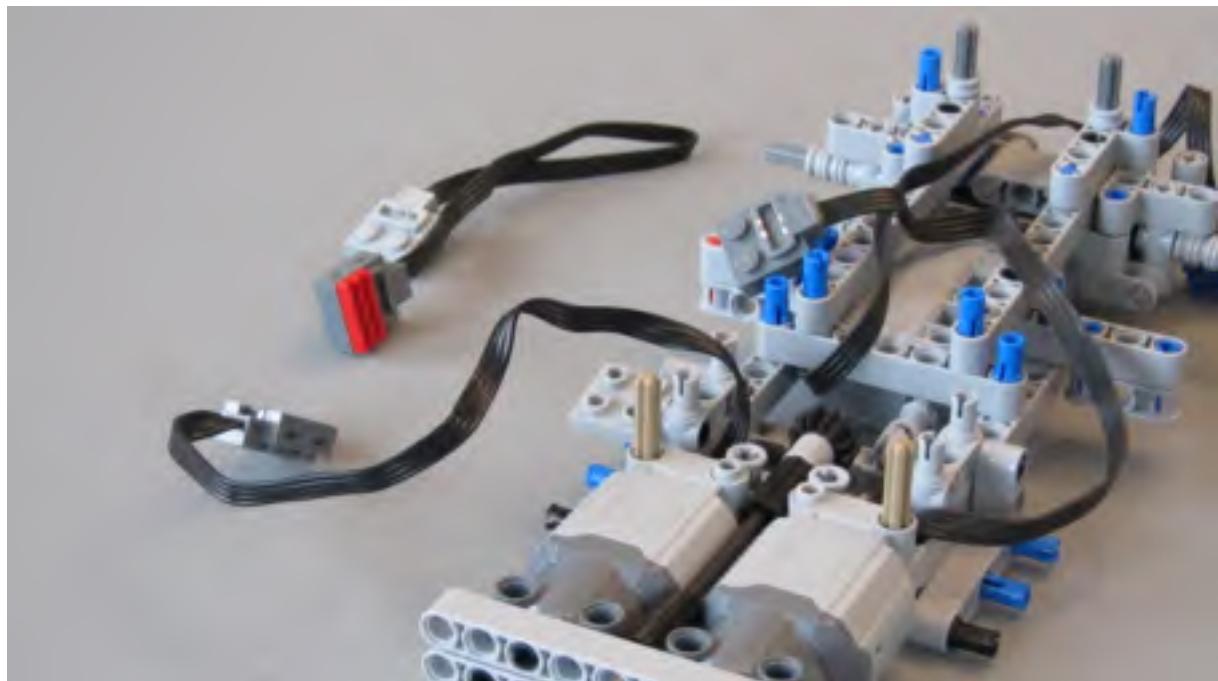
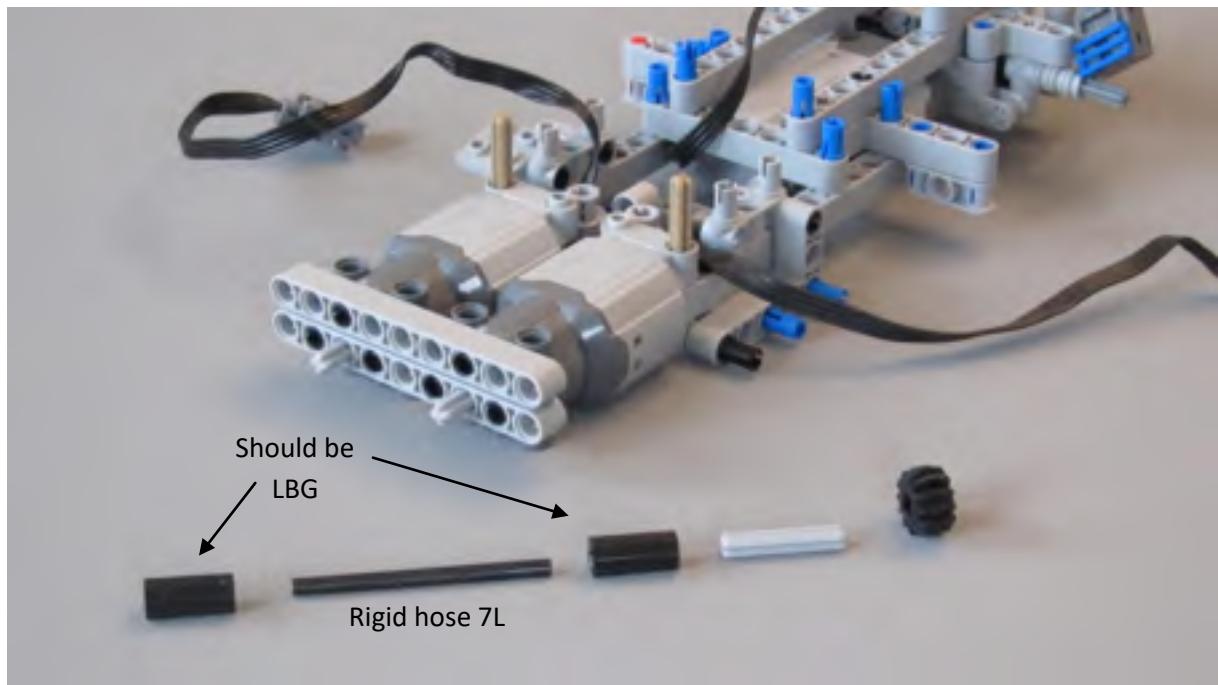


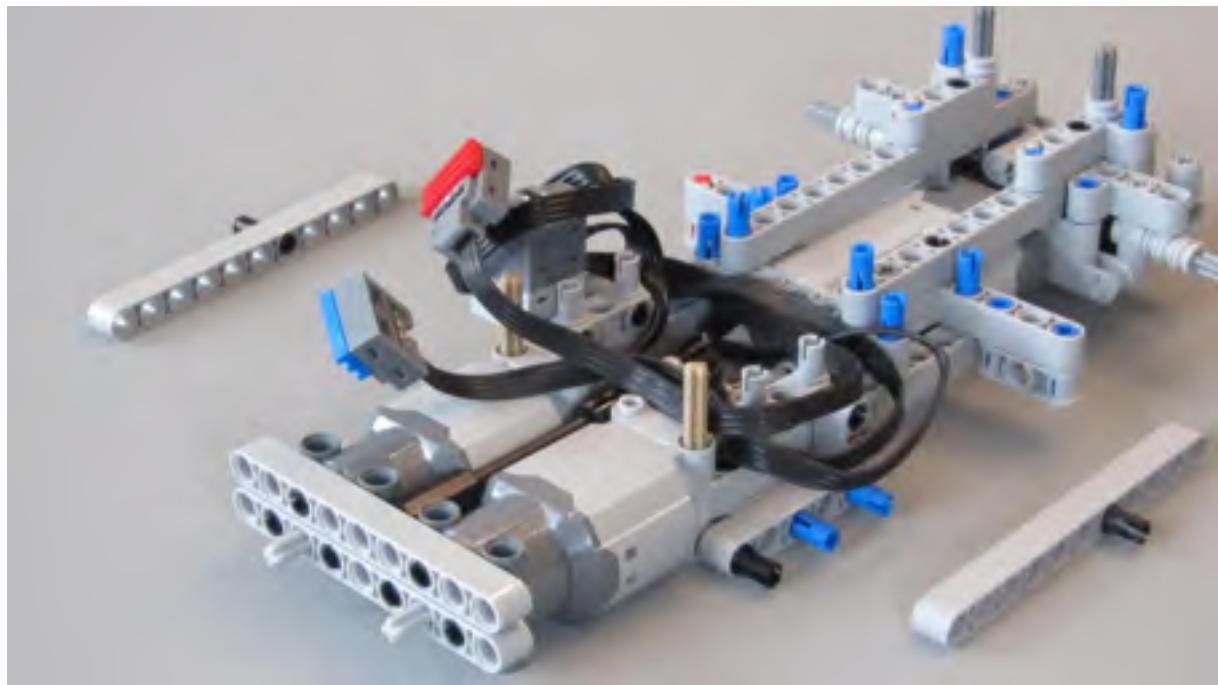
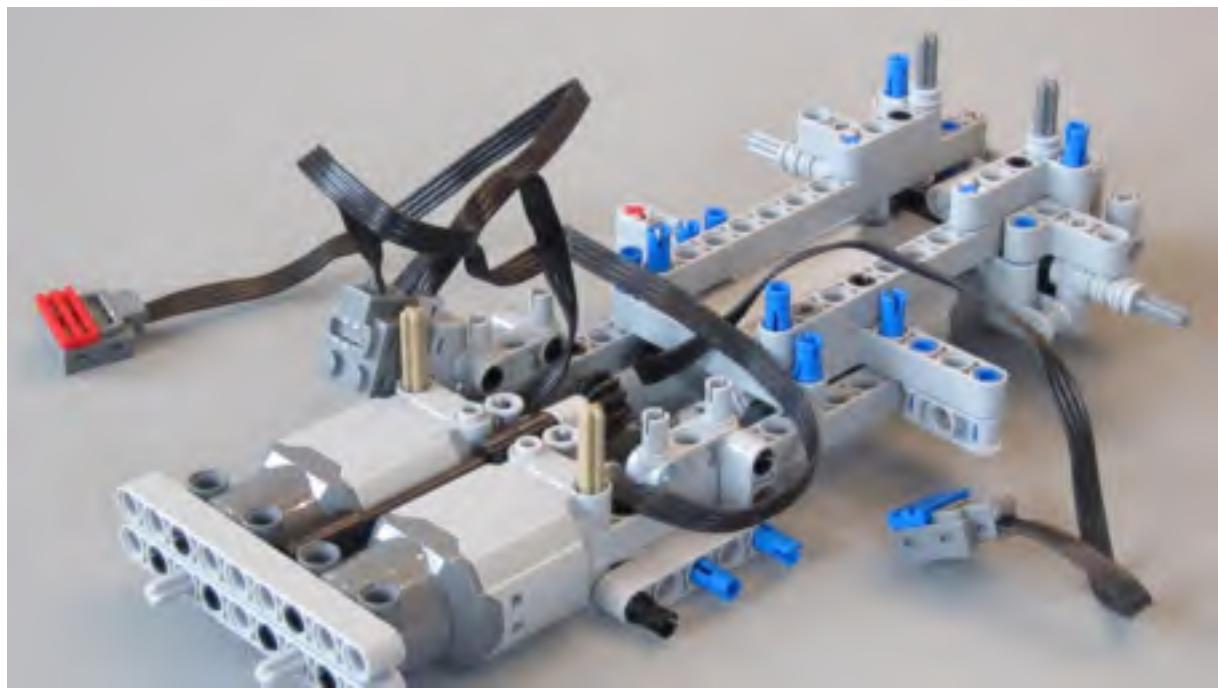


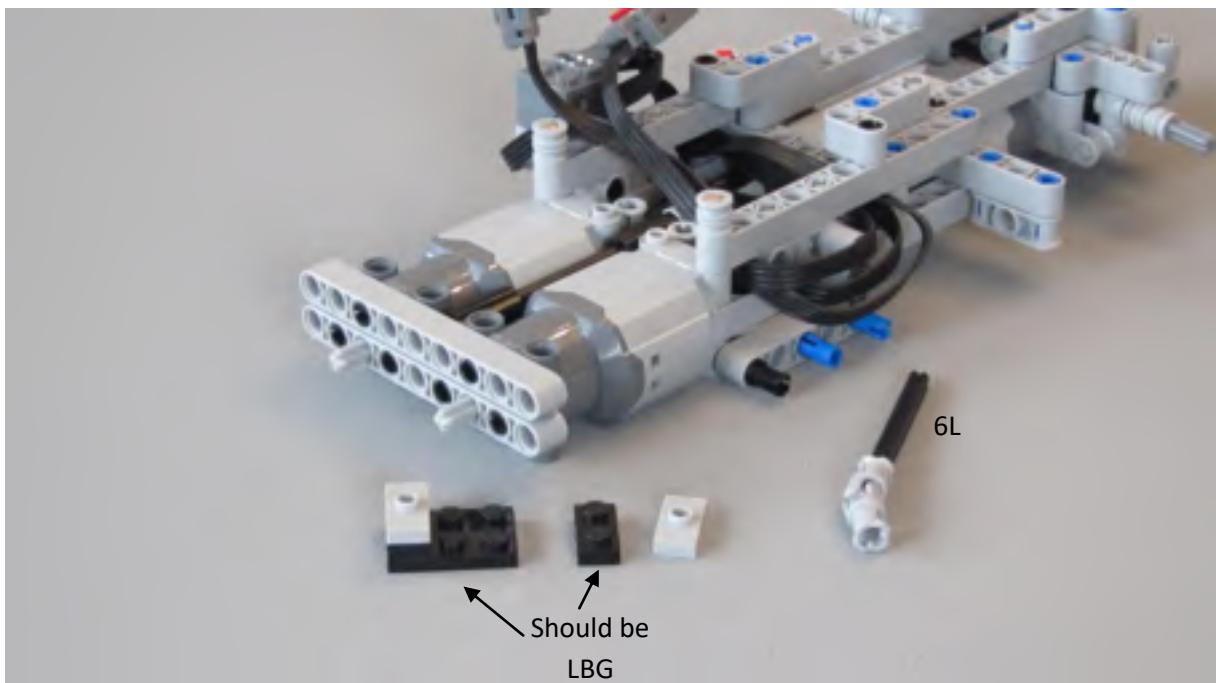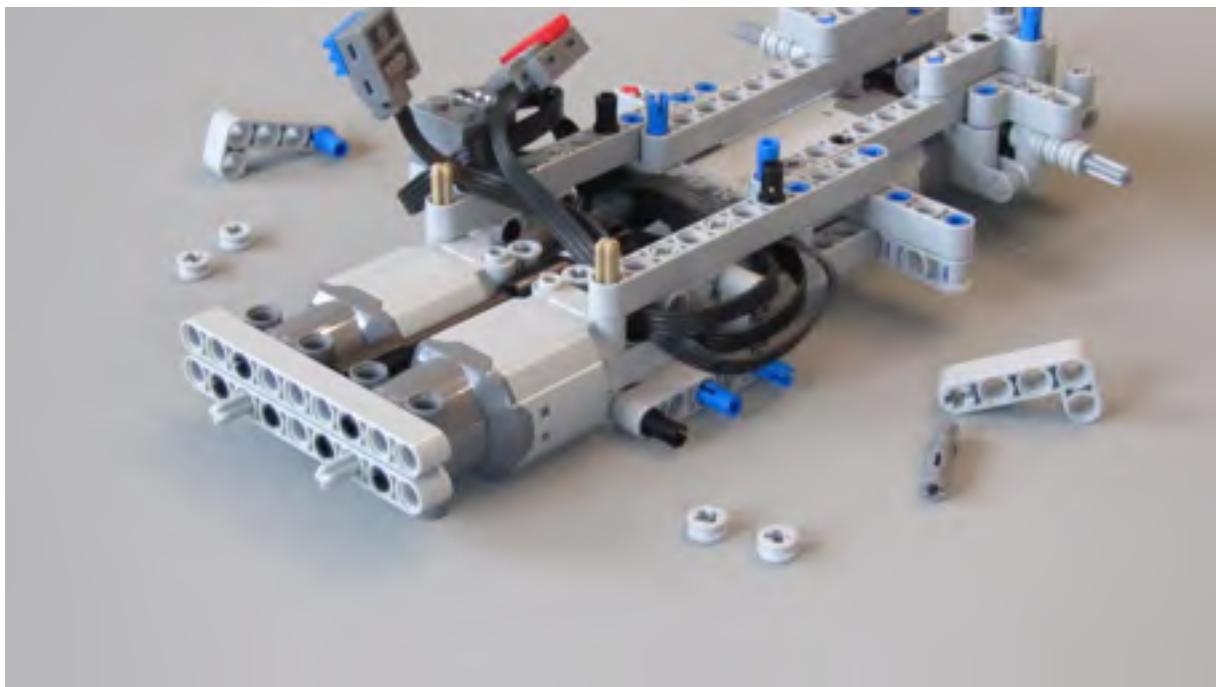


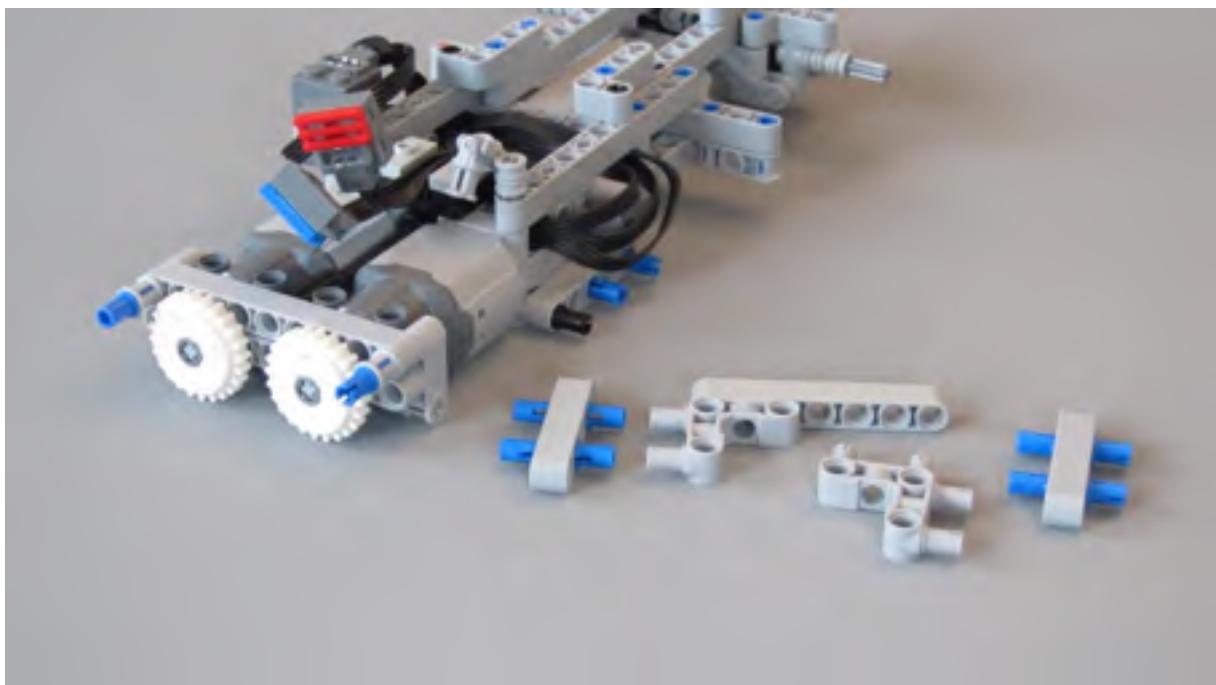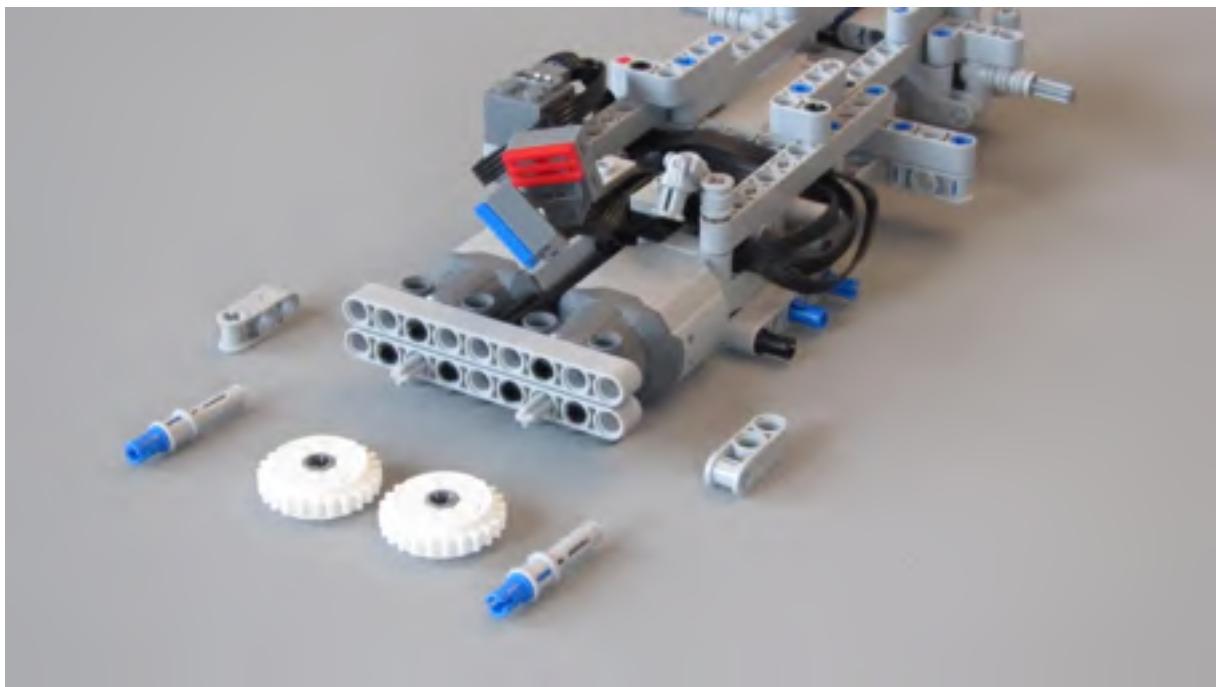

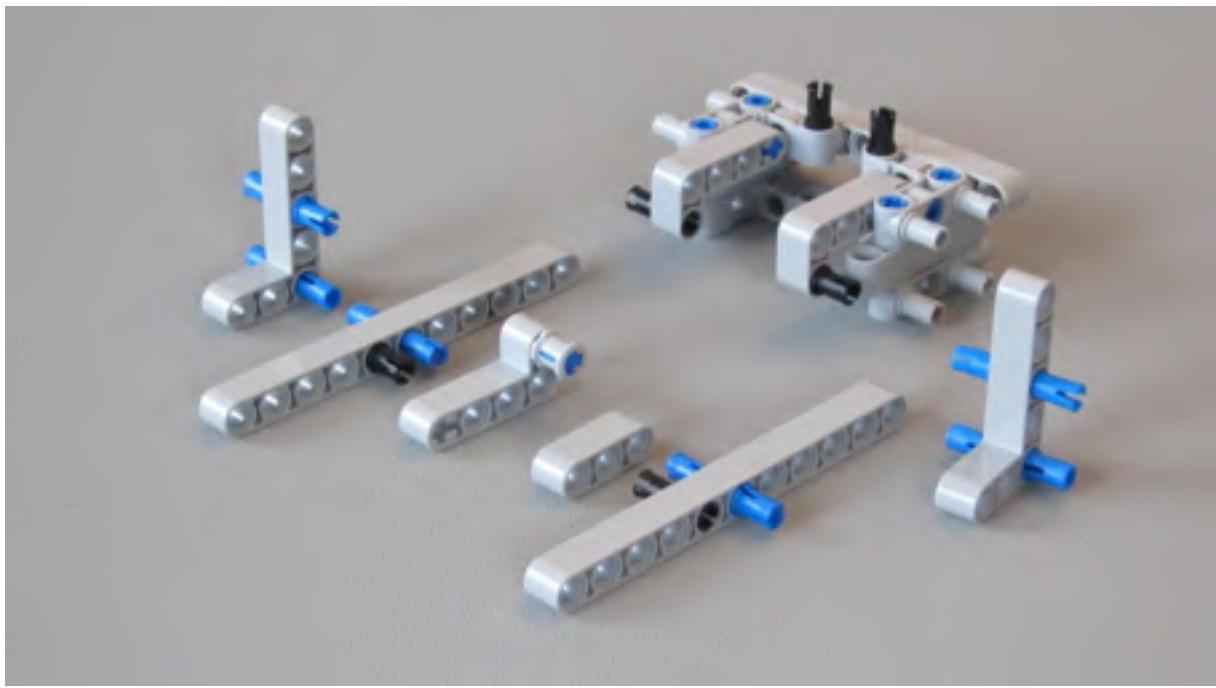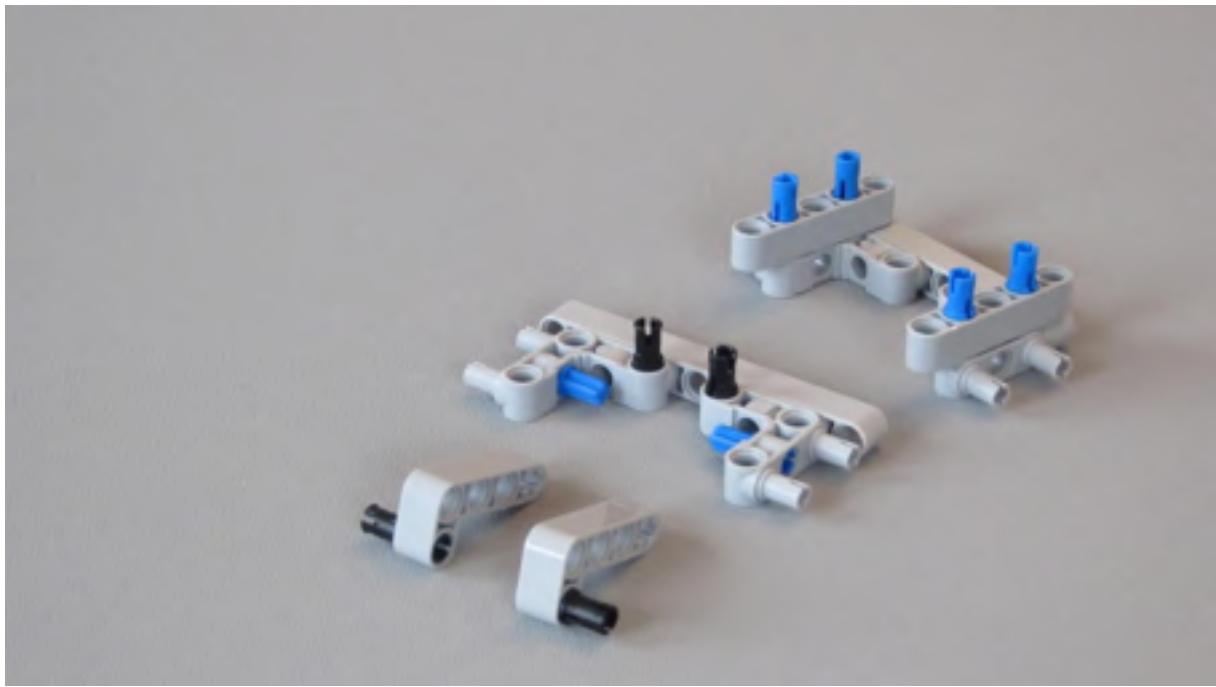


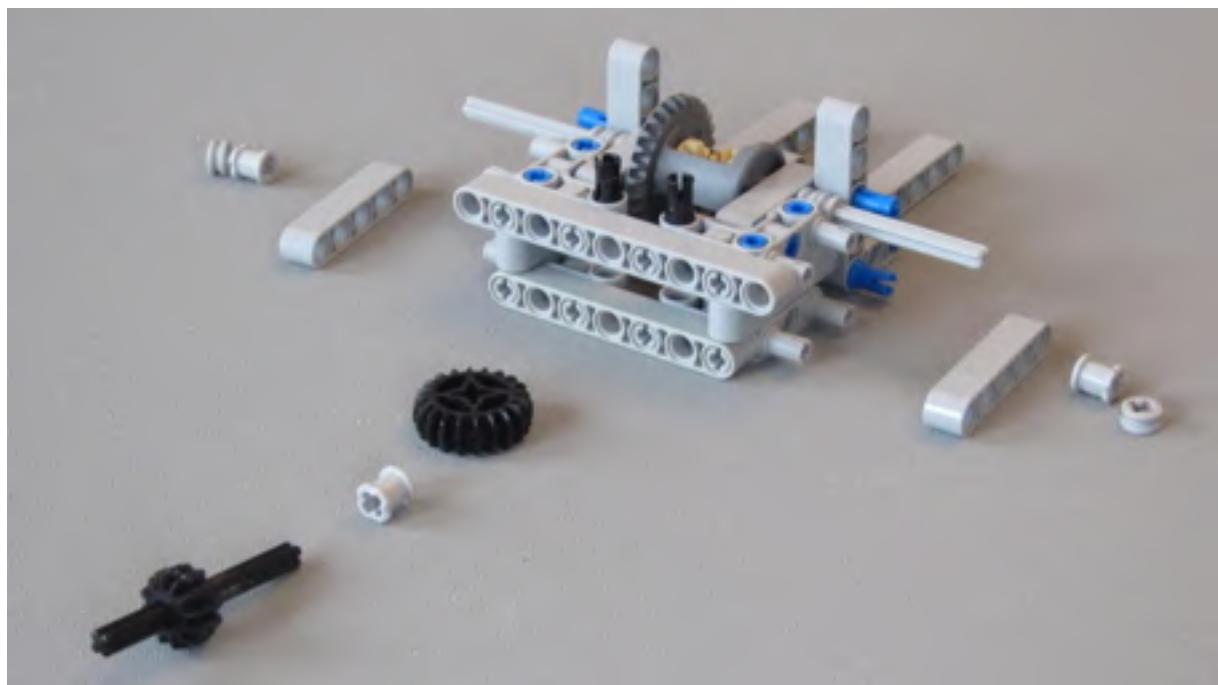
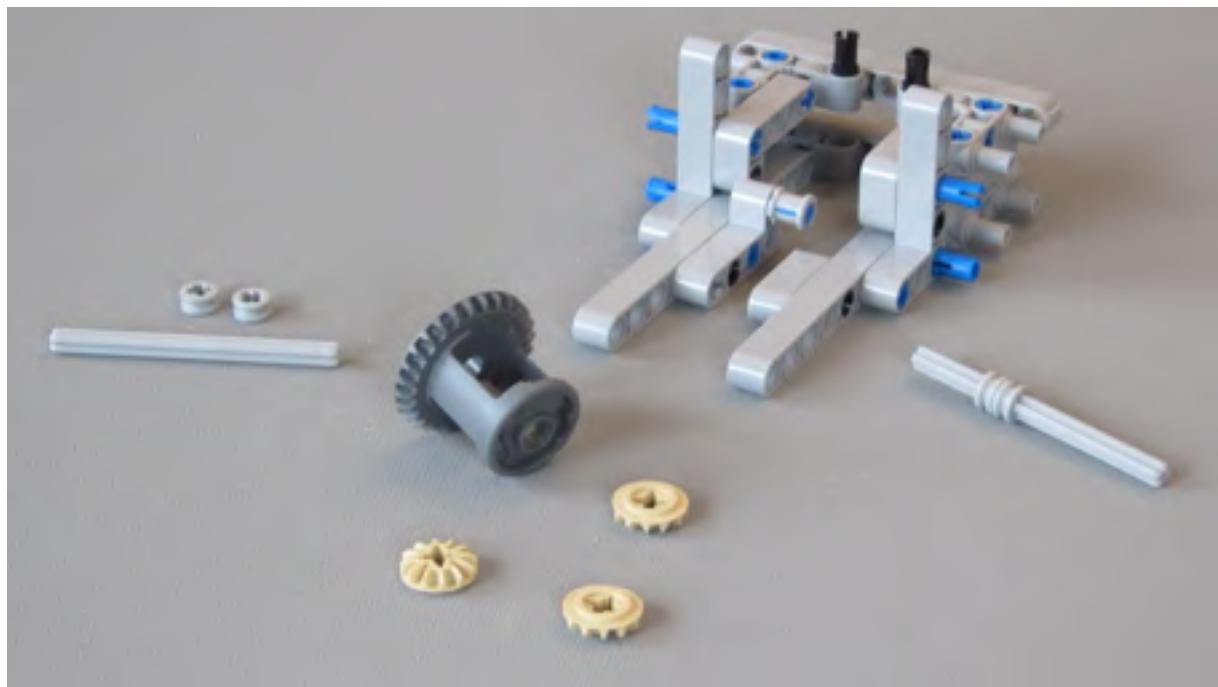


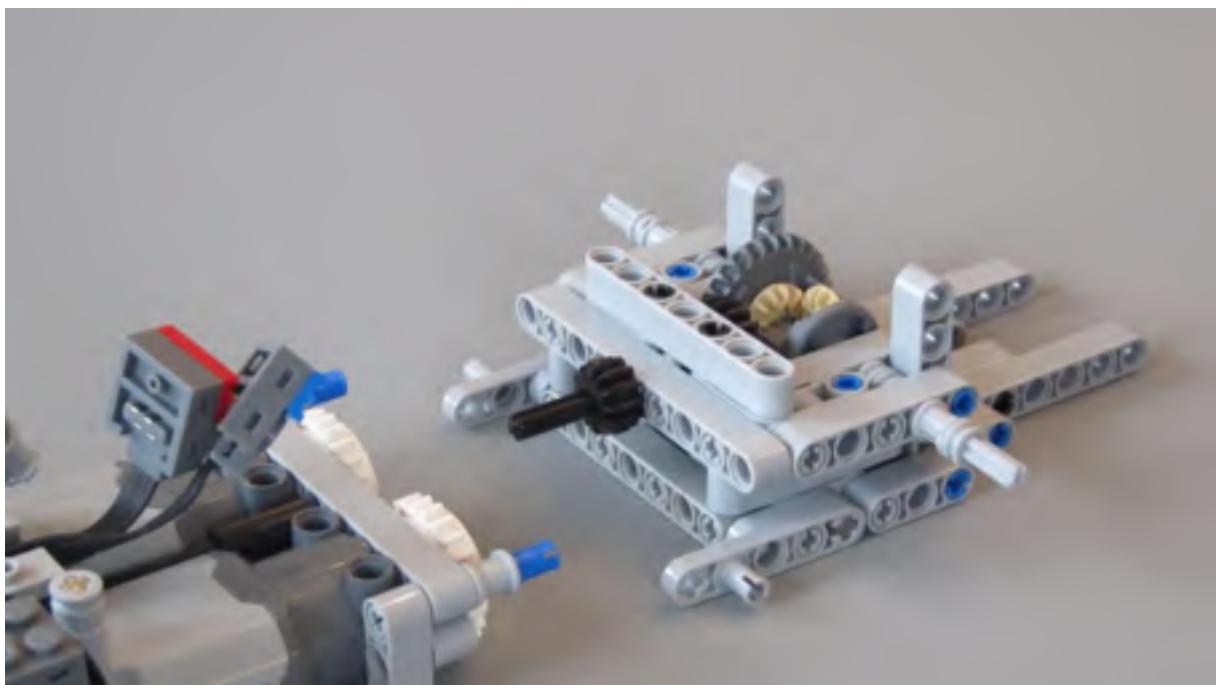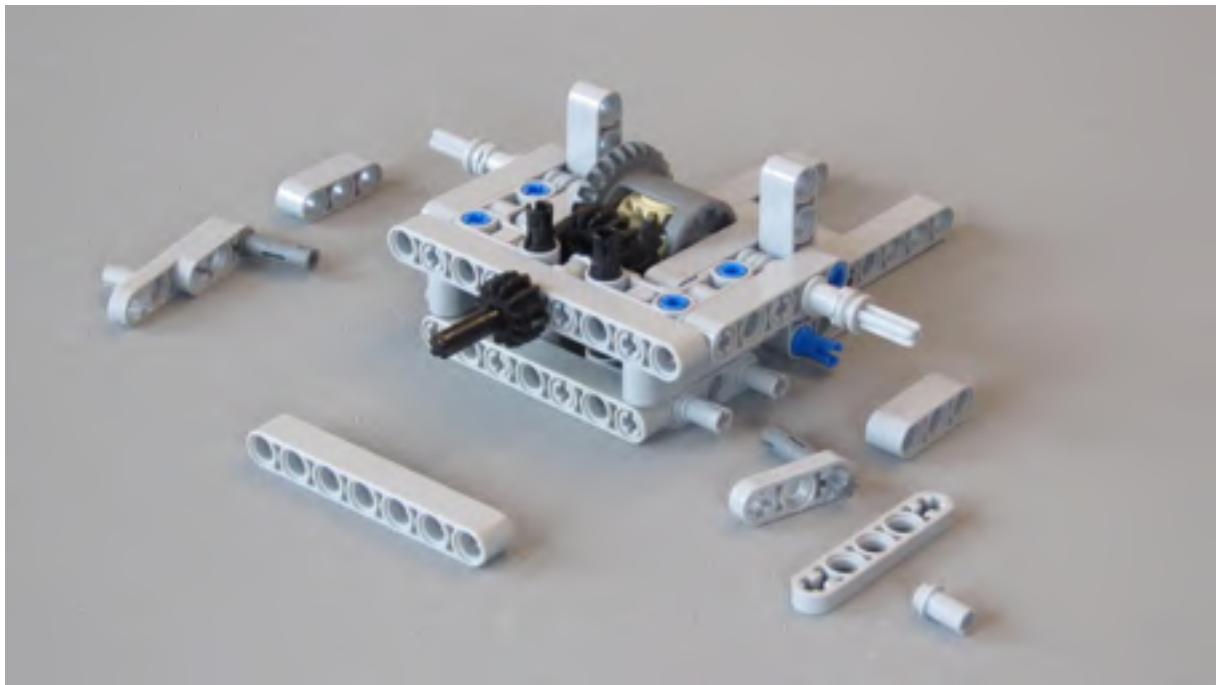



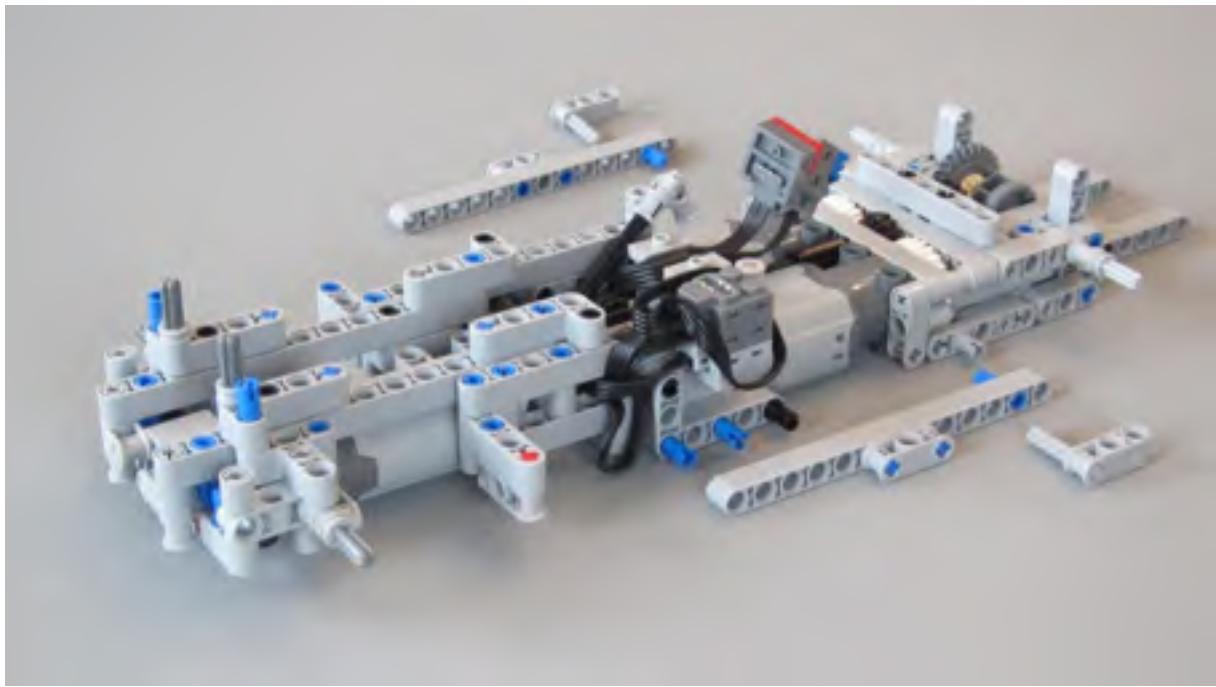



**Check that black axle is attached to connector and not protruding into the differential.**

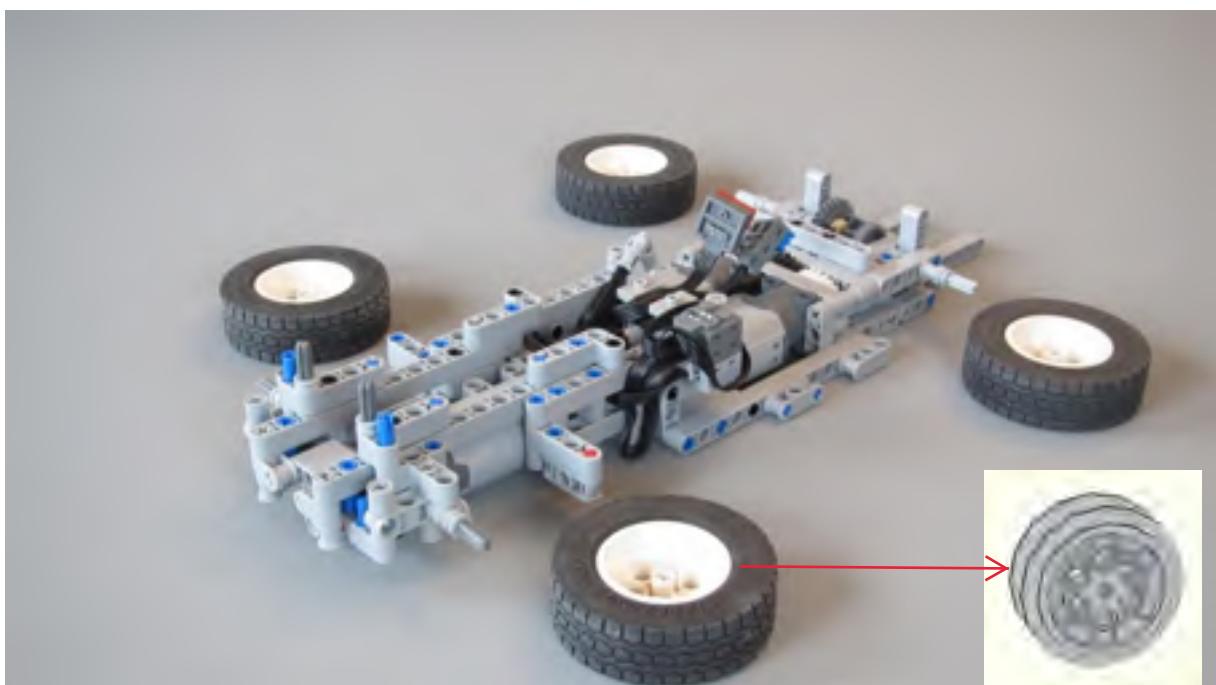

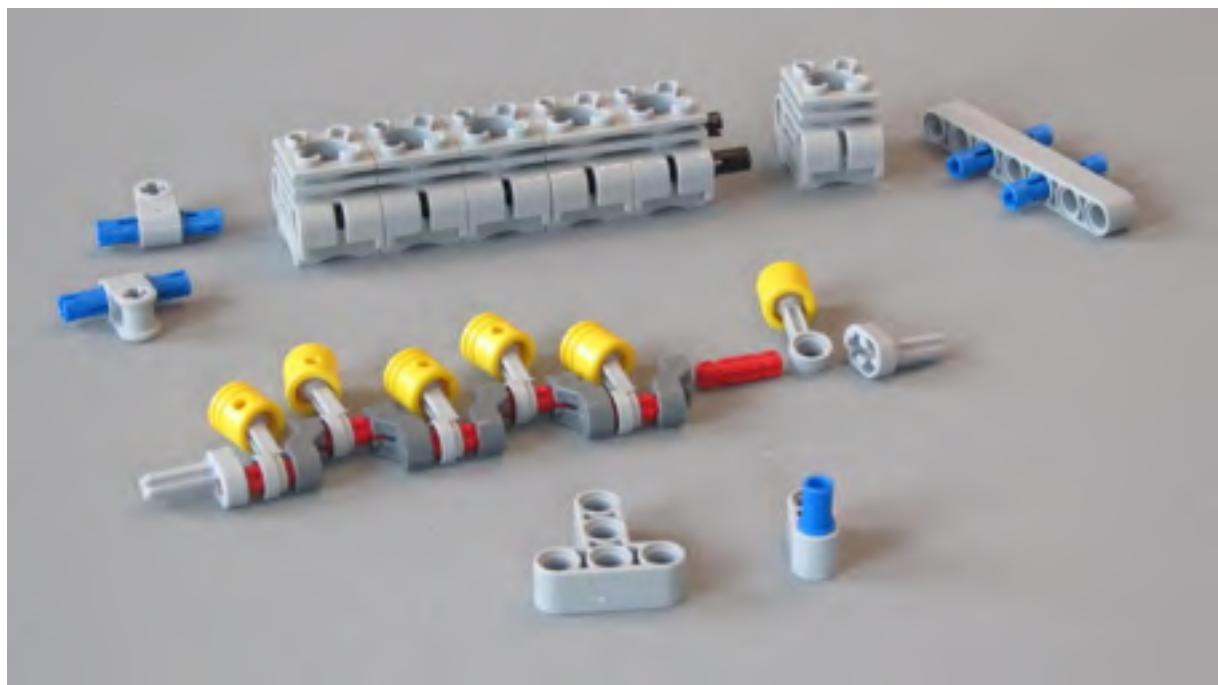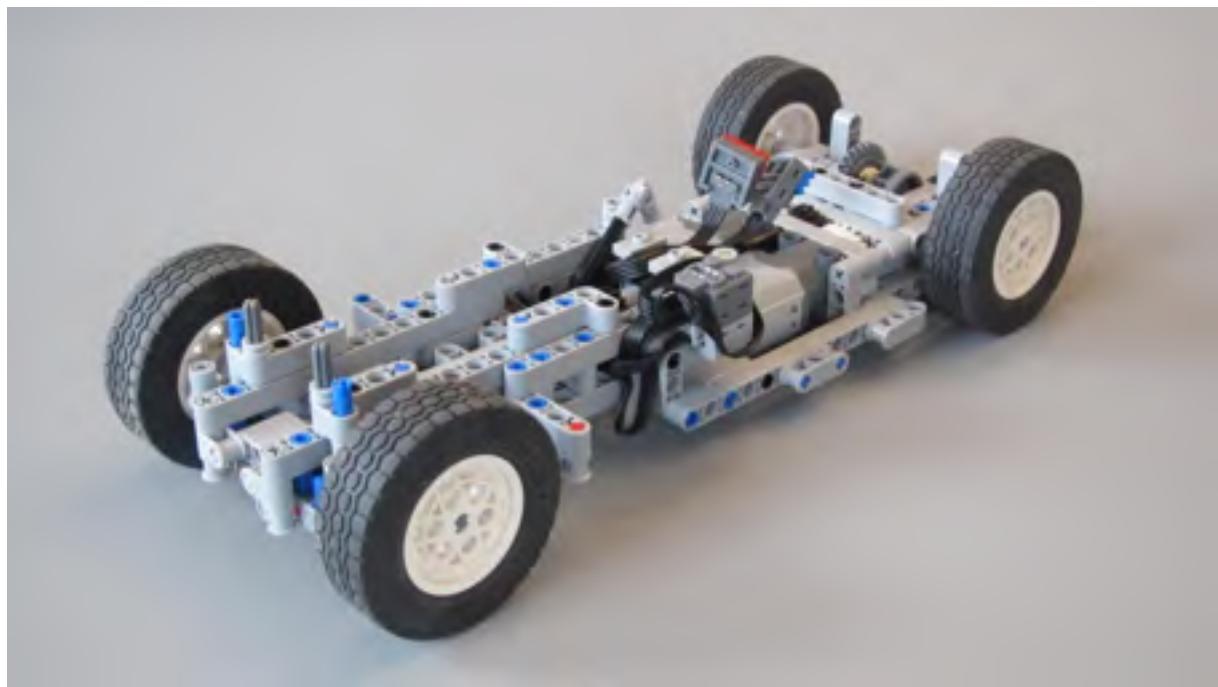


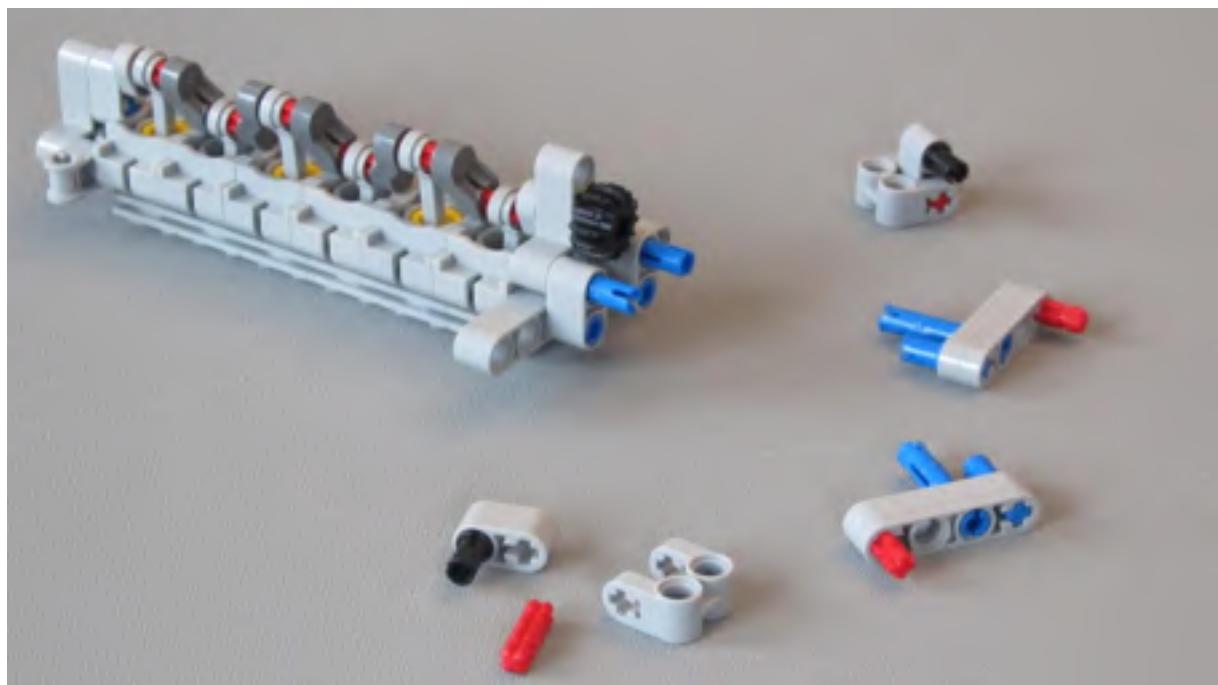


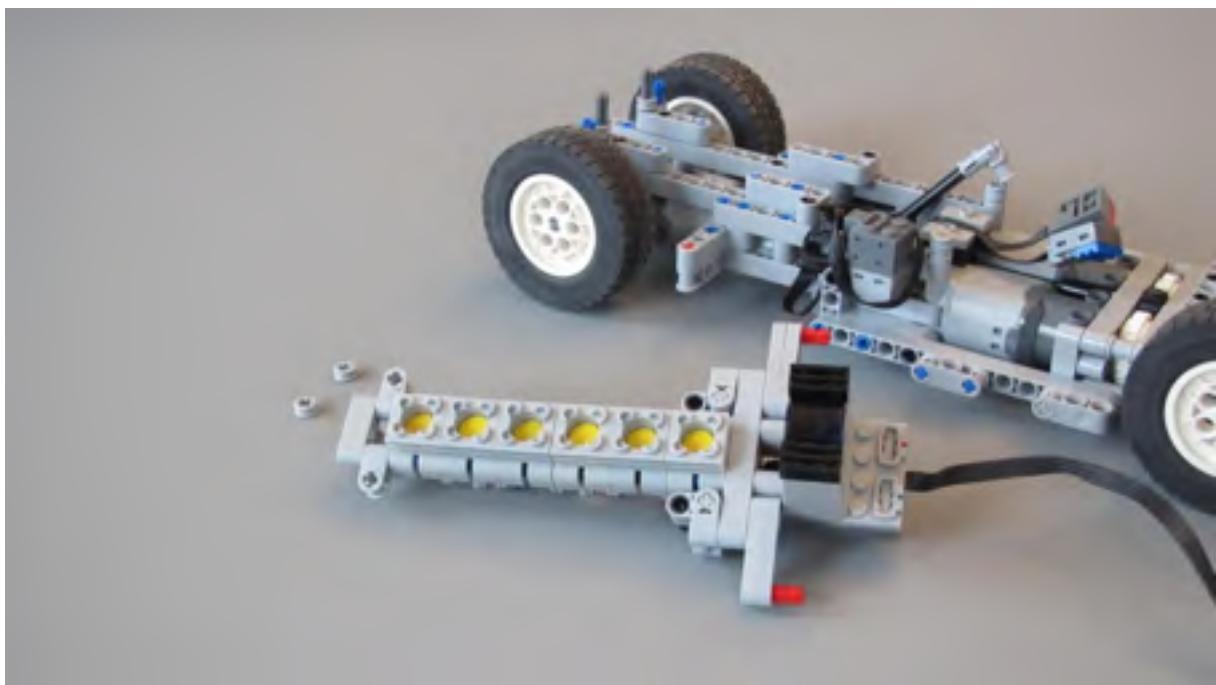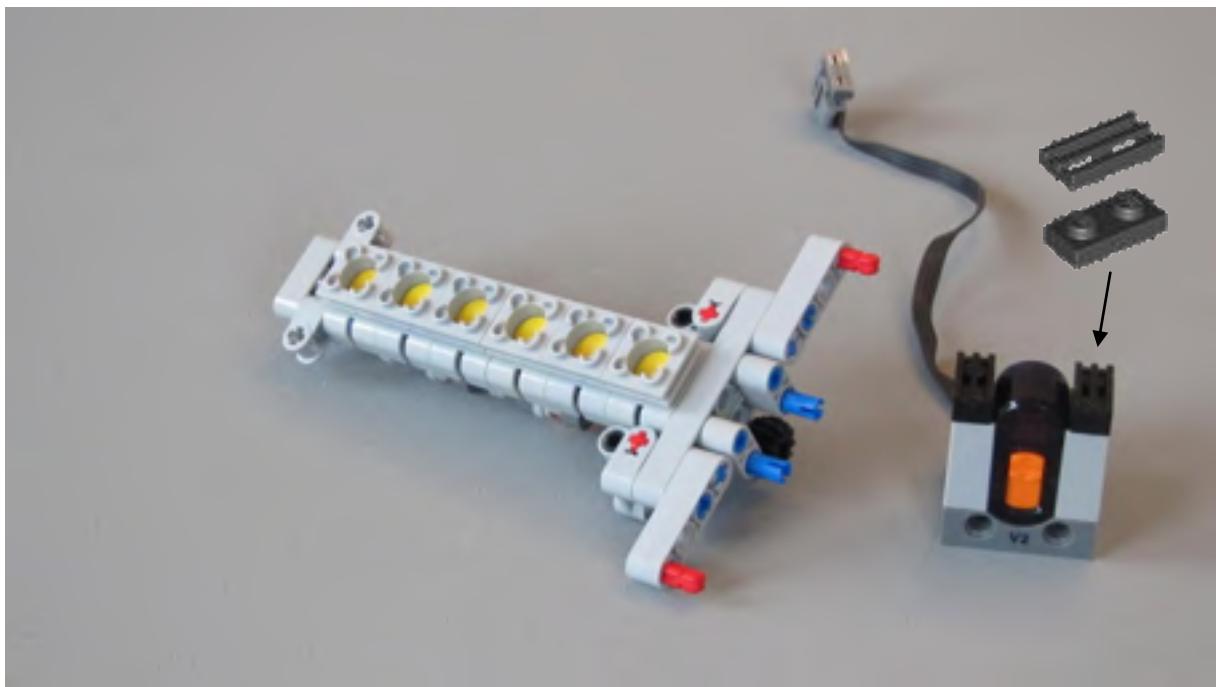


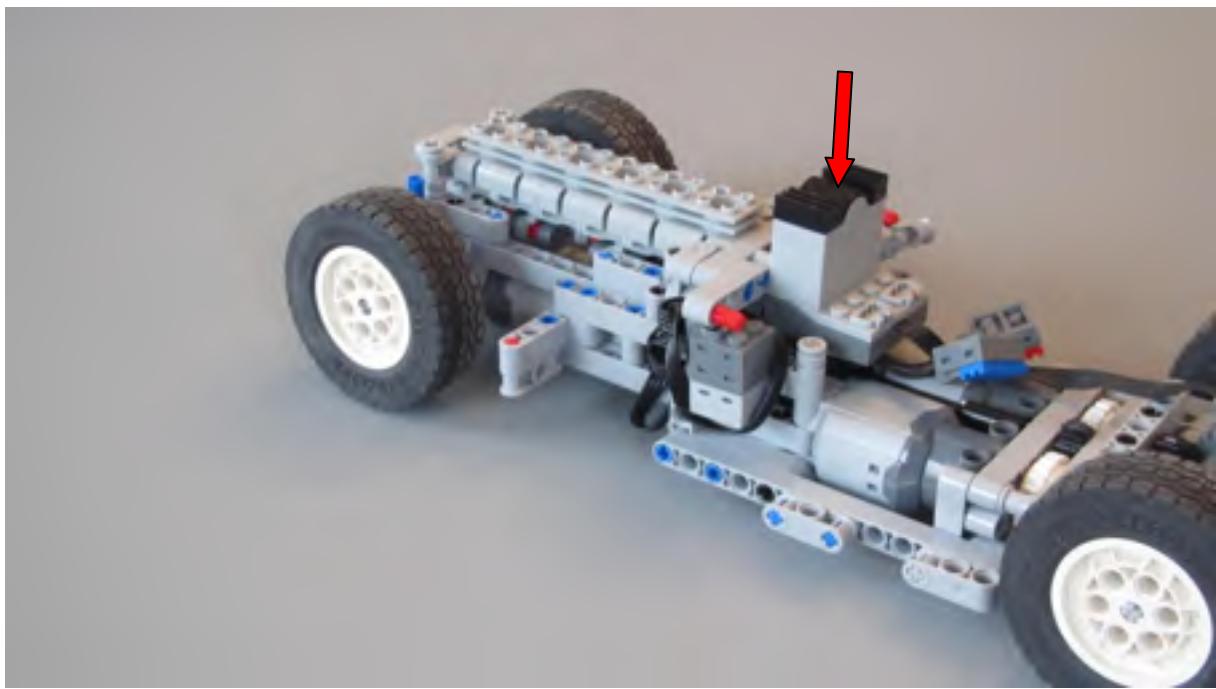



**Press down to connect receiver to underlying plates. Wires should fit in slot between plates.**





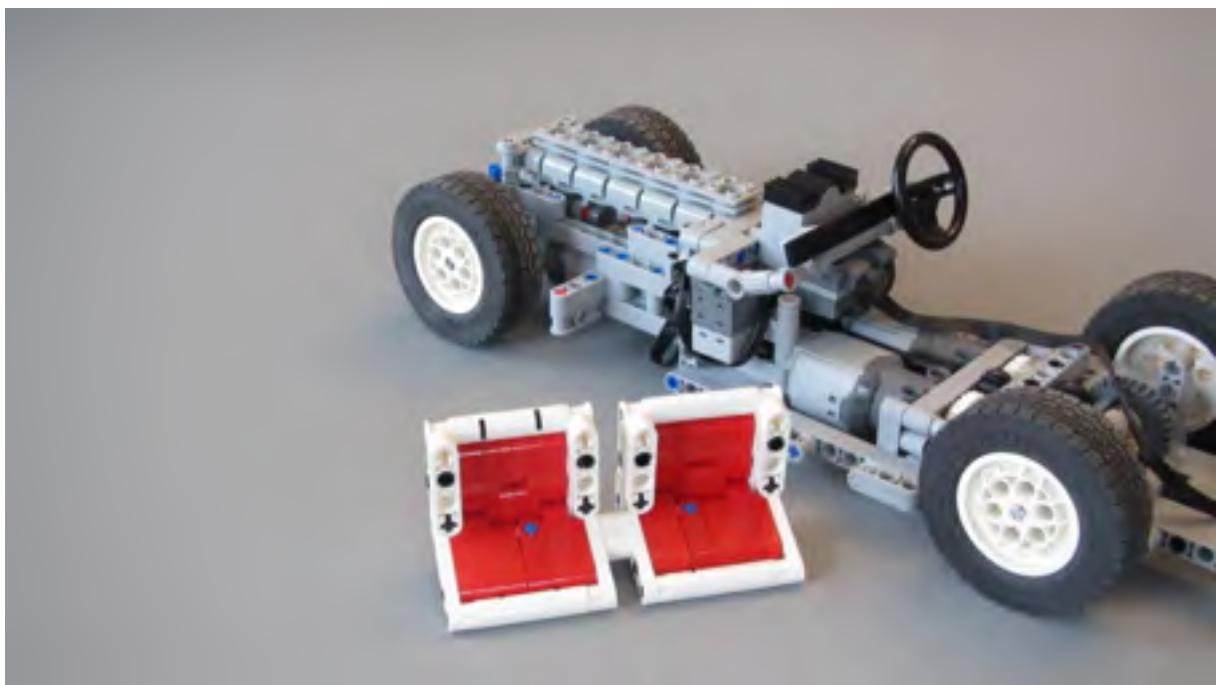
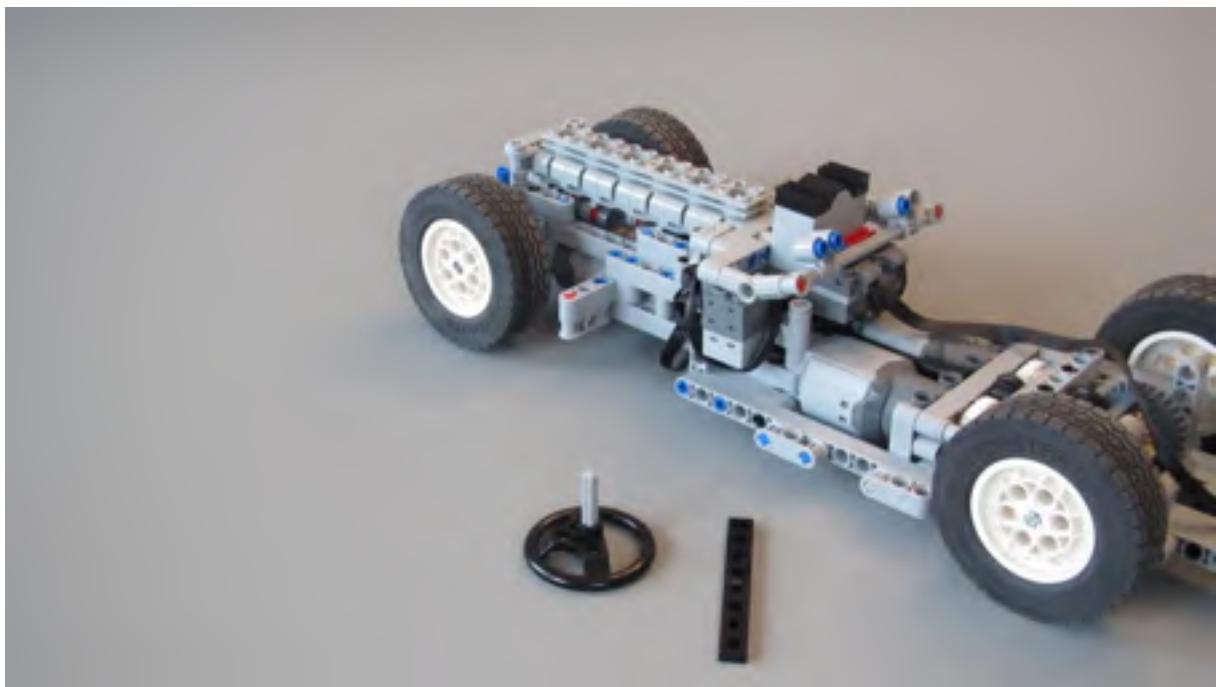



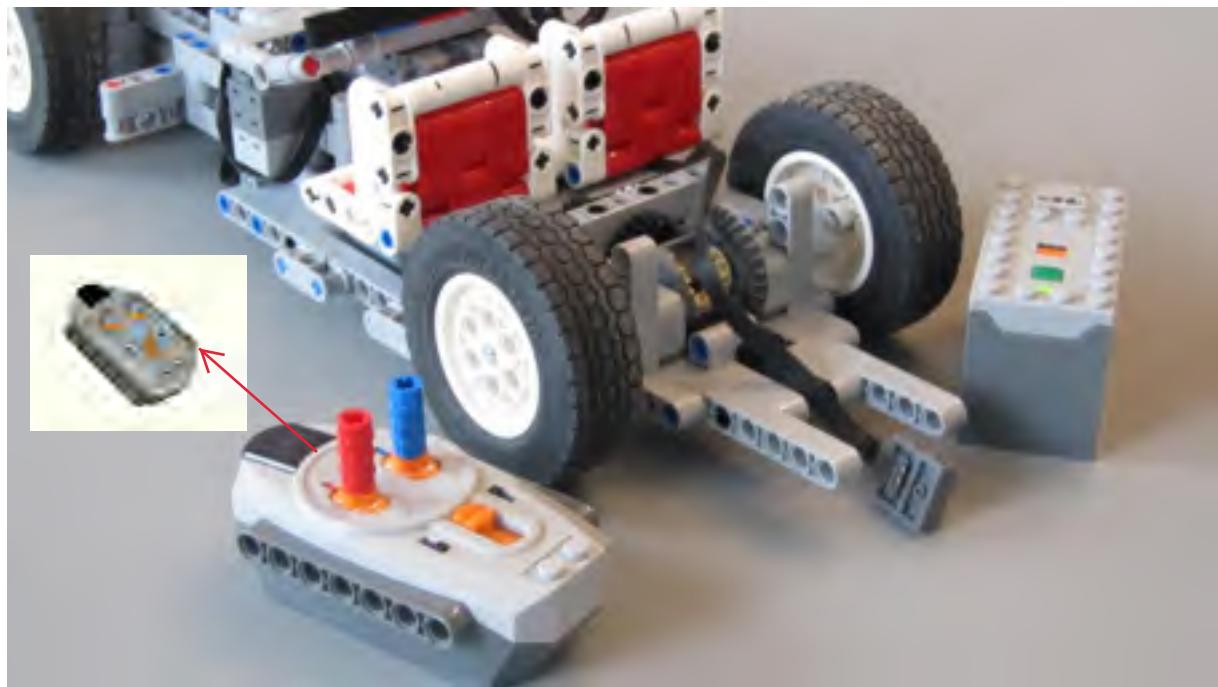



Start instructions for bodywork

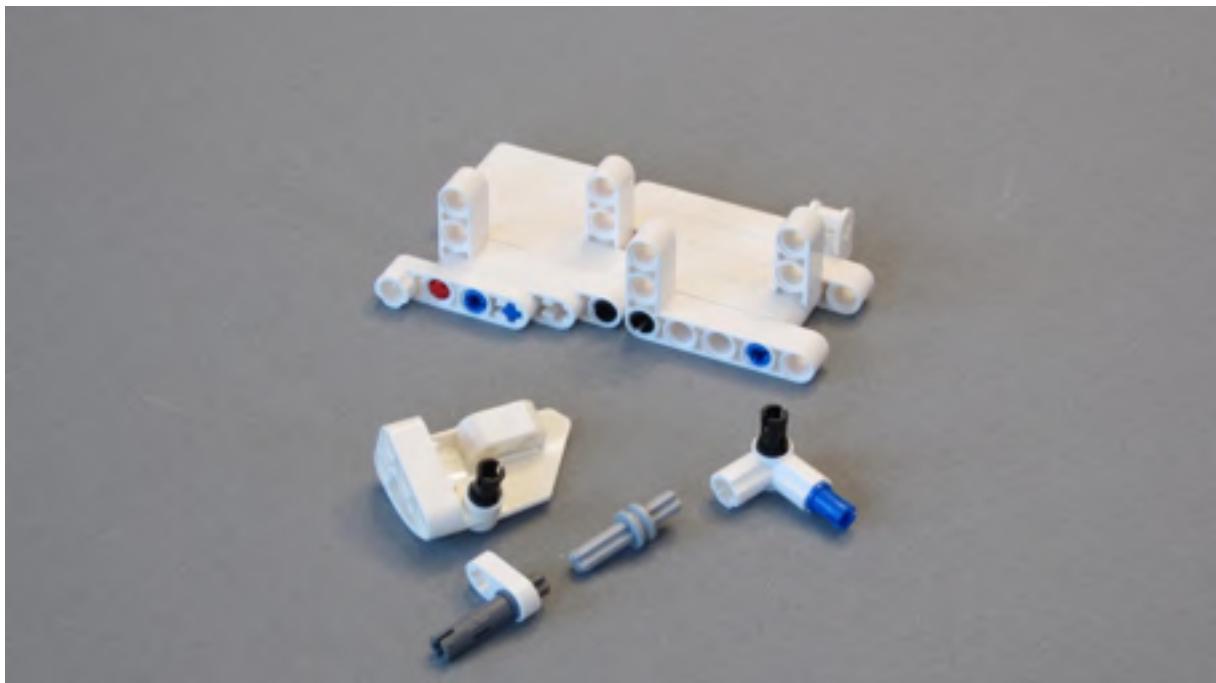
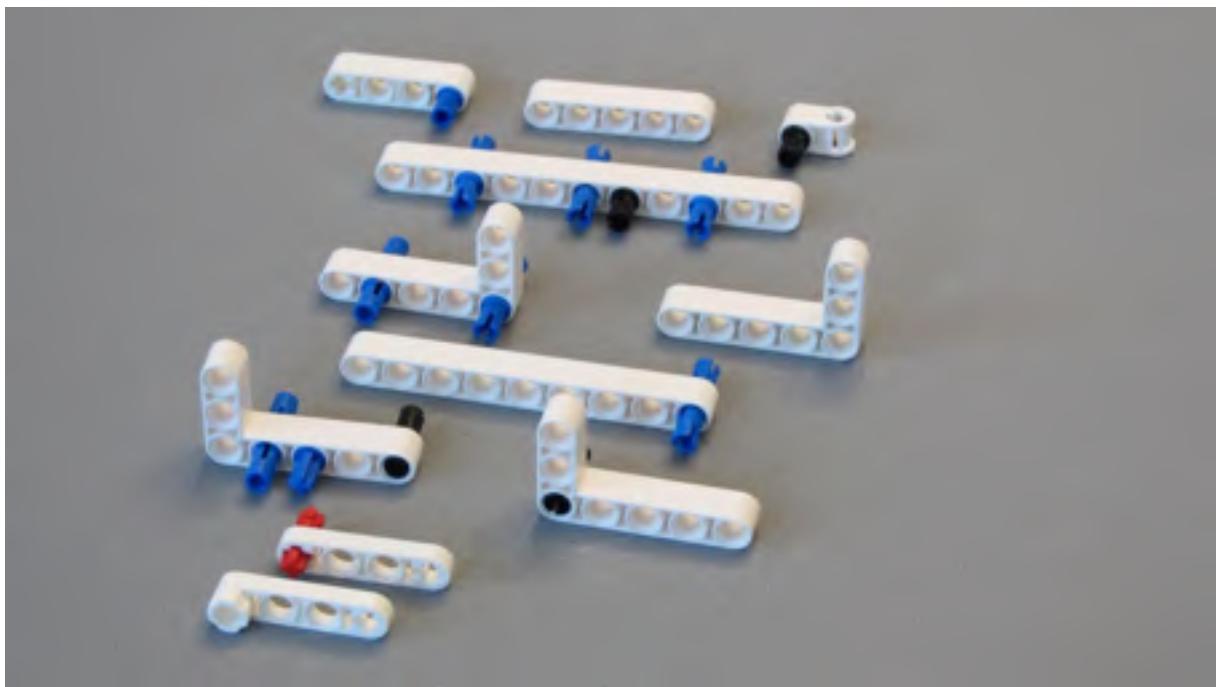


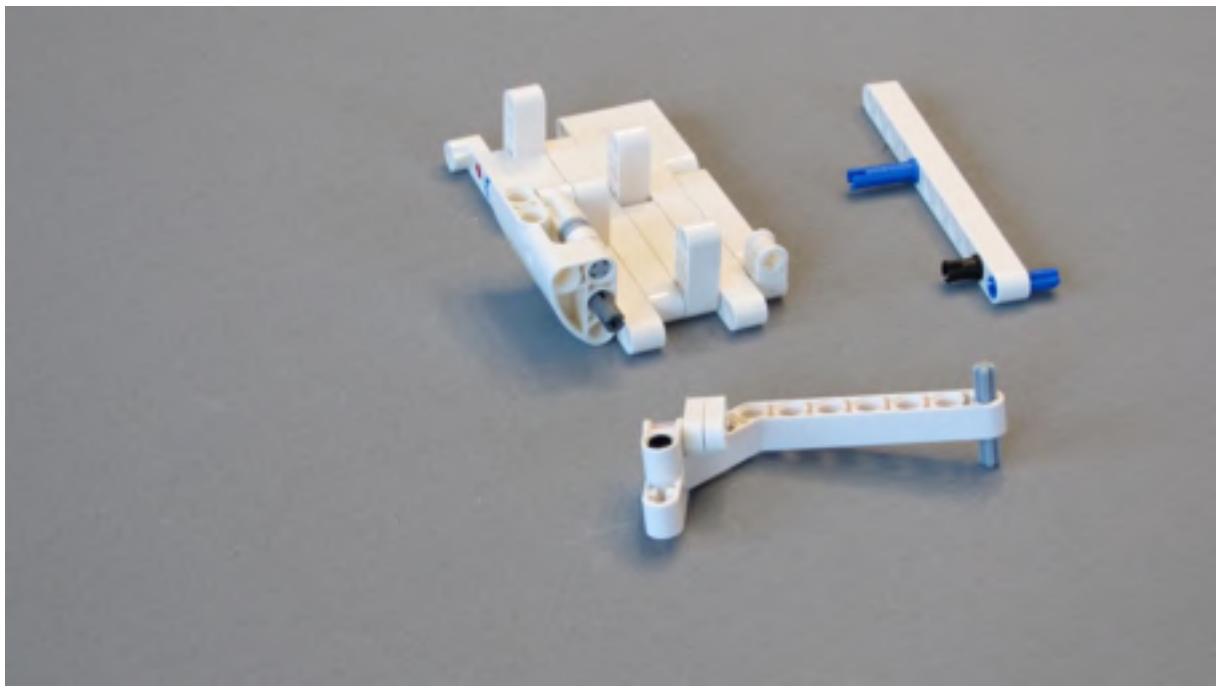
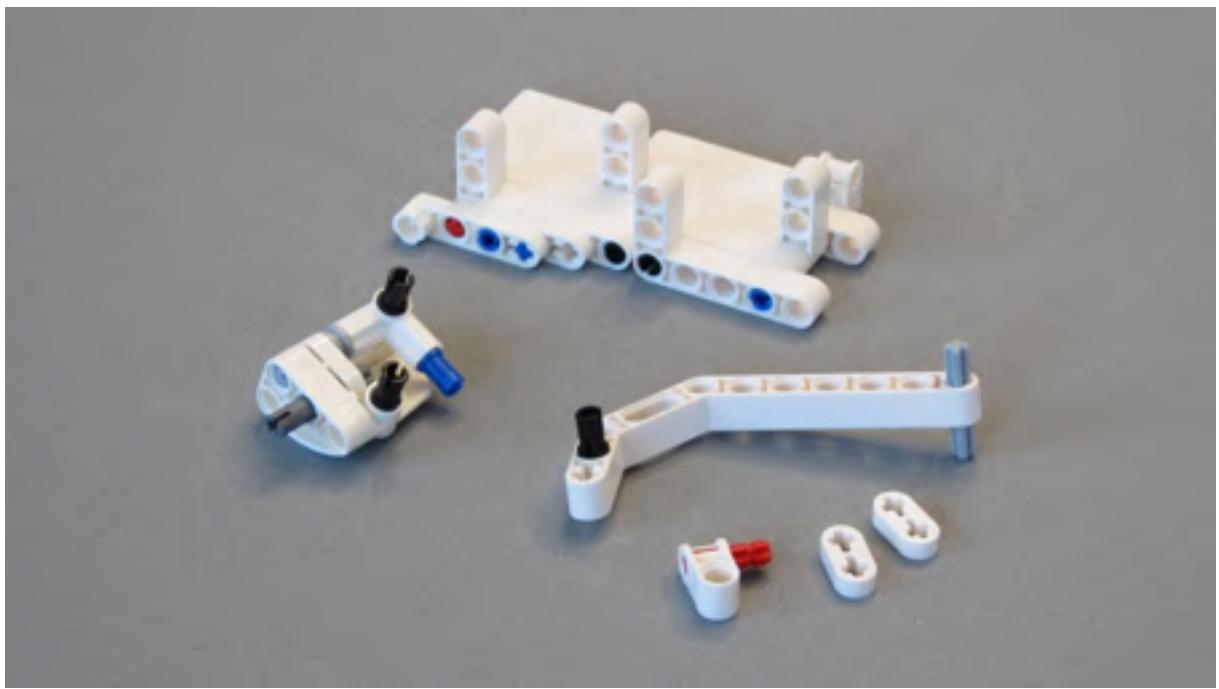


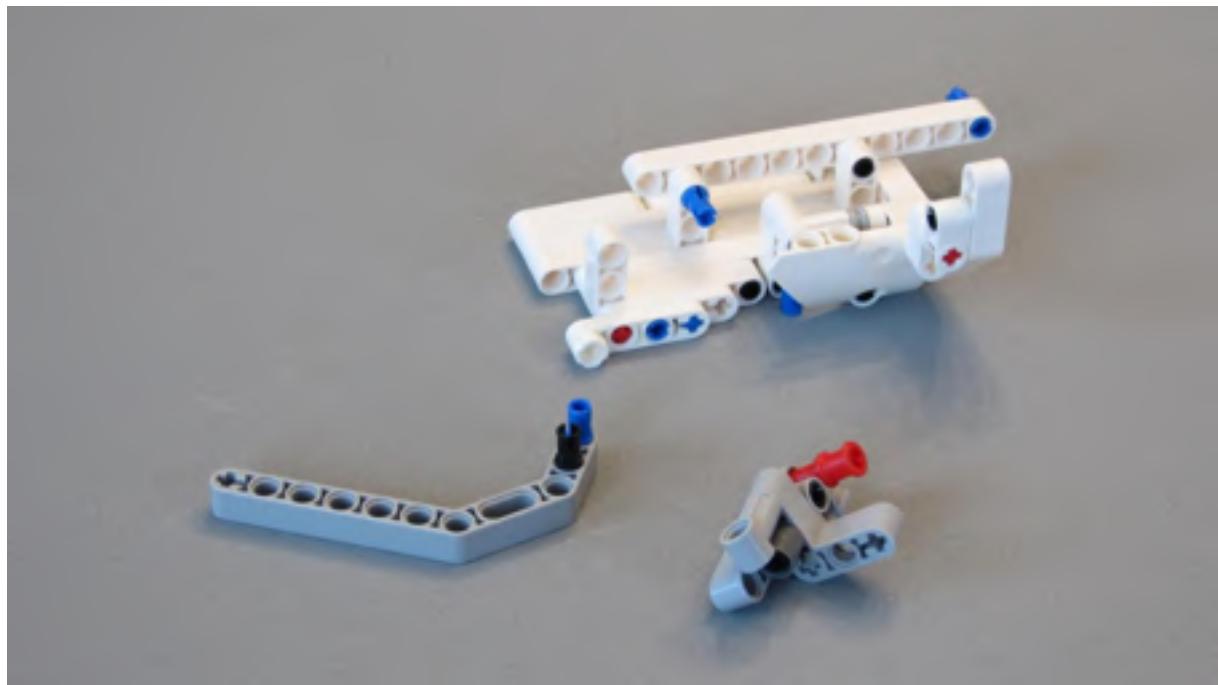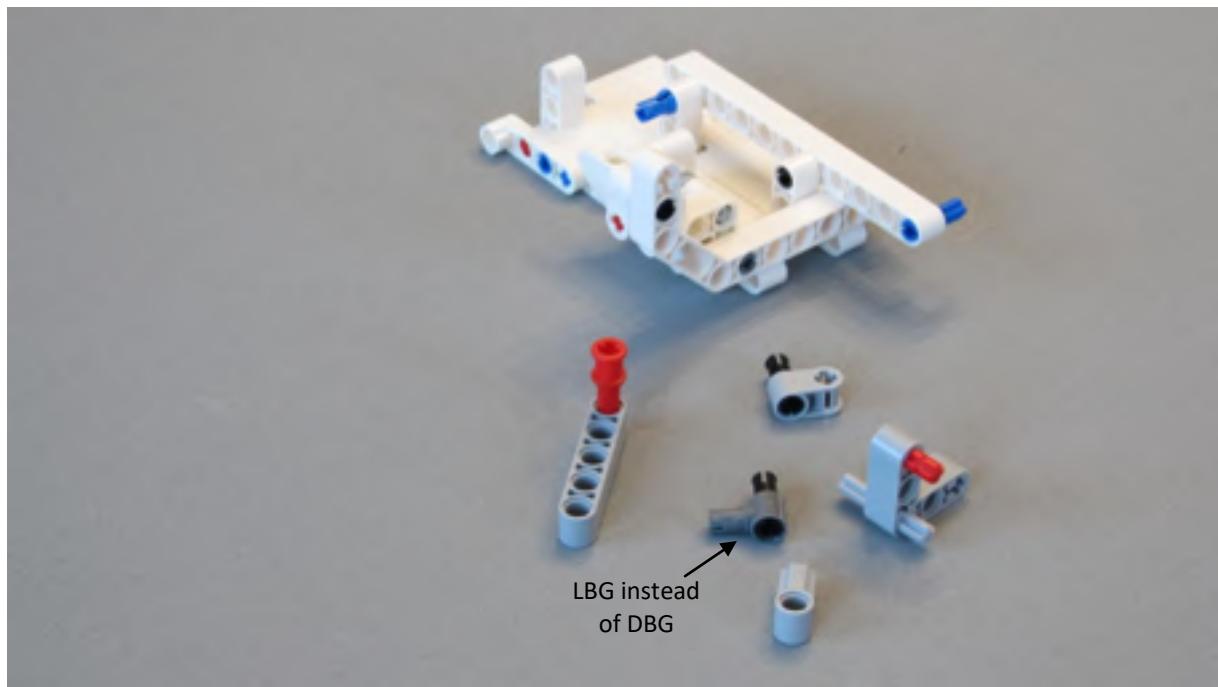


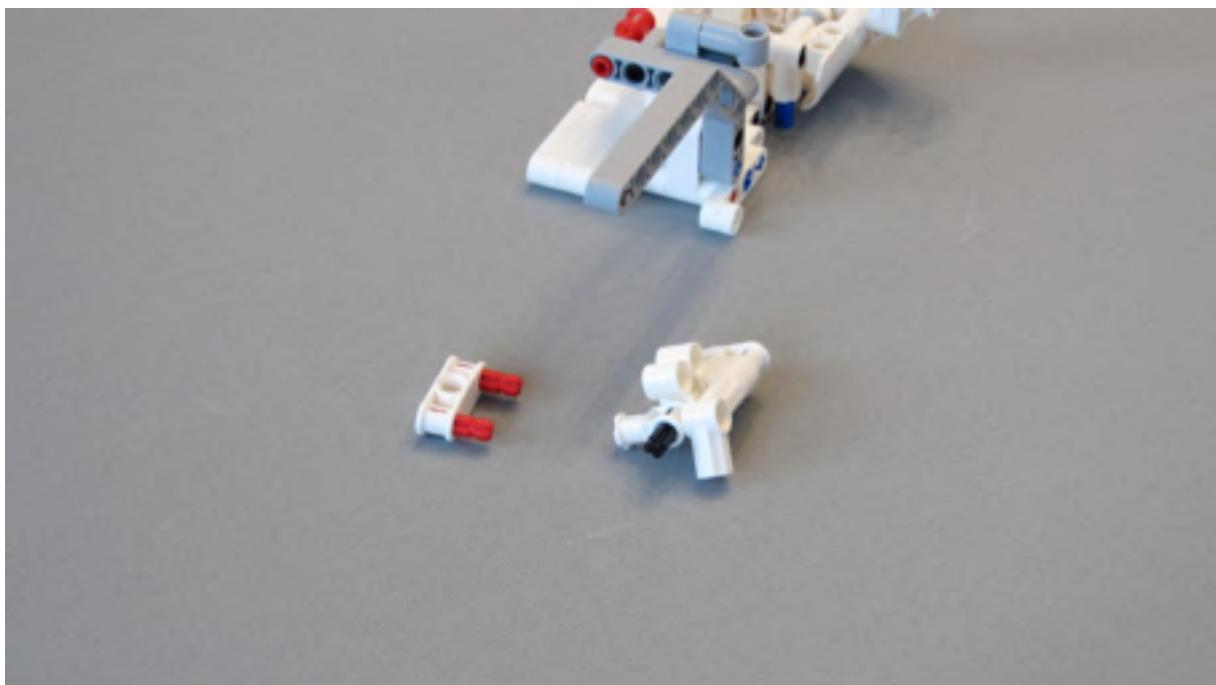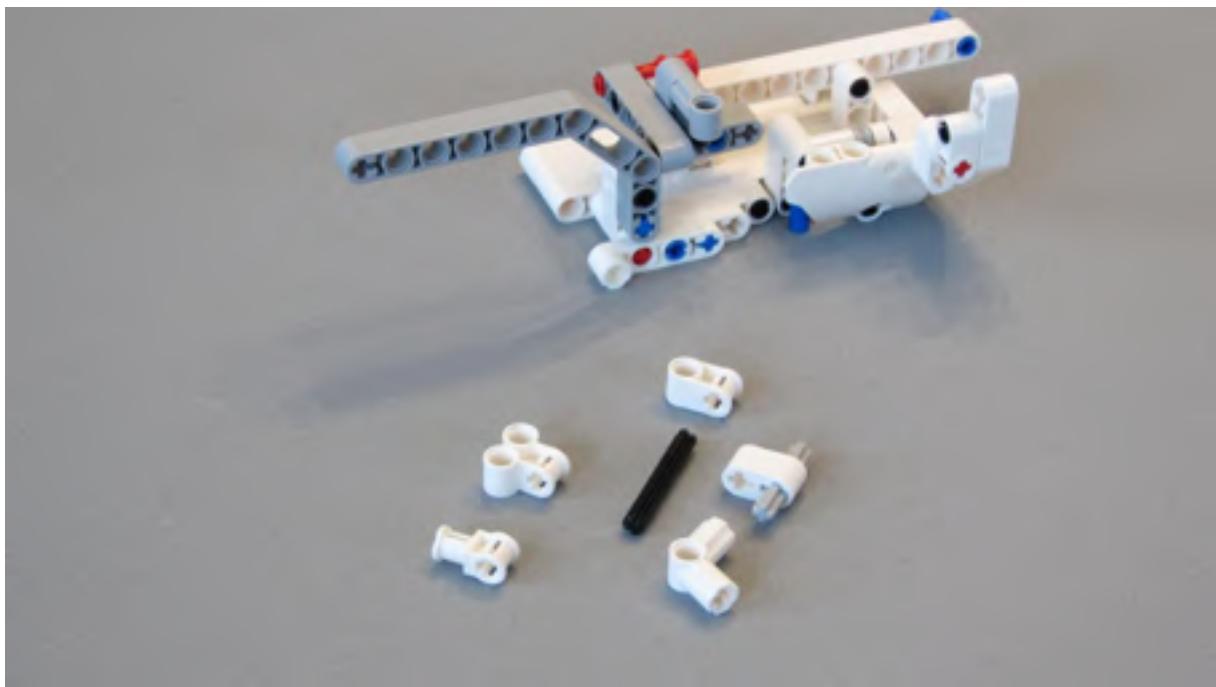



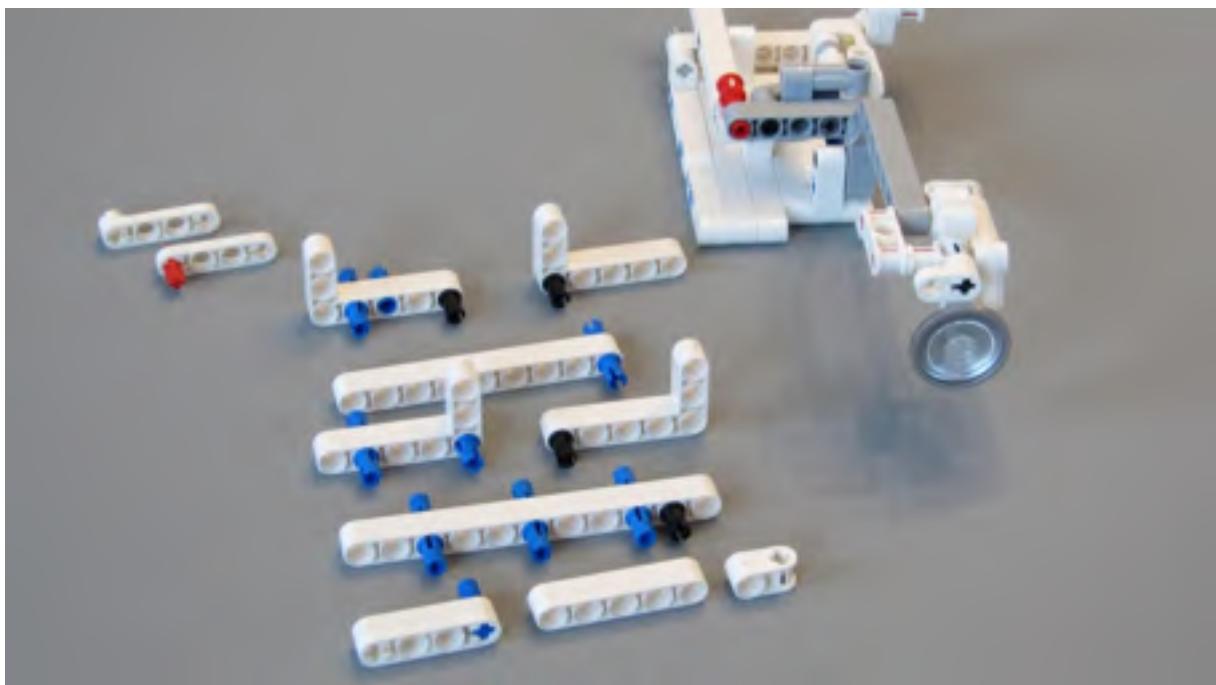


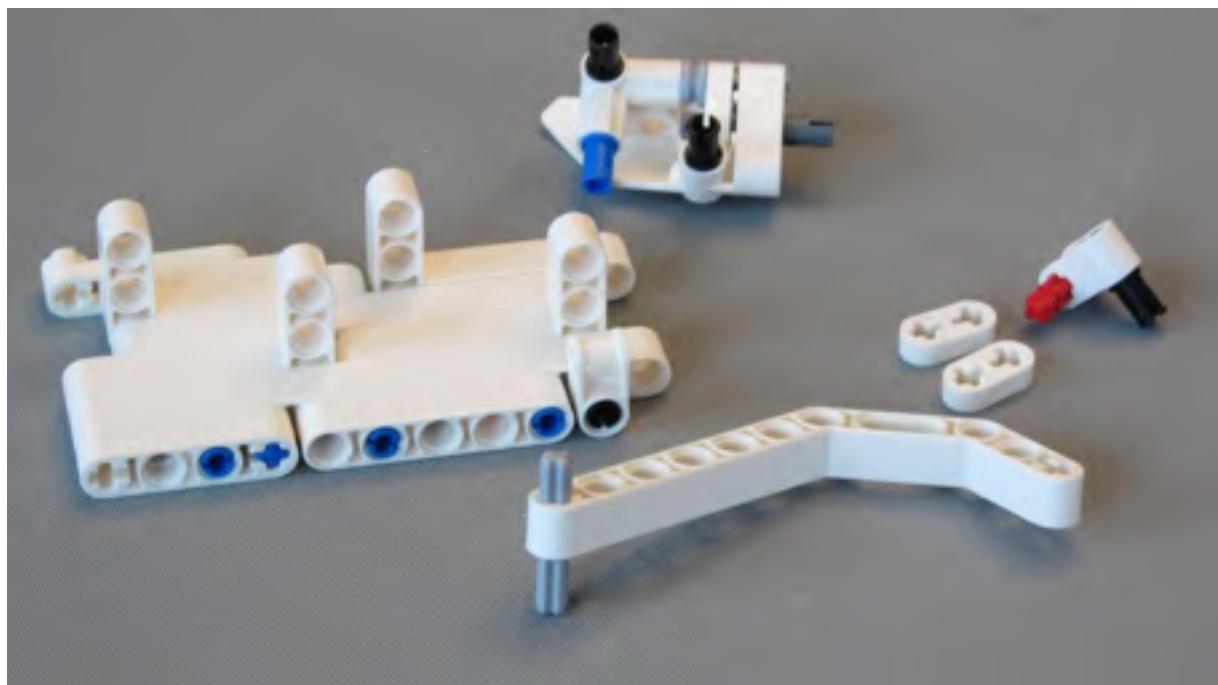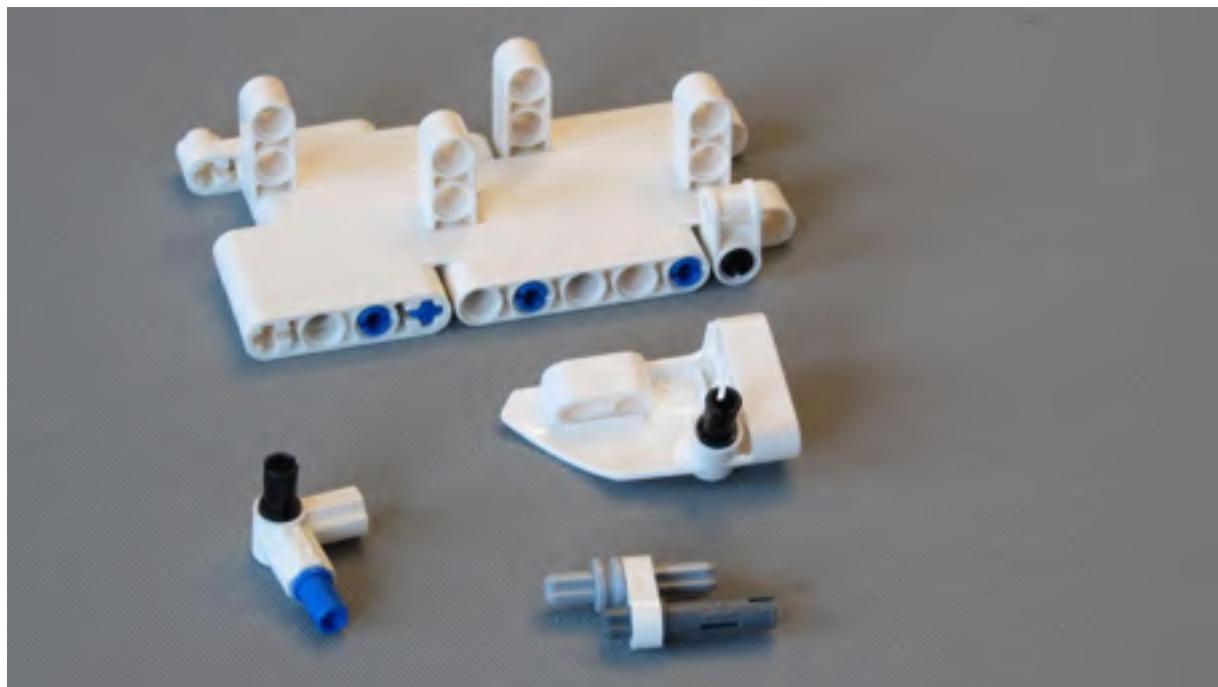


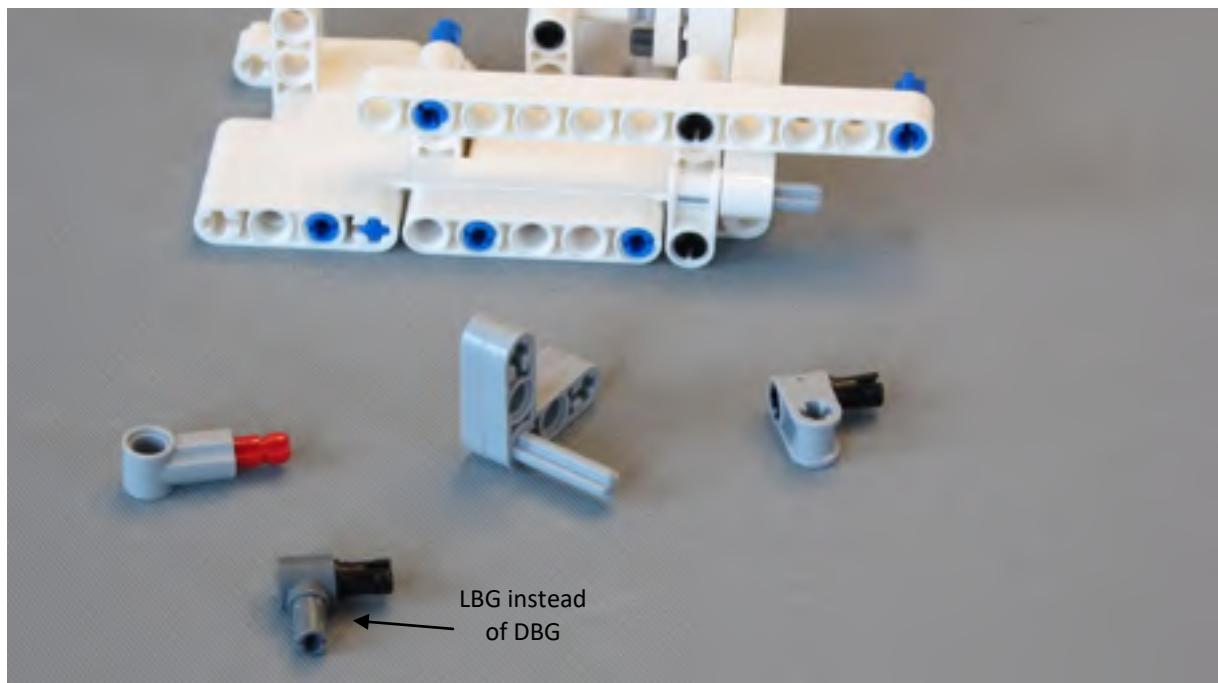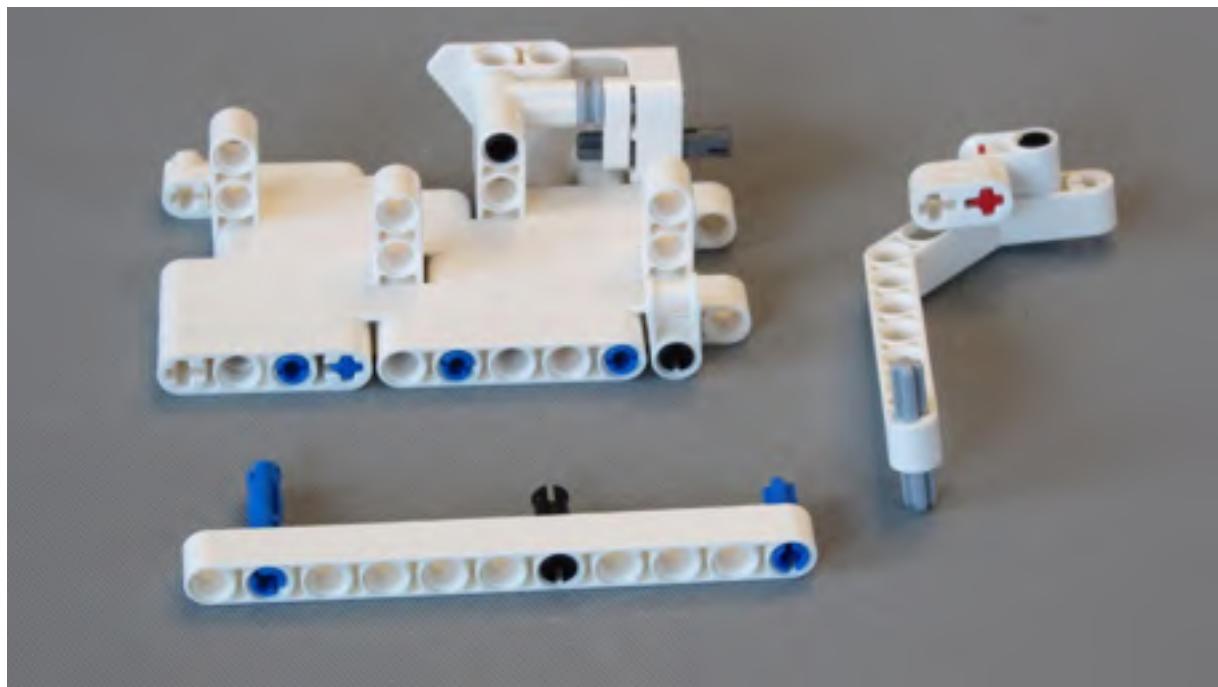

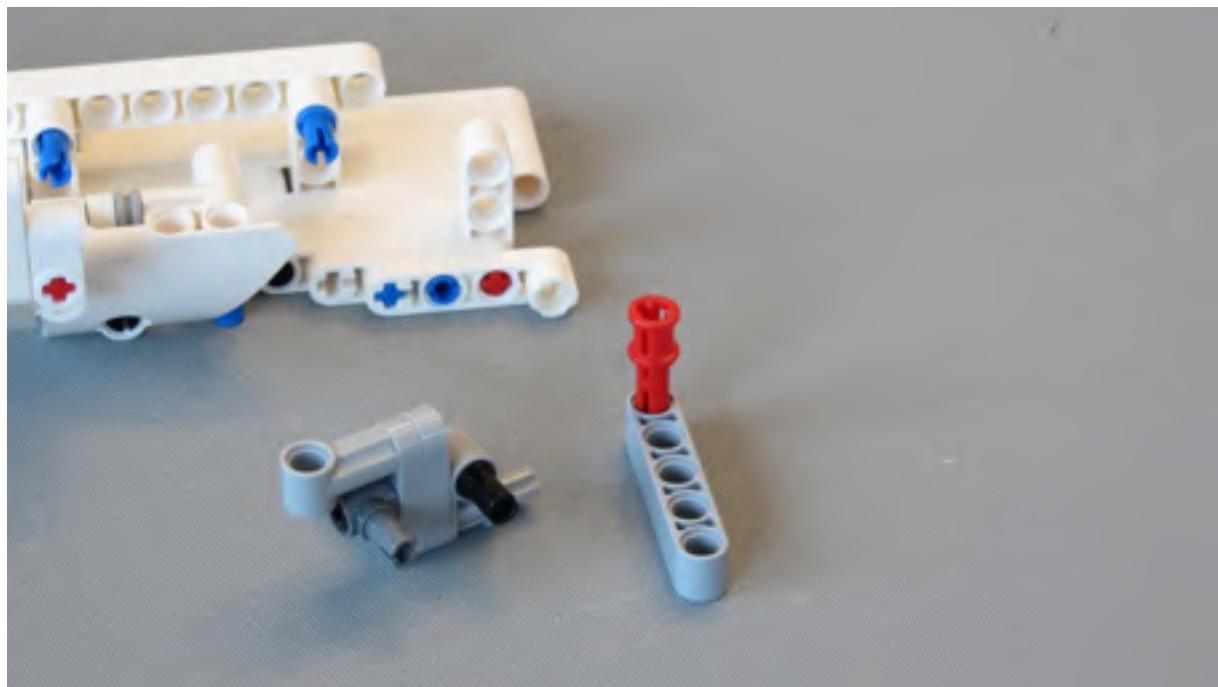


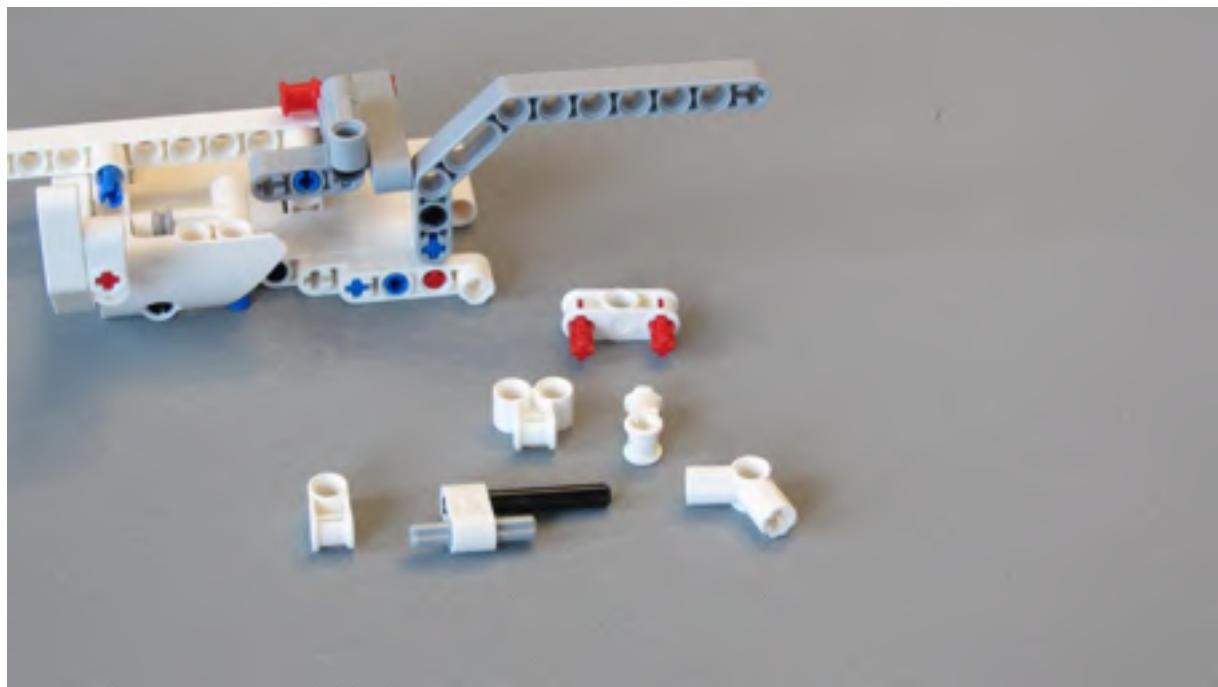


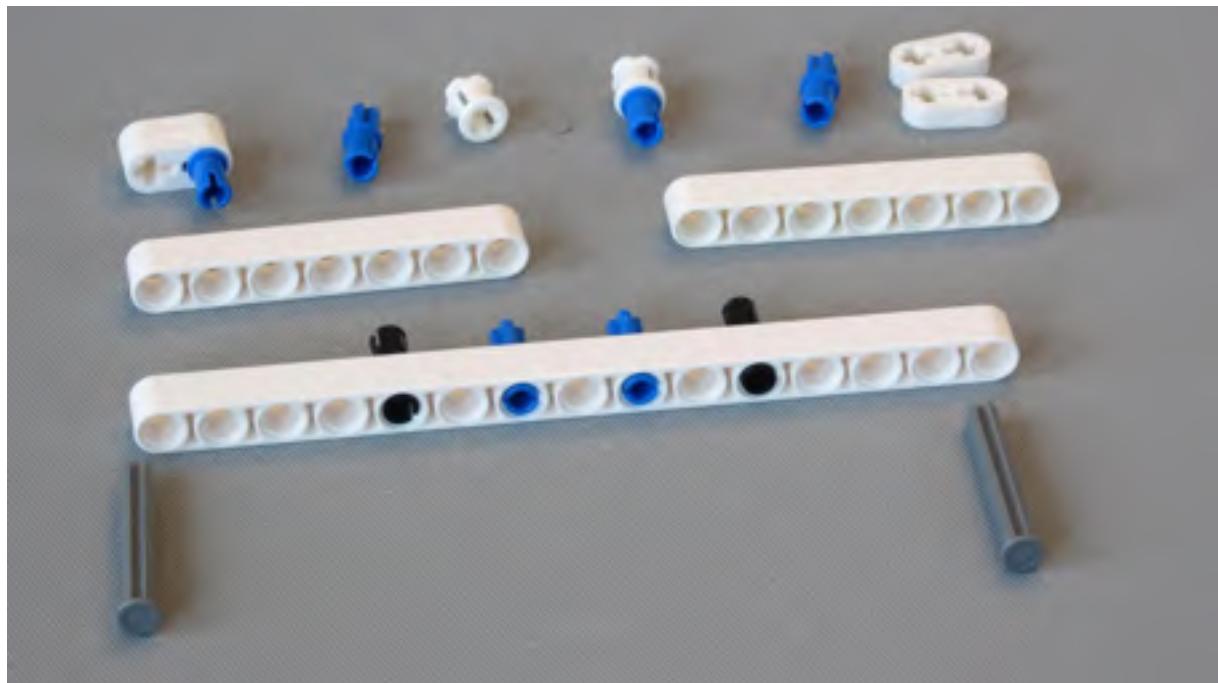
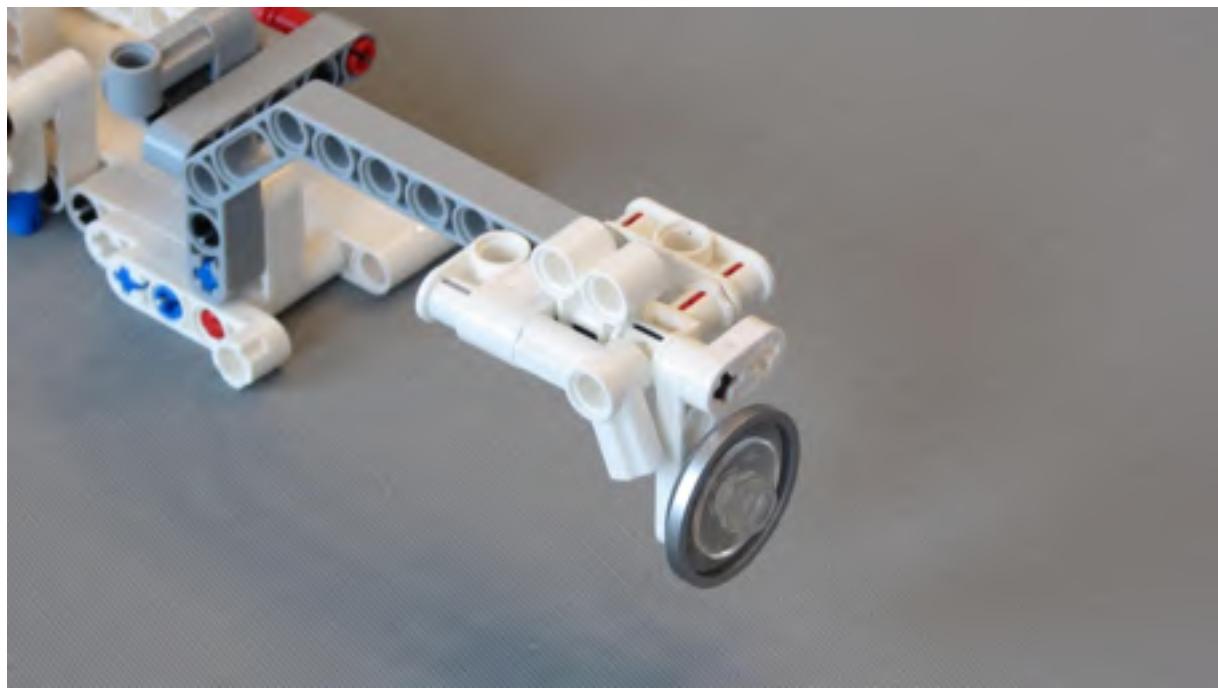



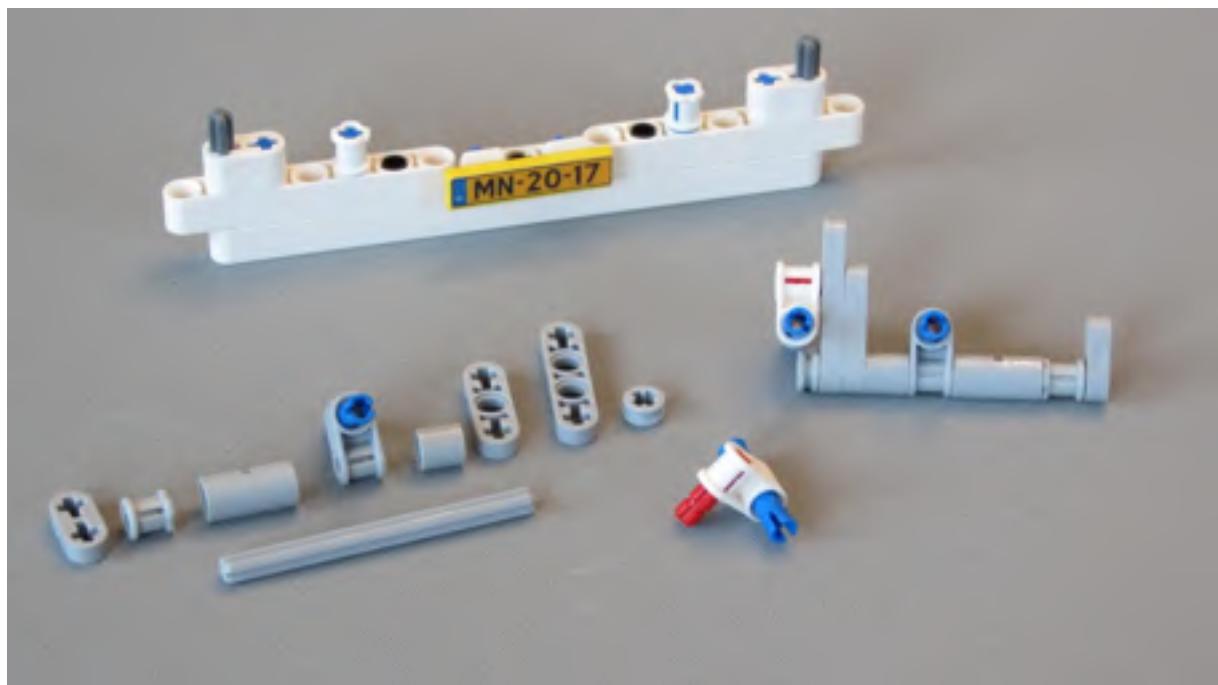




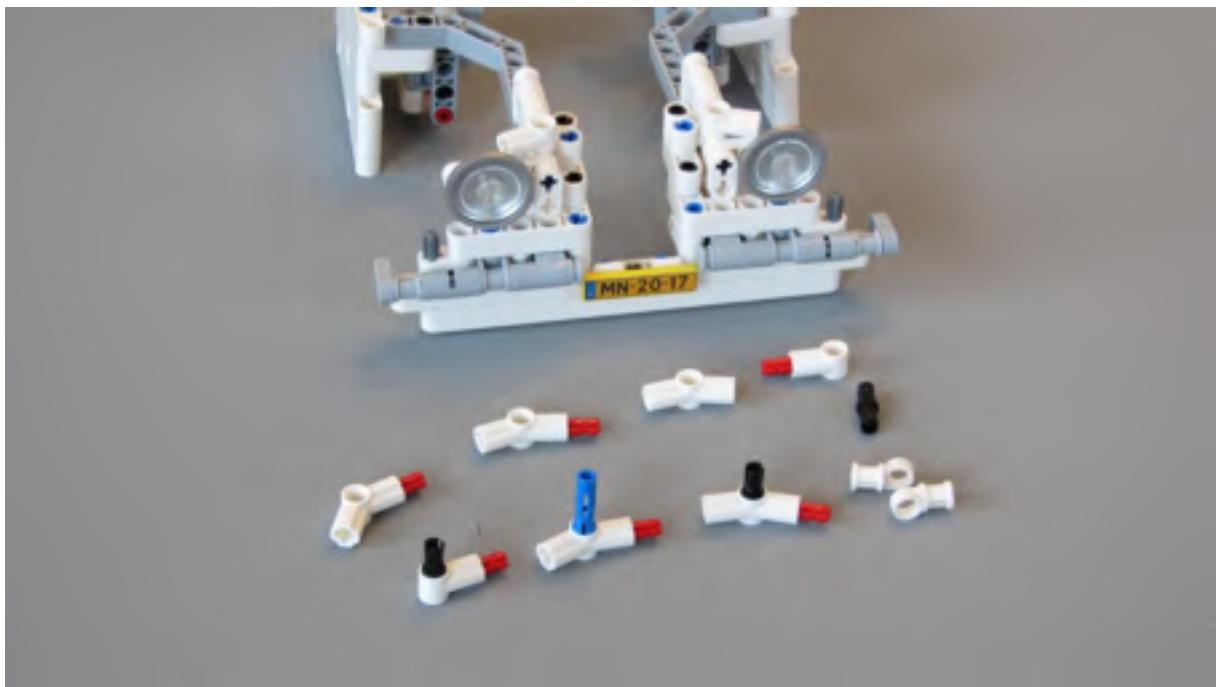


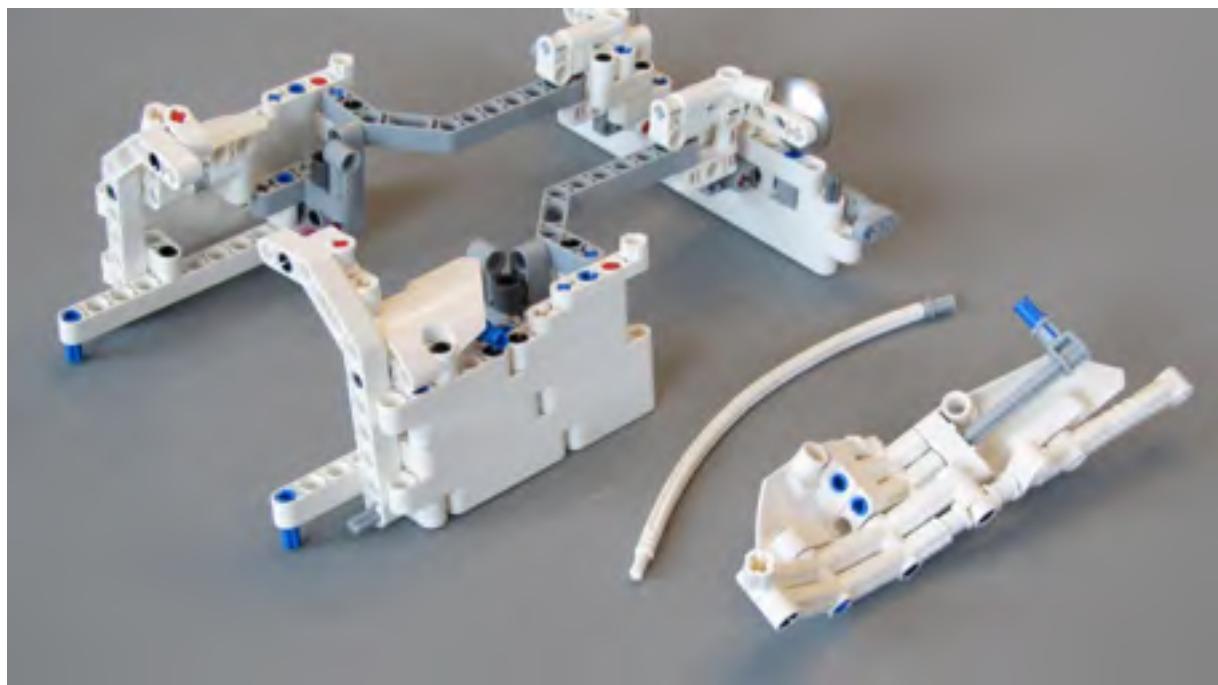


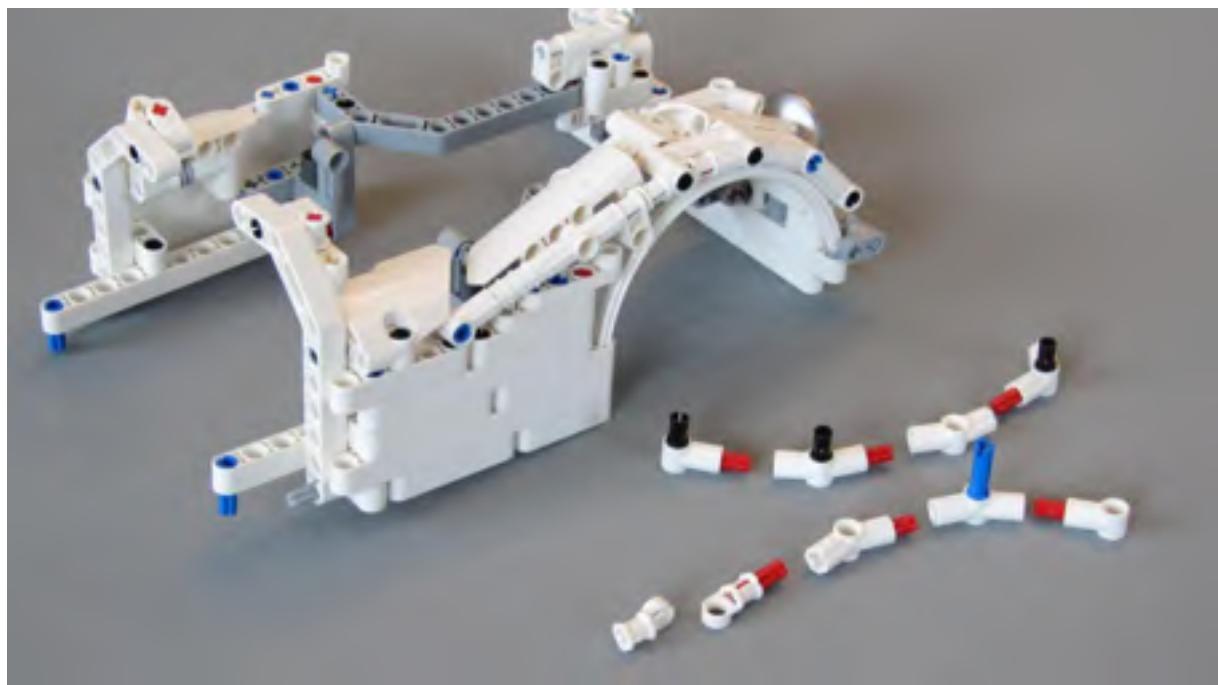
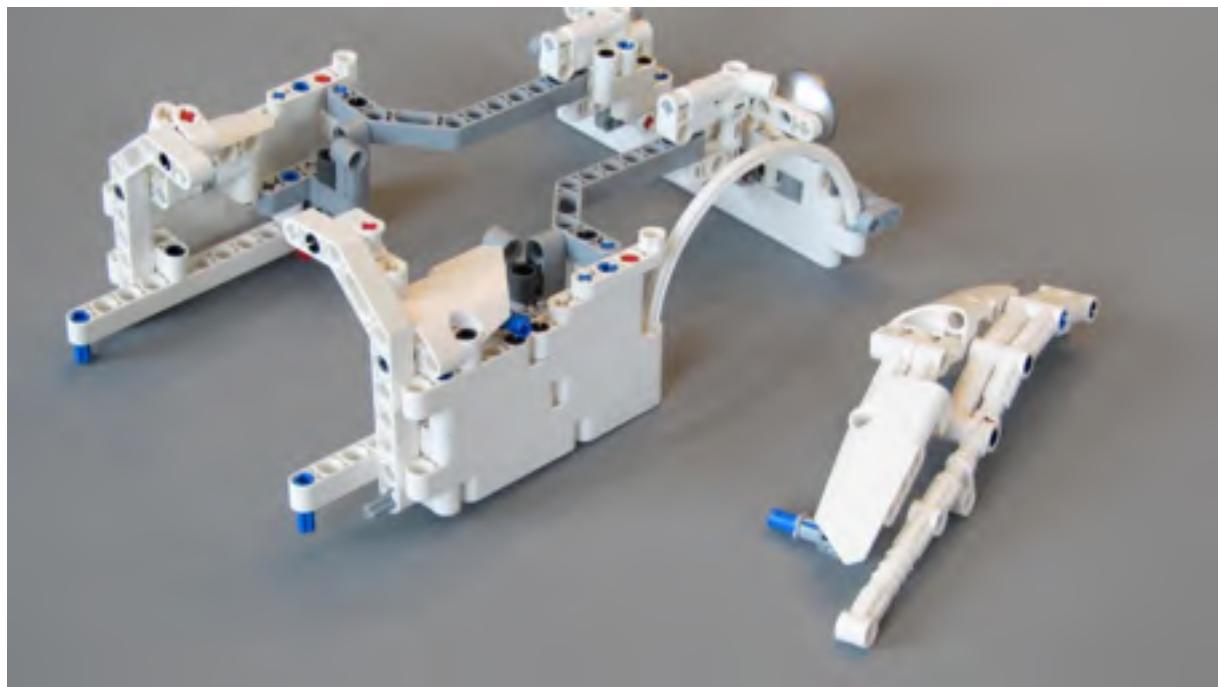


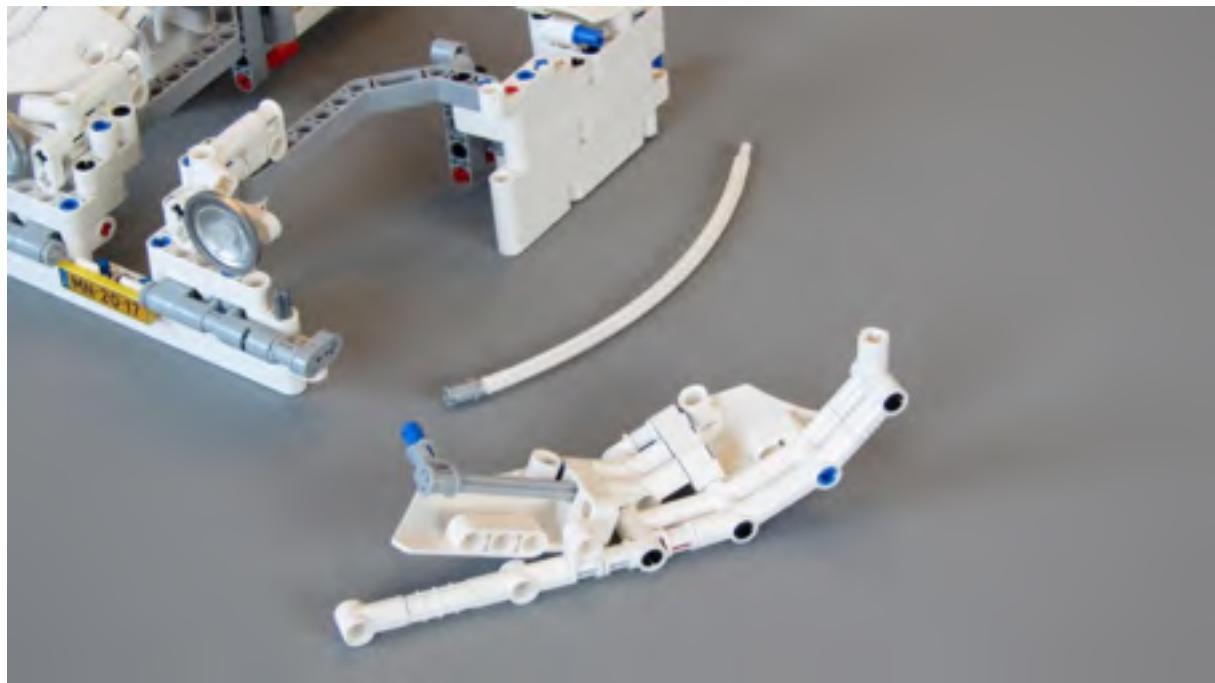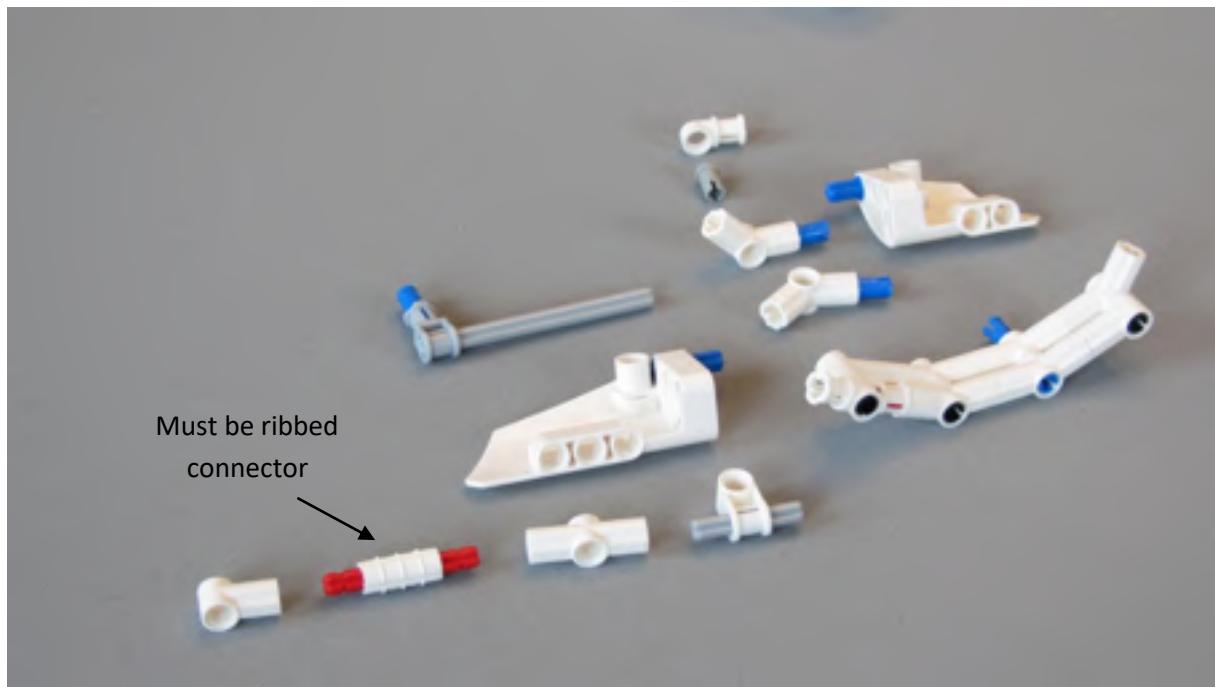




For black version, 19L soft-axle can be replaced by 16L soft-axle with additional **4274**



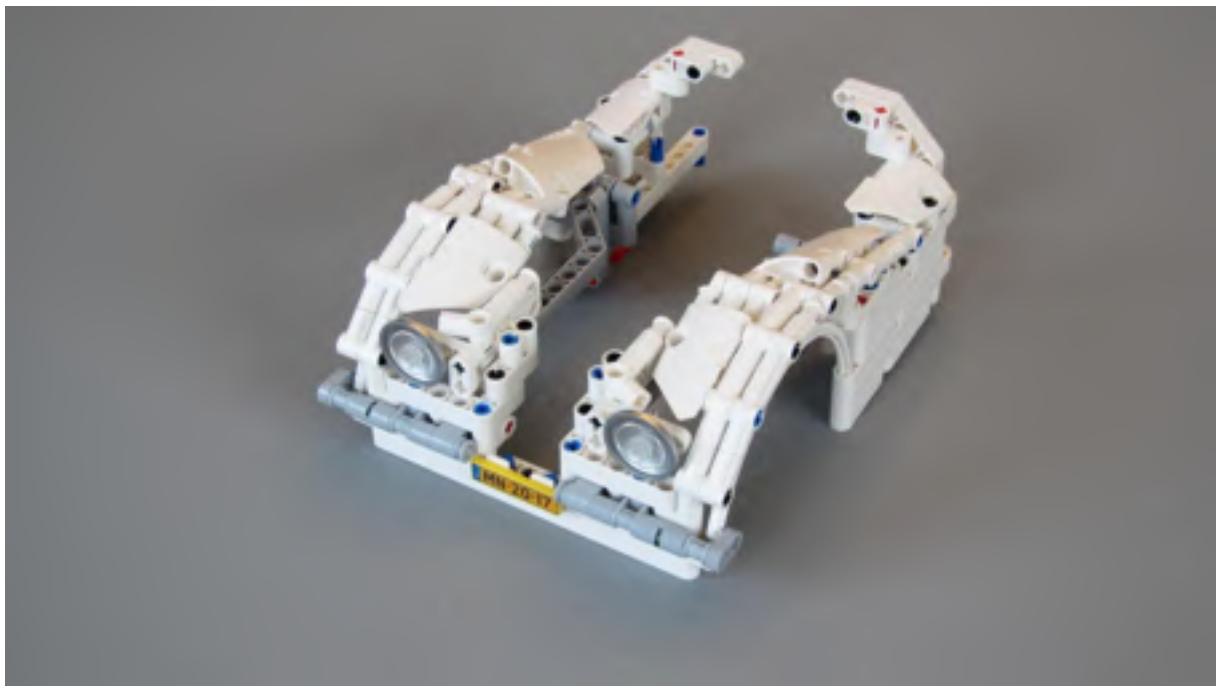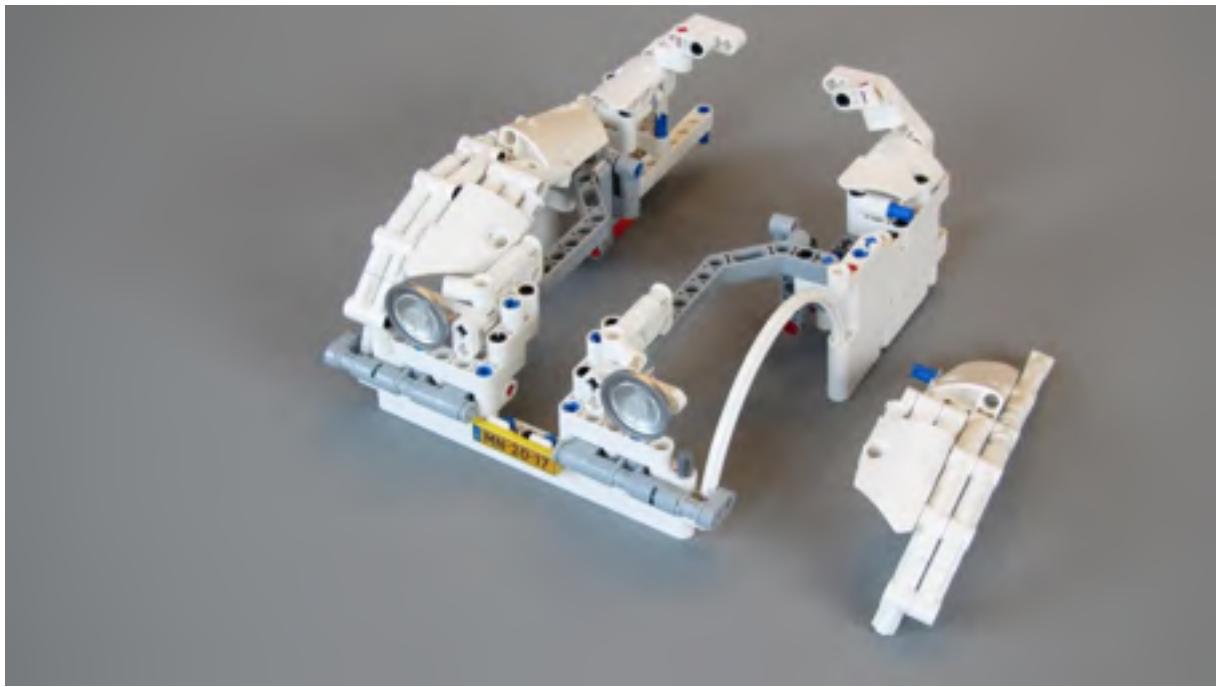


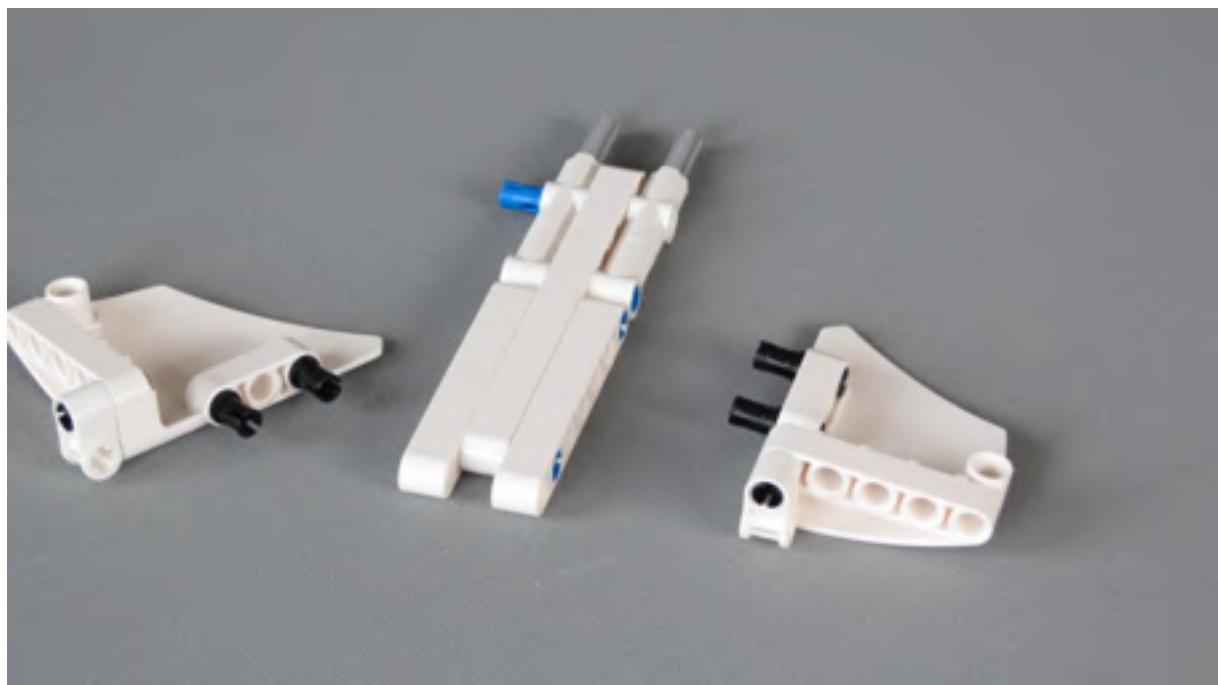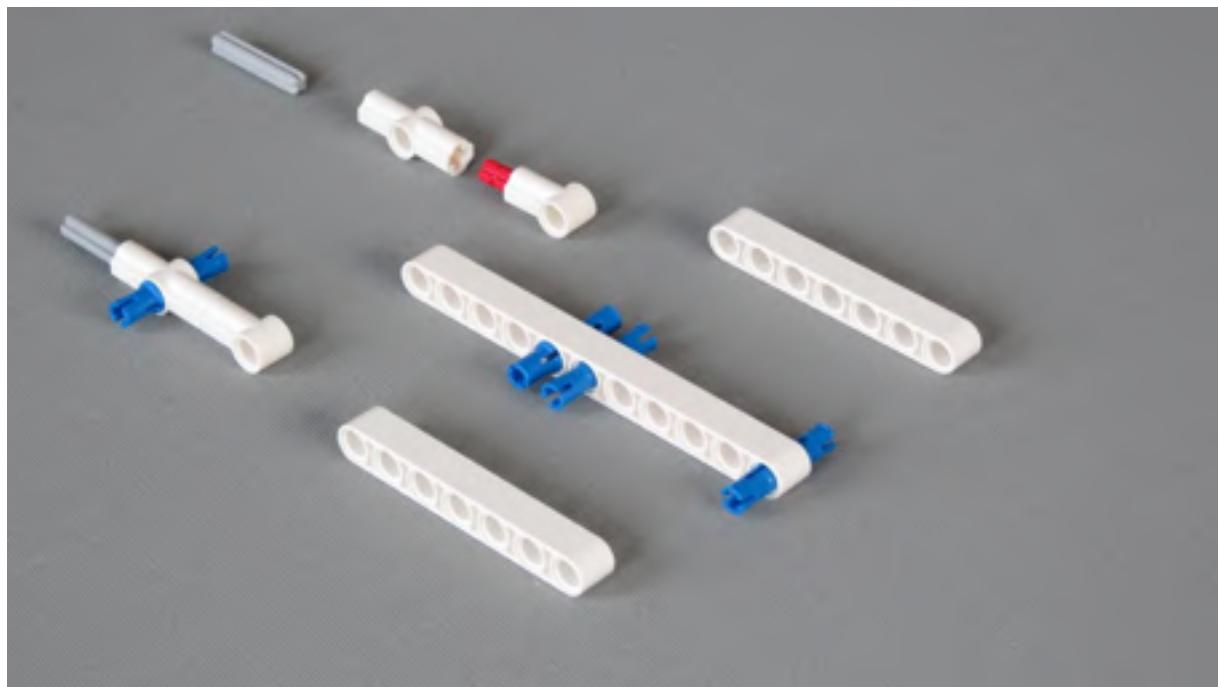

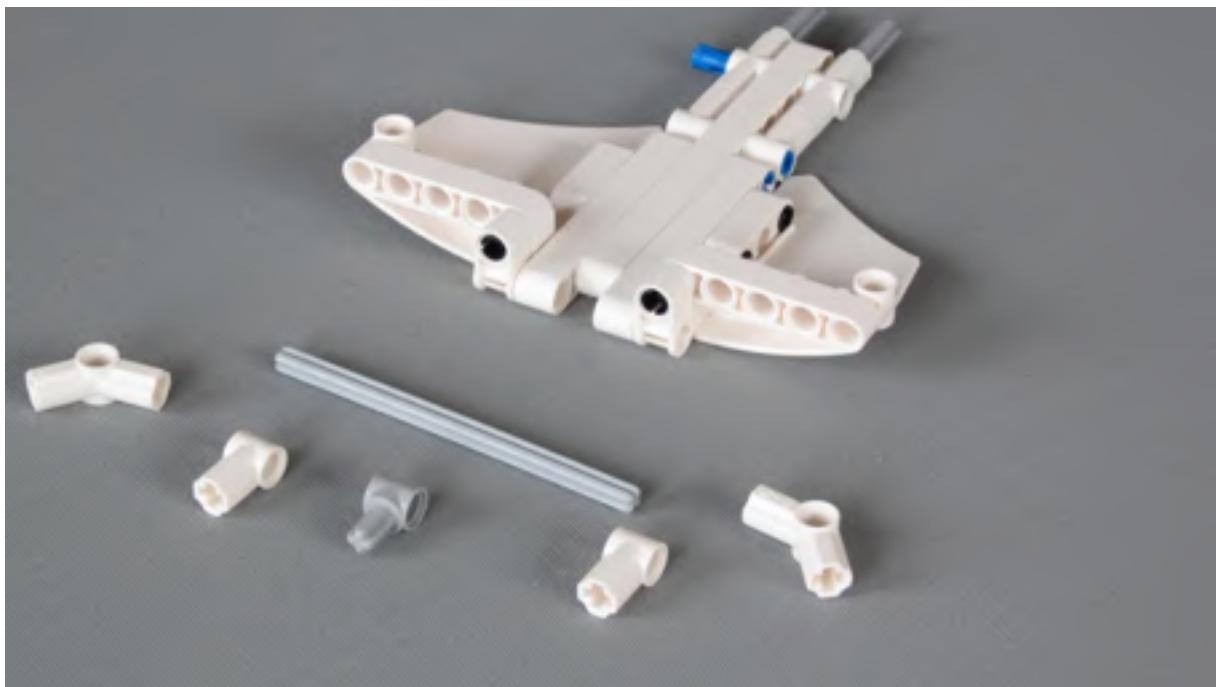

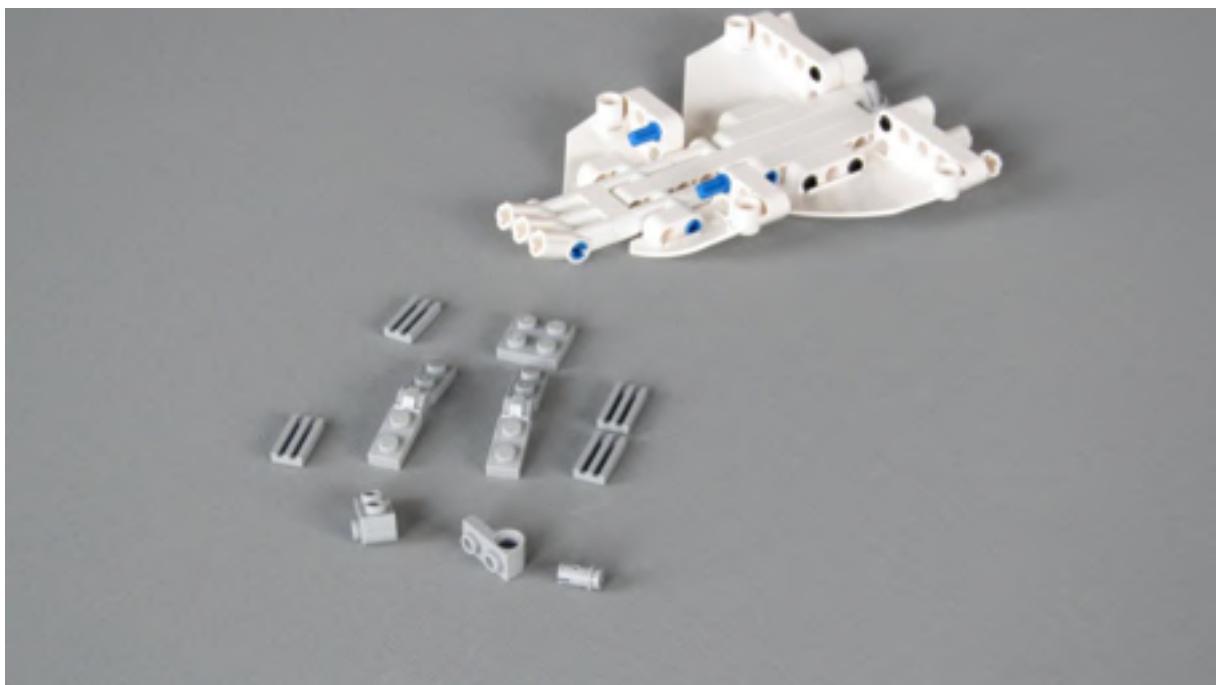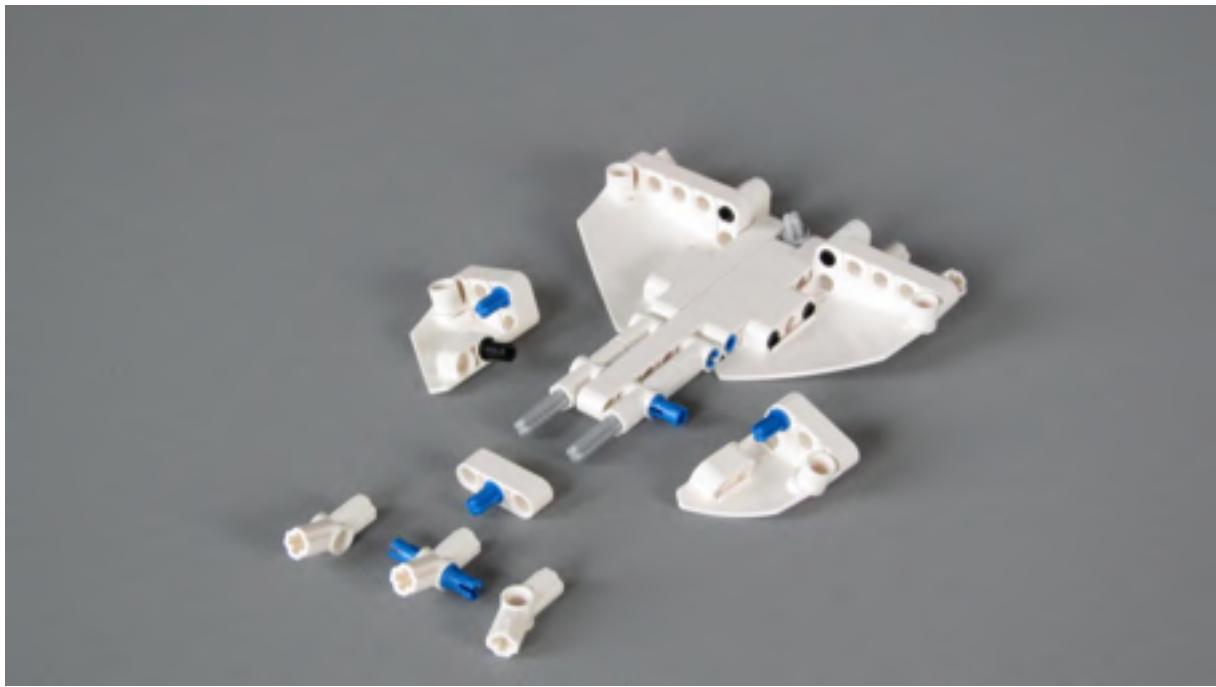





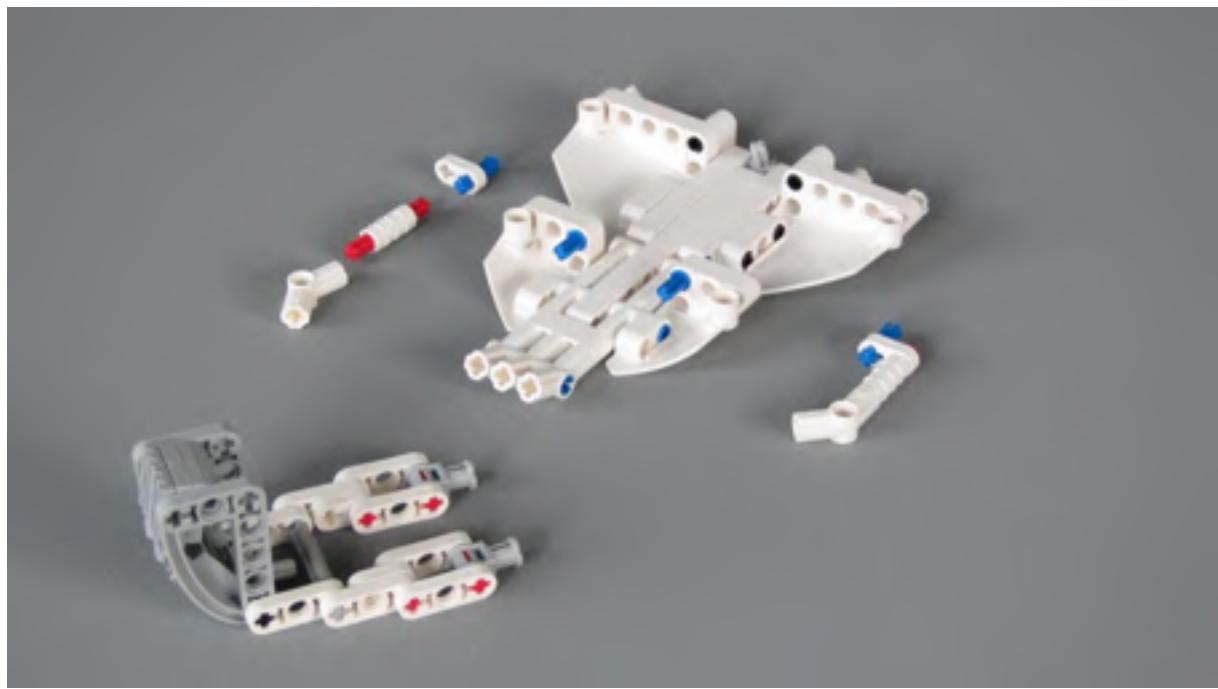




**Windscreen construction for manual (non-RC) chassis**

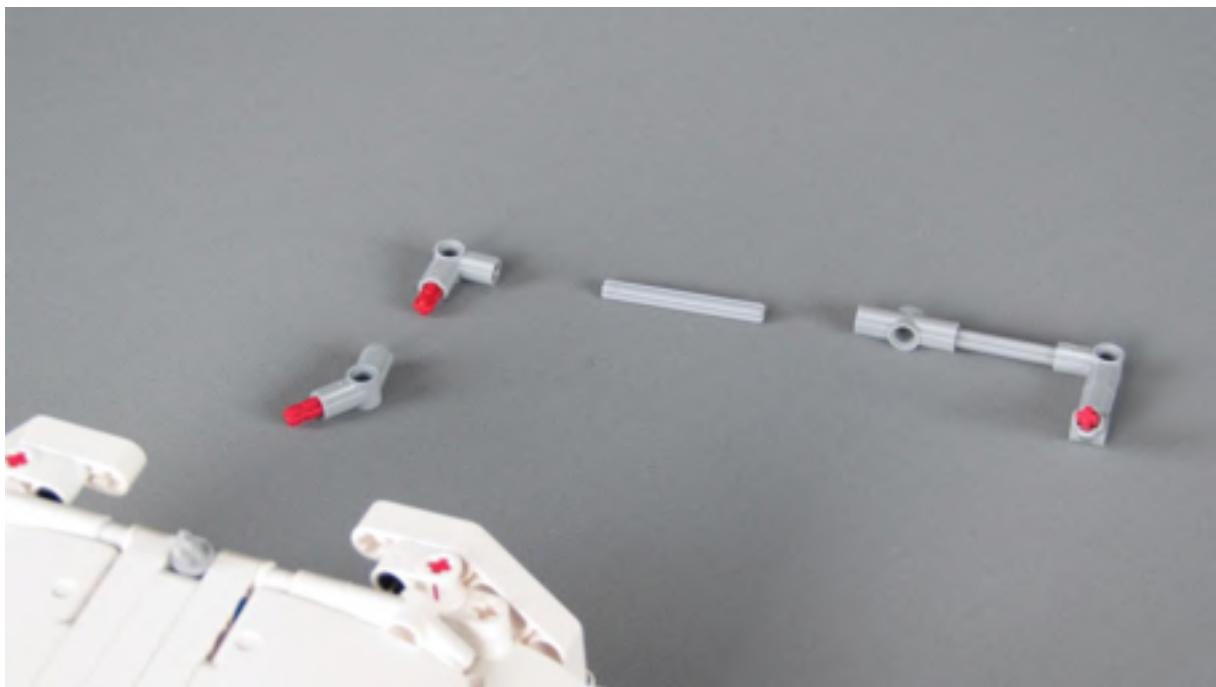


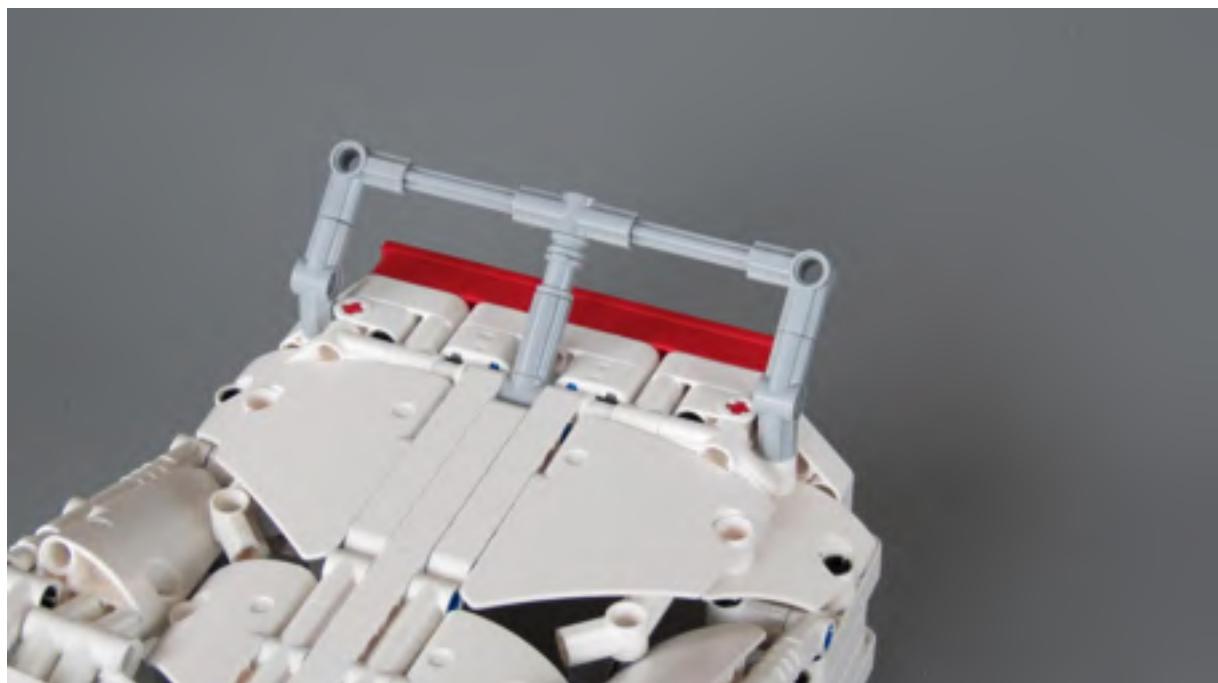

**End of windscreen construction for manual (non-RC) chassis**



**Windscreen construction for RC chassis**


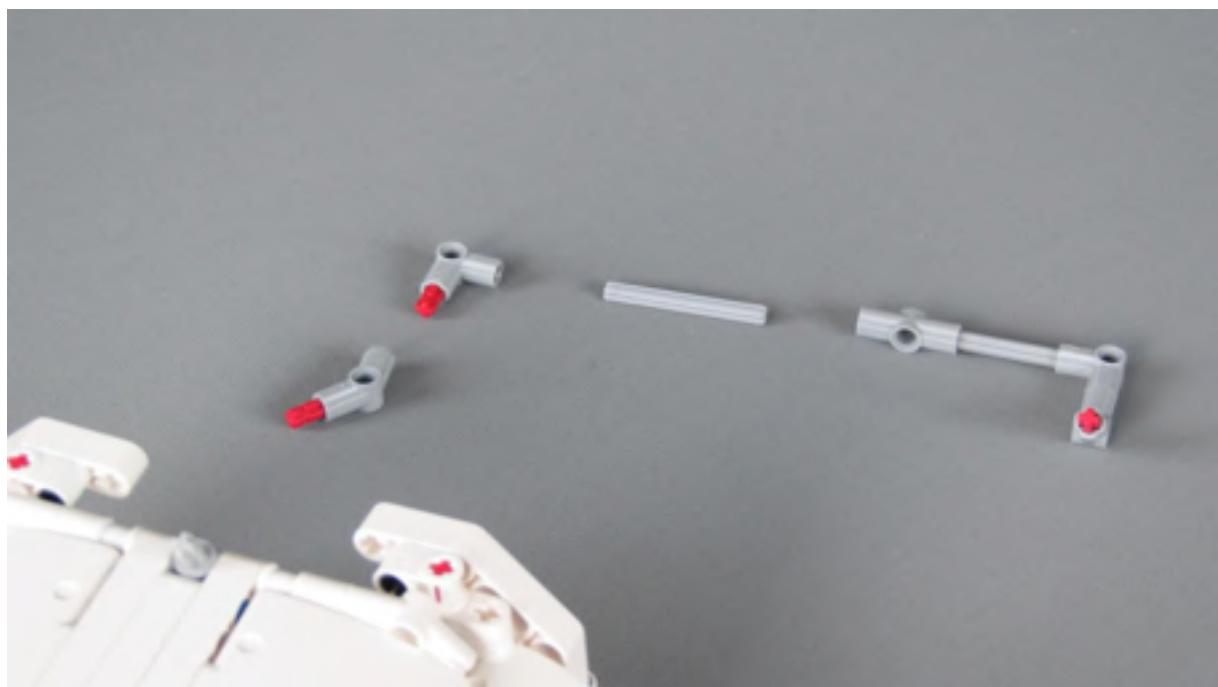



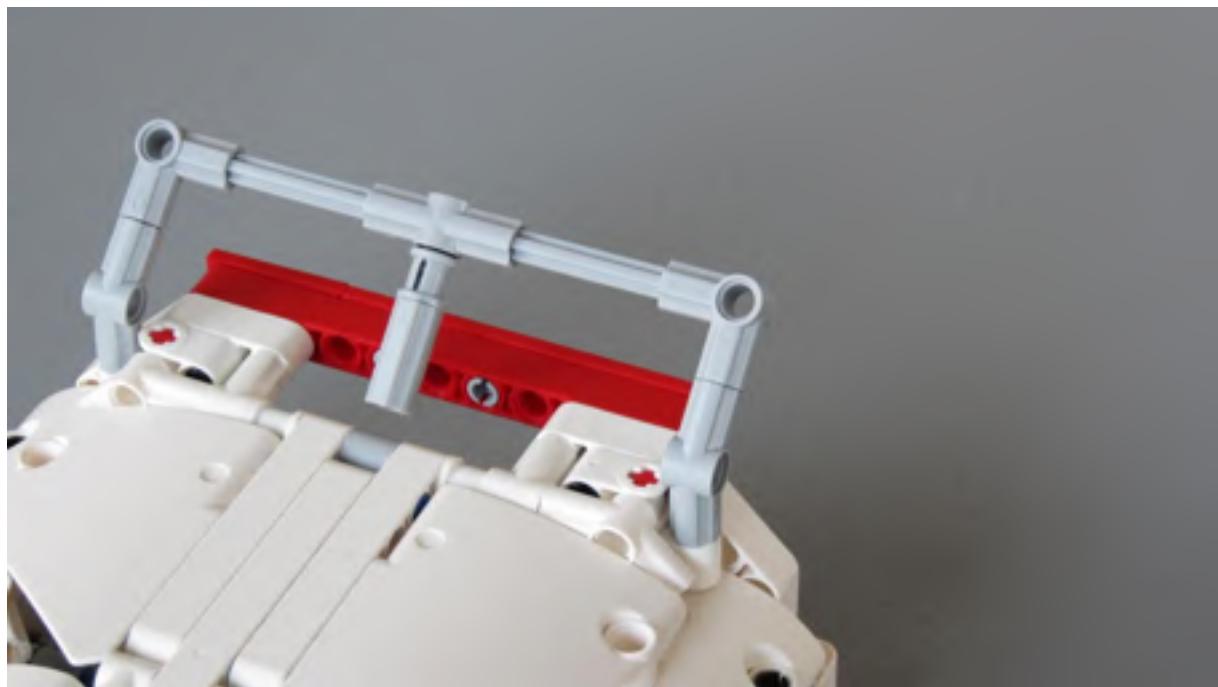


**End of windscreen construction for RC chassis**



**Continuation general instructions bodywork**

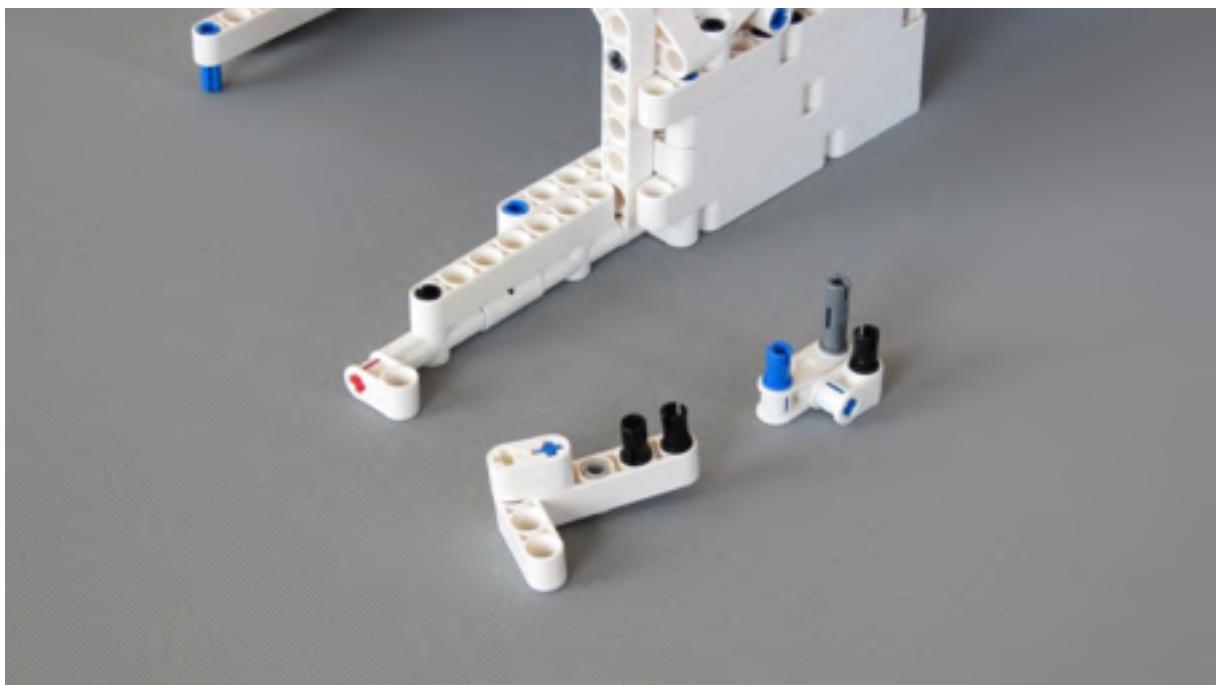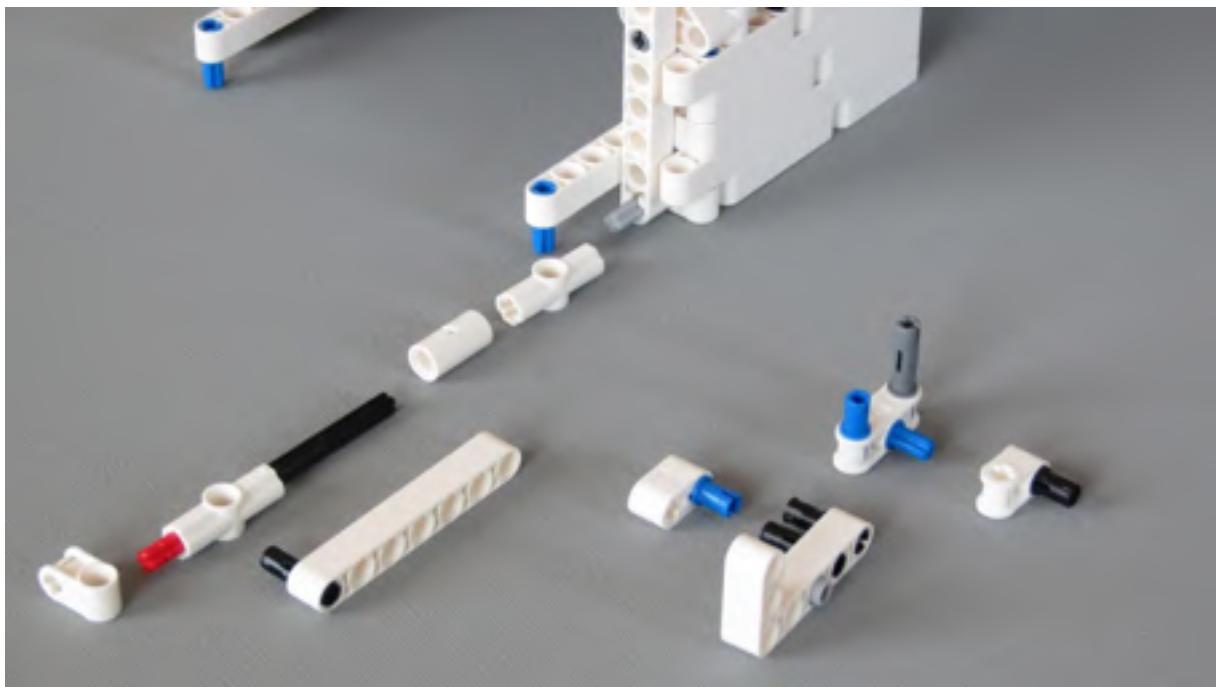


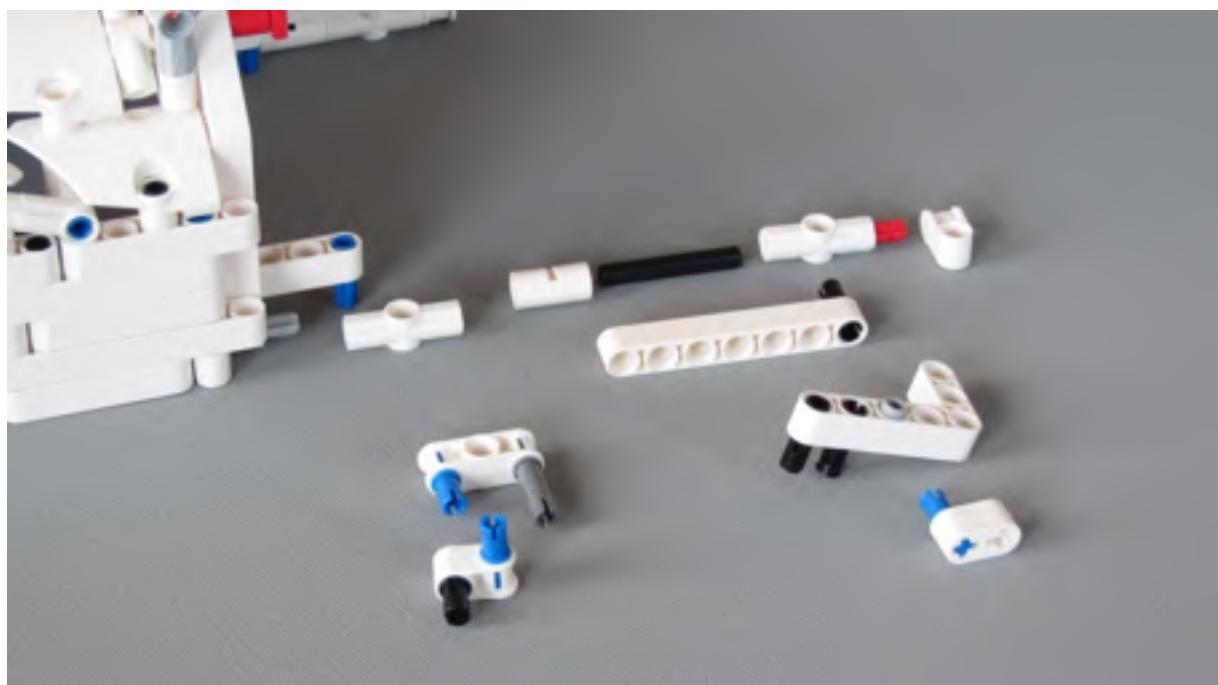
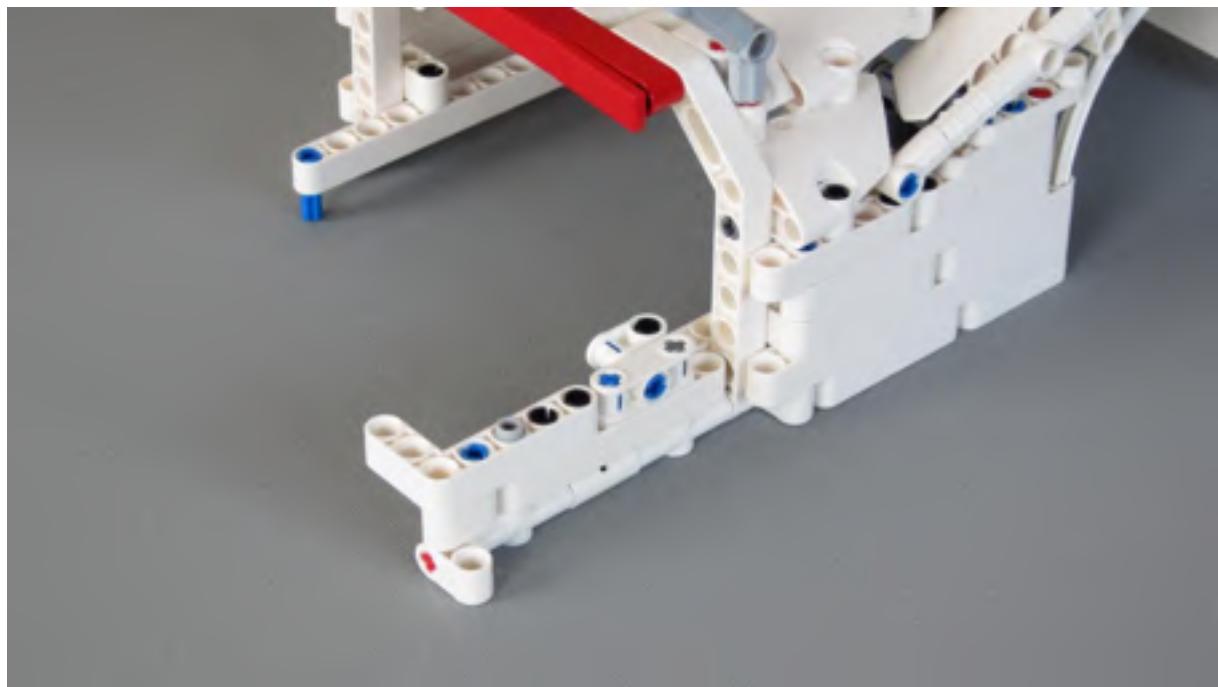


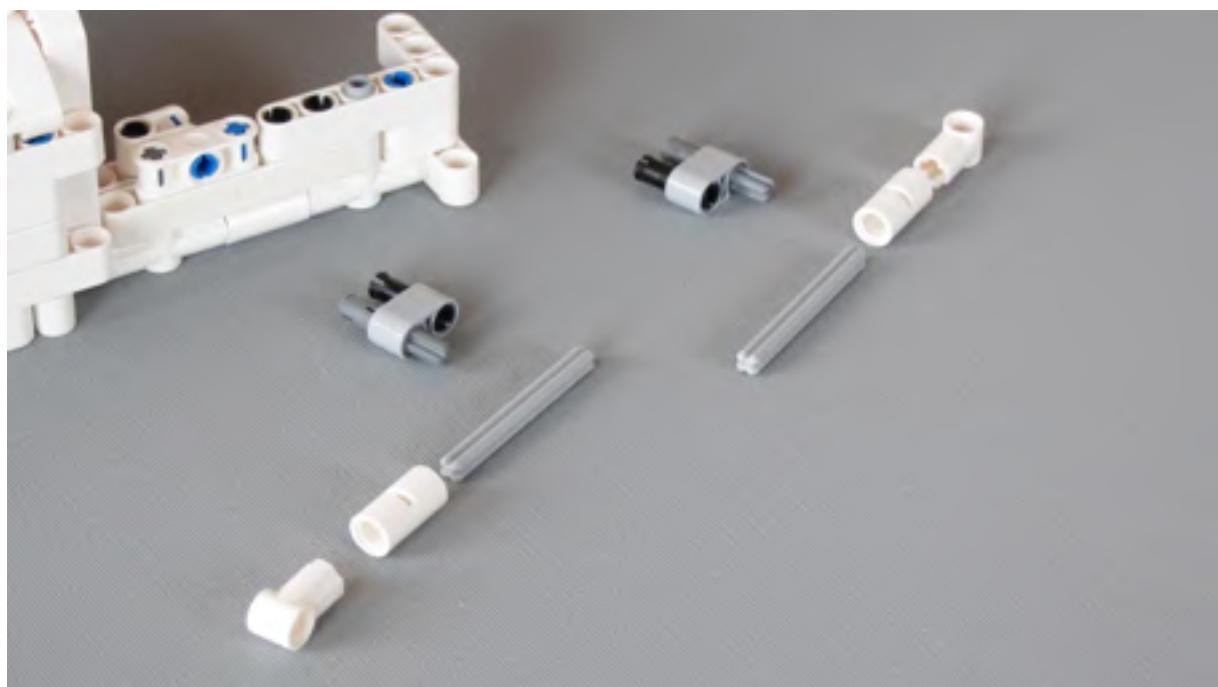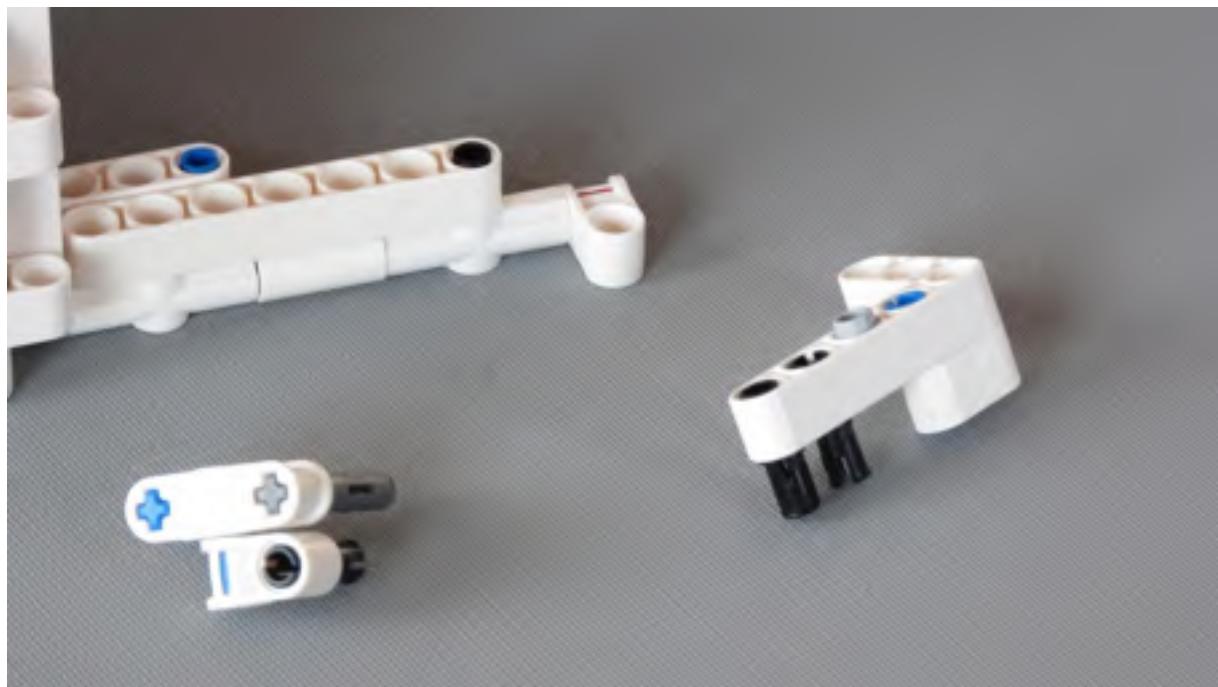






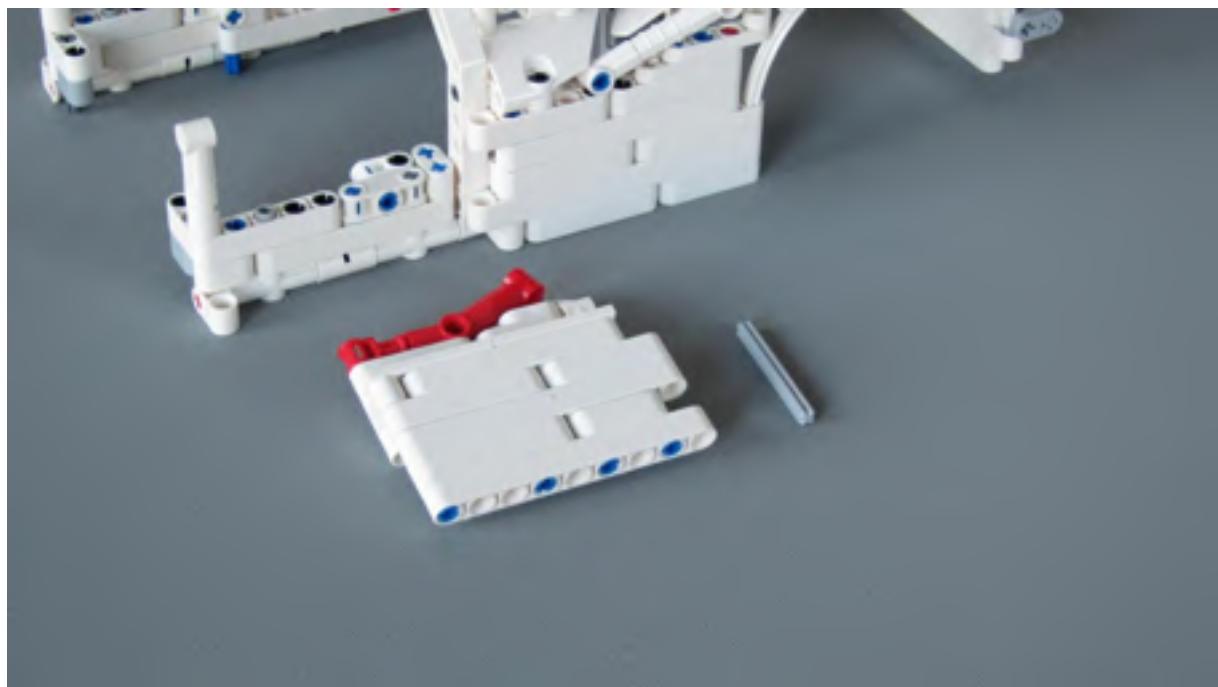
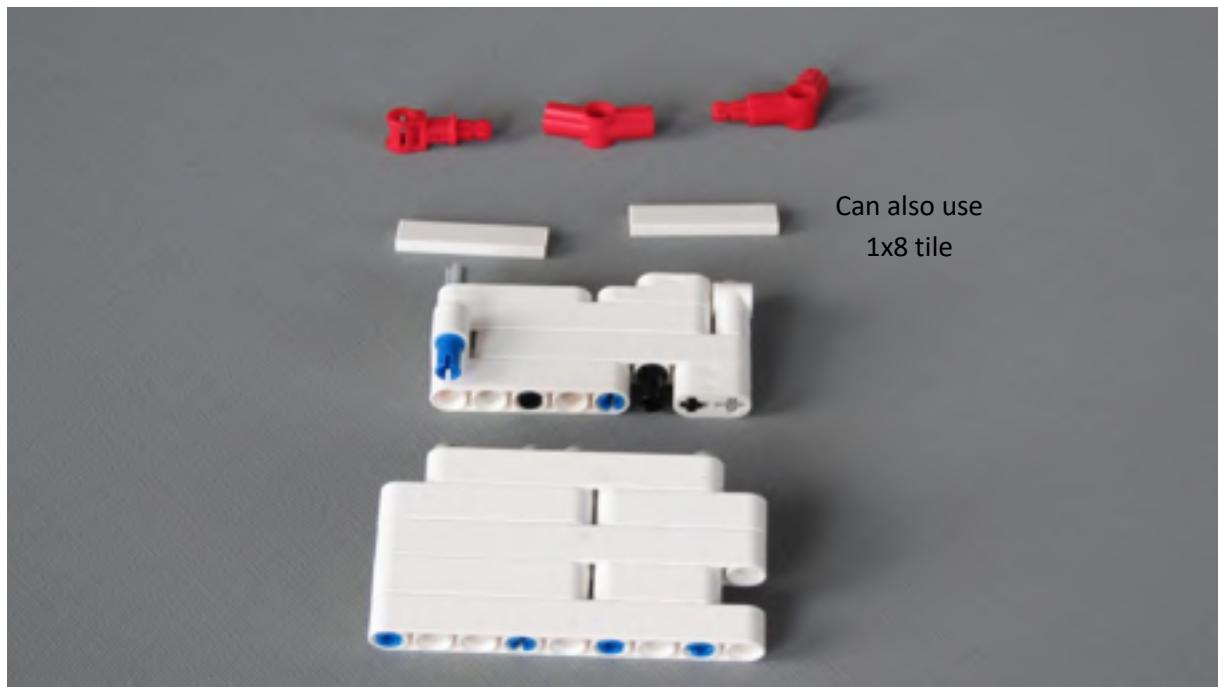


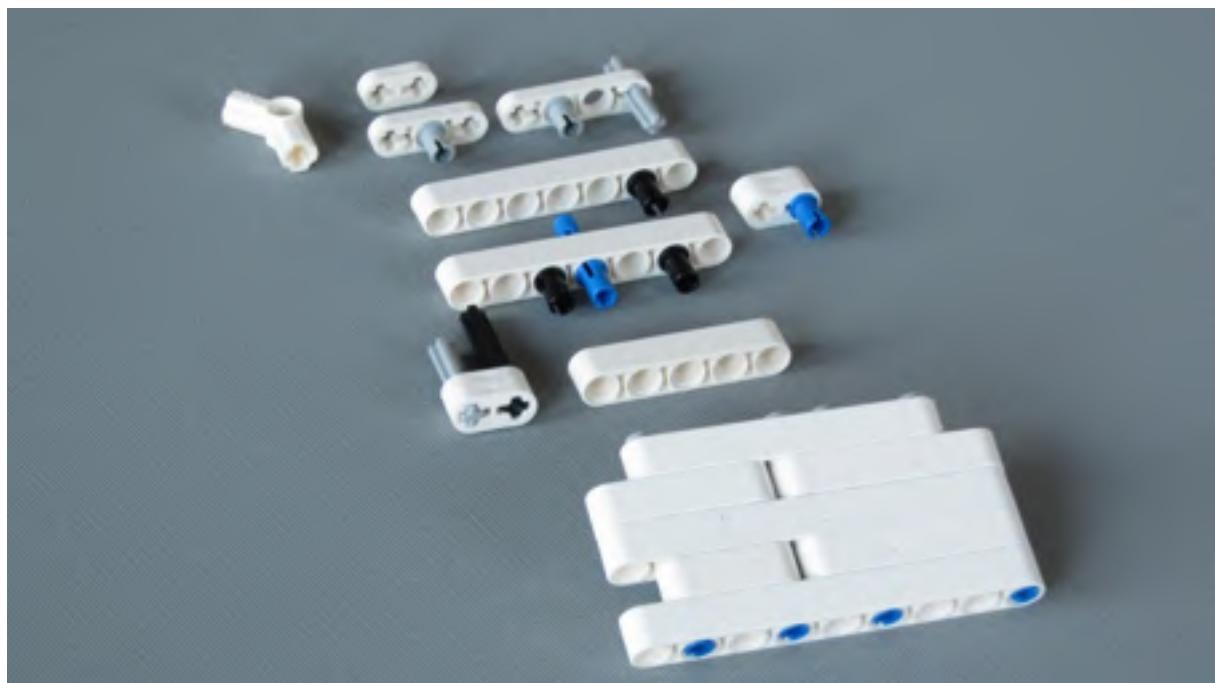


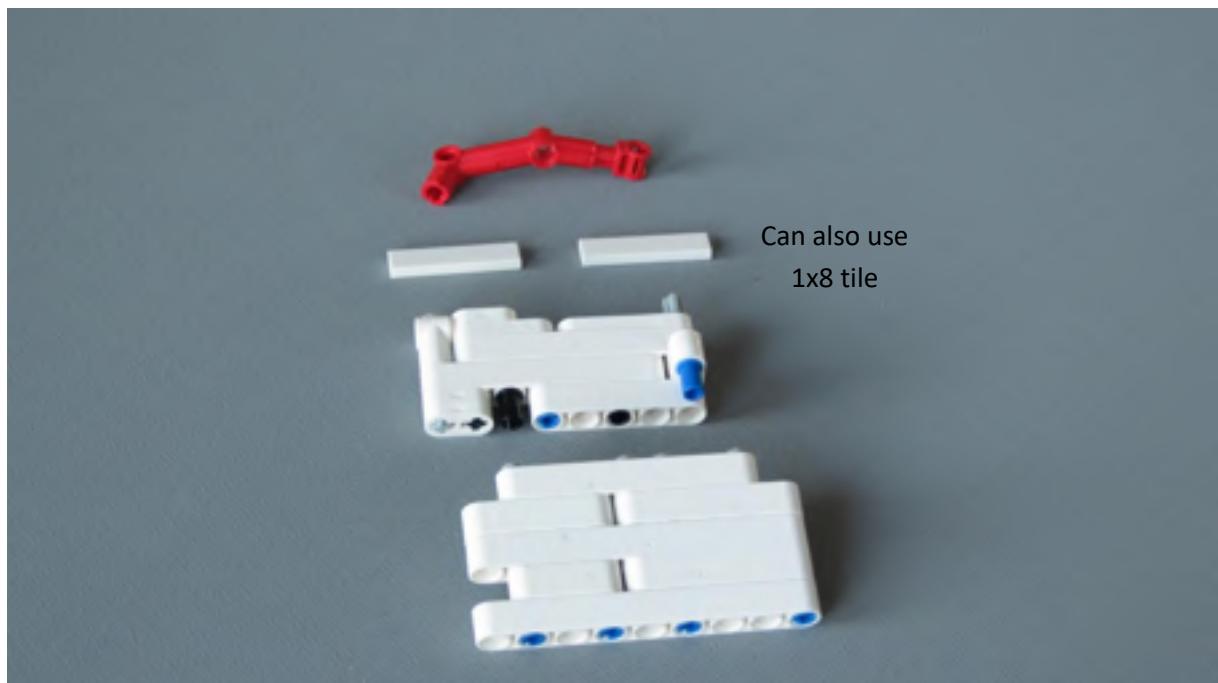
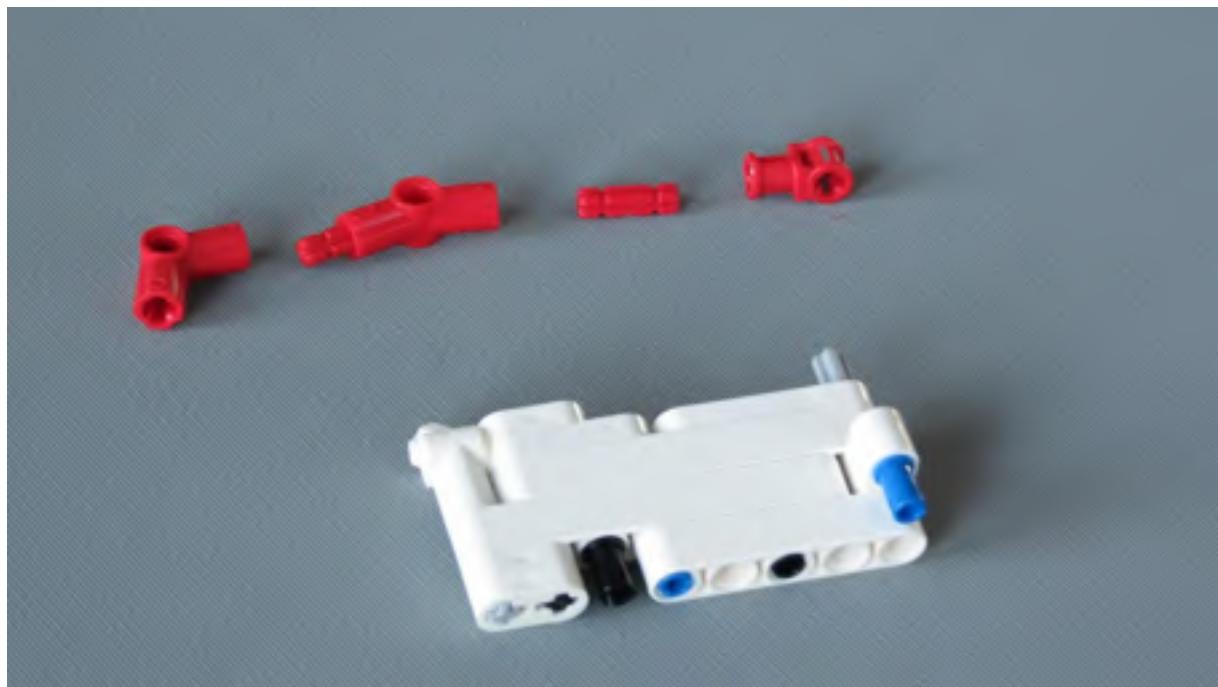



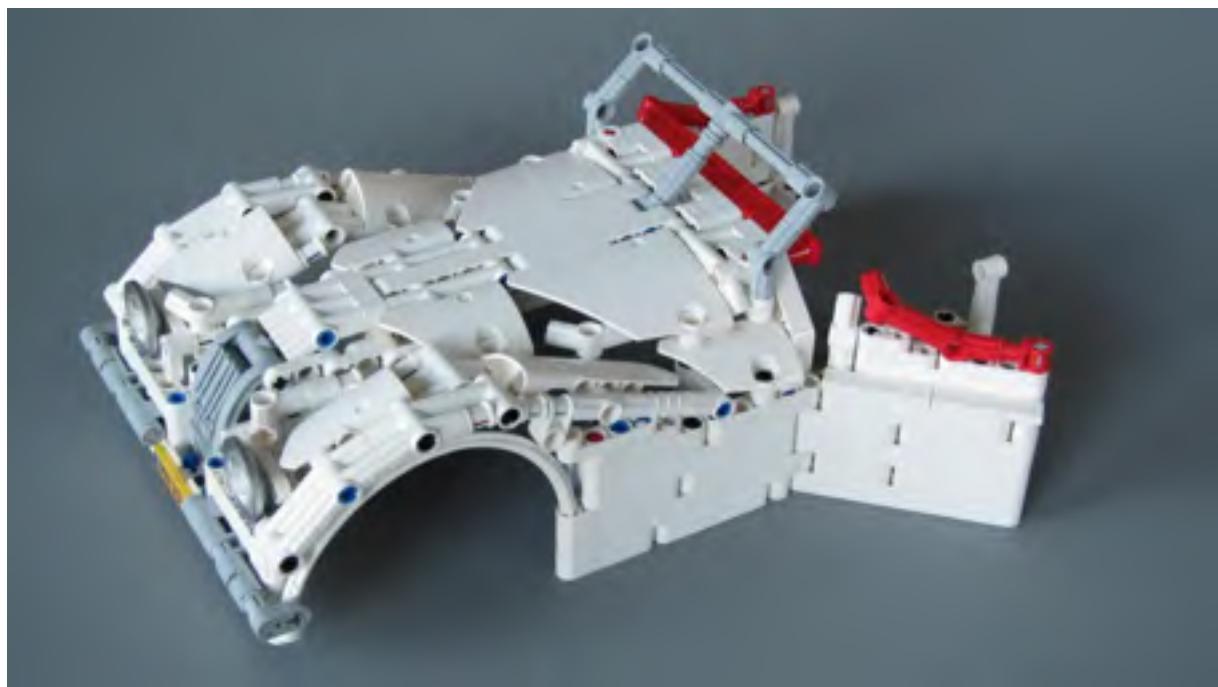


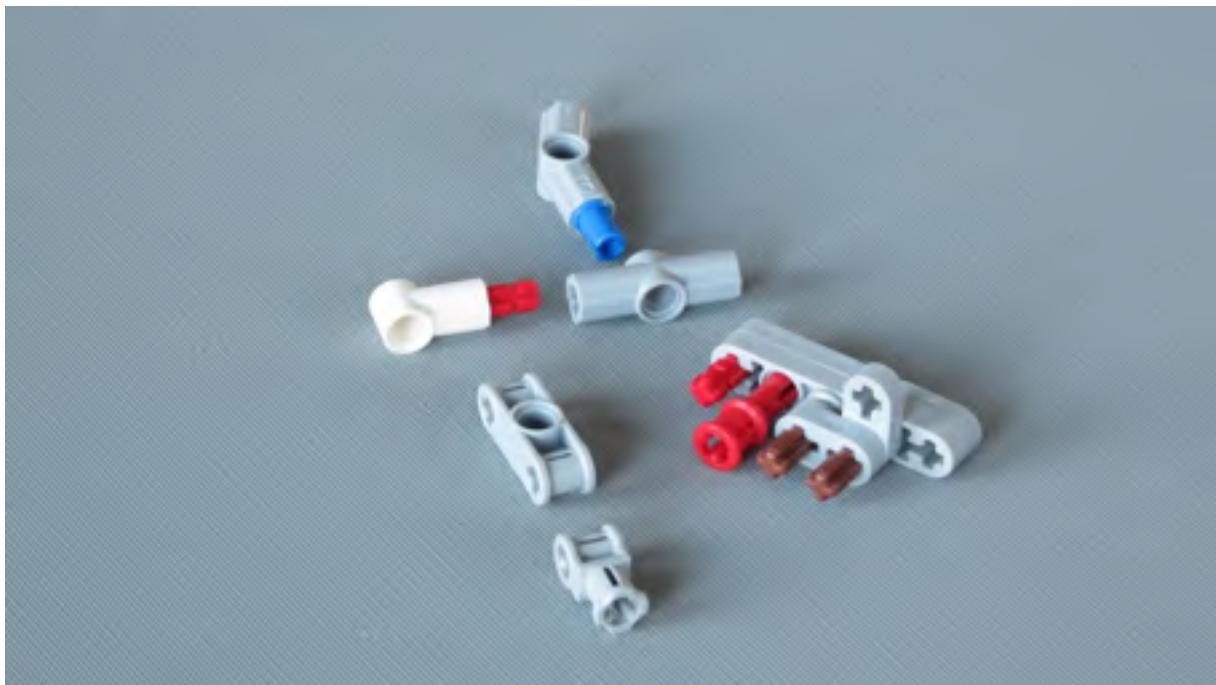
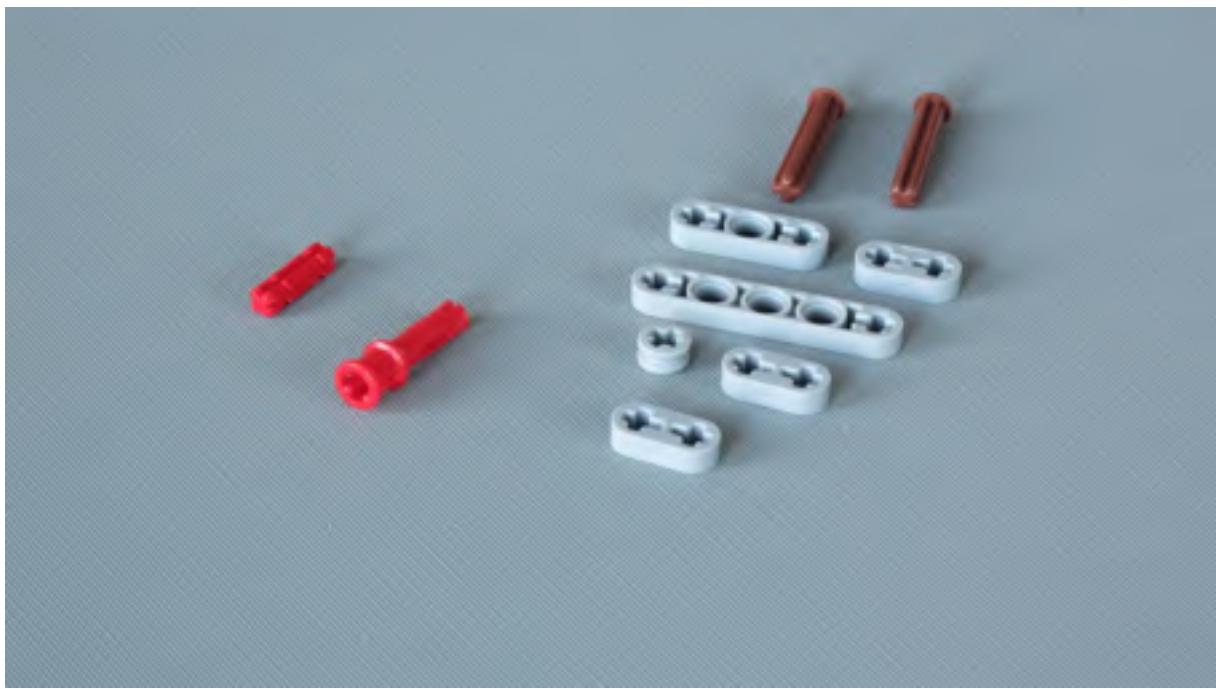


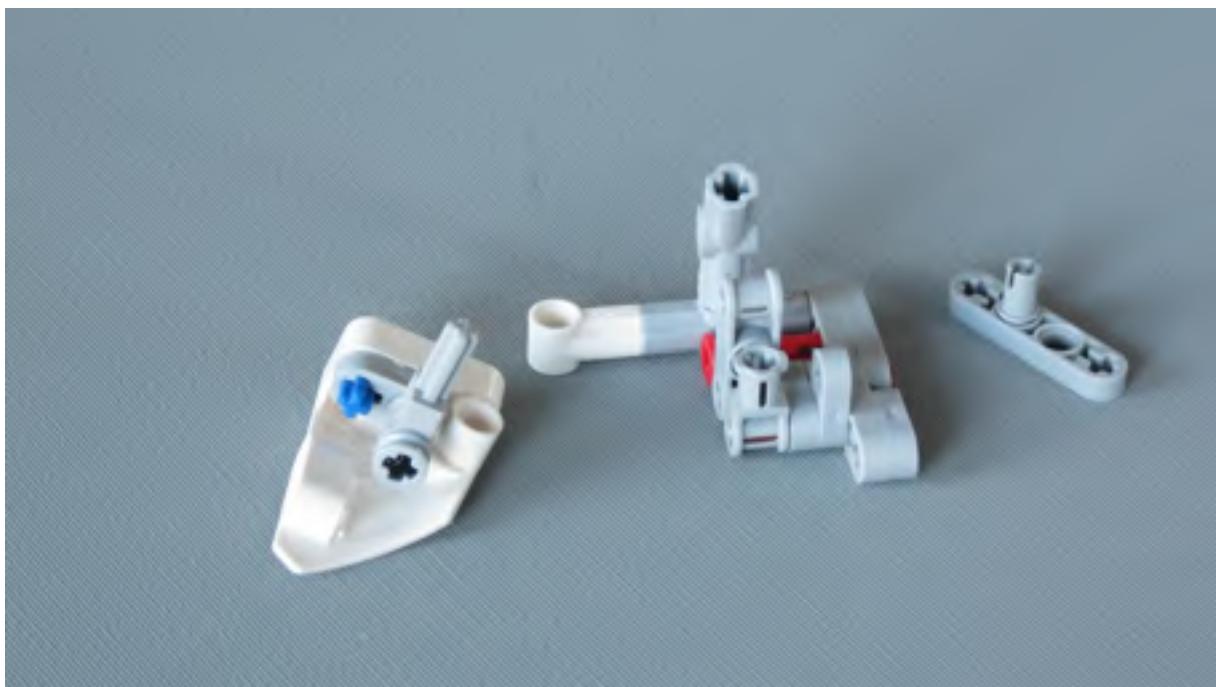
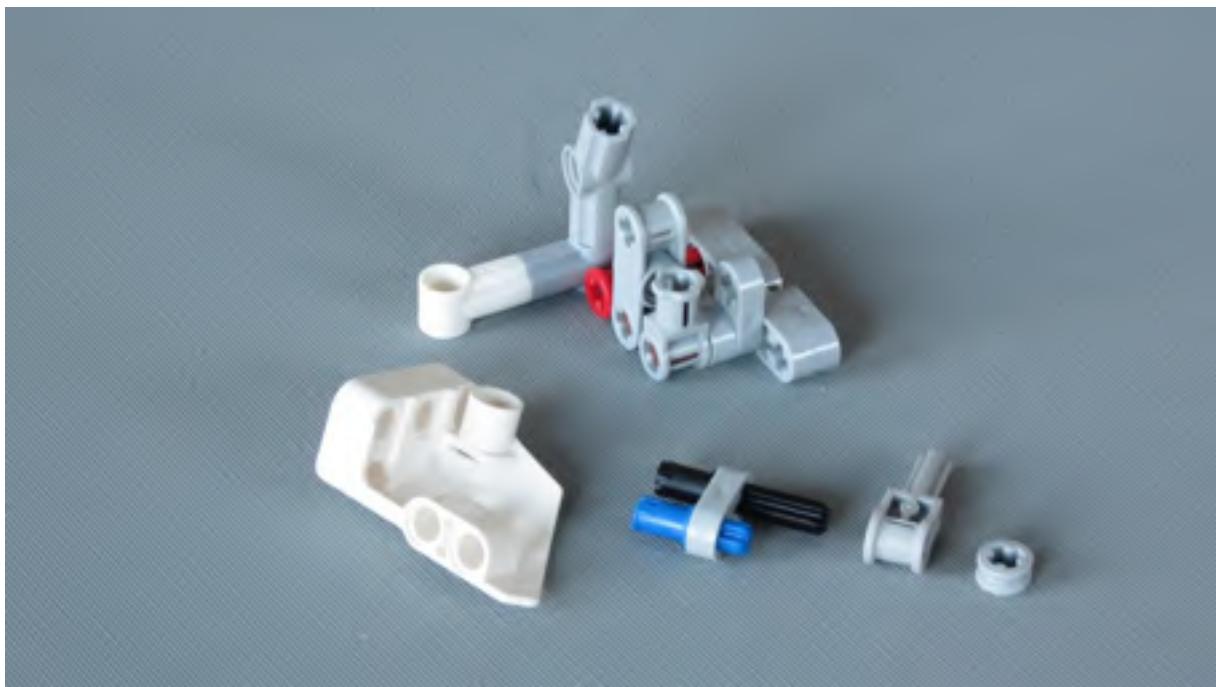



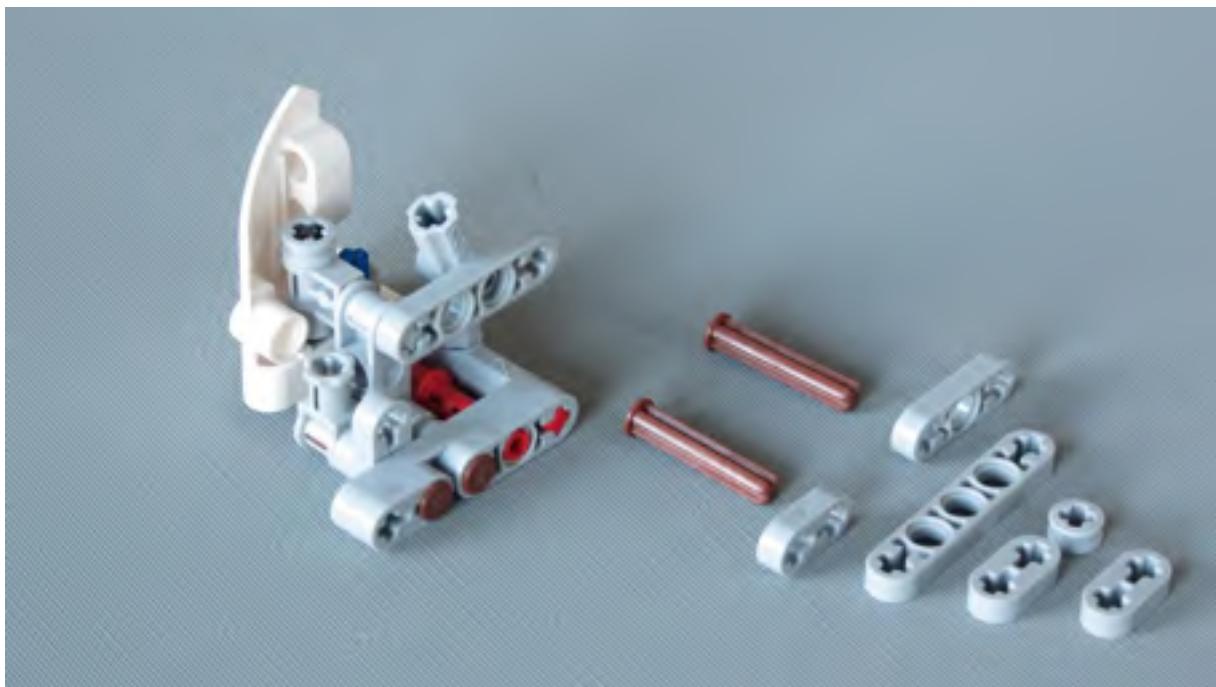


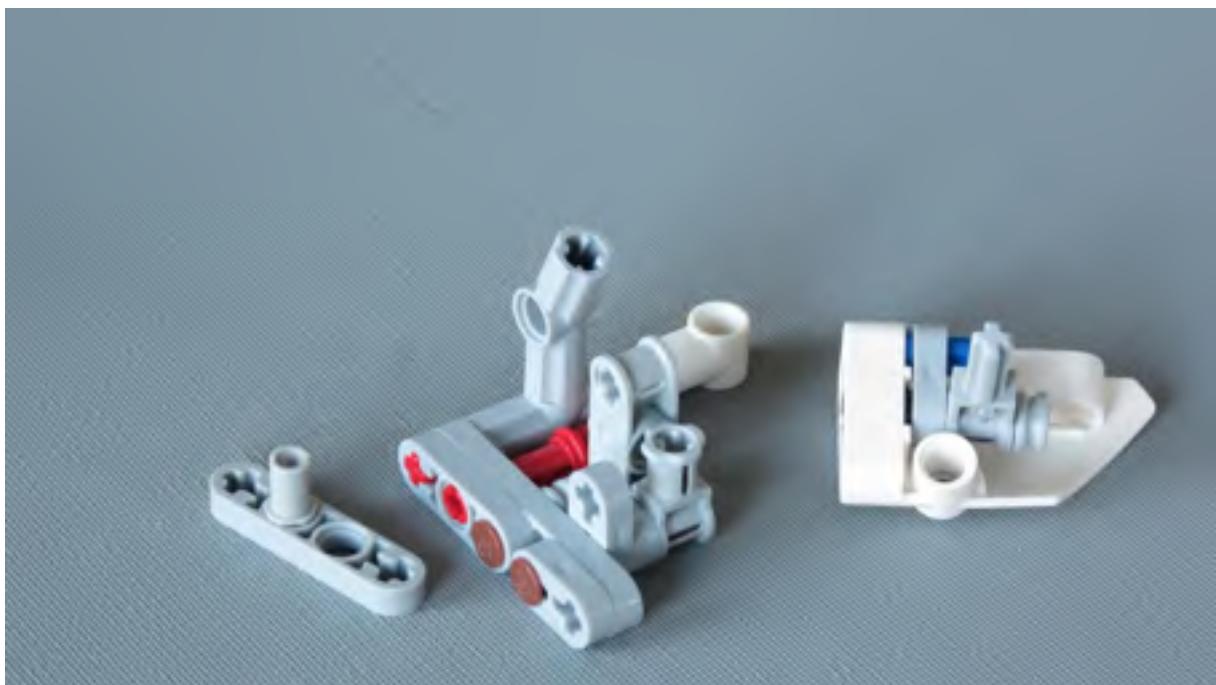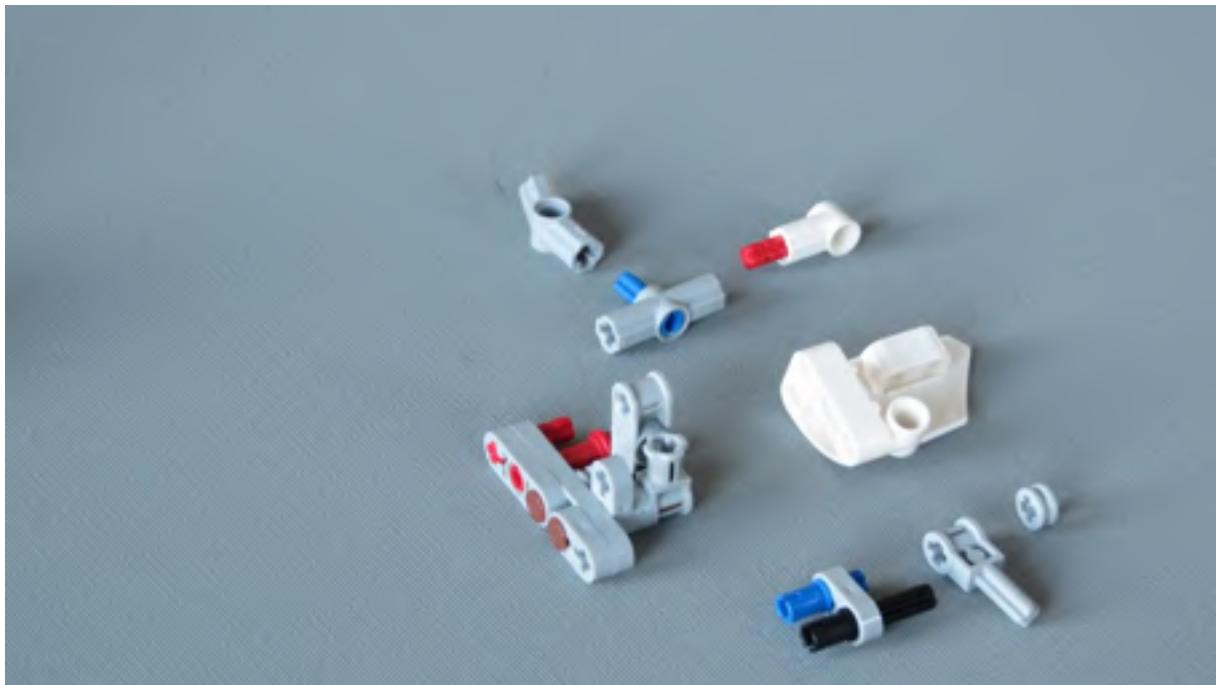


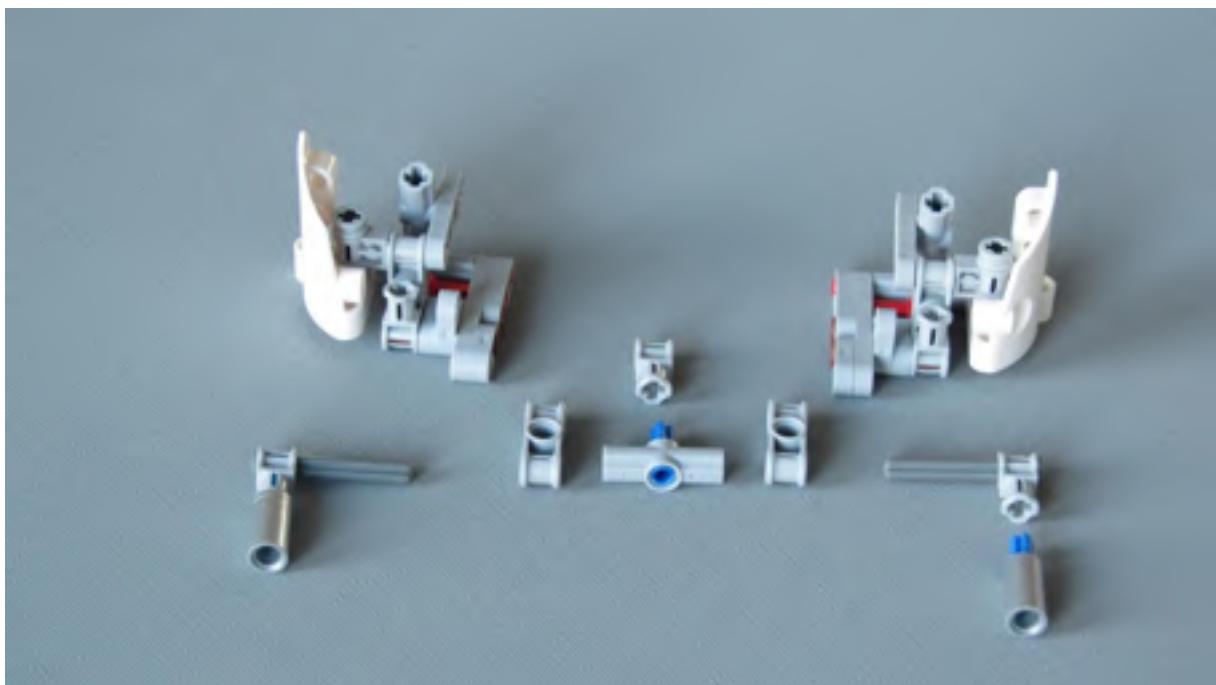
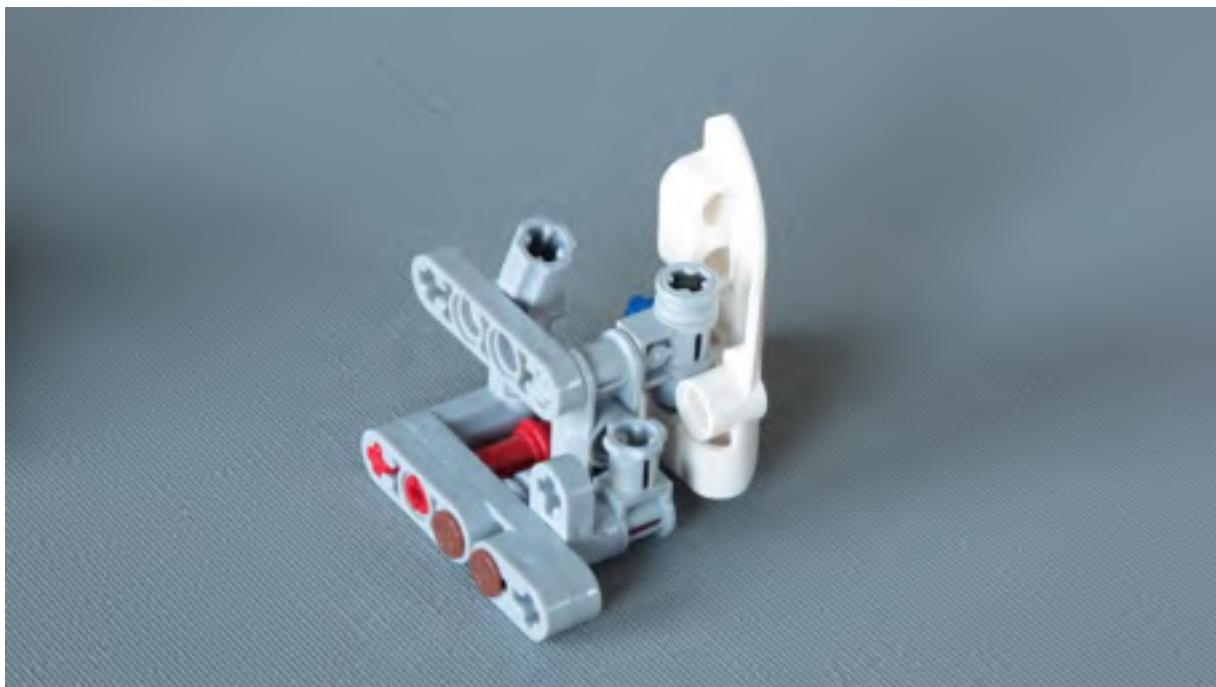


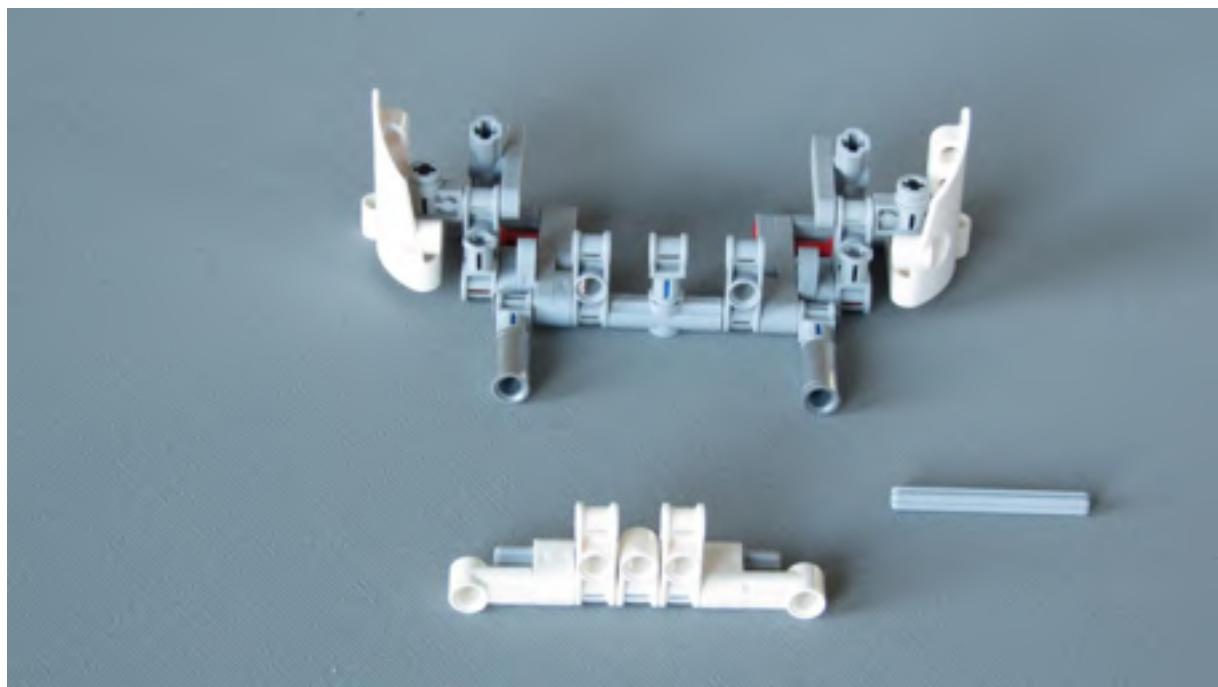
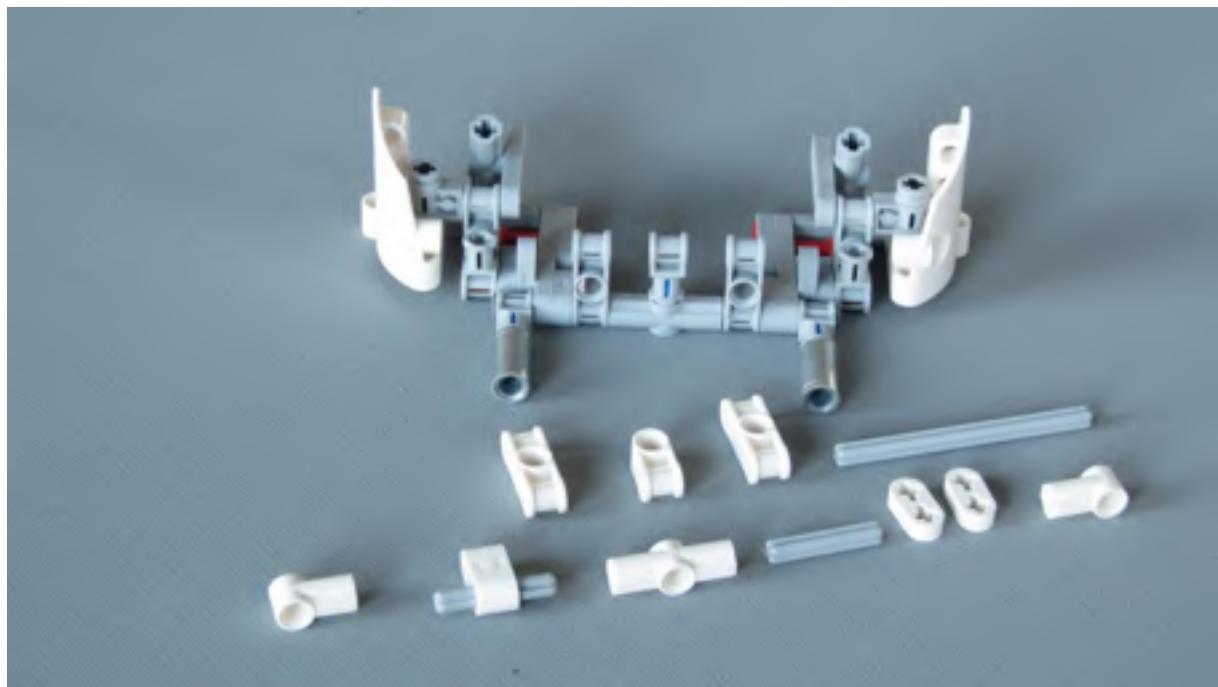


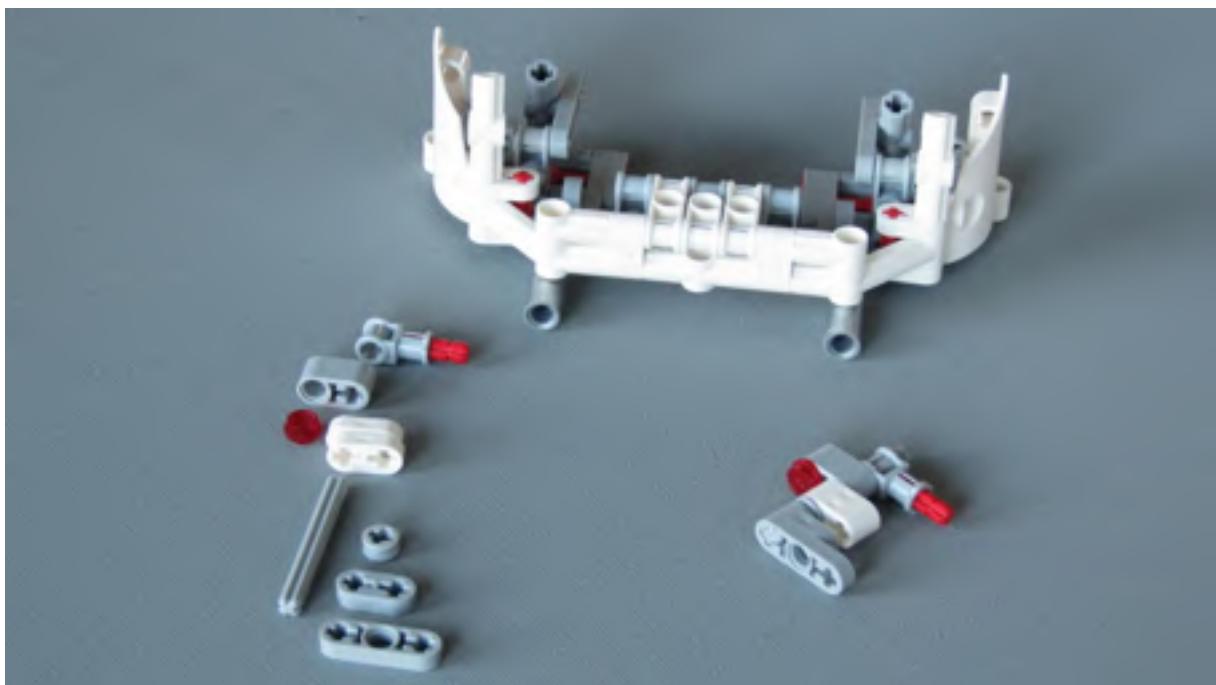
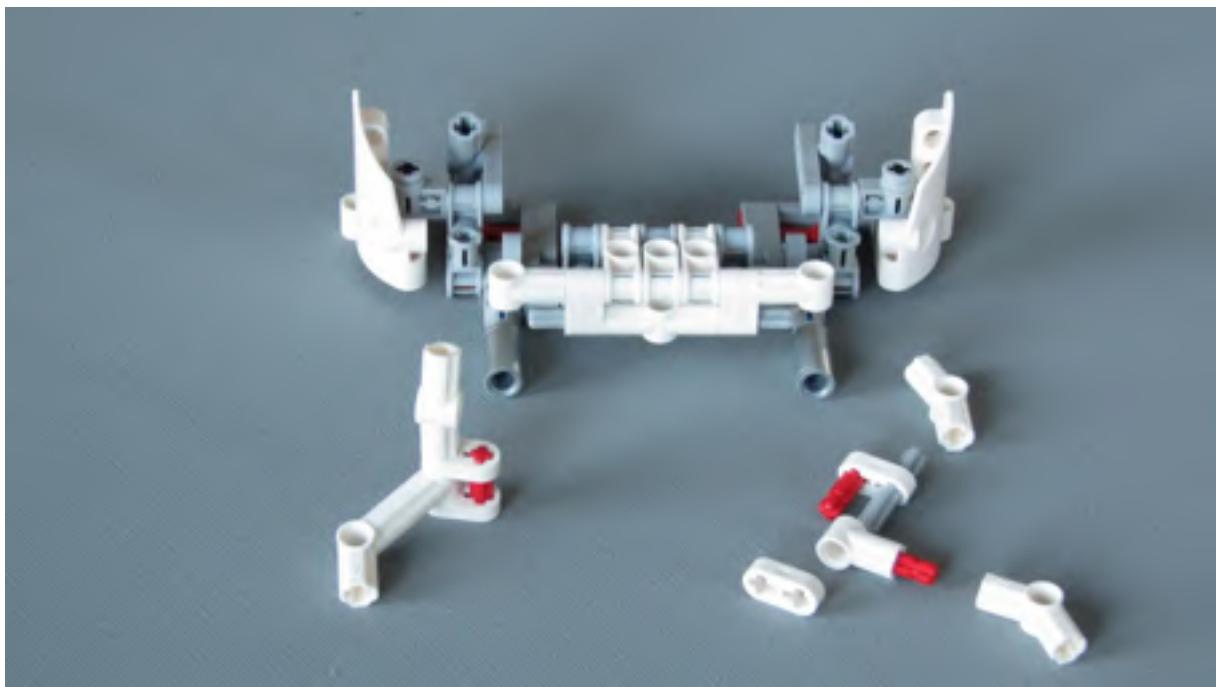


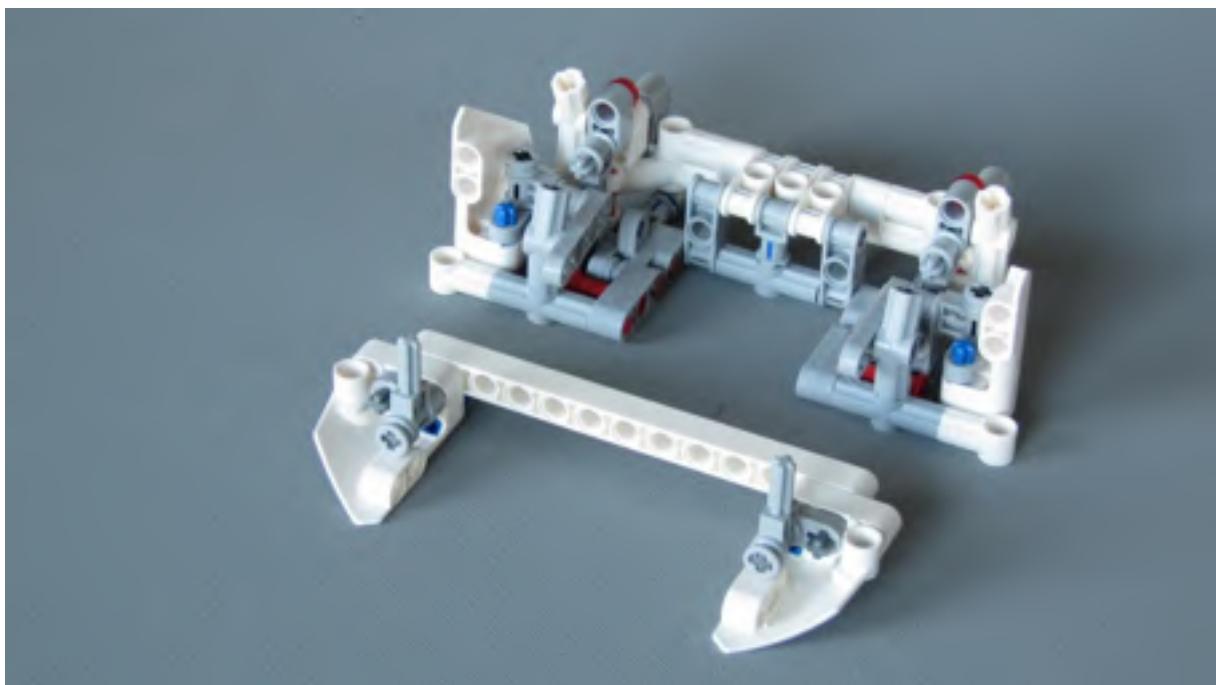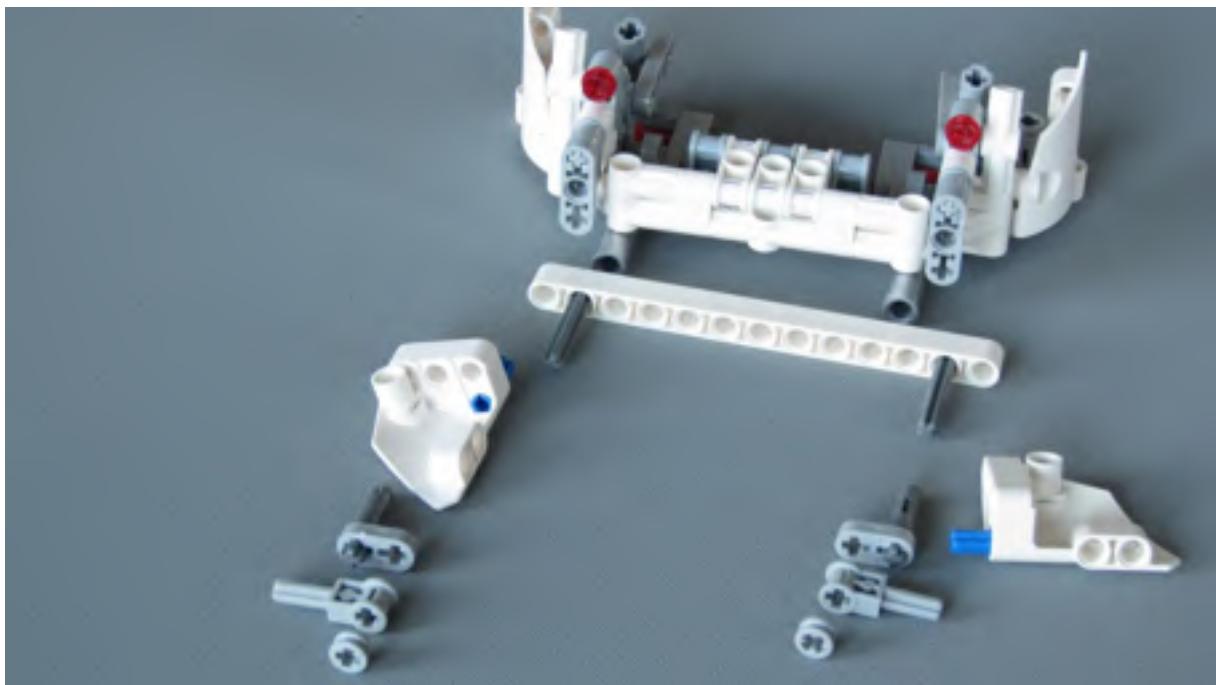


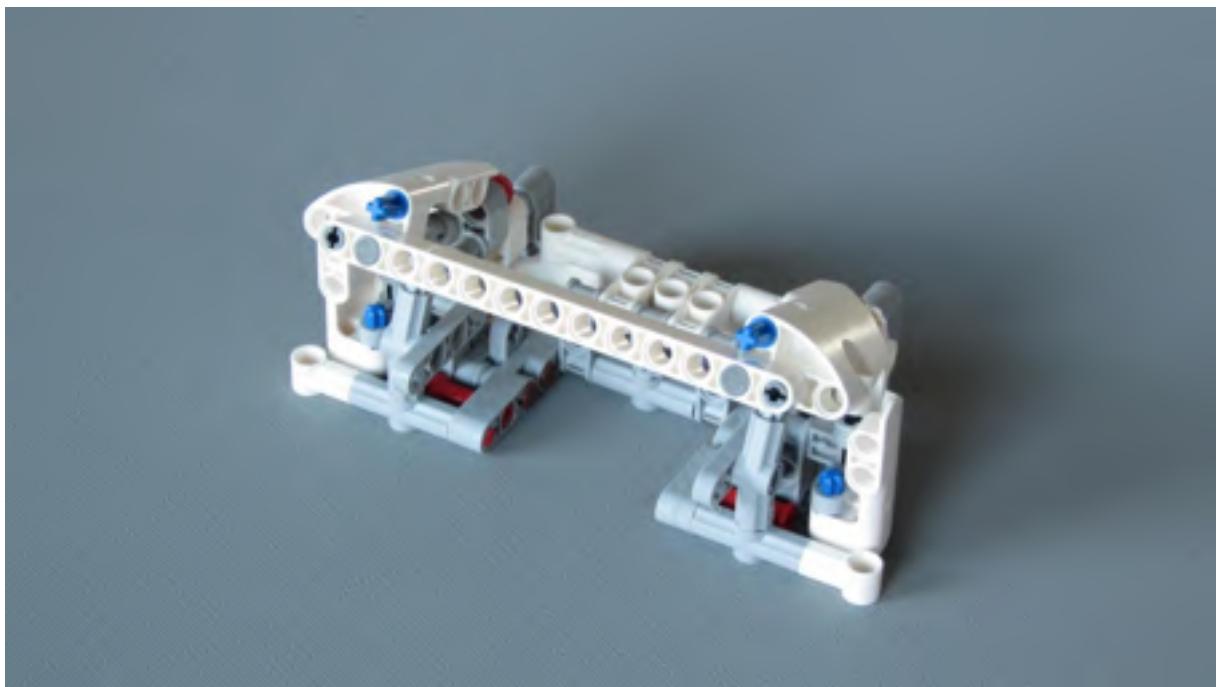


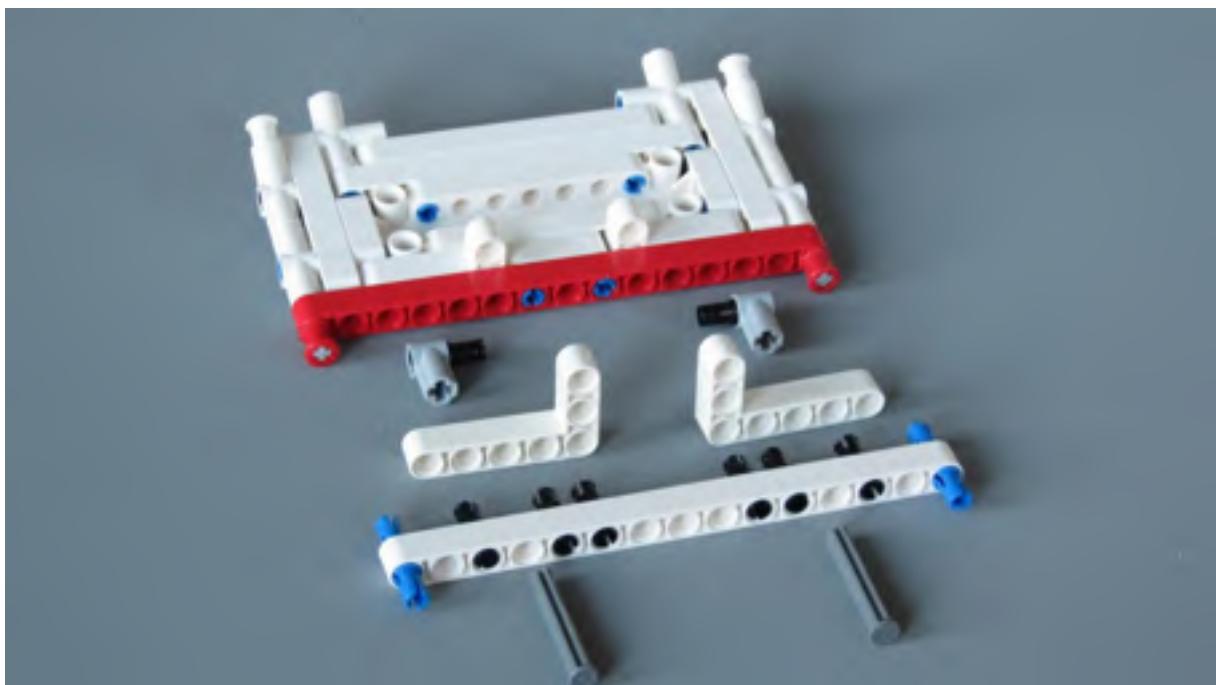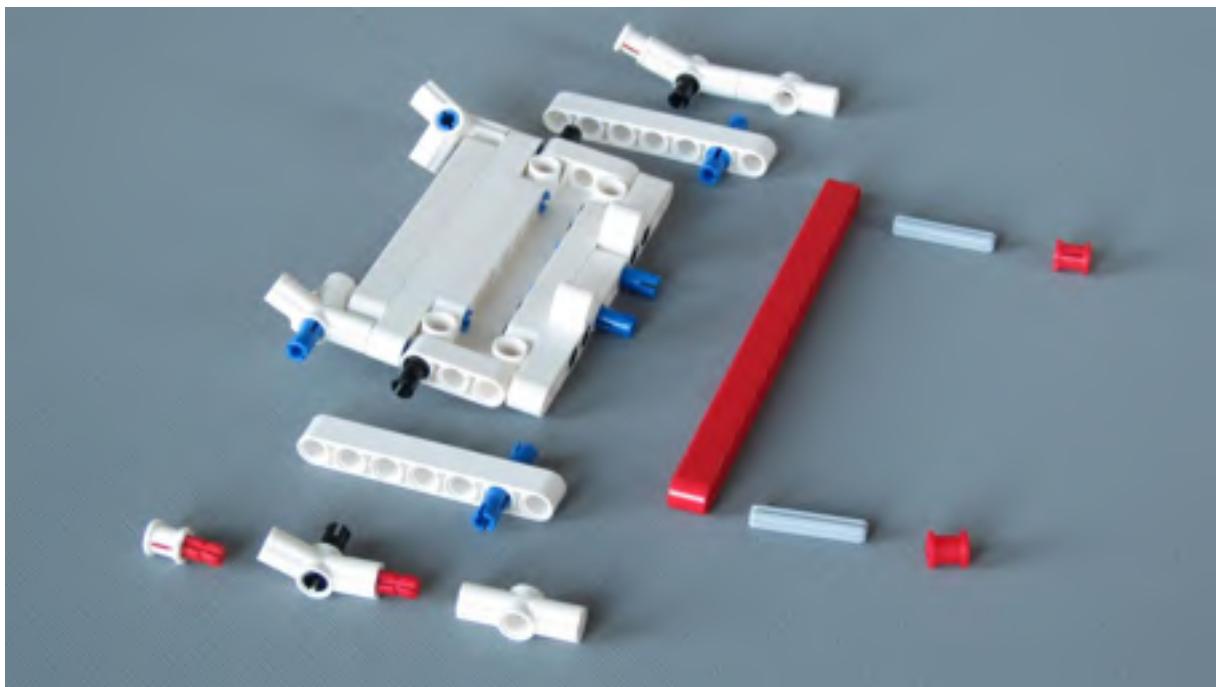

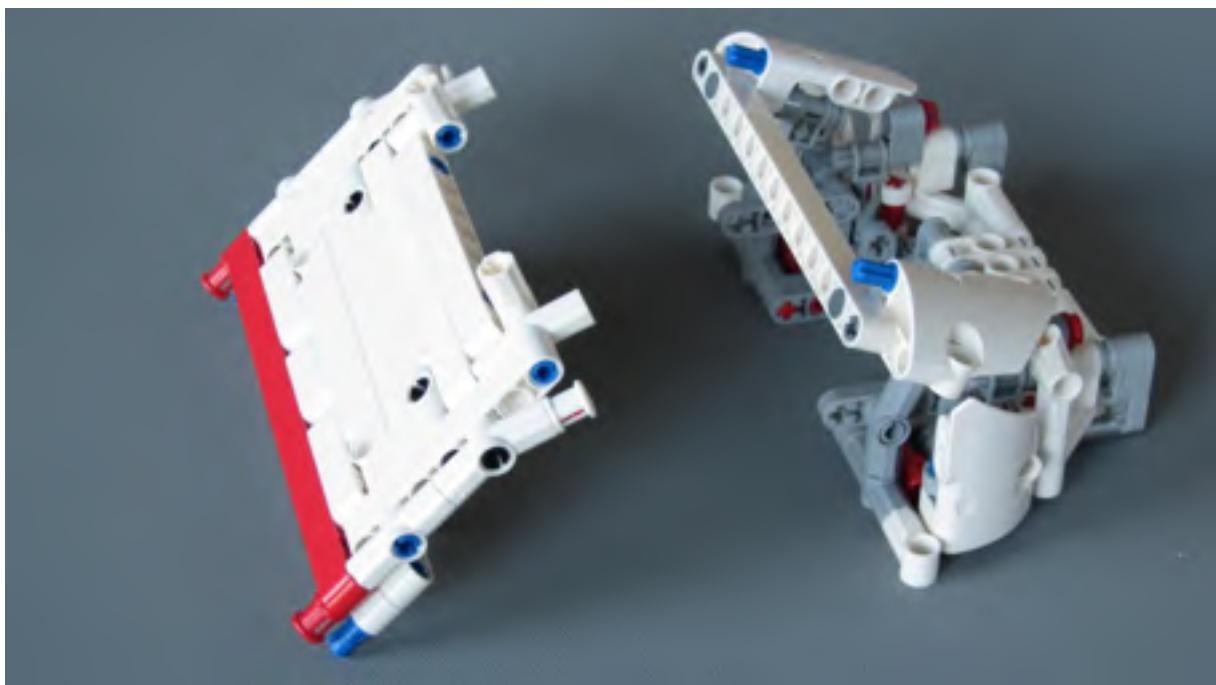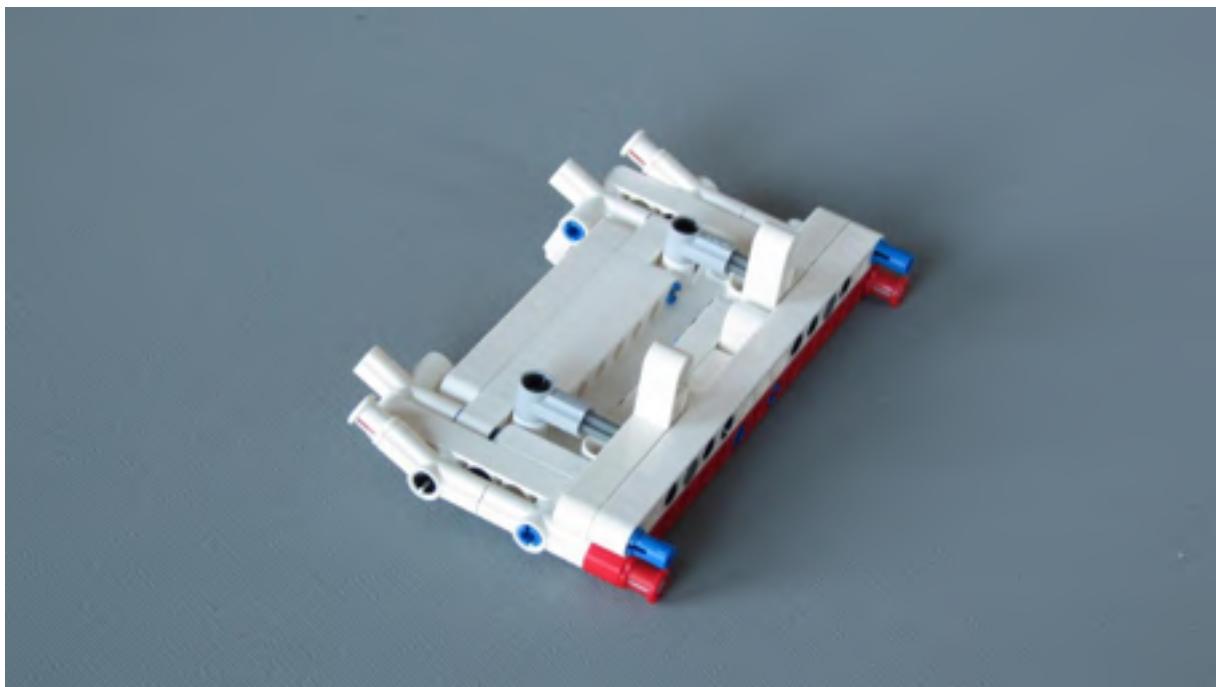

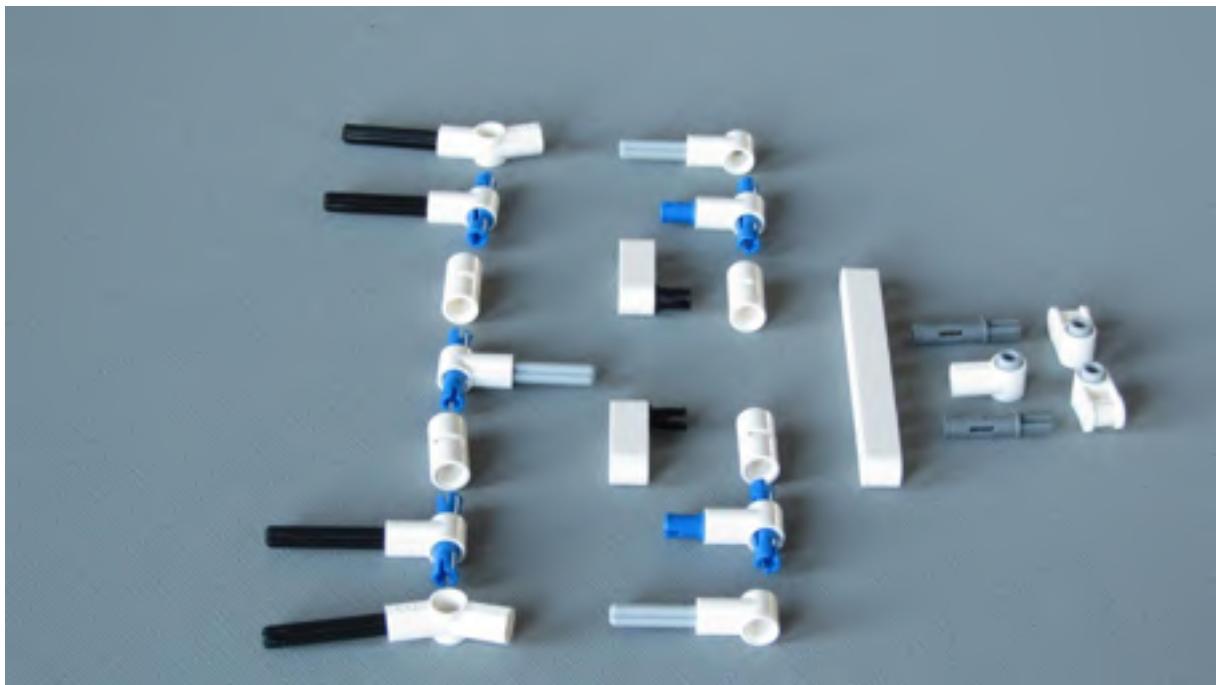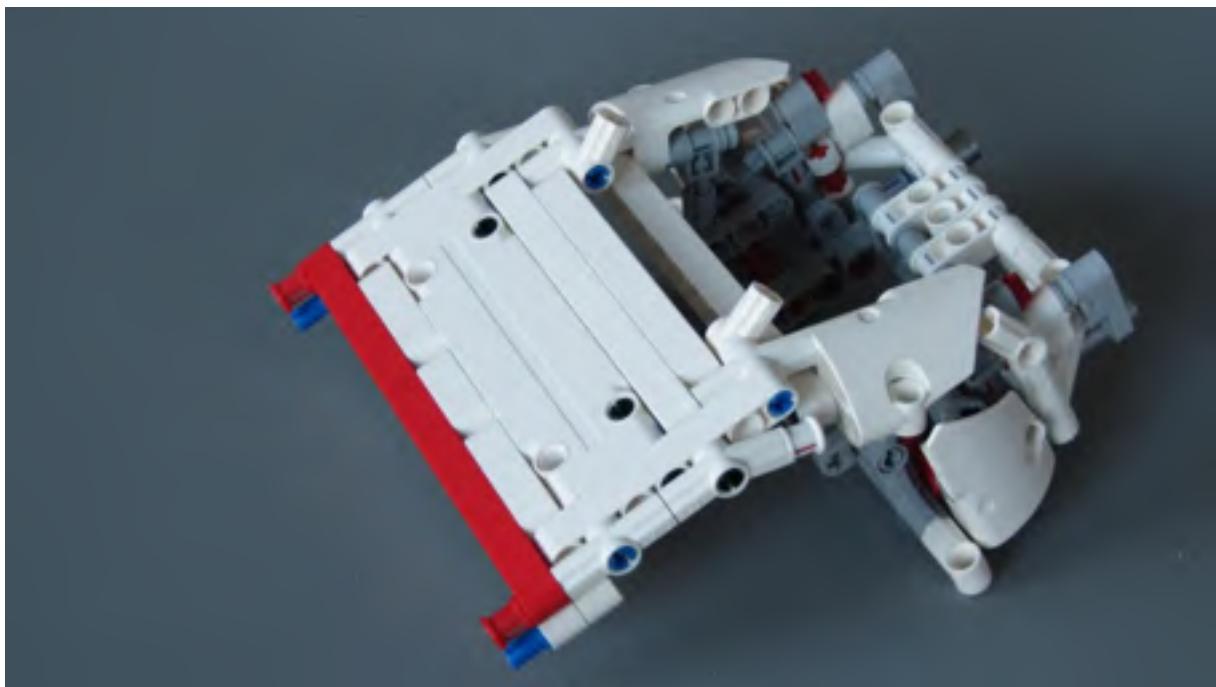

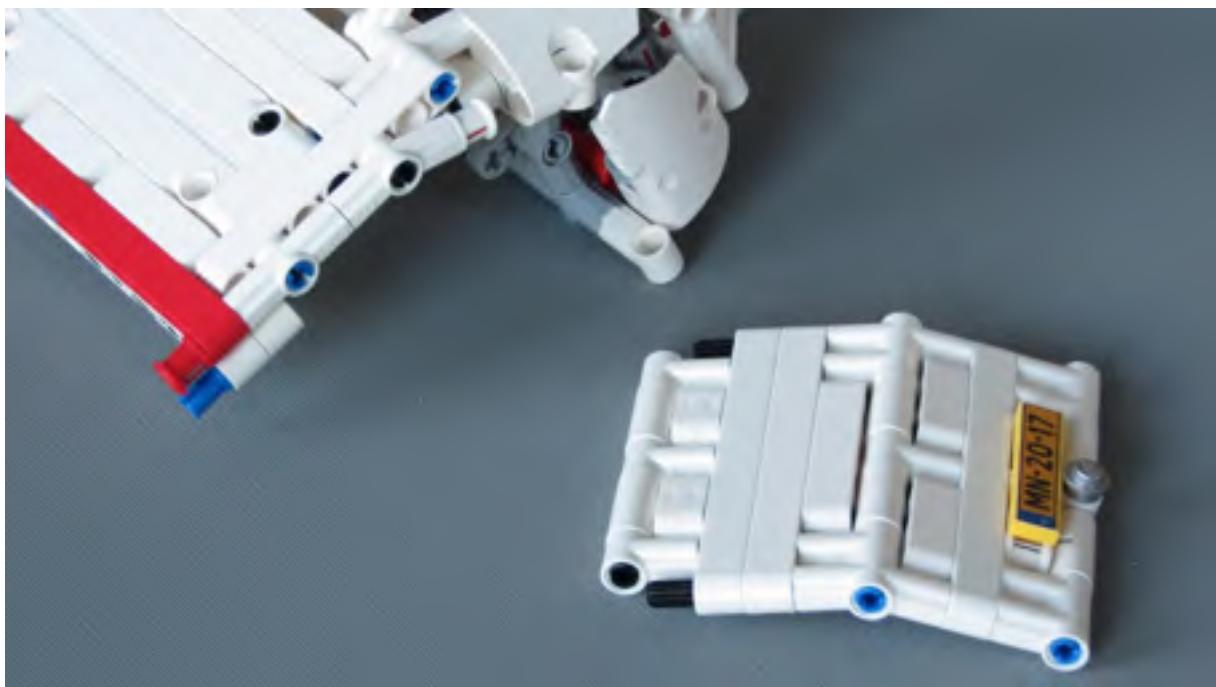

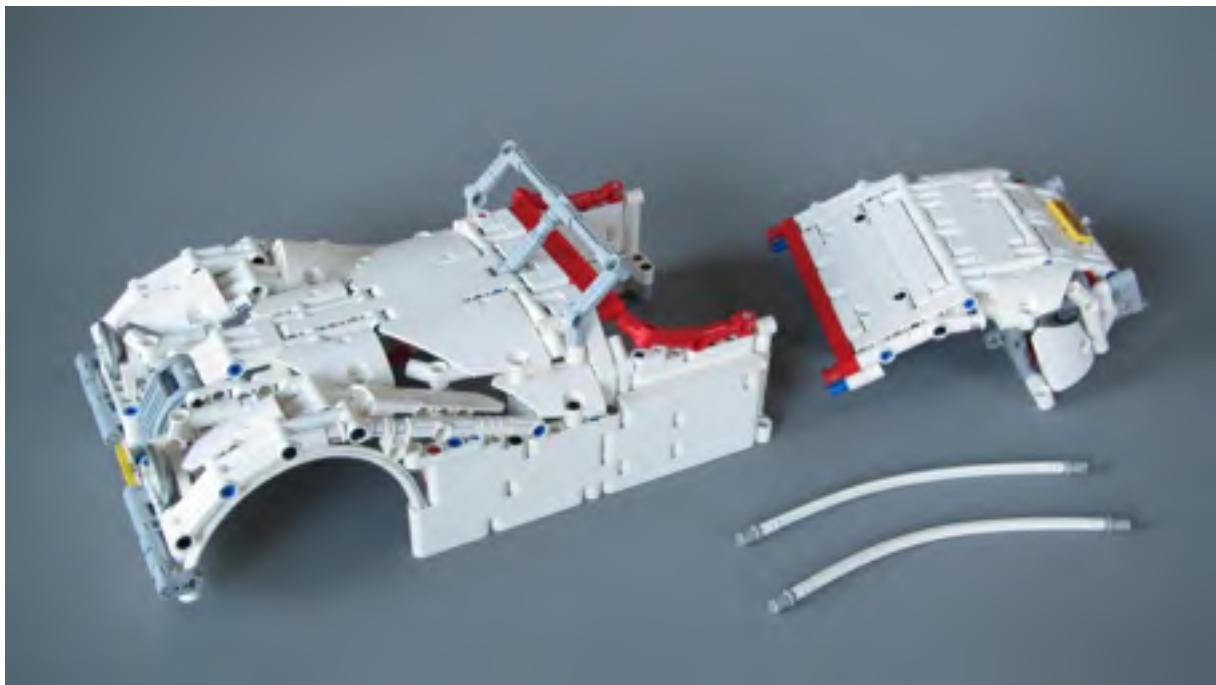


For black version:

Replace 19l soft-axle with 16l soft-axle in combination with **59443**


Replace **32103** with **32014**






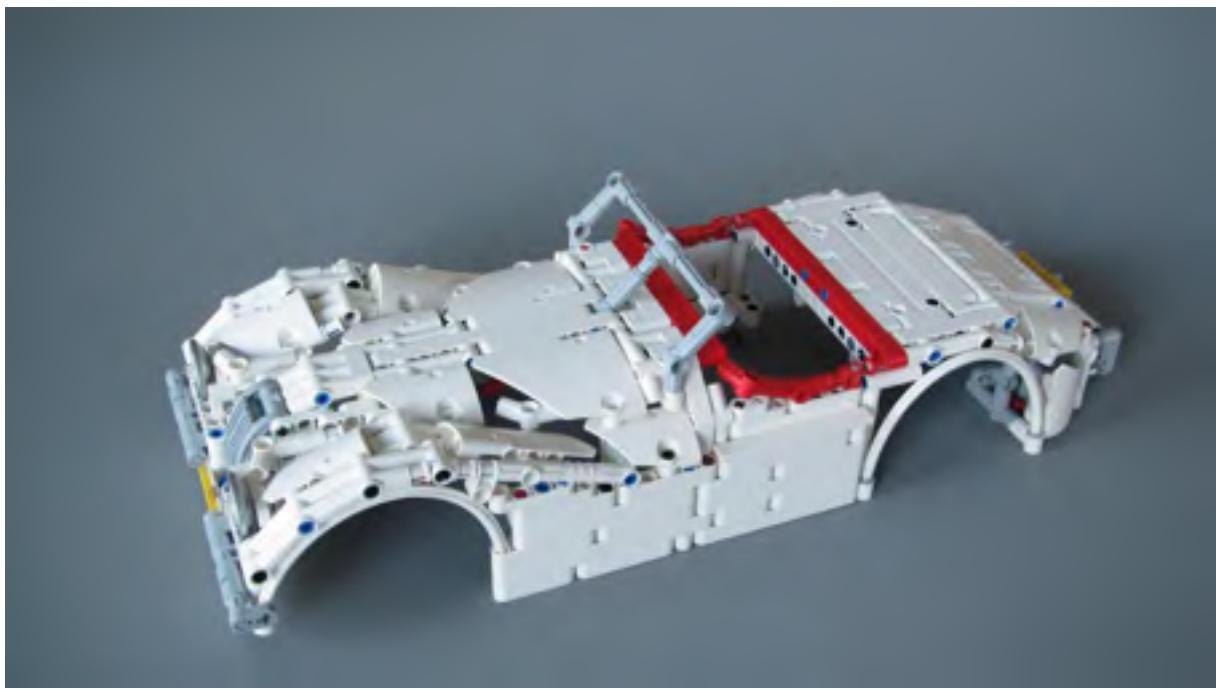



**End instructions for bodywork**

**Start instructions sport seats**

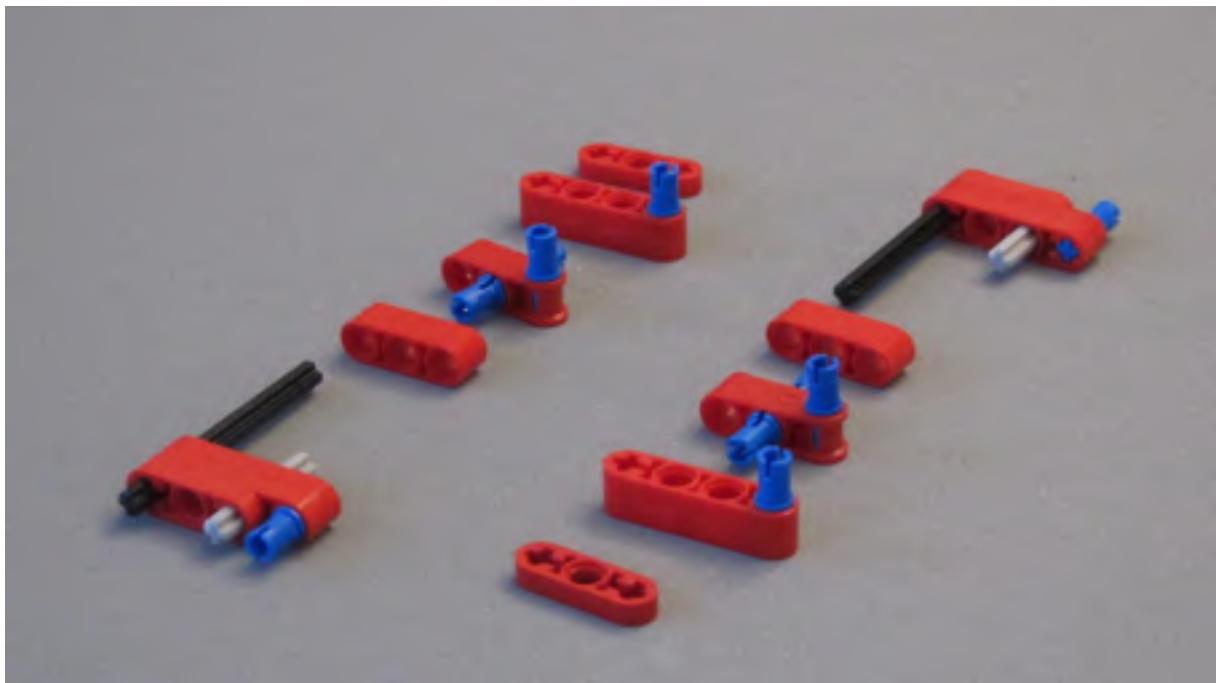

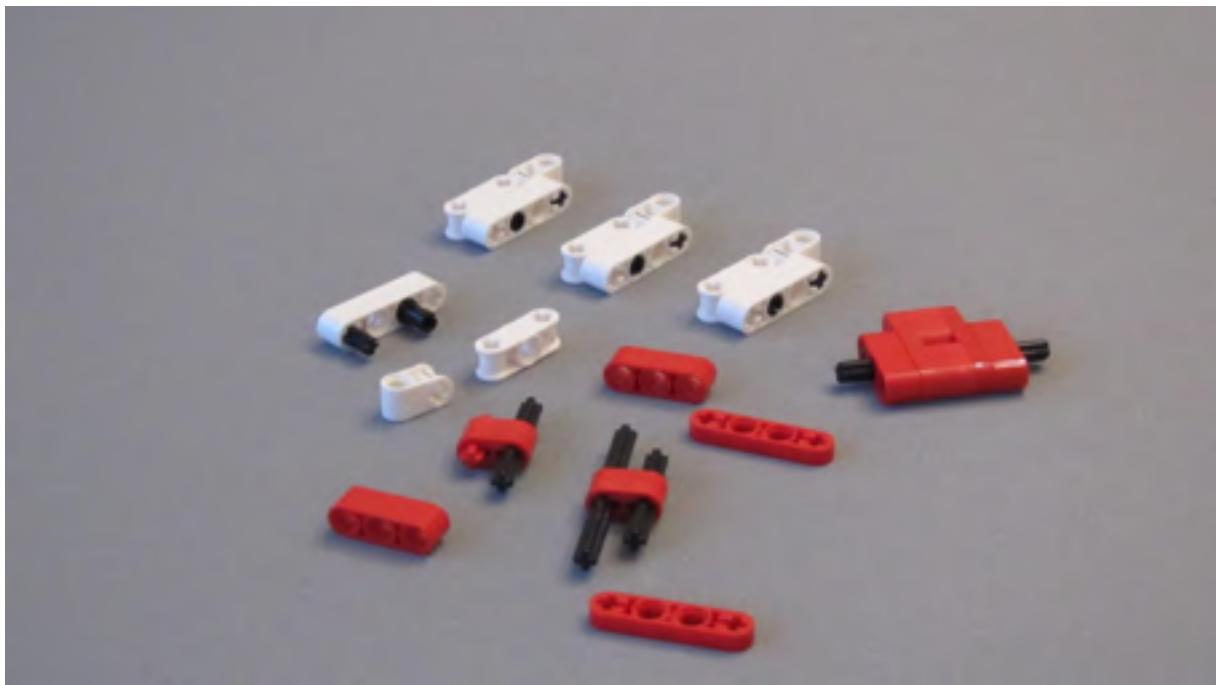
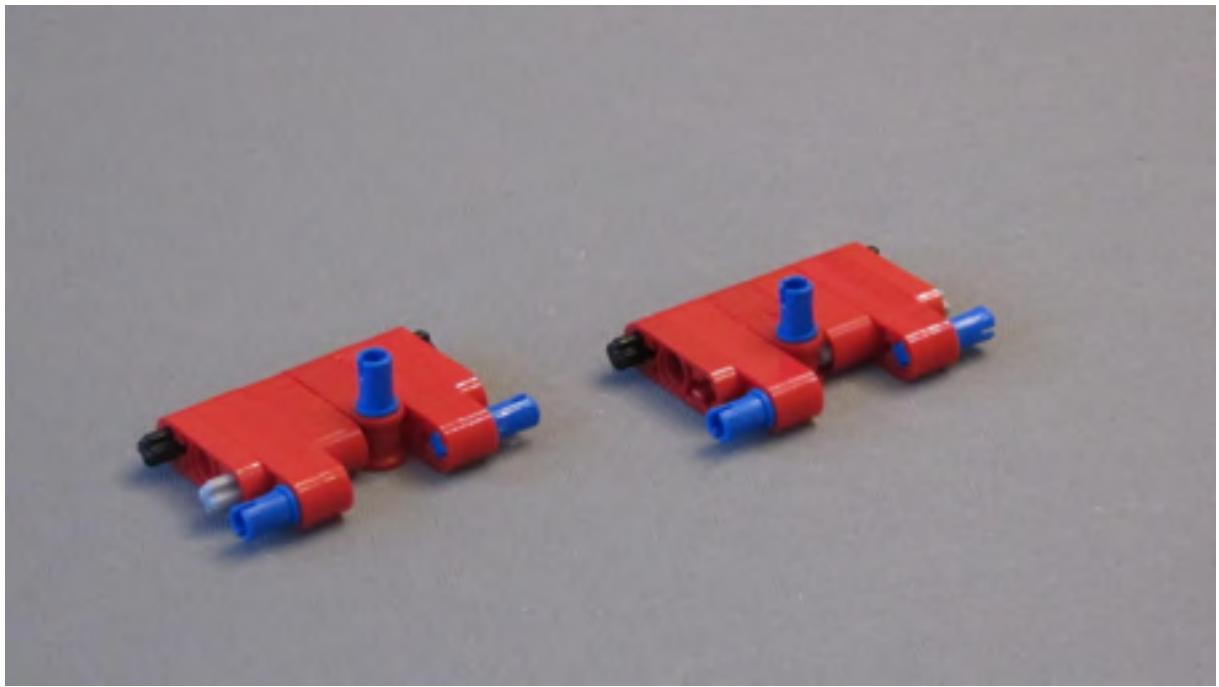


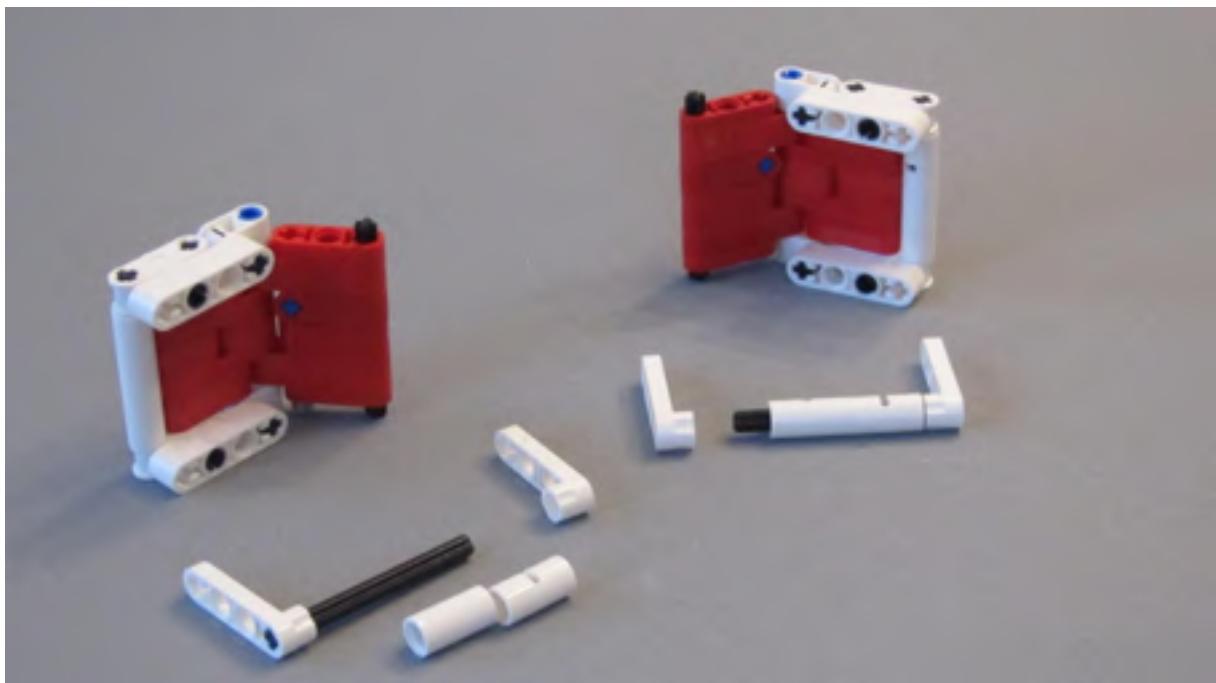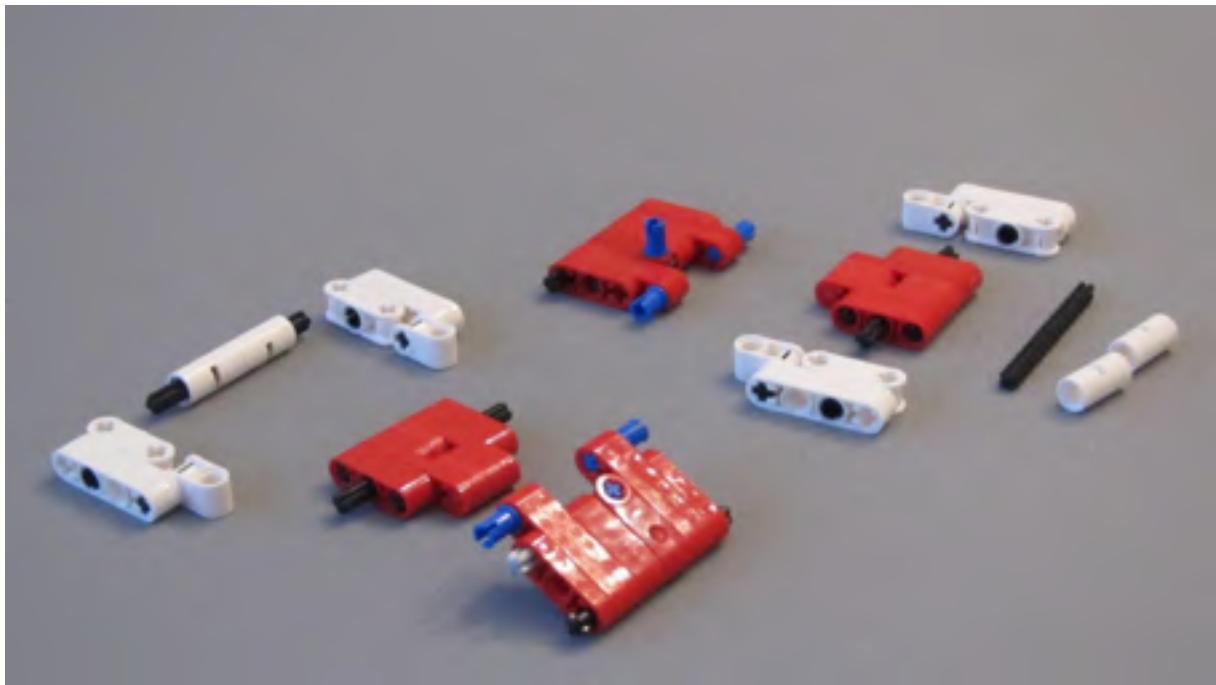


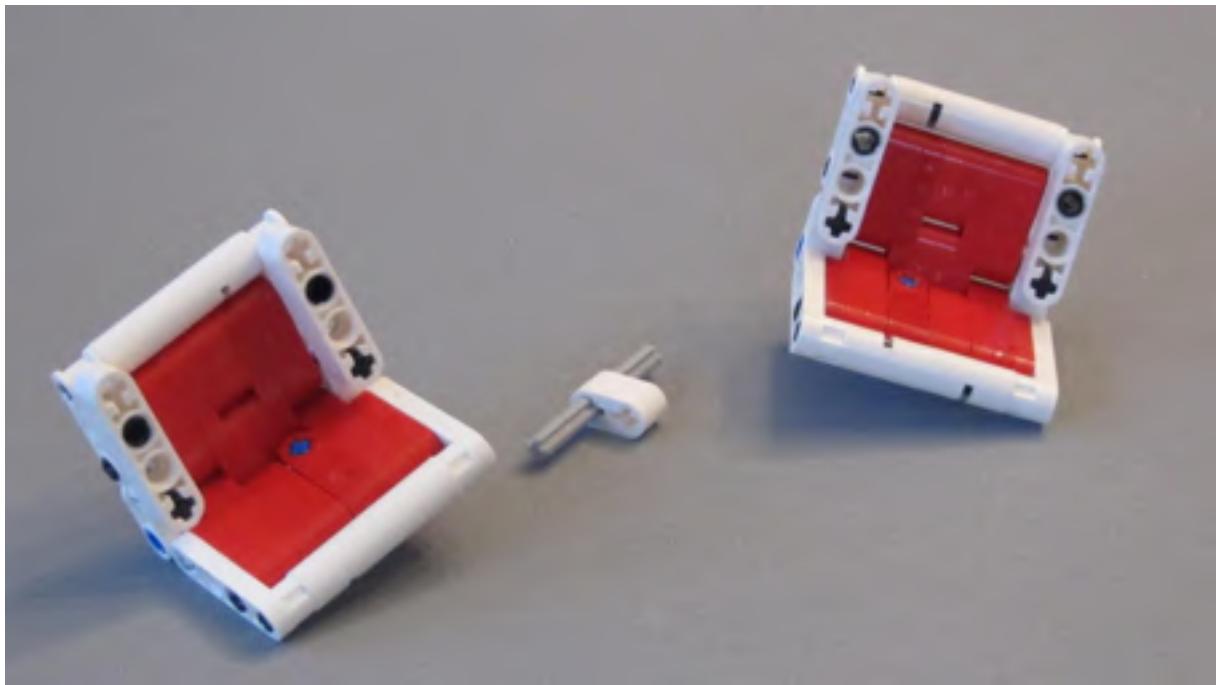


**End instructions sport seats**

Start instructions luxury seats

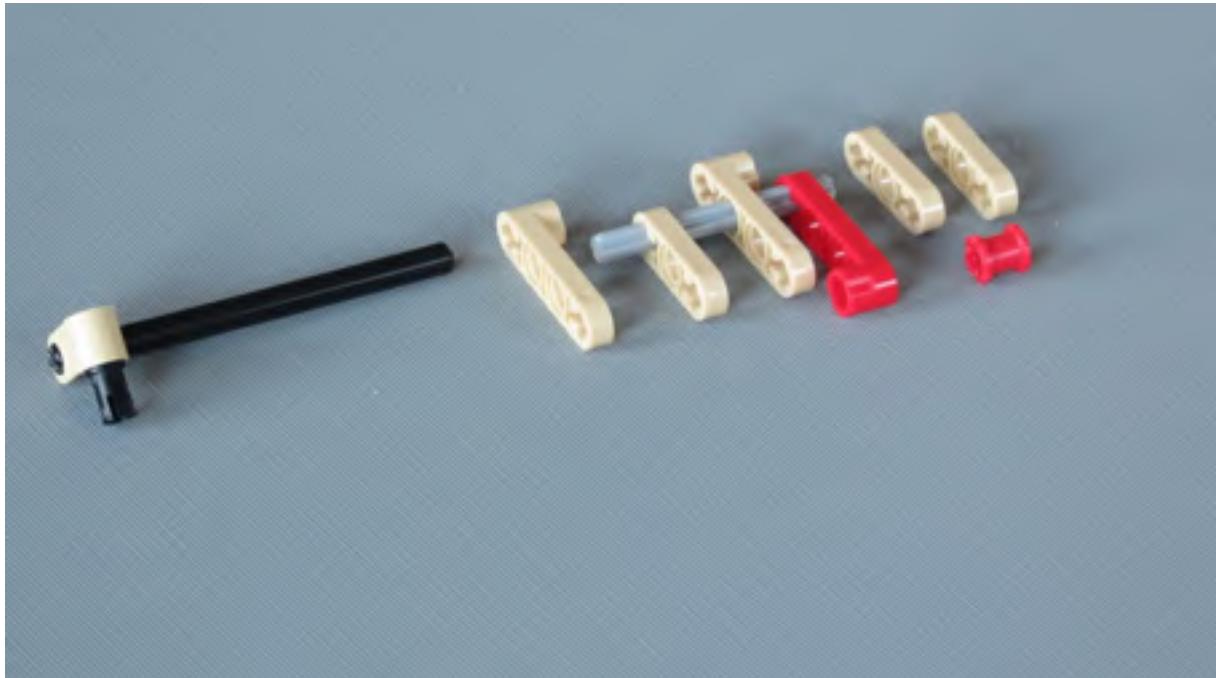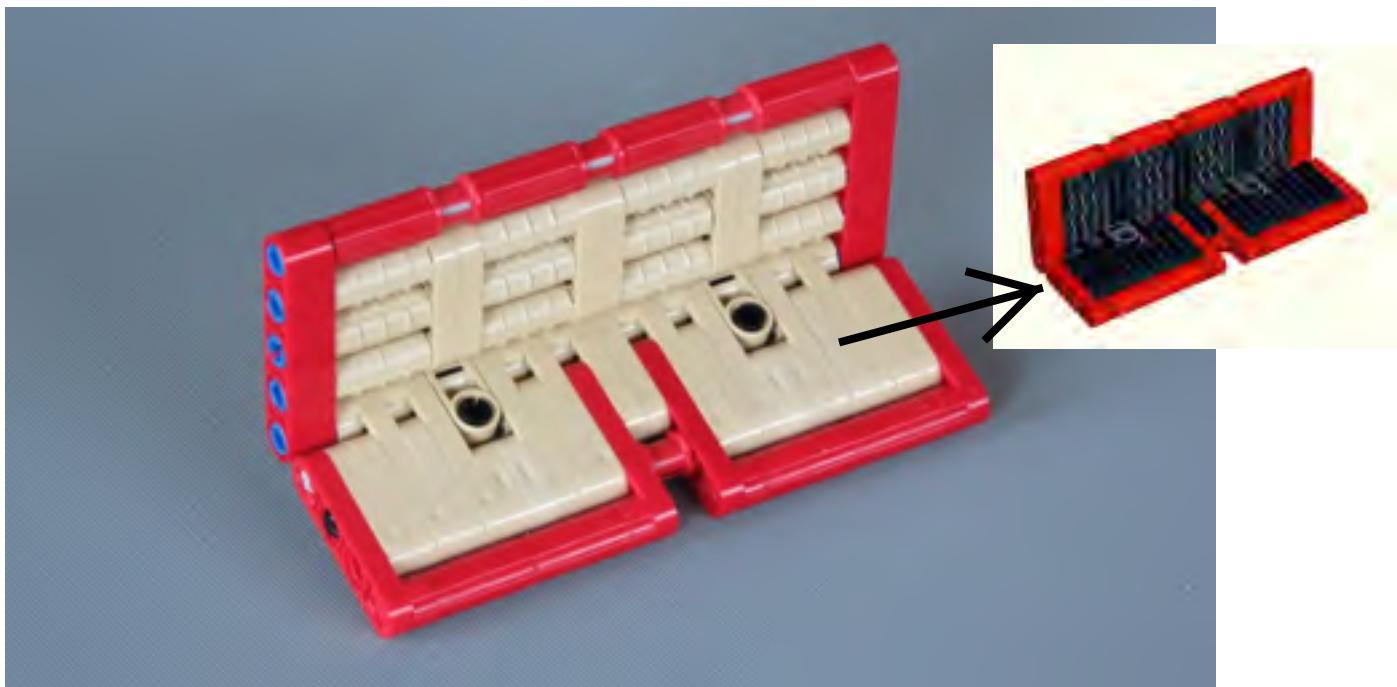

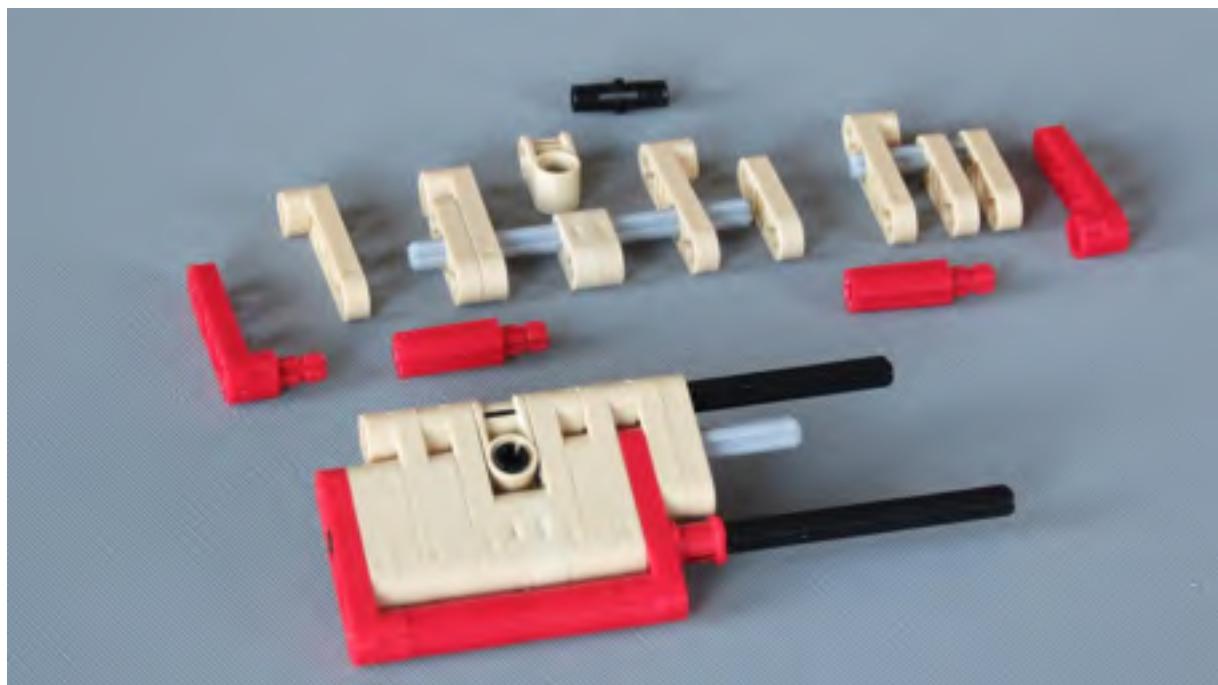

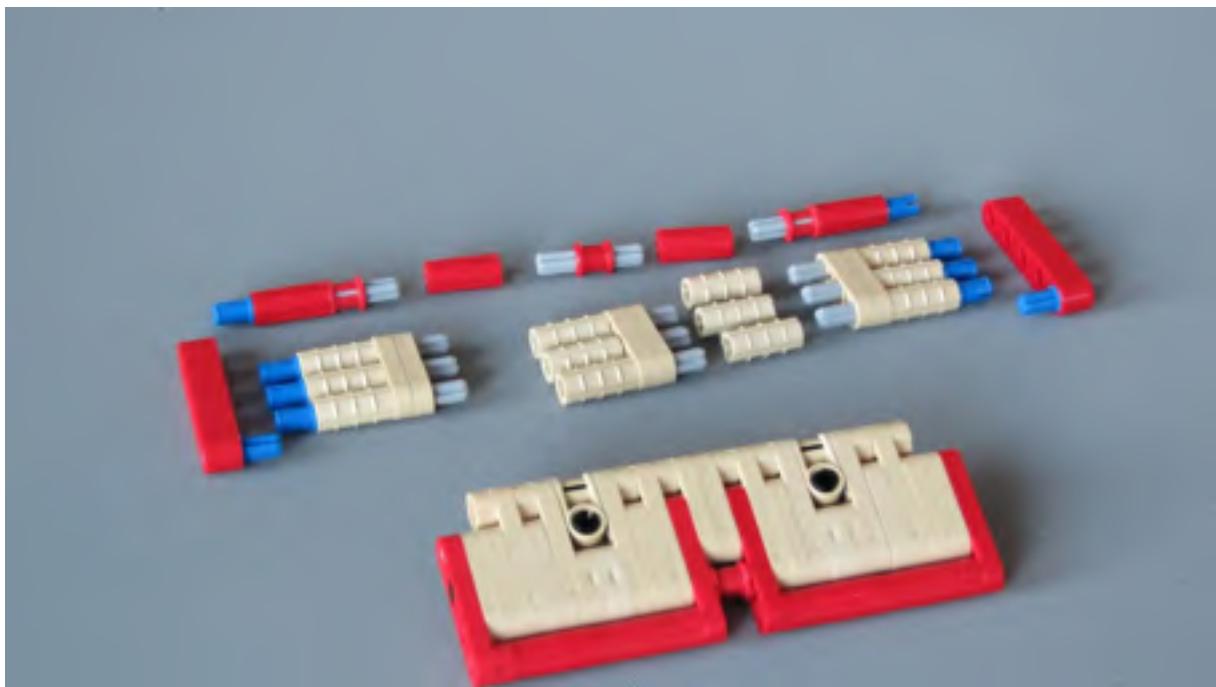

**End instructions luxury seats**

